
正面

Model No.:MH22258


MONSTER™

BLUETOOTH HEADPHONE

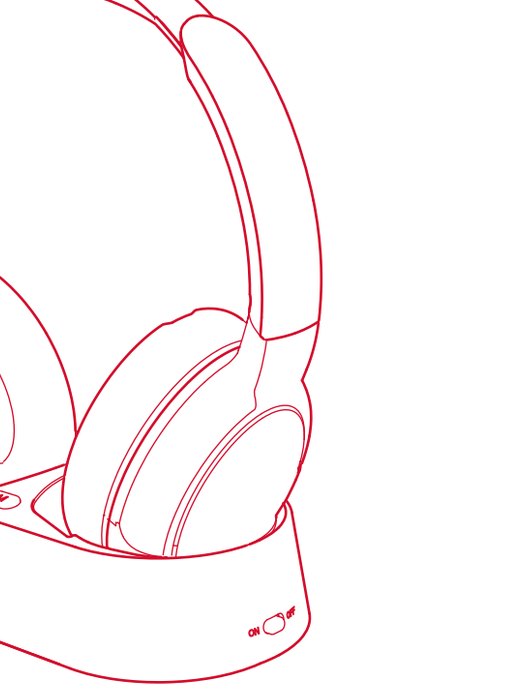

快速指南 / Quick Start Guide

请仔细阅读本快速指南并妥善保存以备将来使用。
本产品由中国平安保险公司承担
Please read this Quick Start Guide carefully and keep it for future use.

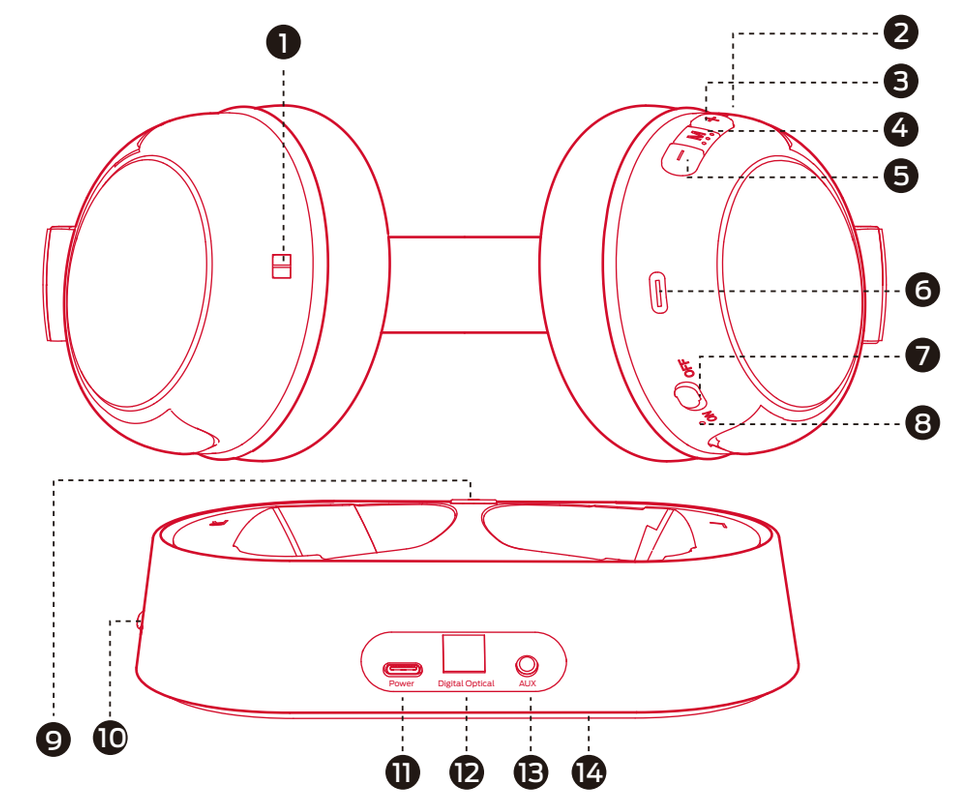

耳机：


❶ 连接底座充电接口
❷ 麦克风
❸ 音量加按键，上一曲目
❹ 多功能按键(MFB)
❺ 音量减按键，下一曲目
❻ USB-C 充电接口
❼ 开关机键
❽ 指示灯

发射器充电座：

❾ 多功能按键(MFB)
❿ 开关机键
⓫ USB-C 电源接口
⓬ 电视光纤接口
⓭ AXU接口
⓮ LED指示灯

充电

耳机：插入USB-C或者放入发射器底座可充电，充电过程中红灯常亮，充满电后常亮白灯。

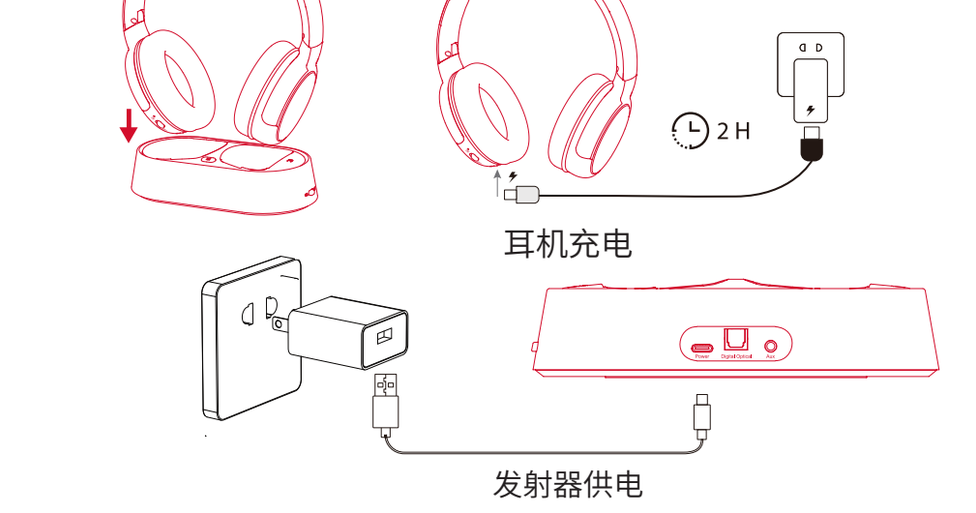

耳机充电

发射器供电

电源开/关

耳机：关机状态下，拨动“ON⊂⊃”后开机，自动进入配对状态，白灯亮2秒，同时有系统提示音。开机状态下，拨动“⊂⊃OFF”后关机红灯亮2秒，同时有系统提示音

发射器：关机状态下，USB-C 充电线插入电源接口上供电后，拨动“ON⊂⊃”后开机，黄、白色指示灯交替闪烁(有绑定记录进入回连模式：白灯呼吸闪)。开机状态下，拨动“⊂⊃OFF”或拔出充电线，所有灯熄灭

配对

耳机：开机状态下，开机白灯快闪进入配对状态(优先回连蓝牙发射器)，如发射器/耳机开机未连接状态下，需回连其他蓝牙设备短按“MFB”键耳机回连蓝牙设备

发射器：发射器无配对记录，开机会自动进入配对模式。

发射器有配对记录，但未绑定，开机自动进入配对模式

发射器有绑定记录，未连接待机状态下，长按“MFB”键5 秒进入配对状 态，耳机开机进入配对模式，发射器与耳机自动连接，黄、白指示灯交替闪烁

音乐

播放/暂停：短按“MFB”按键
下一曲：已连接手机状态，长按“-”1秒
上一曲：已连接手机状态，长按“+”1秒

音量控制

调低音量：已连接手机状态，短按 “-”
调高音量：已连接手机状态，短按 “+”

通话

接听/挂断：短按“MFB”按键
拒接来电：长按“MFB”按键1秒

通话切换

通话中，长按耳机“MFB”按键2 秒，可将通话音频在手机和耳机之间切换

语音助手

已连接手机状态，双击2下“MFB”键

恢复出厂设置

耳机在开机未连接状态下，快速按5下“MFB”键，清除耳机与手机的配对记录后，耳机会自动关机

清除底座配对记录

底座在开机未连接状态下，长按 5 秒多功能键进入配对，配对状态下，双击“MFB”键，黄、白灯同时长亮 3 秒，所有连接过的设备信息将被清除，清空配对记录后自动进入配对状态


低电报警

每3分钟提醒1次，直至低电关机

发射器连接到电视三种方式

方式一：光纤端口

1.将USB-C接口连接到发射器的底座上，拨动“ON⊂⊃”，白色指示灯亮起
2.将光纤线插入电视的数字音频输出端口，将另外一段插入发射器光纤端口
3.打开耳机“ON⊂⊃”，耳机自动进入配对模式，同时有系统提示音，白、黄色指示灯交替闪烁，表示开机。
4.耳机成功连接到发射器底座时，发射器指示灯显示黄灯
5.打开电视，进入音频设置，选择光纤输出(具体此操作说明，参考第8-11页)

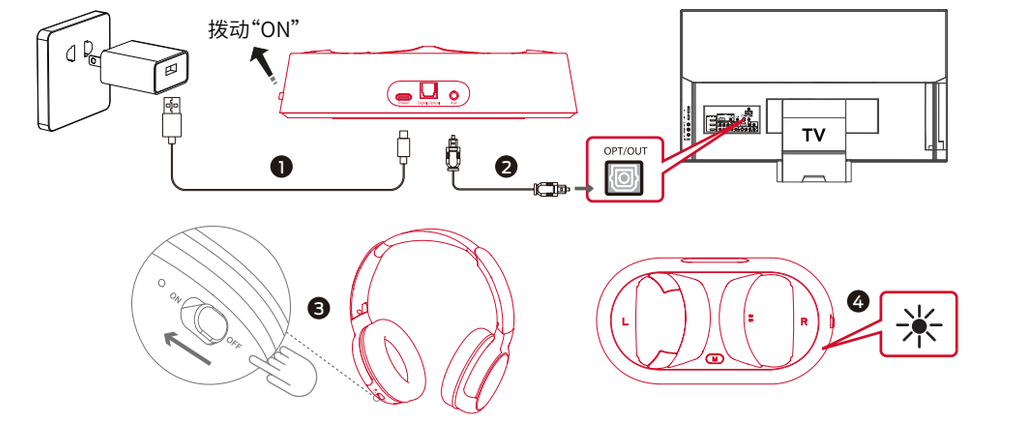


注意：

请记得取下光缆上的塑料管。

2.请确保光缆与您的电视正确连接，否则可能会出现静电现象或无声显示(不要将其缠绕起来或以90 度角折叠，因为光缆是由玻璃和塑料制成的)


3.大多数电视每次仅能通过一个数字输出端口实现音频输出，所以如果您的电视的 HDMI ARC 端口正在使用中，那么其光缆端口可能会被禁用。您可以拔掉HDMI ARC线缆，或者尝试通过 RCA/AUX线缆连接发射器

4.必须将电视音频设置为“PCM”模式，并选择有线音频输出方式。(非常重要!)

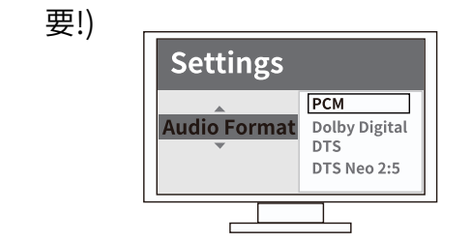


方式二：AUX接口端口

AUX专用线缆插入电视的3.5毫米AUX输出端口，另一端接入发射器3.5毫米AUX输出端口

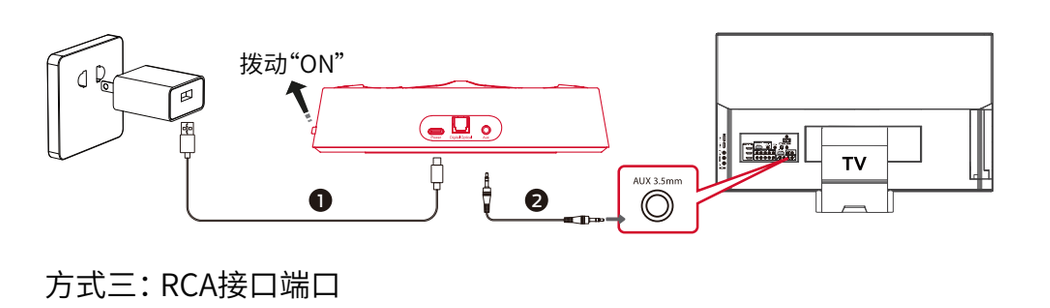


方式三：RCA接口端口


RCA适配器连接到 AUX3.5 毫米音频线缆上。将红色和白色的 RCA 线插头插入其中。将连接器插入电视的“音频输出”接口中，然后将另一端插入发射器的 AUX接口

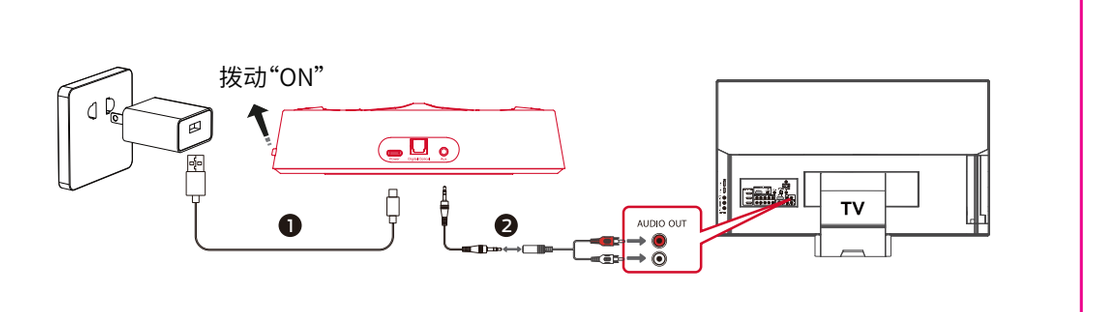



电视声音输出设置

以下列出了三家不同品牌电视机常见的声音输出方式。若您所购电视机的品牌不在此处列出，请参考您电视机的用户手册以获取详细说明。若问题仍未得到解决，请通过提供的售后电子邮件地址：support@mct-audio.com

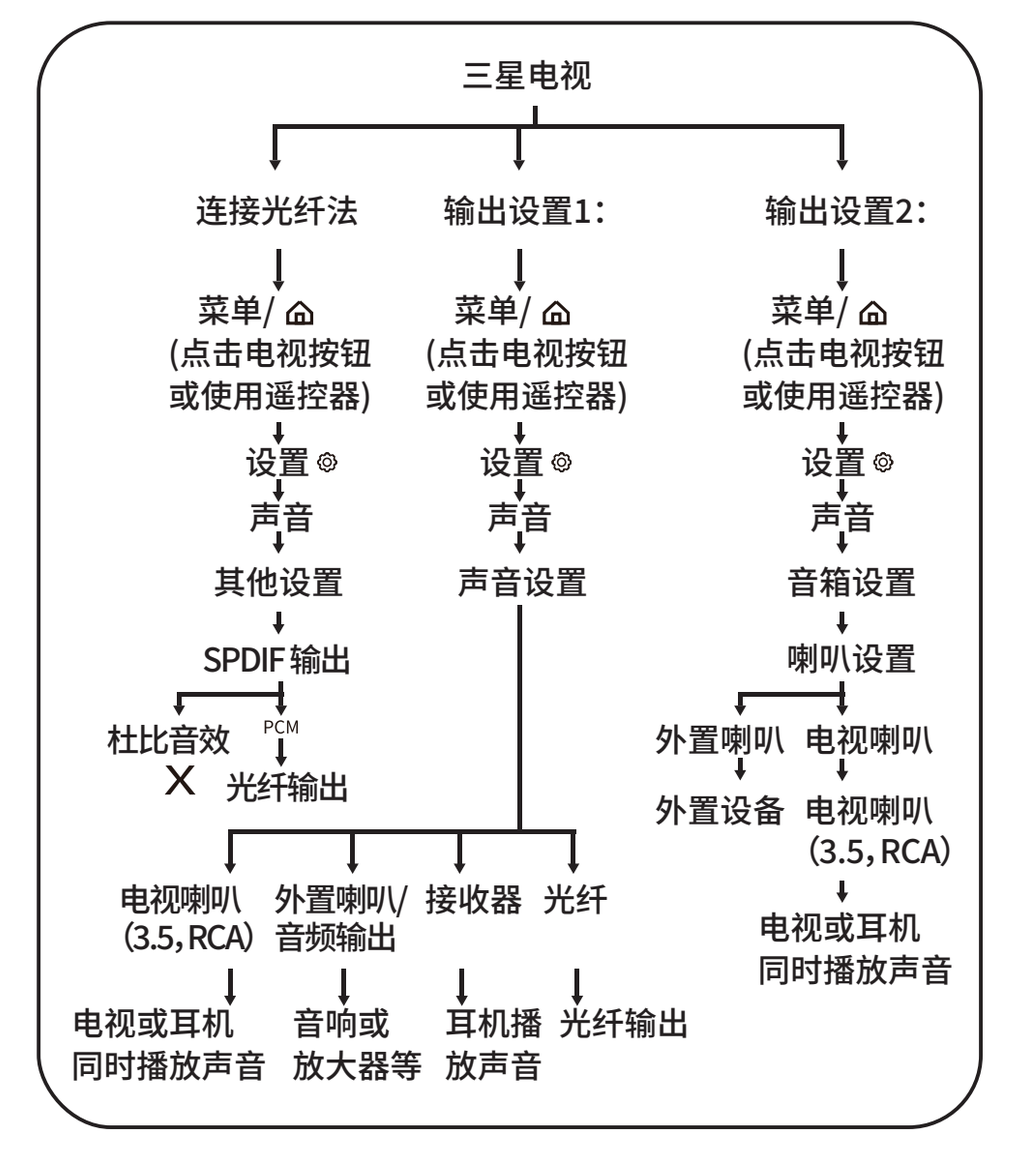

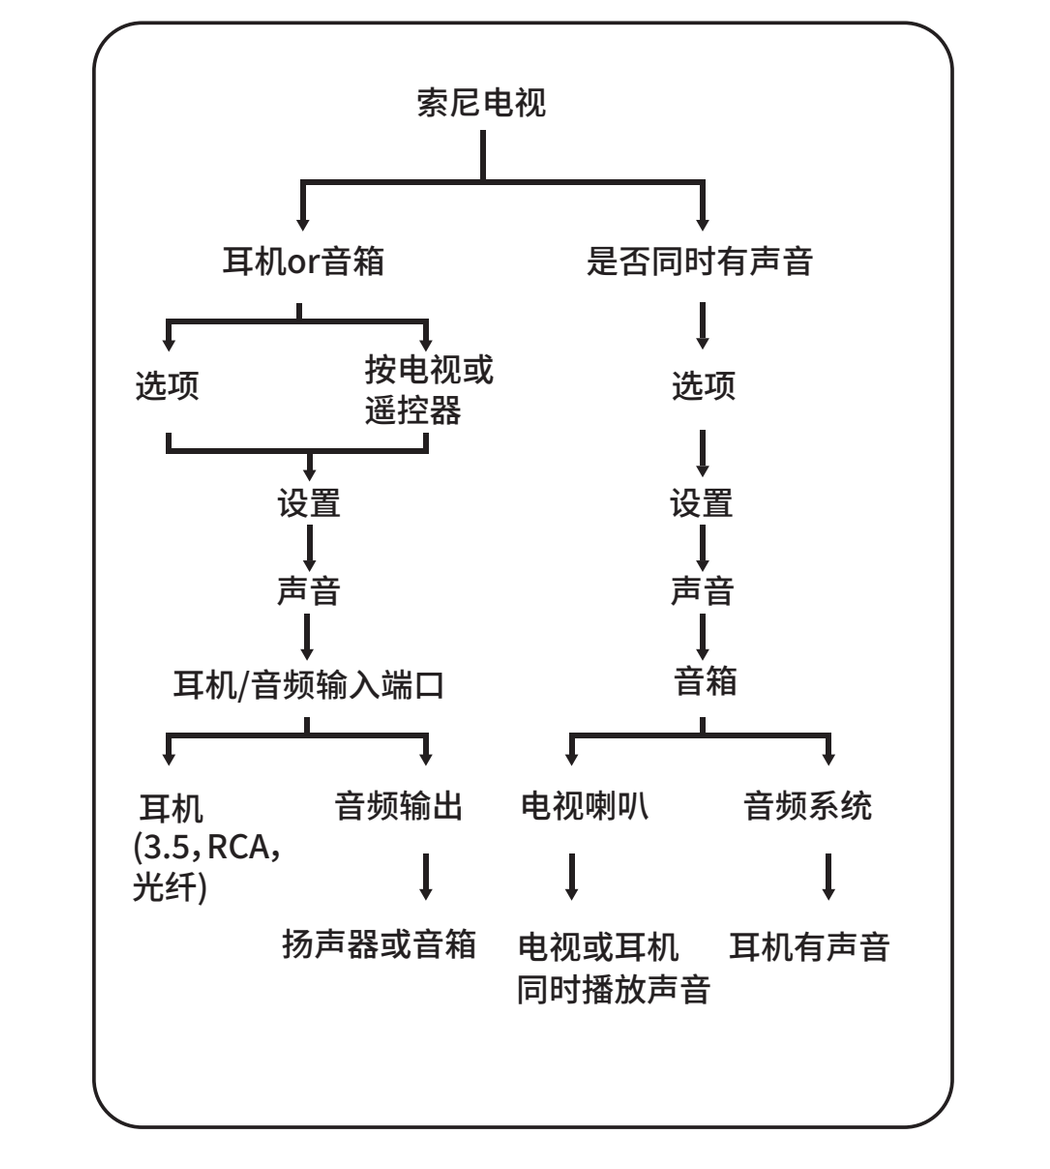

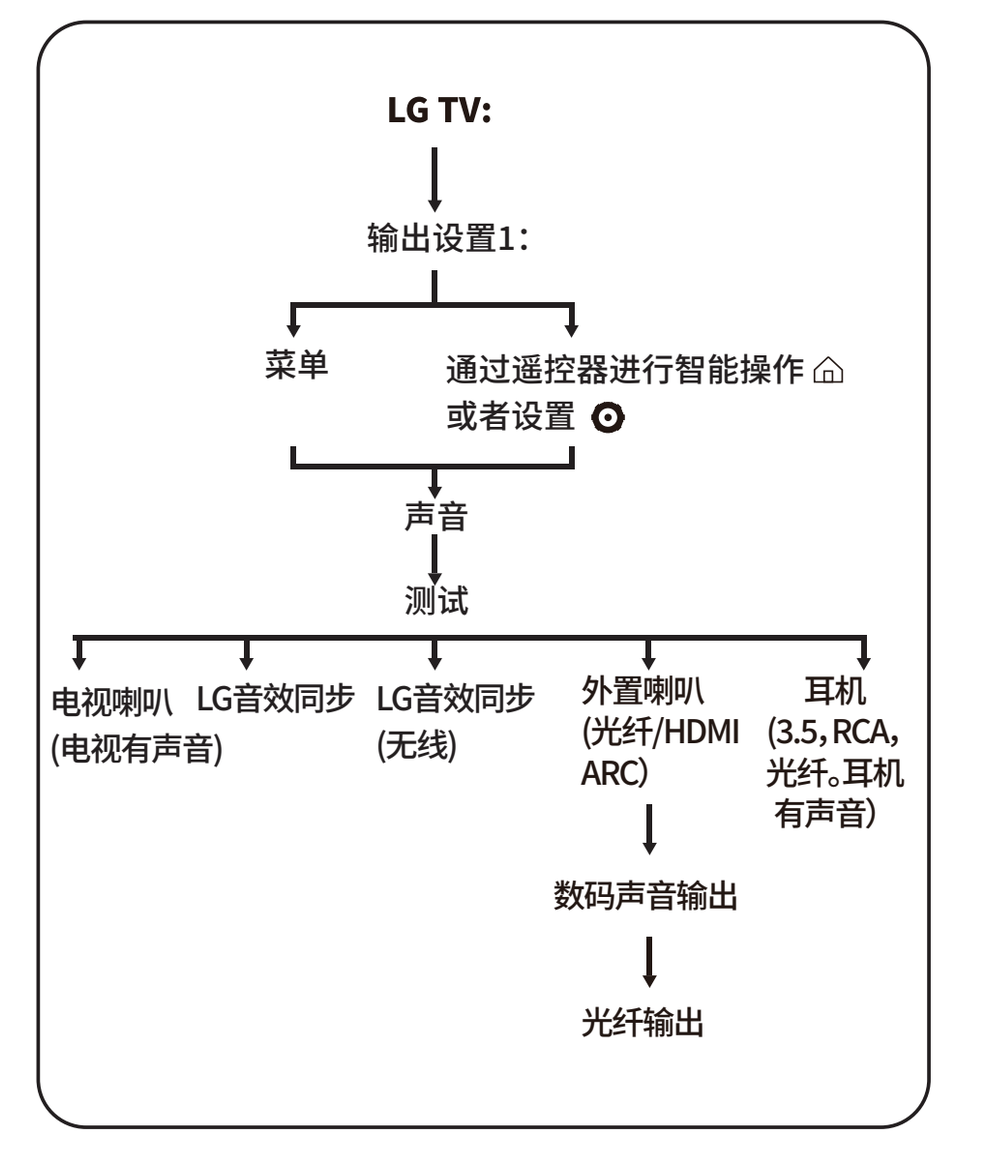

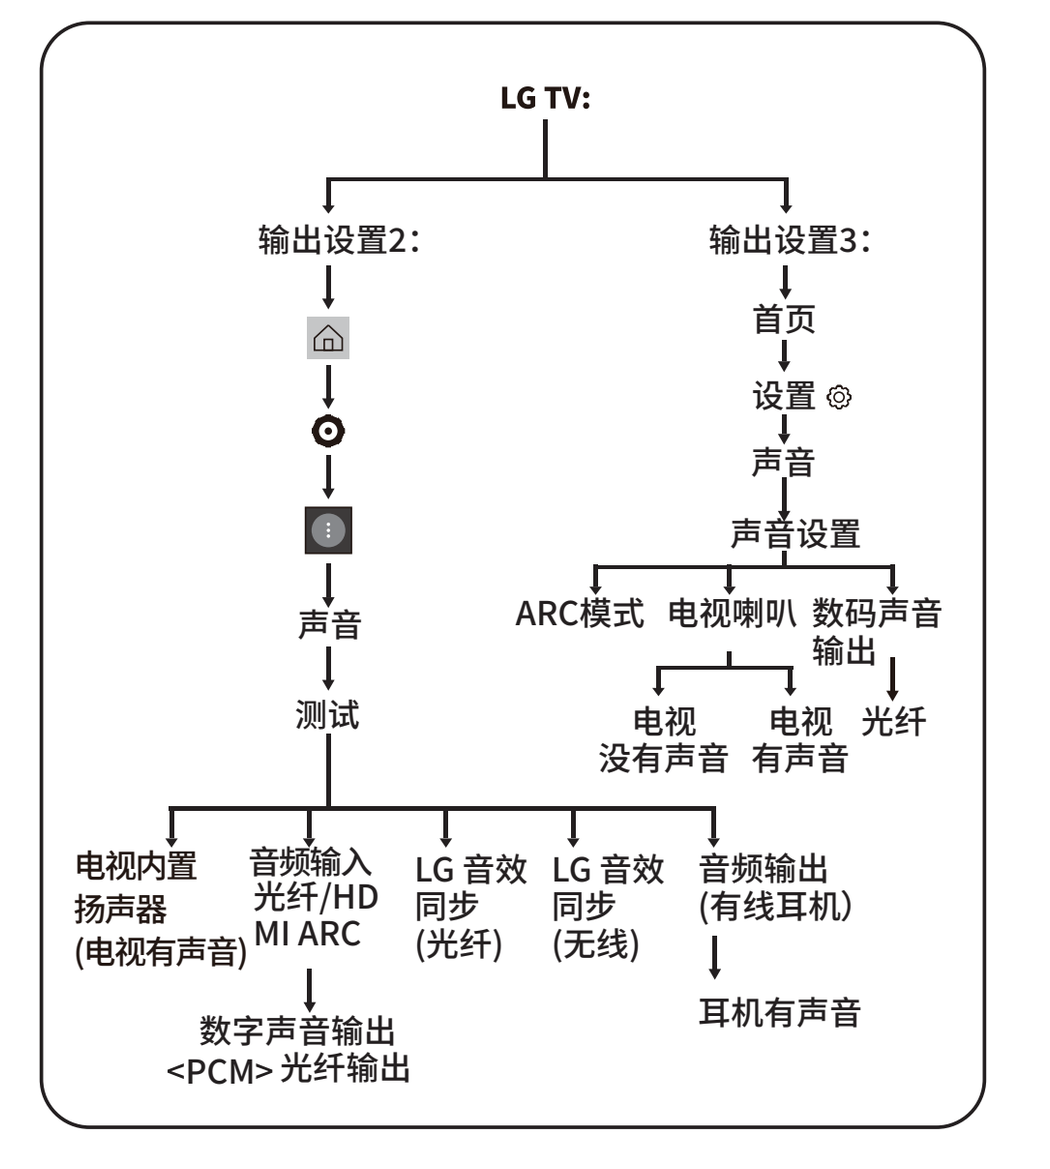

为您的听力负责

为避免听力受损，在佩戴耳机前请调低音乐播放器的音量。佩戴好耳机后，再慢慢将音量调整到适应的水准。噪音的计量单位是(db)。长期暴露于85db 或更高噪音环境下可能造成听力受损。监控使用情况；听力受损是噪音太大加以时间双重作用的结果。声音越大，越要减少暴露在噪音下的时间。声音越柔和，就可以听越久。请通过消费电子协会网站(www.ce.org) 了解如何建立安全收听等级及检视其他重要的安全指引。如何防止噪音性听力损伤 (NIHL) 重要资讯及何种噪音会造成听力受损的完整清单，请参考听障研究基金会网站：www.drf.org。

电池使用注意

·如果电池更换不当，则存在爆炸危险。电池只能用相同类型或同等类型的电池更换。不建议未经许可更换电池，但可以退回制造商进行更换。
·电池[电池组或电池组合]不得暴露在日照 、火烤或类似过热的环境中。

产品有毒有害物质或元素表

本表格依据SJ/T11364-2014的规定来编制

部件名称	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBBs)	多溴二苯醚 (PBDEs)
外壳	○	○	○	○	○	○
线材	○	○	○	○	○	○
喇叭	○	○	○	○	○	○
主板	X	○	○	○	○	○
电池	○	○	○	○	○	○

(有害物质)

O:表示该有害物质在该部件所有均质材料中的含量均在GB/T26572规定的限量要求以下。
X:表示该有害物质至少 在该部件的某一均质材料中的含量超出GB/T26572规定的限量要求。

保修信息卡

信息填写

产品名称：______

产品型号：______

产品SN号：______

购机日期：______


用户信息

用户姓名：______

联系电话：______

地　　址：______

反面

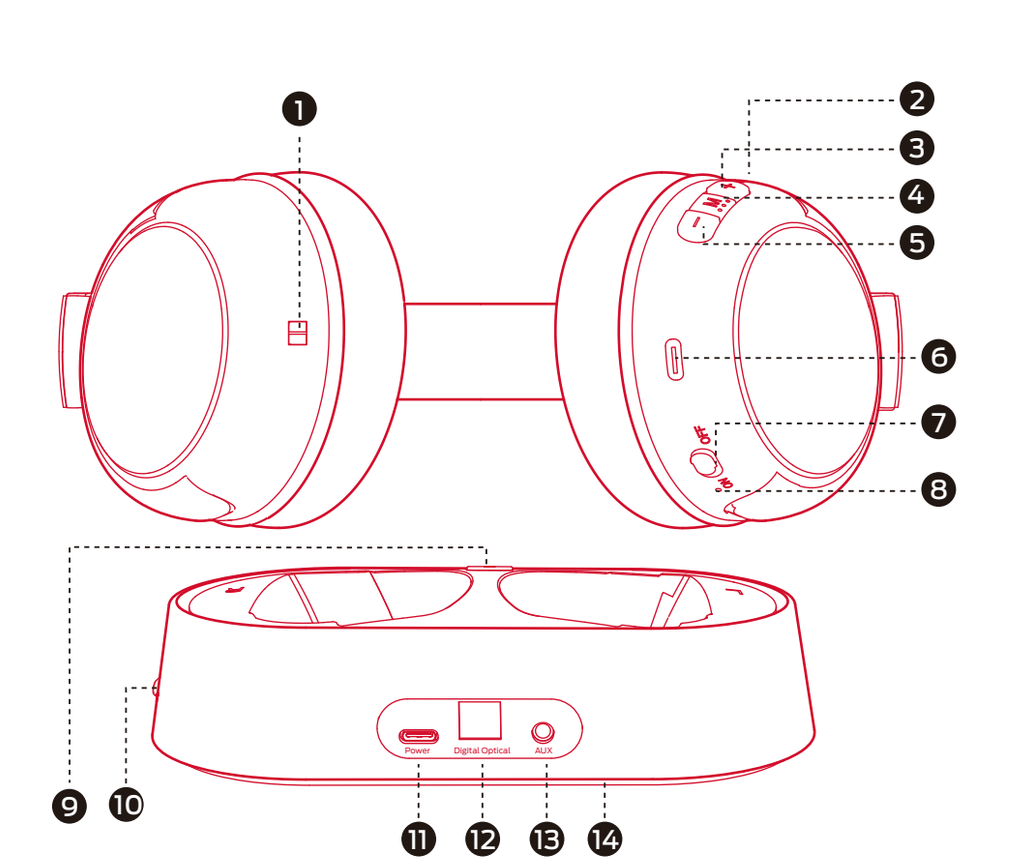

HEADPHONES:


❶ Connection of the charging interface of the base unit
❷ MIC
❸ Volume up button, previous song
❹ Multi-function button(MFB)
❺ Volume down button, next song
❻ USB-C charging port
❼ ON/OFF button
❽ Light button

TRANSMITTER CHARGING DOCK:

❾ Multi-function button(MFB)
❿ ON/OFF button
⓫ USB-C power port
⓬ Optical Input from TV
⓭ AXU charging port
⓮ Light button

Charging

Headphones: They can be charged by inserting USB-C or placing them in the transmitter base. During the charging process, the red light remains on constantly. After being fully charged, the white light remains on constantly.

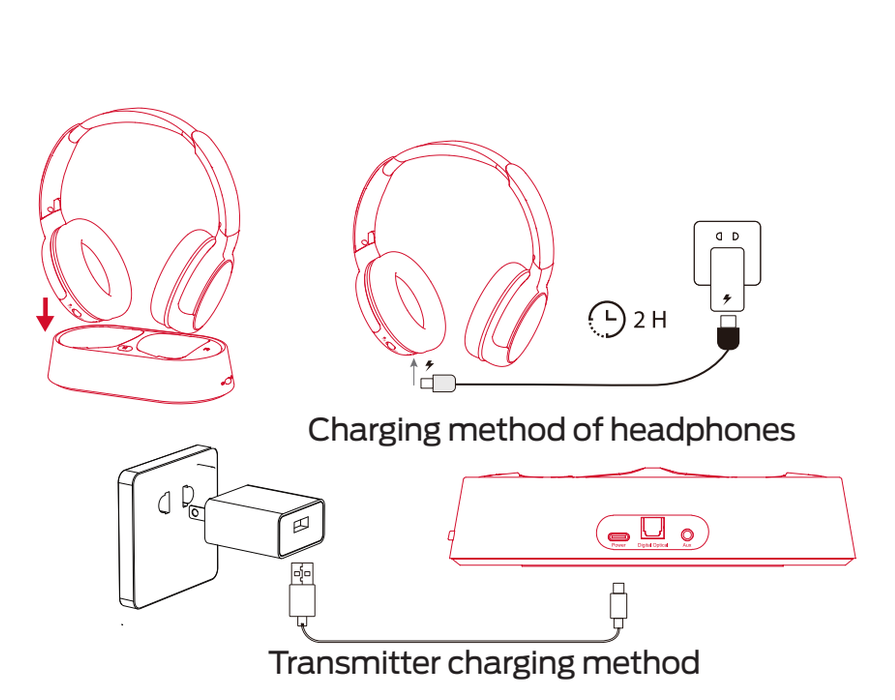

Charging method of headphones

Transmitter charging method

Power on/off

Headphones: When the device is turned off, Pull "ON⊂⊃" to turn it on. The device will automatically enter the pairing state upon startup. The white light will be on for 2 seconds, and there will be a system prompt sound at the same time. When the device is turned on, when you dial "⊂⊃OFF", the red light will light up for 2 s econds and there will be a system prompt sound at the same time

Transmitter: When the device is turned off, insert the USB-C charging cable into the power port to supply power. Then, turn ON the device by plucking "ON⊂⊃". The yellow and white indicator lights will flash alternately (if there is a binding record, enter the reconnection mode: the white light will flash breathing). When the device is turned on, if you pull the "⊂⊃ OFF" button or unplug the charging cable, all the lights will go out

Pairing

Headphones: When the device is turned on, the white light flashes quickly to enter the pairing state (prioritize connecting to the Bluetooth transmitter). If the transmitter/headphones are not connected when the device is turned on, you need to connect to another Bluetooth device: Short press the "MFB" button briefly to reconnect the headphones to the Bluetooth device

Transmitter: The transmitter has no pairing record. The device will automatically enter the pairing mode.

The transmitter has a pairing record but is not bound. It automatically enters the pairing mode upon startup

The transmitter has a binding record. When it is not connected and in standby mode, long press "MFB" button for 5 seconds to enter the pairing state. When the headphones are turned on and enter the pairing mode, the transmitter and the headphones will automatically connect, and the yellow and white indicator lights will flash alternately

Music

Play/pause: short press the "MFB" button
Next song: connected phone status, long press the “-” button for 2 seconds
Previous song: connected phone status, long press the “+” button for 2 seconds

Volume Control

Turn down the volume: connected phone status, press the “-” button
Turn up the volume: connected phone status, press the “+” button

Call

Answer/hang up: short press the "MFB" button
Reject the call: long press the "MFB" button for 2 seconds

Call Switching

During the call, long press the "MFB" button on the earphone for 2 seconds, and you can switch the call audio between the phone and the earphone.

Voice Assistant

Connected phone status, Double-click the "MFB" button twice

Reset

When the headphones are turned on but not connected, quickly press the"MFB" button five times to clear the pairing record between the headphones and the phone, and the headphones will automatically shut down

Clear the base pairing record

When the base is in the off and unconnected state, long press the multi-function button for 5 seconds to enter pairing. During the pairing process, double-click the "MFB" button. The yellow and white lights will both stay on for 3 seconds simultaneously. All the information of the connected devices will be cleared, and then the pairing record will be emptied, after which the device will automatically enter the pairing state.


Low Battery

Remind once every 3 minutes until the power is low and the machine shuts down

There are three ways for the transmitter to connect to the television


Method One: Optical fiber port

1.Connect the USB-C interface to the base of the transmitter, pluck " ON⊂⊃ ", and the white indicator light will come on
2. Insert the optical fiber cable into the digital audio output port of the TV and the other end into the optical fiber port of the transmitter
3. Turn on the "ON⊂⊃ " button of the headphones. The headphones will automatically enter the pairing mode, and at the same time, there will be a system prompt sound. The indicator light will flash alternately in white and yellow, indicating that the device is powered on.
4.When the headphones are successfully connected to the transmitter base, the transmitter indicator light shows a yellow light
5. Turn on the TV, enter the audio Settings, and select the optical output (for specific operation instructions, refer to page 9-12)

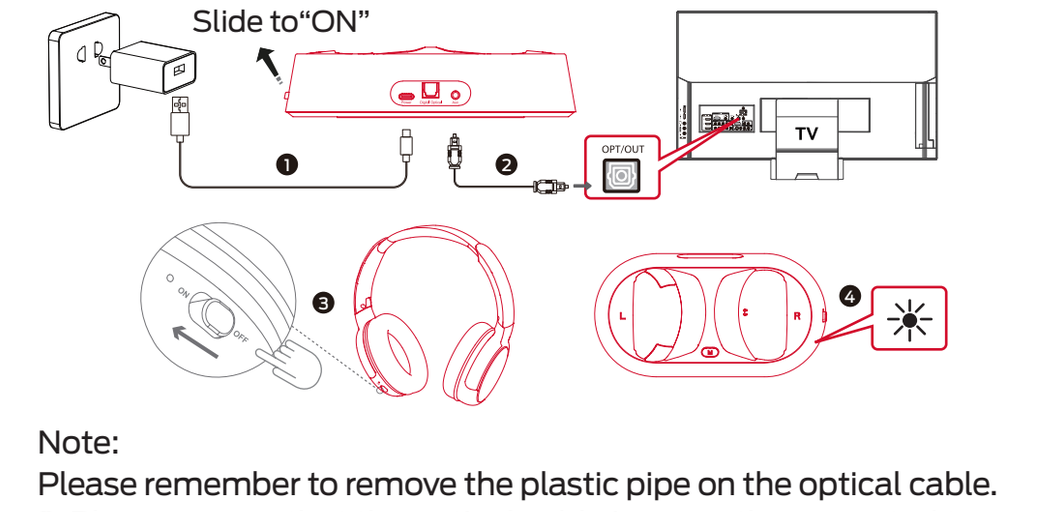


Note:

Please remember to remove the plastic pipe on the optical cable.
2. Please ensure that the optical cable is correctly connected to your TV; otherwise, static electricity or silent display may occur (do not wrap it up or fold it at a 90-degree Angle, as the optical cable is made of glass and plastic).
3. Most TVS can only achieve audio output through one digital output port at a time, so if you If the HDMI ARC port of the TV is in use, then its optical cable port may be disabled. You can unplug the HDMI ARC cable or try to connect the transmitter via the RCA/AUX cable
4. The TV audio must be set to "PCM" mode and the wired audio output method must be selected. (Very important!)

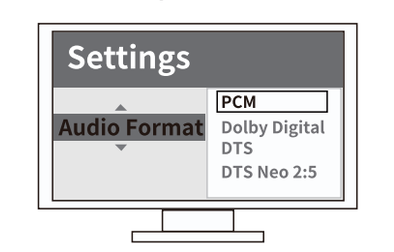


Method Two: AUX interface port

Insert the AUX dedicated cable into the 3.5mm AUX output port of the TV, and connect the other end to the 3.5mm AUX output port of the transmitte

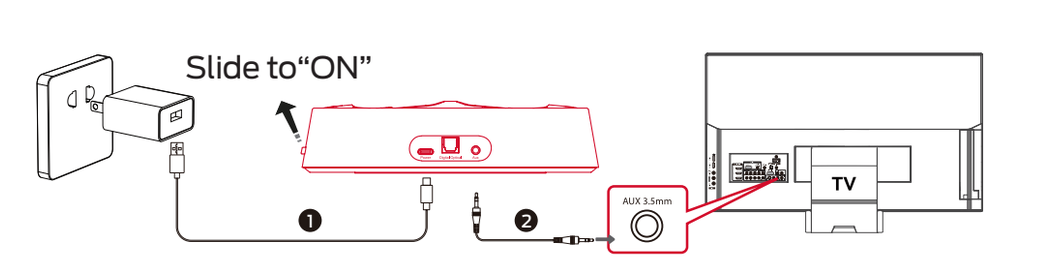


Method Three: RCA interface port


The RCA adapter is connected to the AUX 3.5mm audio cable. Insert the red and white RCA wire plugs into it. Insert the connector into the "Audio Output" interface of the TV, and then insert the other end into the AUX interface of the transmitter

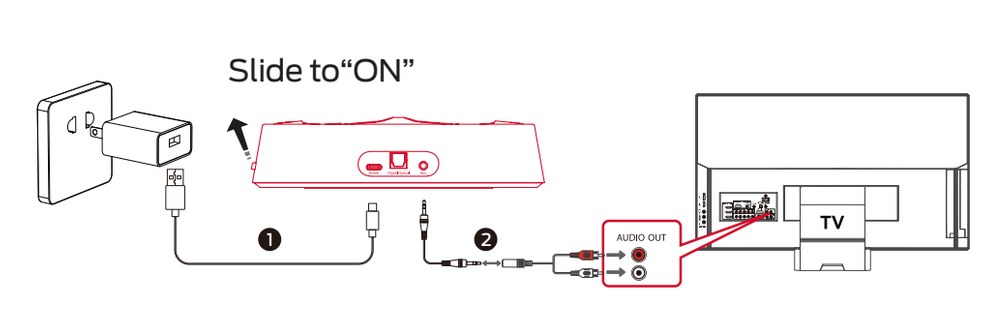



TV sound output Settings

The following lists the common sound output methods of three different brands of televisions. If the brand of the TV you purchased is not listed here, please refer to the user manual of your TV for detailed instructions. If the problem remains unsolved, please contact the provided after-sales email address: support@mct-audio.com

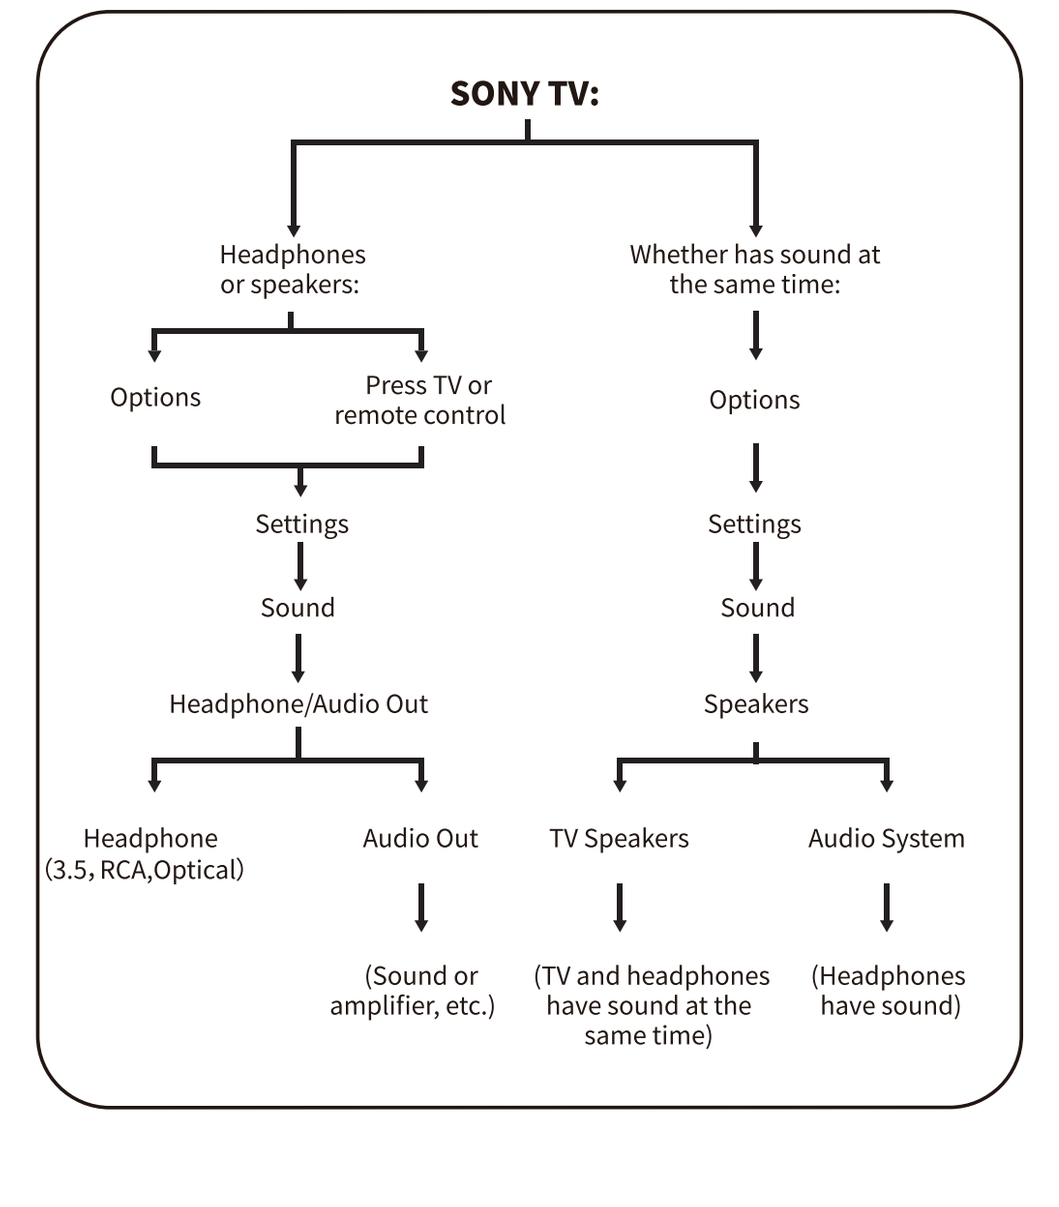

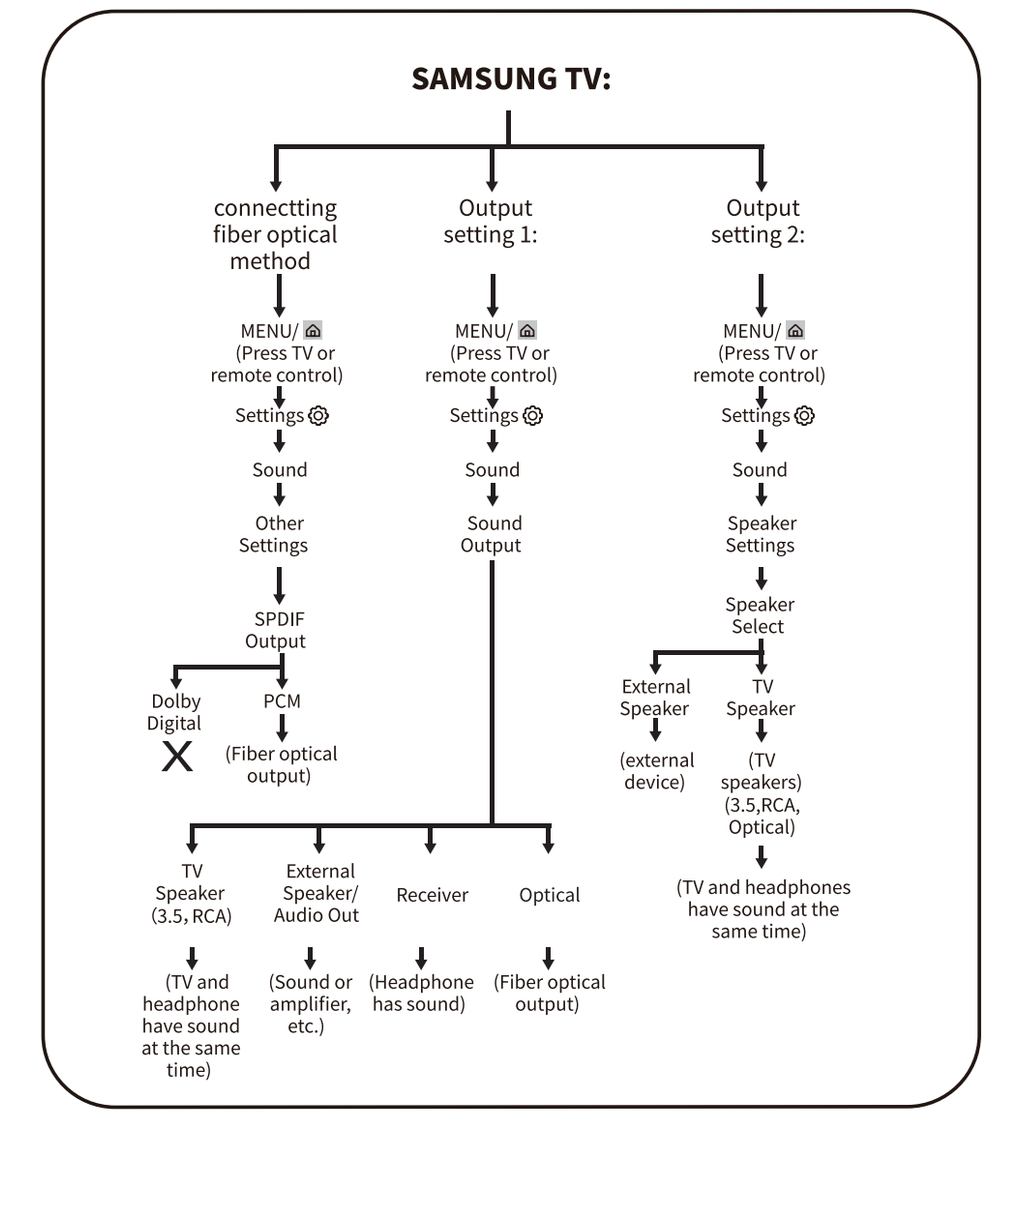

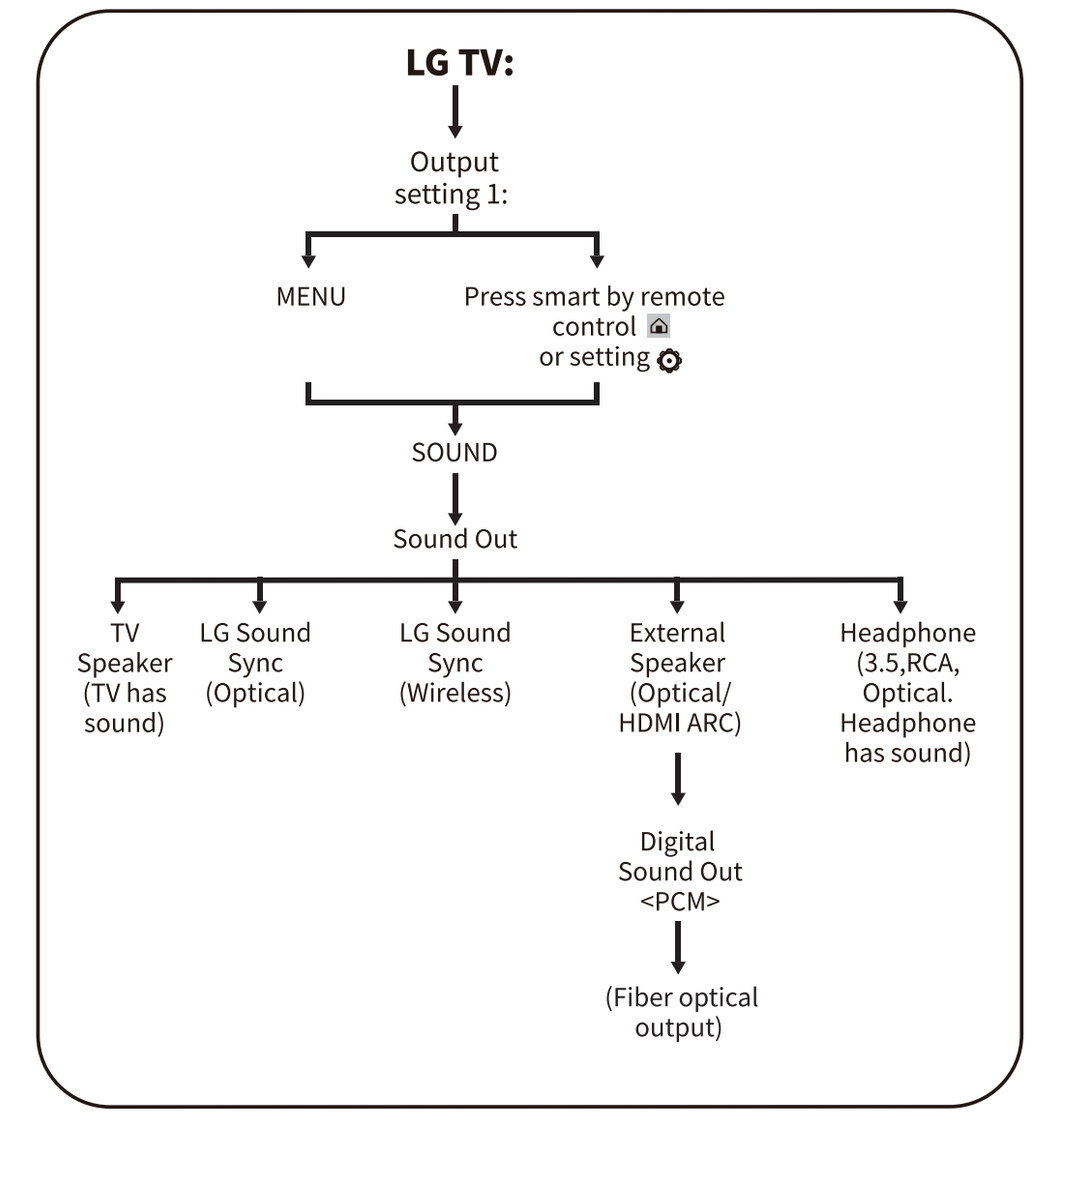

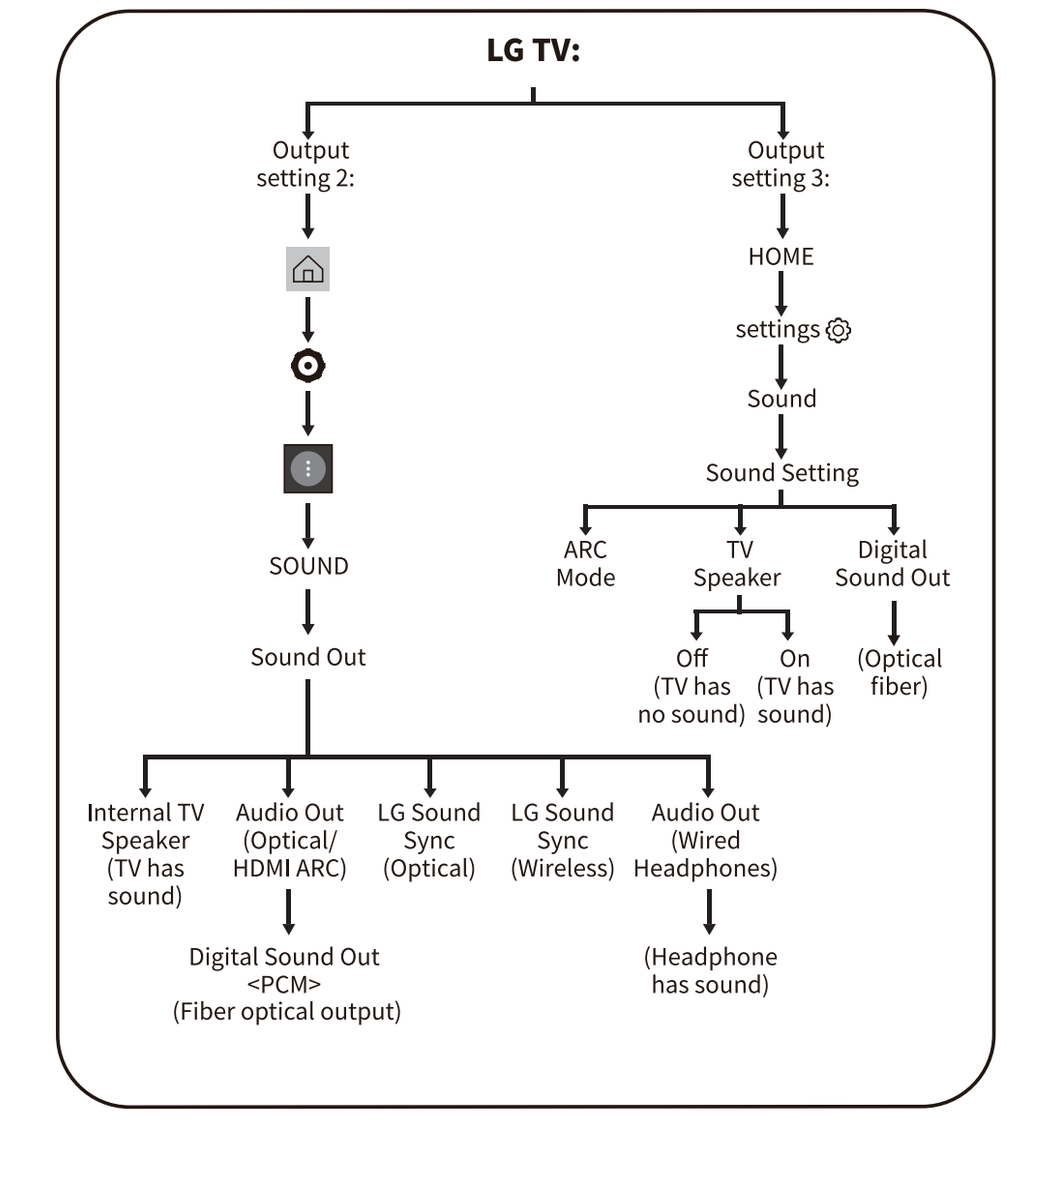

Responsible for your hearing

To avoid hearing loss, turn down the volume of the music player before wearing headset. After putting on the Headphone, slowly adjust the volume to a suitable level. The unit of measurement for noise is (db). Long-term exposure to 85db or higher noise environment may cause hearing loss gradually. Monitor usage; hearing loss is the result of too much noise and time. The louder the sound, the more time to reduce exposure to noise. The softer the voice, the longer you can listen. Please visit the Consumer Electronics Association website (www.ce.org) to learn how to establish a safe listening level and review other important safety guidelines. For important information on how to prevent noise-induced hearing loss (NIHL) and a complete list of what noise can cause hearing loss, please refer to the website of the Foundation for the Study of the Hearing Impairment: www.drf.org.

Battery usage note

· There is an explosion risk if the battery is not replaced properly. Batteries can only be replaced with batteries of the same type or equivalent. It is not recommended to replace the battery without permission, but it can be returned to the manufacturer for replacement.
· The cell [battery pack or battery pack and] shall not be exposed to conditions such as sunlight, fire or similar overheating.

FCC STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. lf this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received. Including interference that may cause undesired operation.
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.
FCC ID: 2AVD2-MH22258

IC CAUTION

Radio Standards Specification RSS-Gen, issue 5
- English:
This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada’s licence-exempt RSS(s). Operation is subject to the following two conditions:
This device may not cause interference.
This device must accept any interference, including interference that may cause undesired operation of the device.

RF exposure statement:
The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.

- French:
Cet appareil contient des émetteurs / récepteurs exemptés de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes:
Cet appareil ne doit pas causer d'interférences.
Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.

Déclaration d'exposition RF:
L'appareil a été évalué pour répondre aux exigences générales d'exposition aux RF. L'appareil peut être utilisé dans des conditions d'exposition portable sans restriction.
IC: 28087-MH22258

75X95MM 105G双胶+K+186C印刷+风琴折