

Mini PC Manual

Manual Mini PC



HYUNDAI
TECHNOLOGY,
INC.

FCC Warning

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

SAFETY & WARNINGS

Please read all instructions in this user guide carefully before using the PC for the first time. Keep this guide for future reference.

GENERAL WARNINGS


- Handle the PC with care and inspect it regularly to ensure it remains in proper working condition.
- If the PC, power cord, or plug show any signs of damage, stop using the device immediately and contact customer support for assistance.
- Do not attempt to modify, repair, or alter any features or functions of this PC.
- This PC contains small CMOS batteries on the motherboard. Do not attempt to replace these batteries yourself. Contact technical support for assistance.
- Avoid using the PC in environments where it may come into contact with liquids. If any liquid spills on or touches the device, discontinue use immediately.
- Do not expose the PC to strong artificial lighting or direct sunlight.
- Do not place objects directly on the top or sides of the PC, as this can obstruct airflow and interfere with the cooling system.
- In the event of a sudden power outage while the PC is in use, the hard drive may be affected. Once power is restored, it is recommended to run a disk scan to check for potential errors.
- When connecting or disconnecting cables, do not forcibly pull on them. Gently handle connectors to avoid damaging ports or cables.
- Images included in this user guide are for reference purposes only.
- If the PC will not be used for an extended period, unplug it and store it in a safe, dry location.

COMPONENTS

- Mini PC
- Power Adapter
- User manual
- VESA Mount and screws


OVERVIEW

1	Power button	8	RJ45
2	Micro SD	9	USB
3	3.5mm audio out	10	USB
4	VGA	11	USB
5	DC IN	12	USB
6	HDMI	13	TYPE-C
7	HDMI	14	VESA mounting holes

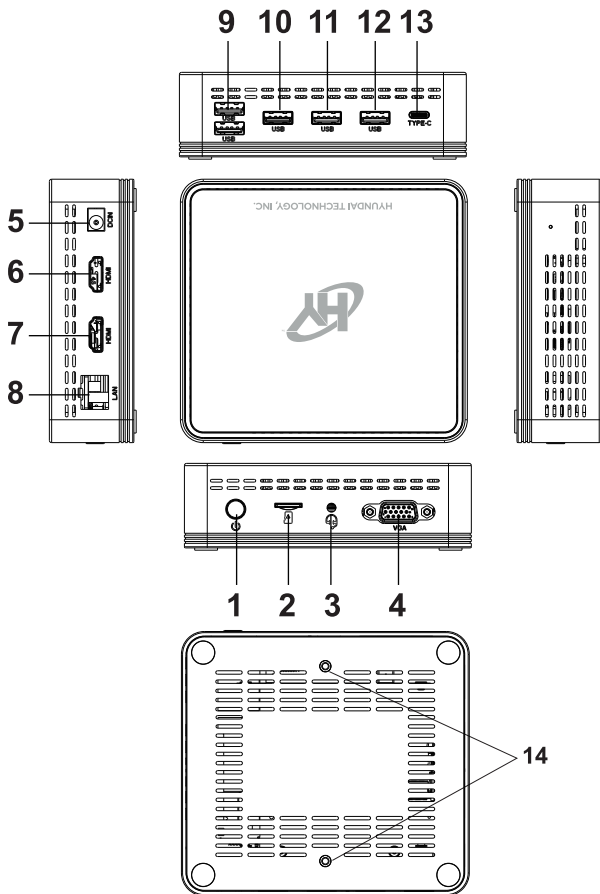

INSTALLATION

1. Turn on the TV or monitor and change the video output to HDMI.
2. Connect one end of an HDMI cable (not supplied) into an HDMI port on the PC. Connect the other end of the cable to the HDMI port on your TV/monitor.
3. Plug one end of the power adapter into a wall socket, then plug the other end into the DC input on the PC.
4. Press the power button and the PC will start.
5. You may now connect a wired or wireless keyboard and mouse via the USB ports and begin use.

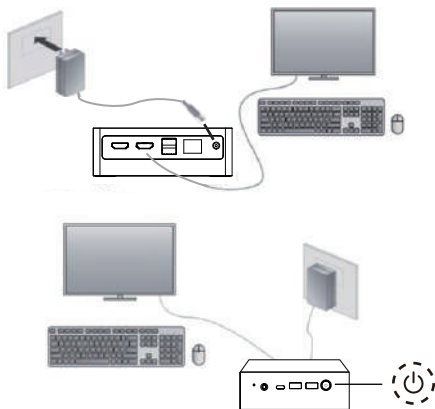

Accessing the BIOS

When the laptop is booting up, press the ESC key. This will enable users to modify advanced computer settings.

Reset

If the PC must be factory reset, use a pin (not supplied) to press and hold the reset button for a few seconds. The PC will then reset and restart.

USING Windows 11 Home S Mode

When the laptop is turned on for the first time, you may be asked to set up Windows 11. Follow the on-screen prompts to complete the setup.

Desktop: Once setup has finished, the laptop will boot onto the desktop. There may be icons on the desktop. These act as shortcuts to access applications. They can be accessed by double-clicking on the shortcut.



HYUNDAI
TECHNOLOGY,
INC.

www.HyundaiTechnology.com

Start menu: Click on the Windows icon at the bottom of the screen to bring up the start menu.


Apps already installed on the computer can be accessed via the start menu. Recently used apps will be listed under the 'Recent' heading in the start menu for easy access.

More apps can be installed via the Microsoft Store.




Note:
You may need to log into your Microsoft account for programs to run with full compatibility.

Notification Menu: Click the date/time (bottom right) to open the notification center, where you can view system alerts and quickly access settings like Wi-Fi, Bluetooth, or brightness.

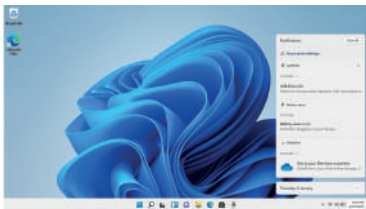

Multitasking To split the screen:

1. Drag a window to one side of the screen until it occupies half.
2. Select another window to fill the other half.

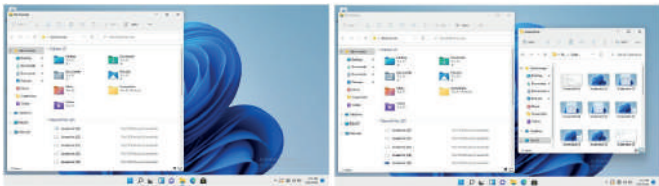

Sleep, Restart, and Shutdown

1. Click the Windows button. Then click the power icon.
2. Select "Sleep," "Restart," or "Shut Down" as needed.



To wake from sleep mode, briefly press the power button. If unresponsive, press and hold the button to force shutdown, then turn it on again.

SPECIFICATIONS

Power input	DC IN, 12V/3A
Dimensions	125.6*115.3*37mm
Weight	340g
System	
CPU	Intel® Gemini Lake Refresh N4020
CPU speed	1.1 GHz
Operating system	Windows 11 Home S Mode
GPU	Intel® UHD Graphics 600
Memory	4GB DDR4
Storage capacity	128GB
Expandable SSD	1* M.2 sata ssd
microSD card support	Max 512GB
Bluetooth	Yes, V4.2
Ethernet (RJ45)	Yes
Wi-Fi connectivity	802.11 a/b/g/n/ac, hasta 2.4GHz y 5GHz
Ports	
Micro SD card up to 512GB	x1
USB 3.0	x3
USB2.0	x2
Combo Jack	x1
DC 5.5mm	x1
HDMI 1.4 Type A	x2
Type-C Data Only	x1
VGA	x1
RJ45 1000M	x1



HYUNDAI
TECHNOLOGY,
INC.

www.HyundaiTechnology.com

SEGURIDAD Y ADVERTENCIAS

Lea cuidadosamente todas las instrucciones de esta guía del usuario antes de utilizar la PC por primera vez. Conserve esta guía para futuras consultas.

⚠ ADVERTENCIAS GENERALES


- Maneje la PC con cuidado y realice inspecciones periódicas para asegurarse de que se mantenga en condiciones óptimas de funcionamiento.
- Si la PC, el cable de alimentación o el enchufe muestran signos de daño, deje de usar el equipo de inmediato y comuníquese con el servicio de atención al cliente.
- No intente modificar, reparar o alterar ninguna de las funciones o características de esta PC.
- Esta PC contiene pequeñas baterías CMOS en la placa base. No intente reemplazarlas usted mismo. Comuníquese con el soporte técnico para recibir asistencia.
- Evite utilizar la PC en entornos donde pueda estar en contacto con líquidos. Si algún líquido se derrama sobre el equipo o entra en contacto con él, interrumpa su uso de inmediato.
- No exponga la PC a luces artificiales intensas ni a la luz solar directa.
- No coloque objetos directamente sobre la parte superior o los laterales de la PC, ya que esto puede obstruir el flujo de aire e interferir con el sistema de refrigeración.
- En caso de un corte repentino de energía mientras la PC está en uso, el disco duro puede verse afectado. Una vez restablecida la energía, se recomienda ejecutar un escaneo del disco para verificar posibles errores.
- Al conectar o desconectar cables, no los tire con fuerza. Manipule los conectores con cuidado para evitar daños en los puertos o cables.
- Las imágenes incluidas en esta guía del usuario son solo de referencia.
- Si no va a utilizar la PC durante un período prolongado, desenchúfela y guárdela en un lugar seguro y seco.

COMPONENTES

- Mini PC
- Adaptador de corriente
- Manual del usuario
- Montaje VESA y tornillos


PRODUCTO

1	Botón de encendido	8	RJ45
2	Micro SD	9	USB
3	Salida de audio 3.5mm	10	USB
4	VGA	11	USB
5	DC IN	12	USB
6	HDMI	13	TIPO-C
7	HDMI	14	Orificios de Montaje VESA

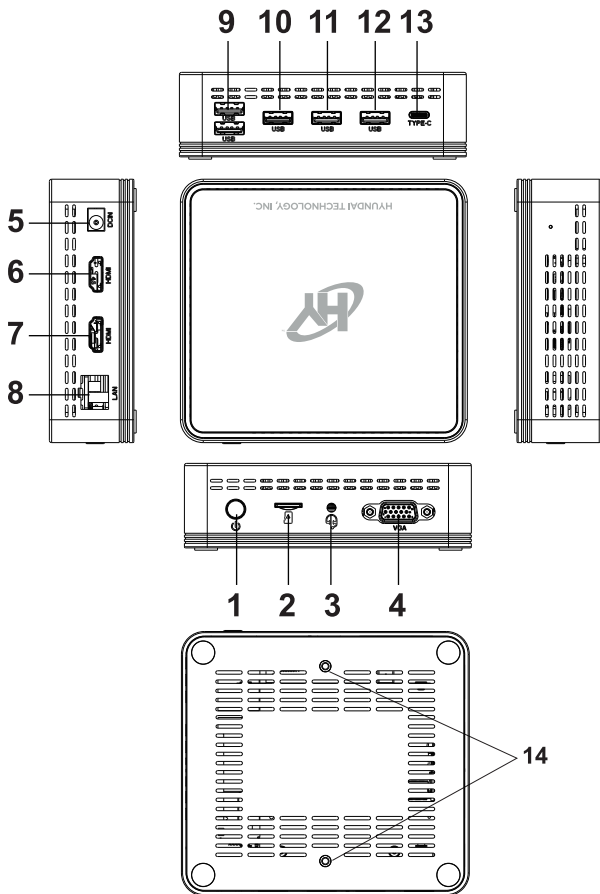

INSTALACIÓN

1. Encienda el televisor o monitor y cambie la salida de video a HDMI.
2. Conecte un extremo de un cable HDMI (no incluido) al puerto HDMI de la PC. Luego, conecte el otro extremo al puerto HDMI del televisor o monitor.
3. Enchufe un extremo del adaptador de corriente a una toma de corriente, y el otro extremo al conector DC IN de la PC.
4. Presione el botón de encendido para iniciar la PC.
5. Ahora puede conectar un teclado y un mouse (alámbricos o inalámbricos) a través de los puertos USB y comenzar a utilizar el equipo.

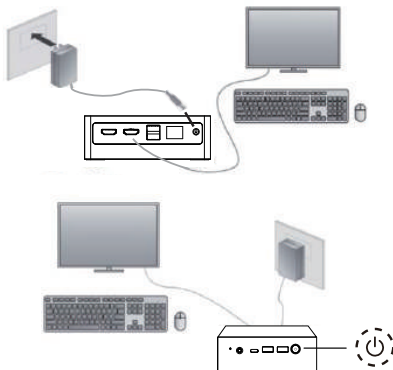

Acceder

Durante el arranque del equipo, presione la tecla ESC. Esto permitirá al usuario modificar configuraciones avanzadas del sistema.

Resetear

Si es necesario restablecer la PC a su estado de fábrica, utilice un objeto puntiagudo (no incluido) para presionar y mantener oprimido el botón de reinicio durante unos segundos. La PC se restablecerá y se reiniciará automáticamente.

USO DE Windows 11 Home S Mode

Cuando encienda la laptop por primera vez, es posible que se le solicite configurar Windows 11. Siga las instrucciones en pantalla para completar el proceso de configuración.


Escritorio: Una vez finalizada la configuración, la laptop iniciará directamente en el escritorio. Es posible que haya íconos visibles en él; estos funcionan como accesos directos a diferentes aplicaciones y pueden abrirse haciendo doble clic sobre el ícono correspondiente.

Menú de Inicio: Haz clic en el ícono de Windows ubicado en la parte inferior de la pantalla para abrir el menú de inicio. Desde allí, puedes acceder a las aplicaciones que ya están instaladas en la computadora. Las aplicaciones usadas recientemente aparecerán bajo el encabezado "Recientes" para facilitar su acceso. También puedes instalar más aplicaciones a través de la Microsoft Store.




Nota:
Es posible que necesite iniciar sesión en su cuenta de Microsoft para que algunos programas funcionen con total compatibilidad.

Centro de Notificaciones: Haz clic en la fecha y hora (esquina inferior derecha) para abrir el centro de notificaciones, donde podrás ver alertas del sistema y acceder rápidamente a configuraciones como Wi-Fi, Bluetooth o el brillo de la pantalla.

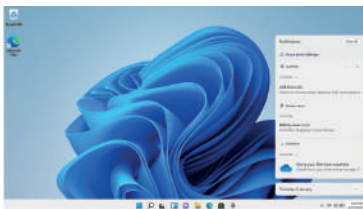

Multitareas Para dividir la pantalla:

1. Arrastra una ventana hacia un lado de la pantalla hasta que ocupe la mitad.
2. Luego selecciona otra ventana para que ocupe la otra mitad de la pantalla.

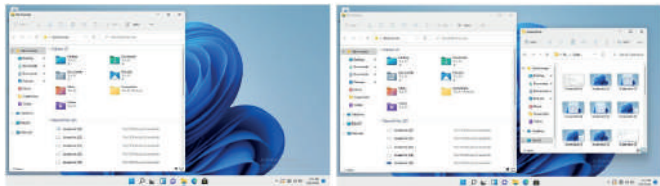

Suspender, Reiniciar y Apagar

1. Haz clic en el botón de Windows, luego haz clic en el ícono de encendido.
2. Selecciona "Suspender", "Reiniciar" o "Apagar" según sea necesario..

Botón de
encendido



Para reactivar la PC desde el modo de suspensión, presiona brevemente el botón de encendido. Si no responde, mantén presionado el botón para forzar el apagado y luego vuelve a encenderla.

ESPECIFICACIONES

Entrada de energía	DC IN, 12V/3A
Dimensiones	125.6*115.3*37mm
Peso	340g
Sistema	
Procesador (CPU)	Intel® Gemini Lake Refresh N4020
Velocidad del procesador	1.1 GHz
Sistema operativo	Windows 11 Home S Mode
Procesador gráfico (GPU)	Intel® UHD Graphics 600
Memoria RAM	4GB DDR4
Capacidad de almacenamiento	128GB
SSD expandible	1* M.2 sata ssd
Compatibilidad con microSD	Máx 512GB
Bluetooth	Sí, V 4.2
Ethernet (RJ45)	Sí
Conectividad Wi-Fi	802.11a/b/g/n/ac, hasta 2.4GHz y 5GHz
Puertos	
Tarjeta MicroSD hasta 512GB	x1
USB 3.0	x3
USB 2.0	x2
Jack (audio/micrófono)	x1
DC 5.5 mm	x1
HDMI Tipo A	x2
Tipo-C (solo datos)	x1
VGA	x1
RJ45 1000 M	x1



HYUNDAI
TECHNOLOGY,
INC.

www.HyundaiTechnology.com.mx



HYUNDAI
TECHNOLOGY,
INC.