# User Manual

Compact Sound Bar 2.1ch

Thank you for purchasing our product. Please read this manual carefully before connection and operation. Please keep it for future reference.

## WHAT'S IN THE BOX

CONTENTS




## PARTS AND CONTROLS

### Sound Bar

Front

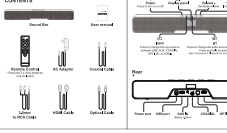


Rear




### Remote Control

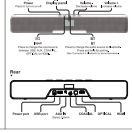


## CONNECTIONS

### Connection 1: Optical

1. Remove the protective cap from both ends of the optical cable.

2. Insert one end of the cable into your TV's **OPTICAL OUT** port.

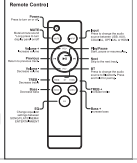**CAUTION:** Make sure you have removed the protective cap from both ends of the optical cable before connecting the cable with the cap on or in the wrong orientation can damage the cable and/or the ports.

3. Align one end of the cable with your TV's **Optical OUT** port and insert the cable.

4. Align the cable with the Sound Bar's **OPTICAL** port and insert the cable.




**NOTE:** The port has a hinged door that swings inward when inserting the cable.

5. Firmly push the cable into the port until you hear or feel a click.

6. Press **SOURCE** on the Sound Bar or remote control repeatedly to select the Sound Bar input.

### Connection 2: Optical

1. Insert one end of the Coaxial cable into your TV's **COAXIAL OUT**.

2. Insert the other end of the cable into the **COAXIAL** port on the Sound Bar.

3. Press **SOURCE** on the Sound Bar or remote control repeatedly to select the **COAXIAL** input.




### Connection 3: HDMI ARC

1. Insert one end of the **HDMI** cable into your TV's **HDMI ARC** port.

**NOTE:** If you don't connect to your TV's HDMI ARC or Audio Return Channel port, you won't hear audio from the Sound Bar. If your TV doesn't have an HDMI ARC port, connect the Sound Bar using the provided Optical, Coaxial or RCA cable.

2. Insert the other end of the cable into the **HDMI** port on the Sound Bar.

If HDMI connection is detected, the sound bar will automatically switch to HDMI input.

3. Press **SOURCE** on the Sound Bar or remote control repeatedly to select the HDMI input.




**NOTE:** Using your TV's HDMI ARC or Audio Return Channel port allows you to use your TV remote to control the power, volume, and mute functions of the Sound Bar.

### Connection 4: RCA

1. Insert one end of RCA cable into your TV's **RCA** (Audio Out) jack.

2. Insert the other end of the cable into the **AUX IN** port on the Sound Bar.

3. Press **SOURCE** on the Sound Bar or remote control repeatedly to select the AUX IN (**AUX**) input.




### Connection 5: Bluetooth

You can listen to music stored on a Bluetooth device such as a smartphone or tablet through the Sound Bar by connecting the Sound Bar and the Bluetooth device with the BLUETOOTH function.

**Pairing a Bluetooth device for the first time**

1. Press **BT** on the Sound Bar or remote control to switch the input source to Bluetooth (**BT**).

Automatically switches to pairing mode the first time it is used.

The display panel blinks when this unit is in pairing mode.

2. Activate the Bluetooth settings on your Bluetooth device.

3. Select "KOOSO" from the list of devices displayed on the screen of the Bluetooth device.

The display panel stops blinking and the device and the Bluetooth device are paired.

**Pairing with other Bluetooth devices**

1. Press **BT** on the Sound Bar or remote control to switch the input source to Bluetooth (**BT**).

2. Activate the Bluetooth settings on your Bluetooth device.

3. Press and hold **BT** on the Sound Bar or remote control to find the display panel blinks.

4. Select "KOOSO" from the list of devices displayed on the screen of the Bluetooth device.

### Connection 6: AUX IN

1. Insert one end of the 3.5mm audio cable into the audio output/headphone output on your TV, MP3 player or other audio source.

2. Insert the other end of the cable into the **AUX IN** port on the Sound Bar.

3. Press **SOURCE** on the Sound Bar or remote control repeatedly to select the AUX IN input.

**TIP:** The Sound Bar supports FEATURES ON system and IMPLEMENTATION CONDITIONS.




### Connection 7: USB

1. Insert your USB Qd device to the USB port on the Sound Bar.

2. If USB is detected, music start playing automatically.

3. Press **►||** button or remote control to play music. Use back USB device to control.

**TIP:** The Sound Bar supports FEATURES ON system and IMPLEMENTATION CONDITIONS.




## Troubleshooting

If you experience problems with the Sound Bar:

- Make sure the speaker is connected to a live AC (mains) outlet.
- Secure all cables and make sure all connections are correct.
- Check the input source.
- If you still have issues, see the table below to identify symptoms and solutions to common problems.

| SYMPTOM | SOLUTION |
|---|---|
| No power | • Check that the power cord is securely inserted into the AC outlet and the Sound Bar.<br>• Disconnect the AC power cord and wait a few seconds before reconnecting. Press the power button to turn on the unit. |
| No sound | • Make sure volume is not turned down or muted.<br>• Check that the correct input source is selected.<br>• Ensure the cables are securely connected. |
| Bluetooth device cannot connect to Sound Bar | • Check that Bluetooth is turned on.<br>• Remove the Sound Bar from your Bluetooth device's list of paired devices.<br>• Bring the Bluetooth device close to the Sound Bar. |
| Sound has stopped playing from the Sound Bar | • Check that your Bluetooth device is connected to the Sound Bar.<br>• Check that the Bluetooth device is not too far away from the Sound Bar. Move it closer to the Sound Bar. |
| Remote control does not function | • Check that the battery polarity (+ and -) is inserted correctly.<br>• Replace the batteries with new ones. |
| Audio and sound distorting | • Lower the volume. |

## Warranty

### What is covered by this warranty

KOOSODIO warrants your product against defects in materials and workmanship when used normally in accordance with KOOSODIO's user guides and manuals for a period of ONE YEAR (1) from the date of original retail purchase by the end-user purchaser.

### What is not covered by this warranty

This warranty does not cover defects or damage arising from improper use, modification, tampering, normal wear and tear, or use in violation of instructions furnished by us. Unauthorized repair, modification or misuse of your product voids this warranty.

### How to obtain warranty service

Before obtaining warranty service, you may visit KOOSODIO.com/support for additional help and troubleshooting. To obtain warranty service, contact KOOSODIO Customer Support by going to KOOSODIO.com and clicking Contact Us.

## Specifications

| | |
|---|---|
| Model Name | KOOSODIO_S120ch |
| Sound Bar | 80 mm*4Ω |
| Frequency Response | 20Hz-20KHz |
| USB | 5Vdc |
| Bluetooth | 5.4 |
| Dimension (W*H*D) | 34.7*4.6*7.48 IN |
| Net Weight | 4.7lb |

## SAFETY INFORMATION

### Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Cleaning: only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

## Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**NOTE:** This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

**RF Exposure Statement**

To maintain compliance with FCC's RF Exposure guidelines. This equipment should be installed and operated with minimum distance of 20cm the radiator your body.This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

KOOSODIO

Email: Support@koosodio.com

## Register The Warranty

Your Amazon return will be expired in **30 days!**

But don't worry, we have a registered warranty benefit for you!

Register your product within **14 days** of purchase to upgrade **1 YEAR FREE REPLACEMENT!**

Scan the QR code Now!