


English

Product Appearance

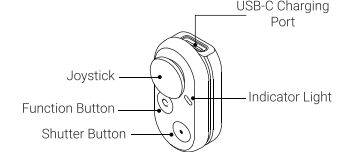


Specs

Model	CINSHAVS
Strap Diameter	1.6in (4cm), 2in (5cm)
Power Input	5V ≍ 1A
Operating Temperature	14°F to 113°F (−10°C to 45°C)
Charging Temperature	32°F to 113°F (0°C to 45°C)
Bluetooth	Operating Frequency: 2402~2480MHz Transmitter Power (EIRP): < 10dBm
Battery	Limited Charge Voltage: 4.2V Nominal Voltage: 3.7V Rated Capacity: 60mAh Rated Energy: 0.222Wh


How to Use

- Attach to a selfie stick with a magnetic notch
Using the Foldable Selfie Stick as an example:

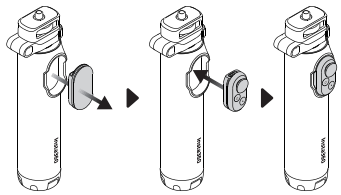

- Attach to a target position

With the included Smart Remote Base and strap, you can attach the Smart Remote to an object, such as a selfie stick or bike handlebar. You can then rotate the Smart Remote as needed.

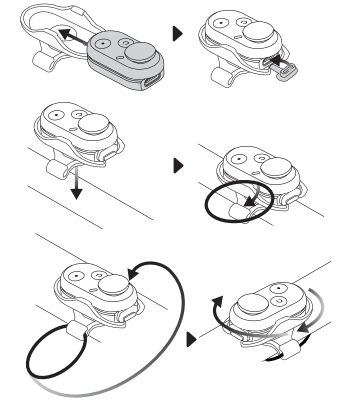

- Connect camera

- Press the Shutter Button on the Smart Remote for 2s to begin pairing.
- Swipe down on the camera's touchscreen and navigate to Accessories -> Add Bluetooth -> Select your Smart Remote.

- Disconnect / Delete camera

Swipe down on the camera's touchscreen, then navigate to Accessories -> Bluetooth Accessories -> Select your Smart Remote -> Disconnect / Delete Device.

Indicator Light Description

- Flashing slowly:** Flashing once every two seconds
- Flashing:** Flashing once, twice, or three times every one second
- Flashing rapidly:** Flashing five times every one second

Scenario	Indicator	Smart Remote Status
On / Off	Flashing blue 3 times Flashing blue 3 times, then off	Powered on Powered off
Connect camera	Flashing blue Solid blue	Disconnected / Waiting for connection Connected to a camera
Photo and video shooting	Flashing blue slowly once Flashing red slowly	Photo countdown Recording video
Mode switching	Flashing blue twice	Switching between shooting modes
In InstaFrame Mode	Indicator flashing rapidly Indicator turning green Indicator turning yellow	Camera in motion Tracking Target lost
Battery level (No camera connected)	Solid yellow Solid blue	< 10% ≥10%
Charging (No camera connected)	Solid red Solid green	Charing in progress Fully charged

Button Description

When the Smart Remote is connected to a camera, you can control the camera using the buttons.

Smart Remote Status	Camera Status	Shutter Button Action	Result
Powered off	Powered off	Long press for 2s	Power on the camera
		Double-press	Take a quick shot
Powered on	Powered on	Press	Works as the camera's Shutter Button
		Long press for 2s	Power off the camera and Smart Remote

Smart Remote Status	Camera Status	Function Button Action	Result
Powered off	Powered off	Press	The indicator displays battery level.
		Press	• Switch between video and photo in the current lens mode (when not recording). • Mark a moment as a highlight while recording.
Powered on	Powered on	Double-press	Switch between perspectives or enable camera movement (customizable on the Smart Remote settings page).

Note: The following table describes the Smart Remote's Joystick when it is connected to a 360 camera. For other types of cameras, check the Joystick's function on the camera's Smart Remote settings page.

Smart Remote Status	Camera Status	Joystick Action	Result
		Press	Turn on/off tracking
		Double-press	Switch between Joystick functions in some shooting modes
		Tilt the Joystick	Frame your shot in 360° lens mode
		Tilt up and down	Zoom in/out image

Firmware Update

Open the Insta360 app, then navigate to Me -> Accessory Settings, search for and connect to your Smart Remote. Then update the firmware as prompted by the app.

Notes

- The product contains magnets. Keep them away from pacemakers and other devices to prevent interference.
- For camera compatibility, please check Insta360's official website and keep the Smart Remote's firmware up to date.
- When the Smart Remote is attached to a selfie stick or bike handlebars, ensure the strap is secure and avoid excess speed to prevent the remote from falling off.
- This product is splash-resistant only. If it gets wet, dry it as soon as possible.
- Avoid dropping, crushing, or throwing the product. Don't place heavy items on it.
- Do not disassemble the product in any way or make any DIY modifications.
- If the product remains unused for an extended period, charge it and power it on occasionally to prevent battery damage from complete discharge.
- Do not clean the product or USB-C Port with any cleaning products or liquid detergent, as it could corrode or rust the Smart Remote. If you need to clean it, use a soft, dry cloth.

Disclaimer

By using this product, you acknowledge and agree to this disclaimer. Inspect the product before each use, and do not use it if damaged. Except for defects covered by applicable law, you are solely responsible for your actions and any consequences arising from the use of this product. To the extent permitted by law, Insta360 reserves the right to interpret and amend this disclaimer.


After-Sales Service

The warranty period of the attached product is 1 year from the original retail purchase. Warranty service may vary according to the applicable laws of your state or jurisdiction. For detailed warranty policies, please visit <https://www.insta360.com/support/aftersales?name=repair>.



简体中文


产品外观

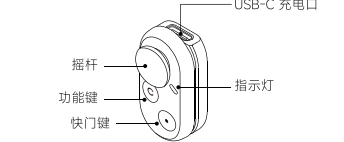

规格	
型号	CINSHAVS
绑带直径	4cm、5cm
电源输入	5V ≍ 1A
工作环境温度	−10°C ~45°C
充电环境温度	0°C ~45°C
	工作频率：2402~2480MHz 发射功率（EIRP）：< 10dBm
蓝牙	充电限制电压：4.2V 标称电压：3.7V 额定容量：60mAh 额定能量：0.222Wh
电池	


如何使用

- 安装至带磁吸槽的自拍杆上使用
以口袋折叠自拍杆为例

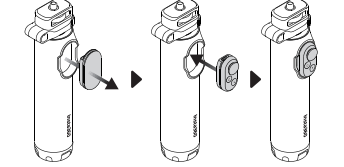

- 安装至目标位置上

通过随附的支架和绑带安装至自拍杆或车把等物体上，并根据需要旋转遥控器的角度。

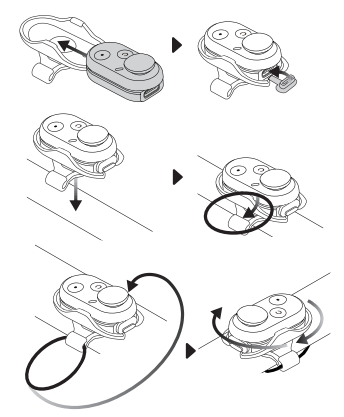

- 连接相机

- 长按遥控器上的快门键 2 秒开机进入配对状态。
- 在相机上下滑打开快捷菜单 -> 配件 -> 添加蓝牙配件 -> 选择您的智能摇杆遥控器。

- 断开 / 删除相机

在相机上下滑打开快捷菜单 -> 配件 -> 蓝牙配件列表 -> 点击您的智能摇杆遥控器 -> 断开连接 / 删除设备

指示灯说明

- 慢闪：2 秒钟闪烁 1 次
- 闪烁：1 秒钟闪烁 1 次、2 次或 3 次
- 快闪：1 秒钟闪烁 5 次

场景	指示灯	遥控器状态
开关机	蓝灯闪烁 3 次 蓝灯闪烁 3 次后熄灭	开机 关机
连接相机	蓝灯闪烁 蓝灯常亮	断开 / 等待连接 已连接相机
拍照和录像	蓝灯闪烁后快闪 蓝灯慢闪 1 次 红灯慢闪	拍照倒计时 拍照 录像中
切换模式	蓝灯闪烁 2 次	切换拍摄模式
云台模式下	当前指示灯快闪 当前指示灯变绿 当前指示灯变黄	运镜中 追踪中 追踪目标丢失
电量 (未连接相机)	黄灯常亮 蓝灯常亮	< 10% ≥ 10%
充电 (未连接相机)	红灯常亮 绿灯常亮	充电中 已充满

按键说明

将相机连接至智能摇杆控制器后，可通过遥控器上的按键操控相机。

遥控器状态	相机状态	快门键动作	结果
关机	关机	长按 2 秒 双击	相机开机 相机快速拍摄
开机	开机	单击 长按 2 秒	功能同相机快门键 相机和遥控器关机

遥控器状态	相机状态	功能键动作	结果
关机	关机	单击	指示灯显示遥控器电量
开机	开机	单击	• 非录像时，相机当前镜头模式下切换录像 / 拍照 • 录像时，标记高光时刻
		双击	切换视角或开始运镜（可在遥控器属性页设置）

注：下表描述遥控器搭配全景相机使用时摇杆的功能，其他相机请查看相机的遥控器属性页。

遥控器状态	相机状态	摇杆动作	结果
		单击	开启 / 关闭追踪
		双击	部分拍摄模式下，切换摇杆功能
		拨动	360 取景
		上下拨动	画面缩放

固件升级

进入 Insta360 App -> “我的” -> “配件管理”，搜索并连接遥控器。连接成功后，如有新版固件，App 会弹出升级提示。请根据提示完成遥控器固件升级。

注意事项

- 本产品含磁铁，请远离心脏起搏器等易受干扰设备。
- 本产品适配机型将持续更新，请访问官方商城查询最新适配机型。
- 遥控器绑至自拍杆或车把上时，请确保已绑紧，且需避免高速行驶或其他剧烈运动，以避免其掉落。
- 产品仅防泼溅，如被溅水，需尽快将其擦干。
- 禁止机械撞击、碾压、或抛掷产品。请勿在产品上放置重物。
- 禁止以任何方式拆卸产品。
- 若长时间不使用也请定时充电、避免电池过放损坏。
- 请勿对其使用任何带清洁功能的液体擦拭。USB-C 接口，避免接口腐蚀生锈，影响遥控器的正常工作。建议使用柔软的干布清洁。

免责声明

使用本产品即视为同意本声明。每次使用前请检查，破损请勿使用。除经依法认定的产品质量问题外，使用者应自行承担因使用行为及其后果产生的责任。在国家法律法规范围内，影石 Insta360 保留本声明的解释及修改权。


售后服务

自您最初零售购入之日起，本产品的保修期为 1 年，不同国家和地区可能有所差异，请访问我们官网 <https://www.insta360.com/support/aftersales?name=repair> 了解您当地的详细售后服务流程和具体的保修条款，全面了解您的保修权益。



- ターゲット位置に取り付ける

付属のスマートリモコンベースとストラップを使用して、自撮り棒や自転車のハンドルバーなどのオブジェクトにスマートリモコンを取り付けることができます。その後、必要に応じてスマートリモコンを回転させることができます。

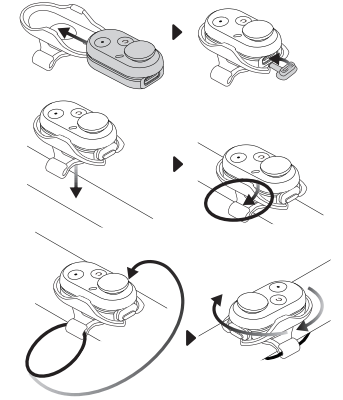

- カメラを接続する

- スマートリモコンのシャッターボタンを 2 秒間長押しして、ペアリングを開始します。
- カメラのタッチスクリーンを下にスワイプし、「アクセサリ」->「Bluetooth アクセサリを追加」->「スマートリモコン」を選択します。

- カメラの接続解除 / 削除


カメラのタッチスクリーンを下にスワイプし、「アクセサリ」->「Bluetooth アクセサリ」-> スマートリモコンを選択 -> 「中断連線 / 削除」。

インジケータランプの説明

- ゆっくり点滅：2 秒に 1 回点滅
- 点滅：1 秒に 1 回、2 回、または 3 回点滅
- 高速点滅：1 秒に 5 回点滅

日本語


製品外観

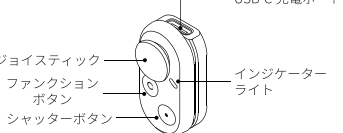

仕様	
型番	CINSHAVS
ストラップ直径	4cm、5cm
入力	5V ≍ 1A
動作温度	−10°C ~45°C
充電温度	0°C ~45°C
Bluetooth	動作周波数：2402~2480MHz 輻射電力（EIRP）：< 10dBm
	充電制限電圧：4.2V 公称電圧：3.7V 定格容量：60mAh 定格エネルギー：0.222Wh
バッテリー	

使用方法

- マグネット式の溝がある自撮り棒に取り付ける
折りたたみ式自撮り棒を例として使用：

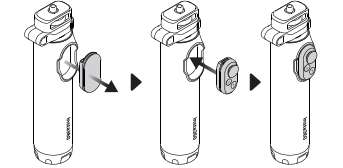

ボタンの説明

スマートリモコンがカメラに接続されているときは、ボタンを使用してカメラを操作できます。

スマートリモコンのステータス	カメラのステータス	シャッターボタンの操作	結果
電源オフ	電源オフ	2 秒間長押し 2 回押す	カメラの電源を入れる クイック撮影
電源オン	電源オン	押す 2 秒間長押し	カメラのシャッターボタンとして機能 カメラとスマートリモコンの電源を切る

スマートリモコンのステータス	カメラのステータス	機能ボタンの操作	結果
電源オフ	電源オフ	押す	インジケータに電池残量が表示されます。
		押す	・現在のレンズモードで動画と写真を切り替えます（録画していないとき）。 ・録画中にハイライトとして瞬間をマークします。
電源オン	電源オン	2 回押す	視点の切り替え、またはカメラの移動を有効にします（スマートリモコンの設定ページでカスタマイズ可能）。

注意：以下の表は、360 度カメラに接続されているときのスマートリモコンのジョイスティックについて説明しています。その他のタイプのカメラについては、カメラのスマートリモコン設定ページでジョイスティックの機能を確認してください。

シナリオ	インジケータ	スマートリモコンのステータス
電源オン / オフ	ブルーで 3 回点滅 ブルーで 3 回点滅した後、消灯	電源オン 電源オフ
カメラを接続	ブルーで点滅 ブルー点灯	未接続 / 接続待機中 カメラに接続済み
写真・動画撮影	ブルーゆっくり 1 回点滅 赤ゆっくり点滅	写真撮影中 動画撮影中
モード切替	ブルー 2 回点滅	撮影モードの切り替え
インスタフレームモードで	インジケータが緑色に点灯 インジケータが黄色に点灯	カメラ移動中 トラッキング
バッテリー残量 (カメラ未接続)	黄色点灯 ブルー点灯	360° レンズモードでのショットフレーミング 画像のズームイン/ズームアウト
充電中 (カメラ未接続)	赤点灯 緑点灯	充電中 充電完了

ファームウェアのアップデート

Insta360 アプリを開き、「マイ」->「アクセサリマネジメント」に移動して、スマートリモコンを検索して接続してください。その後、アプリの指示に従ってファームウェアをアップデートしてください。

注意

- 本製品には磁石が含まれています。干渉を防ぐため、ペースメーカーやその他の機器から離して保管してください。
- カメラの互換性については、Insta360 の公式サイトを確認し、スマートリモコンのファームウェアを最新の状態に保ってください。
- スマートリモコンを自撮り棒や自転車のハンドルバーに取り付ける際は、ストラップがしっかりと固定されていることを確認し、リモコンが落下しないよう過度な速度は避けてください。
- 本製品は防滴仕様のみです。濡れた場合は、できるだけ早く乾かしてください。
- 製品を落としたり、押しつぶしたり、投げたりしないでください。また、その上に重いものを置かないでください。
- いかなる方法でも製品を分解したり、自身で改造を行