EAR0001_Panda_User manual

Revised by Intrawelt 04/05.08.22 - solo arabo 21.10.22

LAST MODIFIED DATE 21.10.22

printing technique: CMYK

DIE-CUT (not to be printed)

BeFree

Wireless earbuds
Écouteurs sans fil

Model: EAR0001

WIRELESS EARBUDS WITH CHARGING CASE (EN)

TECHNICAL SPECIFICATIONS
- PRODUCT CONTAINS AN INTEGRATED LITHIUM BATTERY WITH OVERCHARGE PROTECTION
- EARBUD BATTERY CAPACITY: 25 mAh
- CHARGING CASE BATTERY CAPACITY: 300 mAh
- WIRELESS OPERATING RANGE: 10 METRES / 11 YARDS
- WIRELESS VERSION: 5.1
- TYPE-C PORT (5V-1A)
- BATTERY VOLTAGE: 3.7V
- INPUT VOLTAGE: 5V
- SNR (SIGNAL-TO-NOISE RATIO): 96±3dB
- TRANSMISSION FREQUENCY: 2.4-2.48 GHz
- THD (TOTAL HARMONIC DISTORTION): ±3dB
- BATTERY LIFE: 4-5 HOURS OF MUSIC PLAY TIME AND/OR TALK TIME
- BATTERY LIFE IN STAND-BY MODE: UP TO 100 HOURS
- EARBUD CHARGING TIME: 1 HOUR
- CASE CHARGING TIME: 1.5 HOURS. WITH ONE FULL CHARGE OF THE CASE, YOU CAN CHARGE THE EARBUDS 2-3 TIMES.
- COMPATIBILITY: iOS AND ANDROID

DESCRIPTION OF COMPONENTS
1. CHARGING CASE
2. LED INDICATORS
3. EARBUDS
4. MICROPHONE
5. TOUCH SENSOR
6. USB CHARGING CABLE
7. STRAP
8. TYPE-C PORT

INSTRUCTIONS FOR USE
REMOVE THE PLASTIC TAB BEFORE USE.
TO SWITCH THE EARBUDS ON AND OFF:
TOUCH AND HOLD THE LEFT AND RIGHT EARBUD SENSOR UNTIL YOU HEAR THE WORDS "POWER ON" OR "POWER OFF". WE RECOMMEND SWITCHING THE EARBUDS OFF BEFORE STORING THEM IN THE CHARGING CASE.

HOW TO PAIR THE EARBUDS WITH THE DEVICE
- OPEN THE CASE AND REMOVE THE EARBUDS. THE EARBUDS TURN ON AND PAIR WITH EACH OTHER AUTOMATICALLY.
- ACCESS THE DEVICE TO WHICH YOU WANT TO CONNECT THE EARBUDS AND ACTIVATE THE WIRELESS FUNCTION OR PAIRING MODE.
- ACTIVATE THE SEARCH FOR THE EARBUDS ON THE DEVICE. ONCE THE SEARCH IS COMPLETE, "BE FREE" APPEARS IN THE DEVICE'S WIRELESS LIST. SELECT "BE FREE" TO PAIR.
- THE EARBUDS WILL PAIR WITH THE DEVICE AND ARE READY TO USE.

NOTE 1: IF THE PAIRING PROCESS IS UNSUCCESSFUL, PLACE THE EARBUDS IN THE CASE AND REPEAT THE ENTIRE PROCEDURE. MAKE SURE THAT THE EARBUDS AND THE CASE ARE CHARGED.
NOTE 2: ONLY ONE DEVICE AT A TIME CAN BE PAIRED TO THE EARBUDS. IF THERE IS ALREADY AN ACTIVE WIRELESS PAIRING WITH ANOTHER DEVICE, IT MUST FIRST BE DISCONNECTED.
NOTE 3: THE PAIRED DEVICE MUST BE IN CLOSE PROXIMITY TO THE EARBUDS TO PREVENT LOSING THE CONNECTION. IF THE ACTIVELY PAIRED DEVICE IS SWITCHED OFF OR TAKEN OUT OF RANGE, IT WILL DISCONNECT. WHEN THE DEVICE IS TURNED ON AGAIN OR WHEN THE DEVICE RETURNS WITHIN RANGE OF THE EARBUDS, THE CONNECTION IS AUTOMATICALLY RE-ESTABLISHED. TO ENABLE THIS AUTOMATIC CONNECTION, THIS FUNCTION MUST BE ACTIVATED ON THE DEVICE.
NOTE 4: THE EARBUDS ARE COMPATIBLE WITH SMARTPHONES, TABLETS, COMPUTERS AND OTHER DEVICES WITH WIRELESS TECHNOLOGY.

HOW TO RECHARGE THE EARBUDS
- THE EARBUDS MUST BE CHARGED FOR TEN MINUTES WHEN USED FOR THE FIRST TIME.
- WHEN THE DEVICE IS ALMOST OUT OF POWER, A VOICE WILL SAY "PLEASE CHARGE" THROUGH THE EARBUDS.
- PLACE THE EARBUDS IN THE CASE, WHERE THEY WILL AUTOMATICALLY START CHARGING.
- WHILE THE EARBUDS ARE CHARGING, A RED LED INDICATOR WILL LIGHT UP.
- WHILE THE EARBUDS ARE CHARGING INSIDE THE CASE, A BLUE LED INDICATOR WILL LIGHT UP BESIDE THE TYPE-C PORT ON THE CASE ITSELF.
- WHEN BOTH EARBUDS ARE FULLY CHARGED, THE TWO RED LED LIGHTS AND THE BLUE LED LIGHT ON THE CASE WILL GO OUT.

HOW TO RECHARGE THE CASE
THE CASE CAN BE RECHARGED USING THE CHARGING CABLE INCLUDED:
- INSERT THE TYPE C PLUG OF THE CHARGING CABLE INTO THE TYPE C PORT ON THE CASE.
- INSERT THE USB END OF THE CHARGING CABLE INTO THE USB PORT OF A COMPUTER OR AN AC/DC ADAPTER.
- WHILE THE CASE IS CHARGING, A LITTLE RED LIGHT WILL FLASH BESIDE THE TYPE-C PORT.

TO LISTEN TO AND SEE CONTENT
- TO PAUSE A SONG OR VIDEO, TAP THE LEFT OR RIGHT EARBUD SENSOR ONCE.
- TO RESUME A SONG OR VIDEO, TAP THE RIGHT OR LEFT EARBUD SENSOR ONCE.
- TO SKIP TO THE NEXT SONG OR VIDEO, TOUCH THE LEFT EARBUD SENSOR FOR TWO SECONDS UNTIL YOU HEAR THE BEEP.
- TO GO BACK TO THE PREVIOUS SONG OR VIDEO, TOUCH THE RIGHT EARBUD SENSOR FOR TWO SECONDS UNTIL YOU HEAR THE BEEP.
- TO ACTIVATE THE VOICE ASSISTANCE FUNCTION, IF AVAILABLE ON YOUR DEVICE, TAP THE RIGHT OR LEFT EARBUD SENSOR THREE TIMES.

TO ANSWER CALLS
- TO ANSWER A CALL, TAP THE LEFT OR RIGHT EARBUD SENSOR ONCE.
- TO END A CALL, TAP THE LEFT OR RIGHT EARBUD SENSOR ONCE.
- TO REJECT A CALL, DOUBLE-TAP THE LEFT OR RIGHT EARBUD SENSOR.
- TO CALL THE MOST RECENT NUMBER ON YOUR CALL LIST, DOUBLE TAP THE EARBUDS.

SAFETY INSTRUCTIONS
- DO NOT IMMERSE IN WATER OR OTHER LIQUIDS.
- TO PREVENT FIRES OR ELECTRIC SHOCK, DO NOT EXPOSE THE DEVICE TO RAIN OR MOISTURE.
- DO NOT EXPOSE THE DEVICE TO DRIPPING OR SPLASHING AND DO NOT PLACE IT IN HUMID AREAS SUCH AS A BATHROOM.
- DO NOT EXPOSE THE DEVICE TO DIRECT SUNLIGHT OR HEAT SOURCES (SUCH AS HEATING, HOBS, OVENS, ETC.).
- DO NOT EXPOSE TO EXTREME TEMPERATURES IN HOT OR COLD ENVIRONMENTS OR TO EXTREMELY LOW AIR PRESSURE WHICH CAN CAUSE IT TO EXPLODE OR MAY CAUSE FLAMMABLE LIQUIDS OR GASES TO ESCAPE.
- DO NOT SUBJECT THE DEVICE TO STRONG IMPACTS AND DO NOT LET IT FALL.
- ALLOW THE DEVICE TO COOL BEFORE CLEANING.
- TO CLEAN THE DEVICE EXTERNALLY, USE A DRY, SOFT AND CLEAN CLOTH ONLY.
- ADULT SUPERVISION IS REQUIRED WHEN THE DEVICE IS USED AROUND CHILDREN.
- MAKE SURE THAT THE POWER OF THE DEVICE CORRESPONDS TO THAT OF THE PRODUCT.
- DO NOT COVER WHILE CHARGING.
- DO NOT ATTEMPT TO REMOVE THE BUILT-IN BATTERY, AS IT MAY OVERHEAT, CATCH FIRE OR CAUSE INJURY.
- THE SAFE USE OF THE PRODUCT IS NO LONGER GUARANTEED IF IT HAS VISIBLE DAMAGE, IS NOT WORKING PROPERLY, HAS BEEN STORED FOR A LONG PERIOD IN ADVERSE ENVIRONMENTAL CONDITIONS OR HAS BEEN EXPOSED TO CONSIDERABLE STRESS WHILE BEING TRANSPORTED. IF ONE OF THE SITUATIONS DESCRIBED ABOVE OCCURS, STOP USING THE PRODUCT.
- THIS PRODUCT IS NOT A TOY. KEEP OUT OF THE REACH OF CHILDREN.
- DO NOT USE THIS PRODUCT FOR ANYTHING OTHER THAN ITS INTENDED PURPOSES.
- DO NOT USE THE DEVICE IF THE CABLE IS DAMAGED OR NOT WORKING PROPERLY.
- IT IS ADVISABLE TO USE THE DEVICE ONLY WITH THE POWER CORD SUPPLIED.

IMPORTANT WARNING FOR THE PROPER DISPOSAL OF THE PRODUCT
AS THE BATTERIES CONTAINED IN THE DEVICE ARE NOT REPLACEABLE, THEIR SEPARATE DISPOSAL SHOULD BE CARRIED OUT BY A CENTRE WHICH WILL DISPOSE OF THE WHOLE UNIT. EUROPEAN DIRECTIVE 2012/19/EU ON WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE) STATES THAT THESE DEVICES MUST NOT BE DISPOSED OF IN THE NORMAL UNSORTED URBAN WASTE STREAM, BUT COLLECTED SEPARATELY TO OPTIMIZE THE RECOVERY AND RECYCLING FLOW OF THE MATERIALS THEY ARE MADE OF AND TO PREVENT POTENTIAL HARM TO HEALTH AND THE ENVIRONMENT DUE TO THE PRESENCE OF POTENTIALLY HAZARDOUS SUBSTANCES. THE CROSSED-OUT WASTE CONTAINER SYMBOL IS SHOWN ON ALL DEVICES TO REMIND YOU OF THIS. WASTE CAN BE DELIVERED TO SPECIAL RECYCLING CENTRES OR CAN BE HANDED OVER FREE OF CHARGE TO THE DISTRIBUTOR WHERE YOU PURCHASED THE DEVICE UPON PURCHASING A NEW EQUIVALENT ONE OR WITH NO OBLIGATION TO PURCHASE A NEW ONE IF THE DEVICE IS SMALLER THAN 25 cm/9.75". FOR FURTHER INFORMATION ON THE CORRECT DISPOSAL OF THESE DEVICES, YOU CAN CONTACT THE RELEVANT PUBLIC AUTHORITY.

FCC Warning
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement.

AURICOLARI WIRELESS CON CUSTODIA DI RICARICA (IT)


SPECIFICHE TECNICHE
- PRODOTTO DOTATO DI UNA BATTERIA INTEGRATA AL LITIO CON PROTEZIONE DA SOVRACCARICO
- CAPACITÀ DELLA BATTERIA DEGLI AURICOLARI: 25 mAh
- CAPACITÀ DELLA BATTERIA DELLA CUSTODIA: 300 mAh
- CAMPO OPERATIVO WIRELESS: 10 METRI
- VERSIONE WIRELESS: 5.1
- INGRESSO TIPO-C (5V-1A)
- VOLTAGGIO BATTERIA 3.7V
- VOLTAGGIO D'ENTRATA: 5V
- SNR (RAPPORTO SEGNALE/RUMORE): 96±3dB
- FREQUENZA DI TRASMISSIONE: 2.4-2.48 GHz
- THD (DISTORSIONE ARMONICA TOTALE): ±3dB
- AUTONOMIA: 4-5 ORE DI RIPRODUZIONE MUSICA E/O CONVERSAZIONE
- AUTONOMIA MODALITÀ STAND-BY: FINO A 100 ORE
- TEMPO DI RICARICA AURICOLARI: 1 ORA
- TEMPO DI RICARICA CUSTODIA: 1.5 ORE. CON UNA RICARICA COMPLETA DELLA CUSTODIA È POSSIBILE CARICARE GLI AURICOLARI 2-3 VOLTE.
- COMPATIBILITÀ: iOS E ANDROID

DESCRIZIONE DEI COMPONENTI
1. CUSTODIA DI RICARICA
2. INDICATORI LED
3. AURICOLARI
4. MICROFONO
5. SENSORE TOUCH
6. CAVO DI RICARICA USB
7. CORDINO
8. PORTA TIPO-C

ISTRUZIONI D'USO
RIMUOVERE LA LINGUETTA PRIMA DELL'UTILIZZO.
PER ACCENDERE E SPEGNERE GLI AURICOLARI:
TOCCARE A LUNGO IL SENSORE POSTO SULL'AURICOLARE DESTRO E SINISTRO, FINO A SENTIRE LE PAROLE "POWER ON" IN CASO DI ACCENSIONE O "POWER OFF" IN CASO DI SPEGNIMENTO. SI SUGGERISCE DI SPEGNERE GLI AURICOLARI PRIMA DI RIPORLI NELLA CUSTODIA DI CARICAMENTO.

COME ASSOCIARE GLI AURICOLARI AL DISPOSITIVO
- APRIRE LA CUSTODIA ED ESTRARRE GLI AURICOLARI. GLI AURICOLARI SI ACCENDONO E SI CONNETTONO FRA LORO AUTOMATICAMENTE.
- ACCEDERE AL DISPOSITIVO AL QUALE SI VOGLIONO COLLEGARE GLI AURICOLARI E ATTIVARE LA FUNZIONE WIRELESS O LA MODALITÀ DI ACCOPPIAMENTO.
- ATTIVARE LA RICERCA DEGLI AURICOLARI SUL DISPOSITIVO. UNA VOLTA CHE LA RICERCA È COMPLETATA APPARE "BE FREE" NELLA LISTA WIRELESS DEL DISPOSITIVO. SELEZIONARE "BE FREE" PER STABILIRE IL COLLEGAMENTO.
- GLI AURICOLARI SI CONNETTONO AL DISPOSITIVO E SONO PRONTI PER ESSERE UTILIZZATI.

- PARA ACTIVAR LA FUNCIÓN DE ASISTENTE VOCAL, SI ESTÁ DISPONIBLE EN EL DISPOSITIVO, TOCA TRES VECES SEGUIDAS EL SENSOR DEL AURICULAR DERECHO O IZQUIERDO.

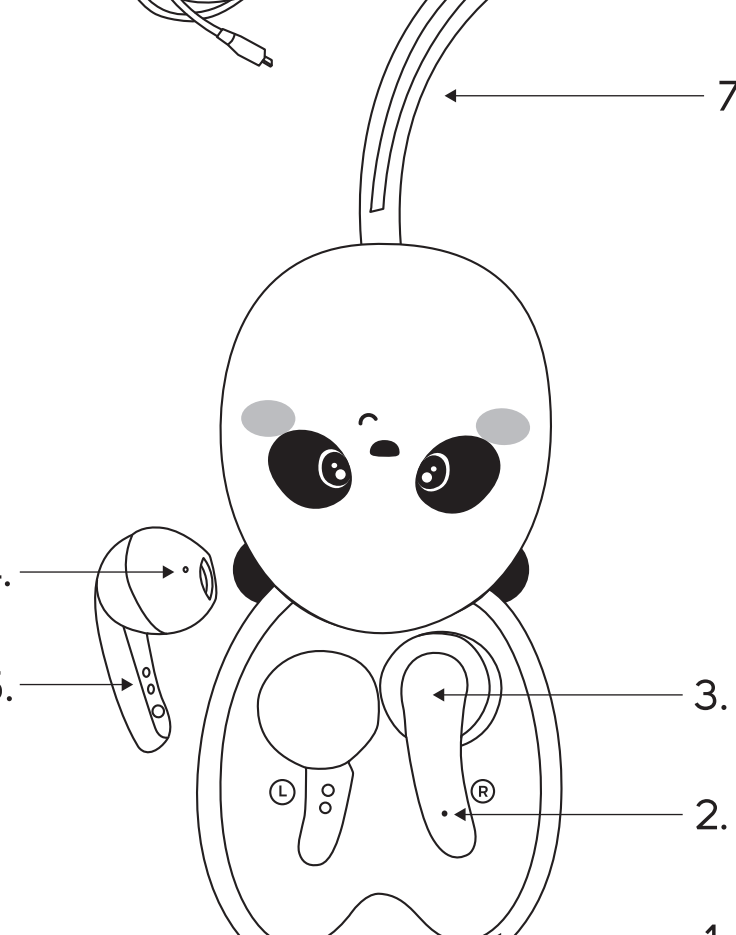

iOS IS A TRADEMARK OF APPLE INC. ALL OF THE BRANDS, NAMES AND MODELS OF THE DEVICES ARE THE PROPERTY OF THE RELATIVE COMPANIES. / iOS È UN MARCHIO DI APPLE INC. TUTTI I MARCHI, I NOMI ED I MODELLI DEI DISPOSITIVI SONO DI PROPRIETÀ DELLE RISPETTIVE AZIENDE. / iOS EST UNE MARQUE D'APPLE INC. TOUTES LES MARQUES, LES NOMS ET LES MODÈLES DES DISPOSITIFS SONT LA PROPRIÉTÉ DE LEURS ENTREPRISES RESPECTIVES. / iOS ES UNA MARCA COMERCIAL DE APPLE INC. TODAS LAS MARCAS, LOS NOMBRES Y LOS MODELOS DE LOS DISPOSITIVOS PERTENECEN A LAS RESPECTIVAS EMPRESAS. / iOS IST EINE MARKE VON APPLE INC. ALLE MARKEN, NAMEN UND MODELLE DER GERÄTE SIND EIGENTUM DER JEWEILIGEN UNTERNEHMEN. / iOS É UMA MARCA REGISTADA DA APPLE INC. TODAS AS MARCAS, OS NOMES E OS MODELOS DOS DISPOSITIVOS SÃO PROPRIEDADE DAS RESPETIVAS EMPRESAS. /