
# 骨传导耳机



使用指南及保修说明

User Manual & Warranty Information

## 示意图

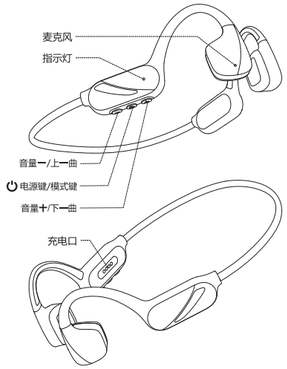


## 充电

该耳机使用内置可充电电池，首次使用耳机必须给电池充满电。使用中，若语音“电量低”提示音，表示电池电量低，此时需要给耳机充电。

将充电线连接到耳机的磁吸充电口，2小时左右即可充满。充电状态指示灯长亮红灯，充满电常亮蓝灯。

**注意** 磁吸充电有正负级对应，相互吸附可正常充电，相互排斥则无法充电甚至造成短路。

本产品的可充电电池必须妥善处理，以便回收利用。请不要将电池放入火中，以免引起爆炸。

## 开关机

| 功 能 | 操 作 | 指 示 灯 |
|---|---|---|
| 开机 | 长按“ ⏻ ”3-5 秒 | 灯亮 |
| 关机 | | 灯灭 |

## 操作说明

| 功 能 | 状 态 | 操 作 |
|---|---|---|
| 音量 + | 无线已连接 | 单击“ + ” |
| 音量 — | | 单击“ — ” |
| 下一曲 | 播放音乐 | 长按“ + ”1秒 |
| 上一曲 | | 长按“ — ”1秒 |
| 暂停播放 | | 单击“ ⏻ ” |
| 恢复播放 | 暂停音乐 | |
| 接或挂电话 | 来电时 | |
| 拒绝电话 | | 长按“ ⏻ ”2秒 |
| 手机/无线听筒切换 | 通话中 | |
| 游戏/音乐模式切换 | 无线已连接 | 4击“ ⏻ ” |

## 使用说明

**如何无线配对**

**无线配对:** 在关机的状态下，长按“ ⏻ ”3-5秒，指示灯进入红蓝灯闪烁状态，此时即进入配对状态，打开设备上的设置（手机/电脑）搜索名称 “ L18A ” ，点击设备 “ L18A ” 配对连接，连接成功退出，即可使用。

**无线/MP3模式切换:** 双击“ ⏻ ”切换无线和MP3(TF卡)模式。

**强调**：开机自动默认无线模式。

**歌曲下载：** 将原装充电数据线连接电脑和耳机，即可读取U盘，将电脑歌曲复制到U盘。

**MP3播放模式切换：** 在MP3模式放歌时，3击 “ ⏻ ” 切换 随机播放/顺序播放模式（带记忆功能）

## AI智能语音控制

(手机需支持语音唤醒功能)

| 功 能 | 状 态 | 操 作 |
|---|---|---|
| 语音控制 | 无线已连接 | 长按“ ⏻ ”1秒松手 |

**说明:** 在无线连接状态中，长按电源键一秒松手，听到提示音后，就可以语音操控手机。

## 指示灯

| 工作状态 | 指示灯状态 |
|---|---|
| 充电中 | 常亮红灯 |
| 充电完成 | 常亮蓝灯 |
| 搜索配对 | 红、蓝灯交替闪烁 |

## 产品参数

型号：L18A

充电：≈2h

输入：5V/150mA

播放：≈6h@60%音量

协议：HFP A2DP AVRCP

音乐格式支持：MP3, WAV, WMA, FLAC, M4A

无线版本：6.0

电池容量：190mAh

连接距离：≈10m

## 注意事项

- 耳机不能长时间泡海水/盐水，使用后应用淡水冲洗擦干，不然充电磁吸部分容易腐蚀。
- 如长时间不使用，请至少一个月充满一次电。
- 请不要私自拆装产品上任何部件，如发现产品有缺陷立即停止使用，联系销售方售后处理。
- 每次运动后请将耳机表面的水擦拭干净，特别是充电磁吸位置，要及时处理干净，防止汗水，盐水腐蚀充电口，影响产品寿命。
- 产品远离火源、热源、冷冻源、化学品、严禁暴力撞击拆装挤压产品。
- 请使用输出5V1A及以内的充电头。

合格證 Q.C.Passed

## 产品保修卡

该卡为产品保修凭证，请妥善保管

| | |
|---|---|
| 产品名称: | 产品型号: |
| 购买日期: | 客户名称: |
| 联系方式: | |

### 产品维修记录

| 日期 | 不良现象 | 方案 |
|---|---|---|
| | | |
| | | |
| | | |

75mm

55mm


# Bone Conduction Headphones



使用指南及保修说明

User Manual & Warranty Information

## Schematic diagram

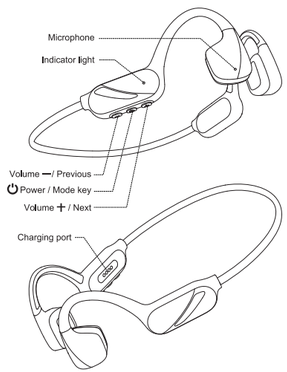


## Charge

The headphone uses a built-in rechargeable battery, the first use of the headphone must be fully charged to the battery. In use, if the voice promps "low battery", the battery is low, and you need to charge the headphone.

The charging cable should be connected to the headset's magnetic charging port , about 2 hours to fill . Charging status indicator is red light, full charge often blue light .

**Note** Magnetic charging has a positive and negative polarity correspondence, mutual adsorption can be charged normally, and mutual repulsion will not charge or even cause a short circuit.

The rechargeable battery of this product must be properly disposed of for recycling. Please do not place the battery in a fire to avoid explosion.

## Power On/Off

| Function | Operation | Indicator |
|---|---|---|
| On | Press ' ⏻ ' for 3-5s | Light is on |
| Off | | Light is off |

## Operating instruction

| Function | Status | Operation |
|---|---|---|
| Volume + | Wireless connected | Click ' + ' |
| Volume — | | Click ' — ' |
| Next song | Play music | Press ' + ' for 1s |
| Previous song | | Press ' — ' for 1s |
| Pause | | Click ' ⏻ ' |
| Resume | Pause music | |
| Answer the call / Hang up | Phone calls in | |
| Decline the call | | Press ' ⏻ ' for 2s |
| Phone / Wireless earphone switch | On the phone | |
| Switch between Game/Music mode | Wireless connected | 4-click ' ⏻ ' |

Any changes or modifications not expressly approved by the party responsible for compliance could void the user ' s authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and(2) this device must accept any interference received, including interference that may cause undesired operation.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: – Reorient or relocate the receiving antenna. – Increase the separation between the equipment and receiver. – Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. – Consult the dealer or an experienced radio/TV technician for help.

## Instruction

**How to pair with Wireless**

**Wireless pairing:** In the off state, press and hold ' ⏻ ' for 3 to 5 seconds, the indicator light will enter the red and blue light flashing state, and then enter the pairing state. Turn on the Wireless (mobile phone / computer) on the device and search for the device name " L18A ". Click the device " L18A " to pair and connect.

**Wireless / MP3 mode switching:** Double click ' ⏻ ' free Switch Wireless and MP3 mode.
**Note:** Wireless mode is default for boot.

**Song download:** Connect the magnetic charging cable to the computer and headphones, you can read the USB built-in memory card, and copy the songs from the computer to the USB.

**MP3 playback mode switch:** When playing audio in MP3 mode, 3-click ' ⏻ ' to switch between shuffle and sequential playback modes (with memory function)

## AI intelligent voice control

(Phone needs to support voice wake-up function)

| Function | Status | Operation |
|---|---|---|
| Voice control | Wireless connected | Press ' ⏻ ' for 1s to release |

In the Wireless connection state, long press the power button for 1 second and release it to wake up the voice assistant. After hearing the prompt sound, you can operate your phone to save operation time and quickly become intelligent.

## Indicator

| Status | Indicator Light Behavior |
|---|---|
| Charging | Normally on red light |
| Charging Complete | Normally on blue light |
| Search for a match | Red & Blue Lights Alternating Flash |

## Product parameter

Model: L18A

Charging time: ≈2h

Input: 5V/150mA

Operating time : ≈6h@60% Volume

Profile: HFP, A2DP, AVRCP

Music format support: MP3, WAV, WMA, FLAC, M4A

Wireless: 6.0

Battery: 190mAh

Distance: ≈ 10m

## Care and cleaning

- The headphones should not soak in seawater/brine for a long time, as the magnetic charge part tends to decay. When going to the beach, it's better to protect the magnetic absorption point.
- If not used for a long time, please fully charge it at least once a month.
- Do not disassemble any part of the product without permission. If you find that the earphone is defective, please stop using it.
- Keep the product away from fire, heat, freezing, and chemicals. Do not immerse the earphone in water, and do not wipe it with chemicals such as aromatherapy water.
- Store in a cool, dry place. Do not expose the product to direct sunlight for a long time.
- Please use a charging head with an output of 5V1A or less.

Certificate of conformity Q.C.Passed

## Product warranty card

This card is a product warranty certificate, please keep it properly

| | |
|---|---|
| Product name: | Product model: |
| Purchase date: | Clients name: |
| Contact: | |

### Product maintenance records

| Date | Bad phenomenon | Solution |
|---|---|---|
| | | |
| | | |
| | | |