

气传导耳机



使用指南及保修说明
User Manual & Warranty Information

示意图

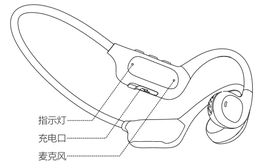

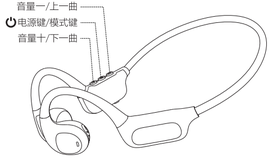

使用说明

无线配对
首次使用，耳机开机后进入无线配对状态。此时，请在手机的无线设置中搜索并选择名为“ M3M ”的设备进行连接。连接成功后，指示灯熄灭。

更换配对设备及回连
断开与当前配对设备的无线后，耳机指示灯红蓝闪烁，其他设备搜索“ M3M ”并点击即可连接。此外，耳机支持自动回连，开机后会自动匹配上一次连接过的设备，需确保前端设备无线已开启。

充电
正常无线连接状态下，手机会显示耳机电量，如电量显示红色，即表示需要充电，插入充电线充电即可。2小时左右即可充满。充电状态下指示灯为红灯常亮，充满电则蓝灯常亮。

注意 请使用输出5V1A及以内的充电头。

本产品的可充电电池必须妥善处理，以便回收利用。请不要将电池放入火中，以免引起爆炸。

操作说明

功能	操作	状态
开机	长按“ ⏻ ”3-5秒	蓝灯亮1秒
关机		红灯亮1秒
音量 +	单击“ + ”	无线已连接
音量 —	单击“ — ”	
下一曲	长按“ + ”2秒	播放音乐
上一曲	长按“ — ”2秒	
暂停播放	单击“ ⏻ ”	
恢复播放		音乐暂停播放
挂断电话		来电时
接听电话		
拒接电话	长按“ ⏻ ”2秒	
手机/耳机音源切换		通话中
游戏/音乐模式切换	4击“ ⏻ ”	无线已连接

指示灯说明

状态	指示灯状态
搜索配对	红蓝灯交替闪烁
正在充电	红灯常亮
充满电量	蓝灯常亮

AI智能语音控制
（手机需支持语音唤醒功能）

功能	状态	操作
语音控制	无线已连接	双击“ ⏻ ”

说明:在无线连接状态中，双击“ ⏻ ”，听到提示音后，就可以语音操控手机，节约操作手机的时间，快捷又智能。

故障及排除

无法开机
确定耳机是否充满电量，按键是否误操作，同时充电激活。

无法无线连接
请在关机状态下长按电源键 10 秒，将耳机恢复出厂设置后，重新连接无线。

无法回连
确定前端（如手机无线）是否正常开启。

耳机音量较小
手机是否需加大音量，需要手机增加或减小音量。确认佩戴方式是否正确。

产品参数

型号：M3M　　版　本：6.0
充电：≈2h　　电池容量：180mAh
输入：5V/150mA　　距　离：10m
播放：≈8h@60%音量
协议：HFP，A2DP，AVRCP

注意事项

保养与清洁：
- 耳机不能泡水，不然耳机会短路烧坏。
- 如长时间不使用，请至少一个月充满一次电。
- 请不要私自拆装产品上任何部件，如发现产品有缺陷请立即停止使用，并联系销售方售后处理。
- 每次运动后请将耳机擦拭干净，特别是充电口位置，要及时处理干净，防止汗水，盐水腐蚀充电口，影响产品寿命。
- 产品远离火源、热源、冷冻源、化学品。严禁暴力撞击拆装挤压产品。
- 请使用输出5V1A及以内的充电头。

合格證 Q.C.Passed

产品保修卡
该卡为产品保修凭证，请妥善保管

产品名称：	产品型号：
购买日期：	客戶名称：
联系方式：	

产品维修记录

日期	不良现象	方案


95mm


Air Conduction Headphones



使用指南及保修说明
User Manual & Warranty Information

Schematic diagram

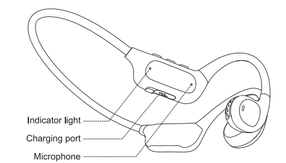

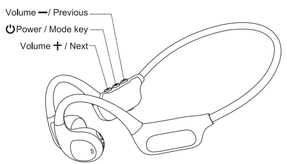

Instruction

Wireless Paring
Power on the headphones, and it will automatically enter Wireless pairing mode. Search for and select the device named “ M3M ” in your phone’s Wireless settings to connect. Upon successful connection, the indicator light will turn off.

Change paired devices and reconnect
Disconnect Wireless from the paired device, and the headset indicator flashes red and blue. Other devices search for “ M3M ” and tap to connect. The headset supports auto-reconnection—it pairs with the last device on power-on. Ensure your source device’s Wireless is enabled.

Charging
Normal connection, the phone will display the earphone battery, such as the battery display red, that is, the meter show the need to charge, plug in the charging line to charge. about 2 hours to fill, charging status indicator is red light, full charge often blue light .

Note Please use a USB power adapter with an output of 5V less than 1A.

The rechargeable battery of this product must be properly disposed of for recycling. Please do not place the battery in a fire to avoid explosion.

Operating instruction

Function	Operation	Status
Power on	Press ‘ ⏻ ’ for 3-5s	The blue light stays on for 1s.
Power off		The red light stays on for 1s.
Volume +	Click ‘ + ’	Wireless connected
Volume —	Click ‘ — ’	
Next song	Press ‘ + ’ for 2s	Music playing
Previous song	Press ‘ — ’ for 2s	
Pause	Click ‘ ⏻ ’	Music pause
Resume		
Hang up		Phone calls in
Answer the call		
Decline the call	Press ‘ ⏻ ’ for 2s	
Call Audio Switch		On the phone
Switch between Game/Music mode	4-click ‘ ⏻ ’	Wireless connected

Indicator

Status	Indicator Behavior
Search for a match	Red and blue lights flash alternately
Charging	Normally on red light
Finished charging	Normally on blue light

AI intelligent voice control
(Phone needs to support voice wake-up function)

Function	Status	Operation
Voice control	Wireless connected	Double-click ‘ ⏻ ’

Note: In the Wireless connection status, double-click ‘ ⏻ ’; After hearing the prompt, you can use voice control for your phone—saving you the time of manual phone operation, fast and smart.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user ’ s authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and(2) this device must accept any interference received, including interference that may cause undesired operation.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
– Reorient or relocate the receiving antenna.
– Increase the separation between the equipment and receiver.
– Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
– Consult the dealer or an experienced radio/TV technician for help.

Troubleshooting

Unable to boot
Determine whether the headset is fully charged, whether the button is misoperated, and then charge and activate.

Unable to connect to Wireless
Press and hold the power button for 10 seconds while the headset is off to restore factory settings, then try again.

Can't back to even
Make sure the front end (e.g., Wireless) is open properly.

Headphone volume is low
Whether the phone increases the volume, the phone needs to increase or decrease the volume, Wearing a way Whether it is right.

Product parameter

Model：M3M　　Wireless: 6.0
Charging time: ≈2h　　Battery: 180mAh
Input: 5V/150mA　　Distance: ≈10m
Operating time : ≈8h@60% Volume
Profile: HFP，A2DP，AVRCP

Care and cleaning

- The product cannot be soaked in water, otherwise it will short-circuit and burn out.
- If not used for a long time, please fully charge it at least once a month.
- Do not disassemble any part of the product without permission. If you find that the earphone is defective, please stop using it.
- Keep the product away from fire, heat, freezing, and chemicals. Do not immerse the earphone in water, and do not wipe it with chemicals such as aromatherapy water.
- Store in a cool, dry place. Do not expose the product to direct sunlight for a long time.
- Please use a USB power adapter with an output of 5V less than 1A.

Certificate of conformity Q.C.Passed

Product warranty card
This card is a product warranty certificate, please keep it properly

Product name:	Product model:
Purchase date:	Clients name:
Contact:	

Product maintenance records

Date	Bad phenomenon	Solution

70mm