[BT21]Dual Blade Handy Fan_Manual

2022-03-25

Size. 80*90 (mm)

6 7 8 9 1 (COVER)

Product Warranty

Warranty Period | 1 year from the date of purchase

We Royche guarantee this product as follows in accordance with the Regulations for Consumer Damage Compensation.
When a consumer requests an after-sale service, the service is provided through the Royche Customer Center.

Product Name	BT21 minini Dual blades handy fan	Model	BT21-RHF-4E-YO(Y) / BT21-RHF-4E-RJ / BT21-RHF-4E-CK BT21-RHF-4E-MG / BT21-RHF-4E-CM / BT21-RHF-4E-CT BT21-RHF-4E-CK
Purchase Date.	year month date		
Purchase Place		Serial No.	

★ Free Service

Consumer Damage Type	Within Warranty Period	After Warranty Period
Product malfunction or/and defect during normal operation		
Major failure within 10 days from the date of purchase	Product Exchange	N/A
Product failure that requires a major repair within a month from the date of product exchange	Product Exchange	N/A
Product exchange in the case where the product can't be repaired due to its defect	Product Exchange	N/A
Free repair in the case where the product fails 3 times due to the same cause.	Free Repair	Paid Repair
Product exchange in the case where the product fails 4 times due to the same cause.	Product Exchange	Paid Repair
In the case where the product fails 5 times due to different causes.	Product Exchange	Paid Repair
In the case where the service center for a technician from ill lost or damaged the product for which a consumer requested a repair	Product Exchange	Product Exchange
Product exchange in the case where the product cannot be repaired because the company does not have repair parts during the retention period of repair parts.	Product Exchange	Product exchange after straight line (%)-end depreciation
In the case where the product cannot be repaired even though there are repair parts available.	Product Exchange	Product exchange after straight line (%)-end depreciation
Product failure due to a consumer's intention or mistake		
When it is impossible to repair	Charge the amount corresponding to the paid repair and then product exchange	Follow the company's separate standard
When it is possible to repair	Paid Repair	Paid Repair

★ Paid Service

1. Product failure caused by a consumer's reckless handling or arbitrary repair or/and alteration
2. Product failure due to repair work not provided by a technician from the Royche Customer Center.
3. Product failure caused by the use of a part/parts not provided by Royche.
4. Product failure or damage by a strong impact or shock, which is caused by consumer negligence.
5. Product failure caused by the use of a consumer part/parts or options not provided by Royche.
6. Product failure caused by natural disasters (fire, flood, earthquake, etc.)
7. Product failure that requires the replacement of a consumable part/parts of which the service period has expired.

* Unless it is for product failure, A/S service may incur a separate charge.
Please read the user manual before applying for this service, you may be subject to a separate standard if your product cannot be repaired.)

Service Hours: 10.00 ~ 17.00 (Mon~Fri) • Website: www.royche.co.kr • Royche Customer Support Center: 02-2-711-0077

제품사양 Product specifications

제품명	BT21 minini 듀얼 블레이드 핸디팬
모델명	BT21-RHF-4E-TT/CK/CM/SK/MG/RJ/KY
제품 사이즈	192(L) x 86(W) x 46(H) mm
제품 무게	140g
배터리 정격	3.7V/2000mAh
충전시간	약 3~4시간
팬 작동 시간	1~6시간
제조국	중국
판매원	(주)로이체 (서울특별시 강남구 언주로 601, 11층)
고객센터	02. 711. 0077

*본 제품은 공정거래위원회 고시 소비자분쟁해결기준에 의거 보상 받을 수 있습니다.

Product name	BT21 Mini Dual Blade Handy Fan
Model name	BT21-RHF-4E-TT/CK/CM/SK/MG/RJ/KY
Product size	192 mm (L) * 86 mm (W) * 46 mm (H)
Product weight	140g
Battery rating	3.7V/2000mAh
Time for full charging	3~4hours
Operational time	1~6hours at max
Manufacturing country	China
Distributor	ELLO TRADING INC CS United States of America, Canada
C/S center	310-755-9154
E.mail	Info@madebyeti.com

* If there is any problem with the product, a consumer may be indemnified with the Consumer Dispute Resolution Standards issued by the Fair Trade Commission.

사용시 주의사항 Precautionson the product use

안전을 위해 해당 제품을 사용하시기 전 아래의 주의사항을 읽어주십시오.
For your safety, please read the following information on the product precautions before using the product.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

① Reorient or relocate the receiving antenna.
② Increase the separation between the equipment and receiver.
③ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
④ Consult the dealer or an experienced radio/TV technician for help.

Caution: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

제품 사용 중 비정상 현상이 생길 경우, 사용을 중단하고 A/S를 받으시기 바랍니다.
배터리 수명이 다한 제품을 함부로 버리지 마십시오.(소각금지)
팬에 손가락이나 머리카락이 끼지 않도록 주의하십시오.
동봉된 케이블을 이용하여 충전하여 주십시오.
5V/2A이하의 아답터만 사용하십시오. 그 이상의 아답터를 사용하여 충전하는 경우 과열로 인한 제품 고장의 원인이 됩니다.
배터리가 방전된 상태로 지속될 경우 배터리가 손상되어 충전이 안될 수 있습니다.
정기간 보관 시 완충 후 보관하여 주시고, 1개월에 한번씩 충전하여 주시기 바랍니다.

If any abnormality occurs while the fan is in use,
please stop using it and receive the product warranty service.
Be sure to dispose of a fan carefully, whose battery life expired (do not incinerate it).
Be careful not to get your finger or hair caught in the fan.
Please charge the fan with the cable, which is enclosed in the product package.
Use only an adapter of 5V/2A, or less. If you use an adapter with a higher voltage or current, product failure may occur due to overheating.
If the battery is left for a long time in a state of not being recharged, the battery may be damaged and may not be charged again. If a fan is not to be used for a long time, please store it after fully charging it, and be sure to charge it once a month thereafter.

※ 상기 주의사항은 누액발생, 발화, 파열, 감전, 부상 등의 원인이 될 수 있으므로, 반드시 지켜주시기 바랍니다.
※ 사양및 외형은 제품의 향상을 위해 예고없이 일부 변경될 수 있습니다.
※ 이 기기는 가정용(B급) 전자파 적합기기로서 주로 가정에서 사용하는 것을 목적으로 하며, 모든 지역에서 사용할 수 있습니다.

Please observe the above precautions, because all uid leakage, fire, rupture, electric shock, injury or other problems may occur if you do not follow them. / For product improvement, the specifications and the exterior appearance of the product may be modified without prior notice. / This device is suitable for household (Class B) electromagnetic wave. / It is intended to be used mainly at home and can be used in all regions. / This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

2 3 4 5 10 (BACK)

제품 구조 Detailed product structure

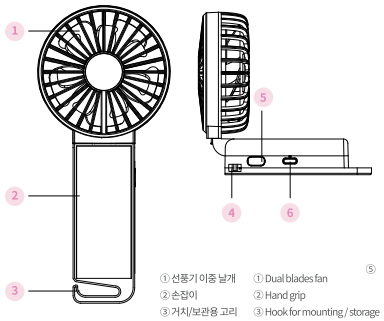

① 선풍기 이중 날개 ① Dual blades fan
② 손잡이 ② Hand grip
③ 거치/보관용 고리 ③ Hook for mounting / storage
④ 넥스트랩 고리 ④ Hook for a neck strap
⑤ 전원(ON/OFF)버튼 ⑤ Power (on/off) button
⑥ USB 충전단자 ⑥ USB charging port

제품 설명 Product description

핸디팬형 | Hand-held fan

*이중날개로 되어 있어 보다 강력한 바람을 느낄 수 있습니다.
*The dual blades will generate even more powerful wind.

손잡이를 잡지로 세워 핸디팬으로 사용합니다.
Hold the hand grip straight up and use it as a hand-held fan.

데스크형 | Fans used on a desk

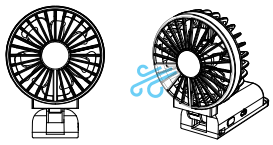

손잡이 부분을 뒤로 젖혀 90°~120°인 상태에서 책상위에 놓아 데스크 팬으로 사용합니다.
Turn the handle backward at a 90-120° angle and place the fan on the desk.

제품 설명 Product description

넥팬형 | Fan with a neck strap

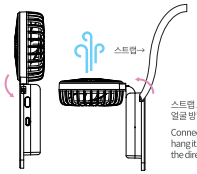

스트랩 고리에 스트랩을 연결하여 목에 건 후 얼굴 방향에 맞춰 넥팬으로 사용합니다.
Connect the strap to the strap hook, hang it around the neck, and use it in the direction so that the wind is blown to your face.

제품 설명 Components



듀얼블레이드 핸디팬 Dual blades handy fan
넥스트랩 Neck strap
USB 충전 케이블 Charging cable
사용자 설명서 Manual

사용방법 How to use

충전 방법 | How to charge

① USB C - Type 케이블을 연결하여 충전합니다.
DC5V/2A 이하의 아답터를 사용하여 주십시오. (아답터 별매)
②충전중에는 적색등이 켜지고, 충전 완료 시 꺼집니다.

① Use a USB type-C cable to charge. Please use an adapter with the rating of DC5V/2A (The adapter is sold separately.)
② The red light turns on while the fan is being charged and turns off once the charging is completed.

선풍기 사용방법 | How to use the fan

전원 버튼을 누름에 따라 다음과 같이 기능이 순환됩니다.
As the power button is being pressed repeatedly, the fan undergoes the following cycle.

Power button → 풍속 1단계 (보통) Wind speed 1 → 풍속 2단계 (강력) Wind speed 2 → 풍속 3단계 (터보) Wind speed 3 → OFF

주의 : 터보로 작동 시 전력이 빠르게 소진되고 (완충 시 약 70분 사용 가능), 다소 소음이 발생할 수 있습니다.

CAUTION: When used by Turbo mode, the power is quickly depleted (approximately 70 minutes available when fully charged), and some noise may occur.

제품보증서

보증기간 | 구매일로부터 1년

소비자 피해보상 규정에 따라 아래와 같이 제품에 대한 보증을 실시합니다.
서비스 요청 시 (주)로이체 고객센터에서 서비스를 진행합니다.

품 명	BT21 minini 듀얼블레이드 핸디팬	모 델 명	BT21-RHF-4E-YO(Y) / BT21-RHF-4E-RJ / BT21-RHF-4E-CK BT21-RHF-4E-MG / BT21-RHF-4E-CM / BT21-RHF-4E-CT BT21-RHF-4E-CK
구 입 일	년 월 일		
구 입 처		Serial No.	

★ 무료 서비스

소비자 피해 유형	보증기간 이내	보증기간 이후
정상적인 사용상태에서 성능, 기능상의 하자로 고장 발생 시		
구입 후 10일 이내에 중요이상 발생 시	제품교환	해당없음
교환한 제품이 1개월 이내에 중요한 수리를 요하는 고장 발생 시	제품교환	해당없음
제품결손으로 인한 고장 불가능 시	제품교환	해당없음
동일하자로 3회 고장 발생 시	무상수리	유상수리
동일하자로 4회 고장 발생 시	제품교환	유상수리
동일하자로 5회 고장 발생 시	제품교환	유상수리
서로 다른 하자로 5회 고장 발생 시	제품교환	유상수리
소비자가 수리를 의뢰한 제품을 사업자가 분실 또는 파손한 경우	제품교환	제품교환
부품보유기간 이내 수리용 부품을 보유하고 있지 않아 수리가 불가능한 경우	제품교환	정액 감가상각후 환급
수리용 부품은 있으나 수리 불가능 시	제품교환	정액 감가상각후 환급
소비자의 고의 과실로 인한 고장인 경우		
수리 불가능 시	유상수리에 해당하는 금액 징수 후 제품 교환	별도 당사 기준에 한함
수리 가능시	유상 수리	유상수리

★ 유료 서비스

1. 소비자의 취급 부주의 또는 함부로 수리, 개조 하여 고장이 발생한 경우
2. (주)로이체 고객센터 기사가 아닌 사람이 수리하여 고장이 발생한 경우
3. (주)로이체에서 제공하지 않는 별매품 구입 사용으로 고장이 발생한 경우
4. 제품 사용 시 강한 충격 등 소비자 부주의로 인한 고장 손상이 발생한 경우
5. (주)로이체에서 지급하지 않은 소모품이나 중선 사용으로 고장이 발생한 경우
6. 천재지변(화재, 수해, 지진 등)에 의한 고장이 발생한 경우 7. 소모성 부품의 수명이 다하여 교체해야 하는 경우

* 제품 고장이 아닌 경우 서비스 요청 시 별도의 비용이 발생합니다. 서비스 신청 전 사용설명서를 반드시 읽어주세요.
(수리가 불가능한 경우 별도 기준에 한함)

상담시간 : 10:00 ~ 17:00 (Mon~Fri) • 홈페이지 접수 : www.royche.co.kr • 고객지원 센터 : 82-2-711-0077