BOLOXA

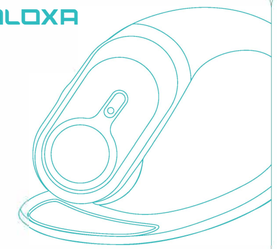

A17_User Manual

True Wireless Sports Earbuds

01

Customer Service

After-sale Email: support@boloxa.ltd

Web: www.boloxa.ltd

WhatsApp: (+86) 1392 3490 475

Packing List

User Manual * 1 piece
Wireless Earbud * 1 pair
Type-C Charging Cable * 1 piece

Charging Case* 1 piece
Soft Ear Tips * 3 pairs(M size on Earbud)

Product Specification

Model NO.: A17
Input: 5V⎓ 1A
Capacity: 3.7V 600mAh, 2.22Wh
Charging Port: Type-C
FCC ID: 2AZJ2-A17

Charging Time: about 2Hrs
Support: AAC/A2DP/HFP/HSP/AVRCP
Charging Supported: Yes
(charging pad not included)
Transmission Rang: 33 feet(without obstacle)

02

Product Overview

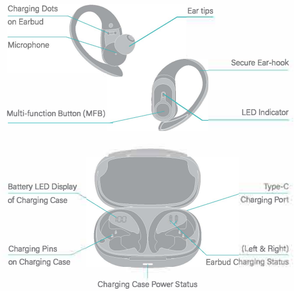

03

Caution

1. Please remove the protective film before use, otherwise the headphone will not be able to charge.

2. Choose suitable ear tips & Wear correctly to enhance sound quality.

3. Please clean the protective grille of both earbuds if the sound becomes low.



04

4. Please clean the magnet charging dot on earbud and charging pin on the charging case with alcohol wipes if the headphones can't be charged.

Multi-Function Button Operation

Power On/Off

2s Power On
long press L and R 2s

5s Power Off
long press L and R 5s

* Or Pick up A17 from charging case

* Or Put them back into charging case

05

Music Playback

Play or Pause
press L or R once

Next Track
press R twice

Previous Track
press L twice

Volume +
long press R

Volume -
long press L

Incoming Call

Answer Call
press L or R once

End Call
press L or R once

2s Reject Call
long press L or R 2s

Voice Assistant

Activate/End Siri
press L or R thrice

(* Must in non-music mode or standby mode)

06

Bluetooth Connection

* Make sure A17 earbuds and charging case have power.

1.Both earbuds will automatically power on and enter pairing statu when you take them out of the charging case.

2.For first time pairing: activate the Bluetooth of your device and search for "A17" to connect.(For non-first connection: when taken out from the charging case, the earbud will connect with your device automatically within 10s.)

Mono Mode

You can use one earbud alone, leave another earbud in the charging case.

When in Dual mode, put one earbud into the charging case;

Or only take one earbud out of the charging case, then search & connect "A17" on your device.

07

Pair with Other Device

A17 sports earbuds have memory connect function, they usually auto-connect with the last paired device. Thus, if you want to connect them with other devices, you should disconnect "A17" from the last paired device, then search and connect it on your another device.

Earbuds Charging

Insert A17 Earbuds into the charging case properly, they will power off and get charged automatically.

When being charged, the display icons will flash up and down, and the earbud's LED light will flash red;

When fully charged, the display icons and the earbuds' LED red light will turn off.



When the battery is less than 10%, a prompt voice "Low baterry please charge" will be advised, announce once every 5 minutes and 5 times in total.

08

Charging Case Charging

Type-C Charging

Use the provided Type-C cable(placed in the black accessory box) to charge the charging case.

During charging, the charging case power display will show the battery in real time. The number will be displayed as "100" when fully charged.



FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

09

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful Interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the Interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

10

IC Warning

"This device complies with Industry Canada's license-exempt RSSs. Operation is subject to the following two conditions:
(1)This device may not cause interference; and
(2)This device must accept any interference, including interference that may cause undesired operation of the device."

« Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.
L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioelectrique subi, meme sile brouillage est susceptibled'en compromettre le fonctionnement. »

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

L'appareil a été évalué pour répondre aux exigences générales en matière d'exposition aux RF. L'appareil peut être utilisé en condition d'exposition portable sans restriction.

11

Factory Restore Settings

This action will delete the pairing data between earphones and your devices. When the earbuds had been connected with multiple devices, you don't know which one is the last device, you can do this operation.

How to reset?

1. Delete the "A17" pairing name on your phone and turn off the Bluetooth setting.
2. When A17 are turned on, press and hold both earbuds simultaneously for 5s to turn off the earbuds. (Don't put them back into the charging case)
3. Press and hold both earbuds at the same time for 8s to reset.
4. Press and hold both earbuds again for 2s to turn on them.
5. Then turn on the Bluetooth of the device and click "A17" to connect.

12

How to sync volume on Android?

To protect users from potential hearing damage, Android's limit on max volume is quite low for Bluetooth audio devices.

If you feel the volume is too low, please access developer options and enable absolute volume, so you'll be able to max the volume at your own volition and to the full capabilities of your Bluetooth earbuds.

(Please scan this QR code to watch a video to learn more details.)

Safety Attention

1. Using earbuds at high to moderate volumes for extended periods of time will result in permanent hearing damage. It is advised you keep volume levels moderate to low at times for your safety.
2. Please keep the earbuds out of extreme heat or humidity, do not use any corrosive cleaner/oil to clean the earbuds.
3. Please avoid disassemble/reassemble the product in case of failure or fire accident.
4. Please keep beyond the reach of kids or pets.
5. Please stop using the device if it causes any discomfort or pain.

13

www.boloxa.ltd

support@boloxa.ltd

Thank you for purchasing the authentic product. For more newer products, parts and accessories, please visit: www.boloxa.ltd
For any assistance please contact Email: support@boloxa.ltd

FC CE RoHS

尺寸：89*90mm
材质：157g铜版纸，覆哑膜
对折方式：风琴折