100MM

140MM

FRONT

CK25GM

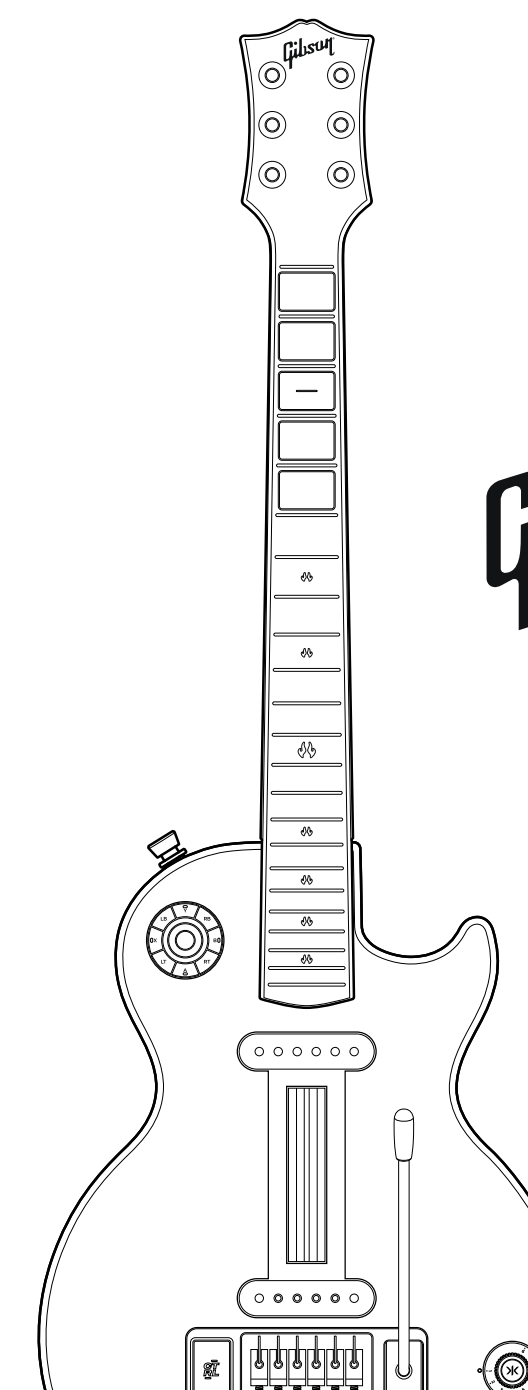

QUICK START GUIDE
GUIDE DE DÉMARRAGE RAPIDE

SCAN FOR
USER MANUAL

SMALL PARTS Not for children under 3 years.
PETITES PIÈCES Garder hors de la portée des enfantes âgés de moins de 3 ans.

GUITAR CONTROLLER LAYOUT

1. Fret Buttons
2. RGB LEDs
3. Left Stick (L3 Button)
4. Navigation Hub
5. Wireless Receiver Compartment
6. Strum Bar
7. Guitar Status LEDs
8. CRTL Button
9. Battery Compartment
10. Whammy Bar
11. Power LED
12. CRKD (Home) Button
13. Mode Dial
14. Right Stick (R3 Button)
15. Directional Pad
16. Neck Release Button
17. Strap Button
18. RFID Touchpoint
19. USB Wireless Receiver
20. Receiver Sync Button
21. Receiver Status LED
22. USB-C Port
23. 3.5mm Headset Jack
24. View, Capture, Menu Buttons
25. Guitar Sync Button
26. Guitar Sync LED
27. Platform Slider

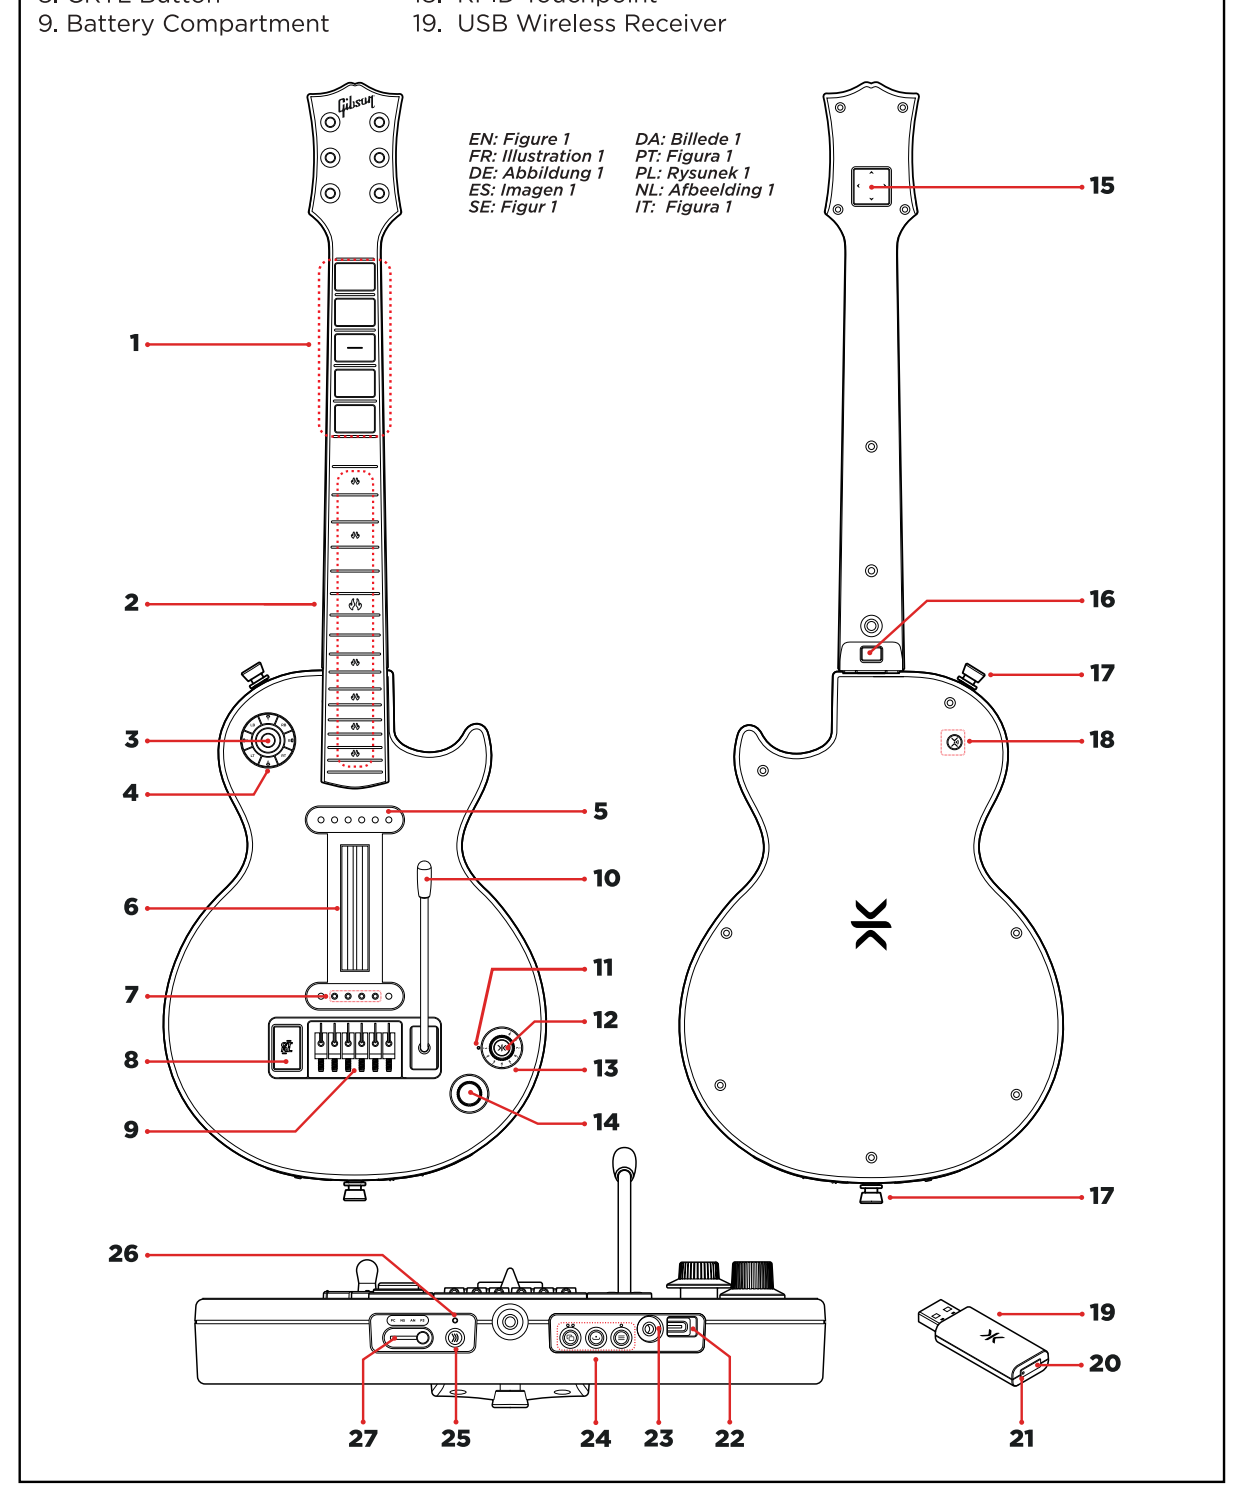

EN: Figure 1
FR: Illustration 1
DE: Abbildung 1
ES: Imagen 1
SE: Figur 1
DA: Billede 1
PT: Figura 1
PL: Rysunek 1
NL: Afbeelding 1
IT: Figura 1

MODE DIAL GUIDE

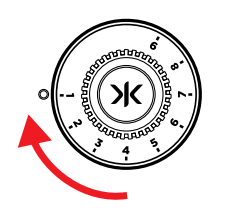

1. PC
2. Festival - Pro
3. Festival - Easy, Medium, Hard
4. Festival - Expert
5. Programable
6. Programable
7. Programable
8. Programable
9. KEYJAM™ Mode

EN: Figure 2 FR: Illustration 2 DE: Abbildung 2 ES: Imagen 2 SE: Figur 2 DA: Billede 2 PT: Figura 2 PL: Rysunek 2 NL: Afbeelding 2 IT: Figura 2

PLATFORM SLIDER GUIDE



PC - PC
NS - Nintendo Switch™
AN - Android
P3 - PlayStation® 3

EN: Figure 3 - DE: Abbildung 3 - SE: Figur 3 - PT: Figura 3 - NL: Afbeelding 3
FR: Illustration 3 - ES: Imagen 3 - DA: Billede 3 - PL: Rysunek 3 - IT: Figura 3

GUITAR STATUS LED & LATENCY GUIDE



○ ○ ○ ○ ○ ○	USB Wired Connection **Best (Lowest Latency)**
○ ● ● ● ● ○	USB Wireless Receiver Connection **Better (Low Latency)**
○ ● ● ● ● ○	Wireless Bluetooth® Connection **Good (Moderate Latency)**

Figure 4

FRET NECK SETUP

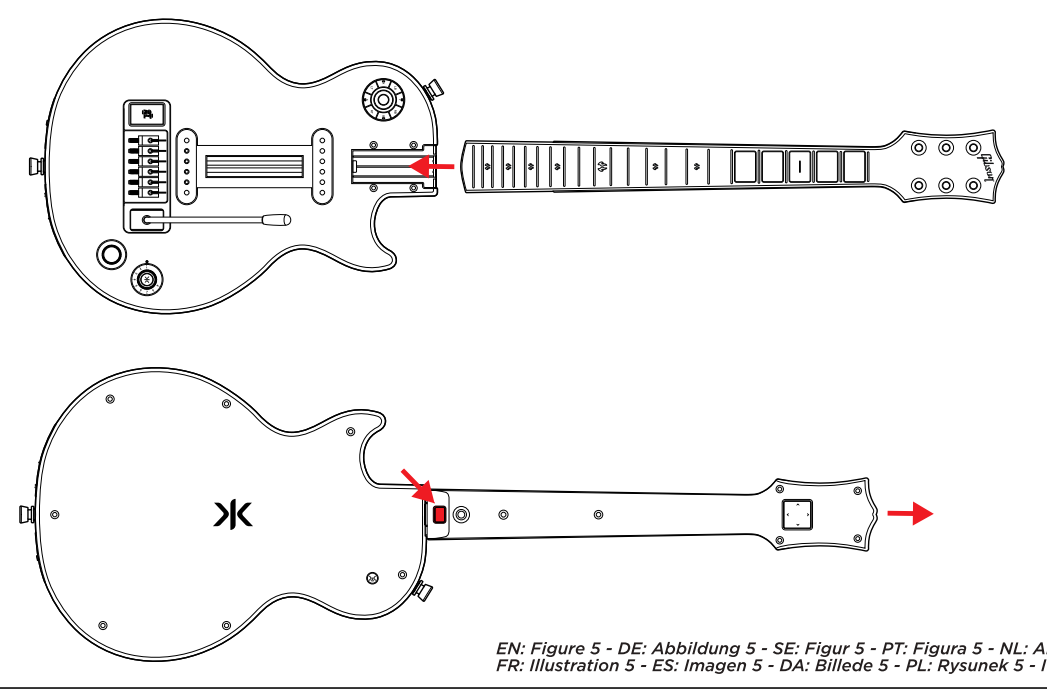

EN: Figure 5 - DE: Abbildung 5 - SE: Figur 5 - PT: Figura 5 - NL: Afbeelding 5
FR: Illustration 5 - ES: Imagen 5 - DA: Billede 5 - PL: Rysunek 5 - IT: Figura 5

COMPARTMENT ACCESS

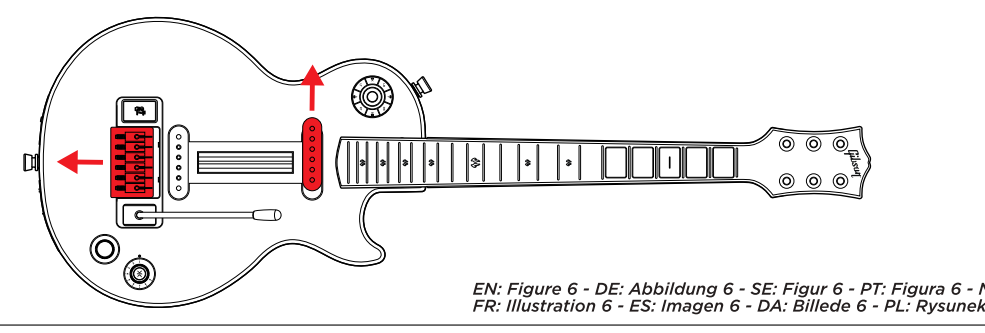

EN: Figure 6 - DE: Abbildung 6 - SE: Figur 6 - PT: Figura 6 - NL: Afbeelding 6
FR: Illustration 6 - ES: Imagen 6 - DA: Billede 6 - PL: Rysunek 6 - IT: Figura 6

CONNECTION SETUP

CONNECT TO PC

Option 1: USB Wired Connection
1) Plug the USB-A end of the cable into your PC. **2)** Set the Platform Slider to "PC" and connect the USB-C end of the cable to the USB-C port on your guitar controller. **3)** The Guitar Status LEDs will remain solid white. **4)** Rotate the Mode Dial to choose your game mode.



EN: Figure 7
FR: Illustration 7
DE: Abbildung 7
ES: Imagen 7
SE: Figur 7
DA: Billede 7
PT: Figura 7
PL: Rysunek 7
NL: Afbeelding 7
IT: Figura 7

Option 2: USB Wireless Receiver.
1) Insert the USB Wireless Receiver into your PC and hold the Receiver Sync button for 3 seconds until the Receiver Status LED starts blinking rapidly. **2)** Power on the guitar controller by pressing the Home (CRKD) button, set the Platform Slider to "PC," and hold the Guitar Sync button for 3 seconds until both the Guitar Sync LED and Guitar Status LEDs blink rapidly. **3)** Once the Guitar Status LEDs remain solid green, the connection is successfully established. **4)** Rotate the Mode Dial to select your game mode.



EN: Figure 8
FR: Illustration 8
DE: Abbildung 8
ES: Imagen 8
SE: Figur 8
DA: Billede 8
PT: Figura 8
PL: Rysunek 8
NL: Afbeelding 8
IT: Figura 8

CONNECT TO NINTENDO SWITCH™

Option 1: USB Wired Connection
1) Insert the Switch console into the dock and set the Platform Slider to NS on guitar controller. **2)** Plug the USB-A end of the cable into your Switch dock. Connect the USB-C end of the cable to the USB-C port on your guitar. **3)** The Guitar Status LEDs will remain solid white. **4)** Rotate the Mode Dial to choose your game mode.



EN: Figure 9
FR: Illustration 9
DE: Abbildung 9
ES: Imagen 9
SE: Figur 9
DA: Billede 9
PT: Figura 9
PL: Rysunek 9
NL: Afbeelding 9
IT: Figura 9

Option 2: *Bluetooth®*.
1) In settings, select the "Controllers and Sensors" and then select Change Grip/Order. **2)** Set the Platform Slider to "NS" on guitar controller. With the guitar powered off, press and hold the Home (CRKD) Button for 3 seconds to enter pairing mode. The Guitar Sync LED and Guitar Status LEDs will begin blinking rapidly in blue. The guitar controller will then automatically connect to the Switch. **3)** After successful connection, you will see the controller highlighted in user 1/2/3/4 on the Switch and the Guitar Status LEDs remain solid blue. **4)** Rotate the Mode Dial to choose your game mode.



EN: Figure 10
FR: Illustration 10
DE: Abbildung 10
ES: Imagen 10
SE: Figur 10
DA: Billede 10
PT: Figura 10
PL: Rysunek 10
NL: Afbeelding 10
IT: Figura 10

CONNECT TO ANDROID

Option 1: *Bluetooth®*
1) Enable *Bluetooth®* on your device. **2)** On the guitar controller, set the Platform Slider to "AN." Ensure the guitar controller is powered off, then press and hold the Home (CRKD) Button for 3 seconds to activate pairing mode. The Guitar Sync LED and Guitar Status LEDs will start blinking rapidly in blue. **3)** Select "Gamepad" from the list of available devices, then press PAIR. When the Guitar Status LEDs stay solid blue, the connection is established. **4)** Rotate the Mode Dial to choose your game mode.



EN: Figure 11
FR: Illustration 11
DE: Abbildung 11
ES: Imagen 11
SE: Figur 11
DA: Billede 11
PT: Figura 11
PL: Rysunek 11
NL: Afbeelding 11
IT: Figura 11

CONNECT TO PLAYSTATION® 3

Option 1: USB Wireless Receiver.
1) Insert the USB Wireless Receiver into your PS3 and hold the Receiver Sync button for 3 seconds until the Receiver Status LED starts blinking rapidly. **2)** Power on the guitar controller by pressing the Home (CRKD) button, set the Platform Slider to "P3," and hold the Guitar Sync button for 3 seconds until both the Guitar Sync LED and Guitar Status LEDs blink rapidly. **3)** Once the Guitar Status LEDs remain solid green, the connection is successfully established. **4)** Rotate the Mode Dial to mode 1.

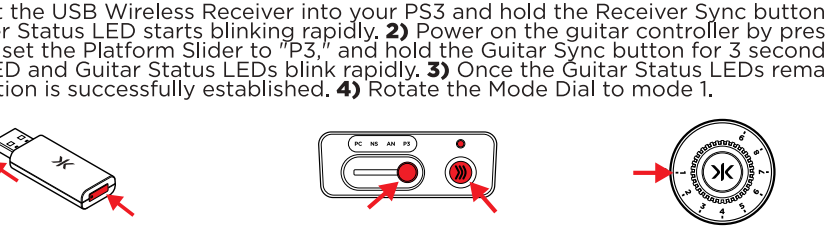

EN: Figure 12
FR: Illustration 12
DE: Abbildung 12
ES: Imagen 12
SE: Figur 12
DA: Billede 12
PT: Figura 12
PL: Rysunek 12
NL: Afbeelding 12
IT: Figura 12

SPECIFICATIONS

Design and specifications are subject to change without notice.

USB Charging cable: 2.5m (8.25ft), USB Cable: USB-C to USB Type-A, Wireless Connection: *Bluetooth®* 5.0+EDR, Battery type: Li-ion (external battery pack), Battery capacity: 1100mAh, Charging time: 2hrs, Input power rating: DC5V/ 1A, Voltage: 5.0V +/-0.2V, Operating temperature: 0ºC--- 40ºC, Radio frequency: ISM 2.4G, Frequency band: 2402---2480MHz(1MHz), Maximum radio-frequency: 0dbm, Mass: Approx. 965g

CUSTOMER SUPPORT

If you have questions about setup or use, contact CRKD direct. The CRKD App includes informational support videos. Visit support on the web at **crkd.gg/support.** If you still need help, please contact our support team: **support@crkd.gg**

LIMITED WARRANTY

CRKD warrants to the original consumer purchaser that product will be free from defects in materials and/or workmanship for the length of time specified in the warranty period from the date of purchase, this being 2 Years, as set forth at www.crkd.gg/warranty.

AUSTRALIAN WARRANTY

These goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. If purchased in Australia or New Zealand, this product comes with one year (12 months) warranty from date of purchase. Defects in the product must have appeared within one year from date of purchase, in order to claim warranty. All warranty claims must be facilitated back through the retailer of purchase in accordance with the retailer's returns policy and procedures. Any expense incurred as a result of returning the product to the retailer of purchase is the full responsibility of the customer.

Bluemouth Interactive, Level 2, 2 Darling Street, South Yarra, VIC 3141. Phone: (03) 9867 2666
Email: **Support@bluemouth.com.au.** Visit: **www.bluemouth.com.au**

GENERAL SAFETY

Please read the following precautions before using the controller.

WARNING: Do not use the controller if you have heart, respiratory or other physical impairments that limit your physical activity. If you have any doubts, consult with a physician.

- Avoid prolonged use of this product. Take a break at about 30-minute intervals.
- Stop using this unit immediately if you begin to feel tired or if you experience discomfort or pain in your hands or arms during use. If the condition persists, consult a doctor.
- This product is intended for use with your hands only, do not bring it into close contact with your head, face or the bones of any other part of the body.
- The vibration function of this product can aggravate injuries, do not use the vibration function if you have any ailment or injury to the bones, joints or muscles of your hands or arms.
- Never disassemble or modify the product.
- Do not expose the product to high temperatures, high humidity or direct sunlight.
- Do not allow the product to come into contact with liquids.
- Do not put heavy objects on the product.
- Do not throw or drop the product or subject it to strong physical shock.
- Do not touch the ports or insert any foreign objects into them.
- Excessive or improper use of the whammy bar can cause it to break.

BATTERY SAFETY

Incorrect use of batteries may result in battery leakage, overheating or explosion. When using batteries, be sure to follow these instructions.

- Do not handle damaged or leaking lithium-ion batteries.
- If you come into contact with material from a leaking battery, take the following actions: If the material gets into your eyes, do not rub, instead immediately flush your eyes with clean water and seek medical attention.
- If the material comes into contact with the skin or clothes, immediately rinse the affected area with clean water. Consult your physician if inflammation or soreness develops.
- Keep batteries out of reach of children.
- Do not dispose of the battery in fire or general waste. Follow local regulations for recycling or disposal.
- Periodically check the battery for signs of damage, swelling, or leakage. Replace immediately if any of these occur.

COMPLIANCE STATEMENTS

FCC STATEMENT: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

ISED STATEMENT: This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions:
This device may not cause interference.
This device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil contient des émetteurs/récepteurs exemptés de licence qui sont conformes aux flux RSS exemptés de licence de Innovation, Science et développement économique Canada. L'exploitation est soumise aux deux conditions suivantes: Cet appareil ne doit pas causer d'interférences. Ce dispositif doit accepter toute interférence, y compris toute interférence pouvant causer un fonctionnement indésirable du dispositive.

Freemode Go LLC hereby declares that this product follows the essential requirements and other provisions of EMC Directive 2014/30/EU and RED directive 2014/53/EU. The full text of the EU Declaration of Conformity is available at the following internet address: **www.crkd.gg/docs**

The UKCA (UK Conformity Assessment) mark is a declaration from the manufacturer that the product meets applicable UK regulations for health, safety, and environment protection.

The crossed-out wheeled bin symbol marked on this product signifies that it must not be disposed of with regular household waste and needs to be taken instead to an appropriate collection point.

The Regulatory Compliance Mark is a visible indication of a product's compliance with all applicable ACMA (Australian Communications and Media Authority) regulatory arrangements, including all technical and record-keeping requirements regarding the electrical safety and/or electromagnetic compatibility (EMC).

MANUFACTURED BY
FREEMODE GO LLC
3142 Constitution Drive,
Livermore, CA 94551, USA

EU AUTHORIZED REPRESENTATIVE
AR Service, 77 Camden Street Lower,
Dublin, D02 XE80, Ireland
E-mail: contact@arenquiries.com

UK AUTHORIZED REPRESENTATIVE
FREEMODE GO LTD
Unit 19 Hither Green Industrial Estate,
Clevedon, Somerset, BS21 6XU, UK

© 2025 Freemode Go, LLC. All rights reserved. The CRKD logos are trademarks of Freemode Go, LLC. All other trademarks are owned by their respective owners.

Les Paul™ guitar body shape and headstock design are trademarks of Gibson, Inc. All rights reserved.

V1

AGENCEMENT DE LA GUITARE DE JEU - Voir illustration 1

1. Boutons de frette
2. LED RGB
3. Stick gauche (touche L3)
4. Hub de navigation
5. Compartiment récepteur sans fil
6. Barre de frappe
7. LED d'état de la guitare
8. Bouton CRTL
9. Compartiment batterie
10. Barre de vibrato
11. LED d'alimentation
12. Bouton CRKD (Home)
13. Molette de réglage de mode
14. Stick droit (touche R3)
15. Boutons directionnels
16. Bouton de relâche du manche
17. Bouton de la sangle
18. Point tactile RFID
19. Récepteur USB sans fil
20. Bouton de synchronisation du récepteur
21. LED d'état du récepteur
22. Port USB-C
23. Prise jack pour casque 3,5 mm
24. Boutons d'affichage, de capture et du menu
25. Bouton de synchronisation de la guitare
26. LED de synchronisation de la guitare
27. Prise plateforme

GITARREN-CONTROLLERBELEGUNG – Siehe Abbildung 1

1. Griffbrett-Tasten
2. RGB-LEDs
3. Linker Stick (L3-Taste)
4. Navigationshub
5. Fach für kabellosen Empfänger
6. Strum-Bar
7. Gitarrenstatus-LED
8. CRTL-Taste
9. Akkufach
10. Vibrato-Bar
11. Power-LED
12. HOME (CRKD)-Knopf
13. Modus-Schalter
14. Rechter Stick (R3-Taste)
15. Richtungstasten
16. Neck-Release-Taste
17. Strap-Taste
18. RFID-Touchpoint
19. Drahtlose Verbindung über USB
20. Synchronisationstaste (Receiver)
21. Status-LED (Receiver)
22. USB-C-Port
23. 3.5mm-Headset-Anschluss
24. Ansicht-Taste, Aufnahmeknopf, Menü-Tasten
25. Synchronisationstaste (Gitarre)
26. Gitarren-Synchronisations-LED
27. Plattform-Schieberegler

SPEZIFIKATIONEN

Änderungen des Designs und der Spezifikationen vorbehalten.

USB-Ladekabel: 2,5 m (8.25ft), USB-Kabel: USB-C auf USB-A, Kabellose Verbindung: Bluetooth® 5.0+EDR, Akku-Typ: Li-ion (externer Akku), Akku-Kapazität 1100 mAh, Ladedauer: 2 Stunden, Leistungsaufnahme: 5 V/DC, 1 A, Spannung: 5,0 V +/- 0,2 V, Betriebstemperatur: 0 – 40 ºC, Funkfrequenz: ISM 2,4 G, Frequenzband: 2.402–2.480 MHz (1 MHz), Maximale Frequenzleistung: 0 dbm, Gewicht: Circa 965 g

DISPOSICIÓN DEL MANDO GUITARRA - Consultar la imagen 1

1. Botones del mástil
2. Luces LED RGB
3. Joystick izquierdo (botón L3)
4. Centro de navegación
5. Compartimento del receptor inalámbrico
6. Barra de rasgueo
7. LED de estado de la guitarra
8. Botón CRTL
9. Compartimento de la batería
10. Palanca de trémolo
11. LED de encendido
12. Botón CRKD (inicio)
13. Perilla de modo
14. Joystick derecho (botón R3)
15. Botones de dirección
16. Botón de liberación del cuello
17. Botón de la correa
18. Punto de contacto RFID
19. Receptor inalámbrico USB
20. Botón de sincronización del receptor
21. LED de estado del receptor
22. Puerto USB-C
23. Conector de 3,5 mm
24. Botones de menú, vista y captura
25. Botón de sincronización de la guitarra
26. LED de sincronización de la guitarra
27. Selector de plataforma

ESPECIFICACIONES

El diseño y las especificaciones podrían cambiar sin previo aviso.
Cable de carga USB: 2,5 m (8,25 ft); cable USB: USB-C a USB-A; conexión inalámbrica: Bluetooth® 5.0+EDR; tipo de batería: Li-Ion (batería externa); capacidad de la batería: 1100 mAh; tiempo de carga: 2 h; potencia nominal: 5 V CC, 1 A; voltaje: 5,0 V +/- 0,2 V; temperatura de funcionamiento: 0 °C--- 40 °C; frecuencia de radio: ISM 2.4G; banda de frecuencias: 2402---2480 MHz (1 MHz); frecuencia de radio máxima: 0 dbm; peso: 965 g (aprox.)