正面

80*110mm

Wireless Hearing Protection Earbuds User Manual

What's Included

Charger Case×1

Earbuds×2

L/M/S Earplugs×1

User manual×1

L/M/S Foam Ear Tips×1

The M foam ear tipsis on Earbuds

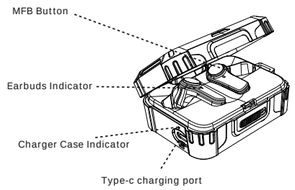

Using Your Hearing Protector

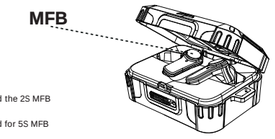

Turn ON:
Press and hold the 2S MFB

Turn OFF:
Press and hold for 5S MFB

Auto switch-off after 5 minutes without connecting to the device

Charging the Charger Case

To charge the Charger Case, insert the supplied USB connector cable into the USB jack located on the hearing protector. Connect the other end of the cable to a suitable USB power source such as a computer or third party certified (UL, Intertek, etc.) AC to USB wall adapter. (5V 1A)

Charger Case Indicator

Flashing red	Low power
Breathing light	Red 0-30% Yellow 30-70% Green 70-100%
Steady green	Fully charged
Steady light	Charger eadbuds

Charger Case Charging



Charging the Wireless Earbuds

Put the Earbuds into the Charging Case, than the earbuds indicator steady red.

Earbuds Indicator

Flashing red	Low power
Steady red	Charging
OFF	Fully charged

Earbuds Charging

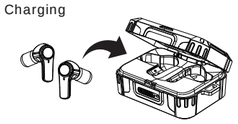

Power ON/OFF

Action	Auto ON/OFF	Manual ON/OFF
Power ON	Open and pick up from the charging case	Press and hold the "MFB" button for 2 seconds
Power OFF	Place the earphones backto the charging case	press and hold the "MFB" button for 5 seconds

Note: in pairing mode, if there is no connection for more than 5 minutes or the battery voltage is less than 3.1V, the headphones will automatically shut down.

Pair with your device

1. Take out the two headphones and turn them on with a"power on" sound;

2. The indicator flashes rapidly in alternating red andblue with a "pairing"voice;

3. Open the Bluetooth of the phone or tablet and then search and click Bluetooth "**AC171**",

4. Once the earphone prompts"Connected" indicating successful connection and ready for use.

5. The headphones have an automatic reconnection function. When the headphones are tumed on again,they will automatically connect to the device.

6. After successful connection, please place the headphones inside the helmet (NOTE: please distinguish between the left and right earphone)

背面

MFB (Multifunction Button) Instructions

Playing Music		
Functions	**Actions on MFB**	**Sounds**
Play/Pause music	Single press the left or right MFB	✕
Volume +	Double press the right MFB	Beep for the highest volume
Volume -	Double press the Left MFB	✕
Next song	Triple Right MFB	✕
Previous song	Triple Left MFB	✕

Voice assistant		
Functions	**Actions on MFB**	**Sounds**
Activate voice assistant	Press and hold the left or right MFB for 1 second	D~
Stop voice assistant	Press and hold the left or right MFB for 1 second	D~

Calling		
Functions	**Actions on MFB**	**Sounds**
Answer calls	Single press the left or right MFB	✕
End call	Single press the left or right MFB	✕
Reject call	Press and hold the left or right MFB for 2 seconds (when a call comes)	✕

LED Indicator Status & Voice Prompt

Work Status	Indicator Light Status	Voice Prompt
Power on	Blue and red light flashes	Power on
Power off	Light off	Power off
Pairing mode	Blue and red light flashes fast	Pairing
Wireless connected	Blue light is flashes per 3 seconds	Connected
Low battery warning	Red light is flashes per 10 seconds	Please charger
Disconnected	Blue and red light flashes fast	Disconnected
Battery high		Battery high (70%-100%)
Battery medium		Battery medium(30%-70%)
Battery low		Battery low(0%-30%)

Specifications

Version	5.4
Input	5V ⎓1A
Charging time	2.5 hours
Charger Case Battery capacity	800mAh
Earbuds battery capacity	45mAh
Working range	20 meters
Working time	7 hours
Charging Port	Type-C

Troubleshooting

1.The phone cannotfnd the headphones:
Possible reasons:

(1) The headphones are not turned on and under standby mode;

(2) Headphone program error;

(3) Phone program error.

Solution:

(1) Putthe earphones into the charging case and close the case; then open the case and take the earphones out (the red and blue indicator lights flash altemately) to enter the pairing mode;

(2) Please clear the pairing record of the earphones.

(3) Restarting the phone and clear all pairing data in the phone' s Wireless

2. No sound from headphones:
Possible reasons:

(1) Improper phone volume;

(2) The headphones are not properly connected to the phone;

(3) The headphones are out of operating range.

Solution:

(1) Adjustthe phone volume;

(2) Reconnect the headphones;

(3) Keep the earphones and phone within a range of 10m.

Possible reasons:

(1) Do not perform any otheractions while searching Wireless

(2)Please use headphones near your phone to ensuresignal stability

3. The red indicatorlight does not light up during charging
Possible reasons:

The headphones have not been used for a long time

Solution:

Chargethe headphones for 30 minutes and the red indicator will light up.

Correct Disposal of This Product
(Waste Electrical & Electronic Equipment)
This Marking shown on the product or its literature, indicate t hat it should not be disposed with other household wastes at the end of its working life.To prevent possible harm to the environment or human health from uncon trolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.
Household user should contact either the retailer where they pu rchased this product, or their local government office, for details of where and how they can m ake this item for environmentally safe recycling.Business users should contact th eir supplier and check the terms and conditions of the purchase contact.this product shoul d not be mixed with other commercial wastes for disposal.

FCC STATEMENT :
This device complies with Part 15 of the FCC Rules. Operation i s subject to the following two conditions.
(1)This device may not cause harmful interference, and
(2)This device must accept any interference received, including interference that may cause undesired operation.
Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equip ment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules These limits are d esigned to provide reasonable protection against harmful interference in a residential instal lation. This equipment generates uses and can radiate radio frequency energy and, if notinstalle d and used in accordance with the instructions, may cause harmful interference to radio commu nications. However, there is no guarantee that interference will not occur in a particular inst allation. If this equipment does cause harmful interference to radio or television reception. which ca n be determined by turning the eauipment off and on. the user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help
RF warning statement:
The device has been evaluated to meet general RF exposure requi rement. The device can be used in portable exposure condition without restr iction.

FCCID:2BCRG-AC171

WARNING DO NOT DISPOSE OF THE UNIT IN FIRE OR WATER. > NEVER ATTEMPT TO DISASSEMBLE AND REASEMBLE WASTE ELECTRICAL PRODUCTS SHOULD NOT BE DISPOSED OF WITH HOUSEHOLD WASTE. ELECTRICAL PRODUCTS SHOULD NOT BE DISPOSED OF WITH HOUSEHOLD WASTE. RECYCLE WHERE FACILITIES EXIST. > CHECK CHECK WITH YOUR LOCAL AUTHORITIES FOR RECYCLING ADVICE. KEEP YOUR DEVICE AND ALL ACCESSORIES OUT OF THE REACH OF CHILDREN AND ANIMALS. > SMALL PARTS CAN CAUSE SUFFOCATION OR INJURY. SMALL PARTS CAN CAUSE CHOKING OR SERIOUS INJURY IF SWALLOWED. > AVOID EXPOSING YOUR DEVICE TO VERY HOT OR VERY COLD TEMPERATURES (BELOW 0°C OR ABOVE 0°C). (BELOW 0°C OR ABOVE 45°C). > EXTREME TEMPERATURES MAY CAUSE DEFORMATION OF THE DEVICE AND REDUCE THE CHARGING CAPACITY AND LIFETIME OF YOUR DEVICE. AND REDUCE THE CHARGING CAPACITY AND LIFE SPAN OF YOUR DEVICE. > DO NOT ALLOW YOUR DEVICE TO GET WET LIQUIDS CAN CAUSE SERIOUS DAMAGE.
> DO NOT HANDLE YOUR DEVICE WITH WET HANDS.