


BSP-D3

手机游戏手柄

MOBILE GAME CONTROLLER

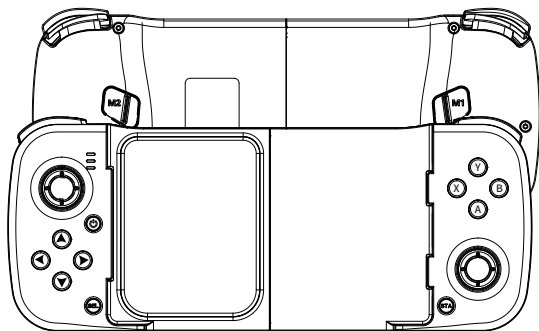

产品说明书
User Manual





适用说明:

- 1、本产品采用人体工学设计,手感舒适。
- 2、具有拉伸收缩功能,可以拉伸收纳不同长度为 135-173mm 的手机。
- 3、采用蓝牙 5.0 EDR/BLE 连接,手柄通过蓝牙与手机等各主机连接。
- 4、支持 ShootingPlus V3 APP, APP 可以通过各手机应用市场下载。
- 5、支持安卓与鸿蒙 HID 标准模式,可玩支持 HID 标准模式的各类游戏厅游戏。
- 6、支持安卓 6.0 以上系统(即 ShootingPlus V3 安卓模式)。
- 7、支持 iOS 10.1 至 13.3.1 系统(即 ShootingPlus V3 iOS 模式)多个触控;支持 iOS 13.4 及以上系统单点触控。
- 8、支持 iOS 13.0 以上系统 MFi 游戏, MFi 游戏可以到 ShanWan MFi app 下载。
- 9、支持 PS3/SWITCH 游戏主机蓝牙连接玩游戏,但没有陀螺仪功能。
- 10、支持 Windows 10 系统笔记本电脑蓝牙连接,玩 X-Input 游戏。
- 11、支持 USB 有线,可以玩 PC/PS3/SWITCH 的游戏。
- 12、其他模式下, M1和M2可以设置背键单键和宏。
- 13、按键带炫酷 LED 背光(同时按下 R3+ ⊕ 键可开启或关闭按键背光)。

★ 因手机系统问题,个别手机可能不支持此设备


★ 因官方游戏平台软件升级或源代码变更等不可抗拒的因素造成部分游戏无法与本产品连接操作,我公司不负任何责任。对此我公司保留最终解释权。

功能按键示意图:

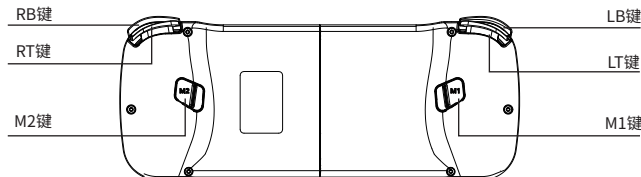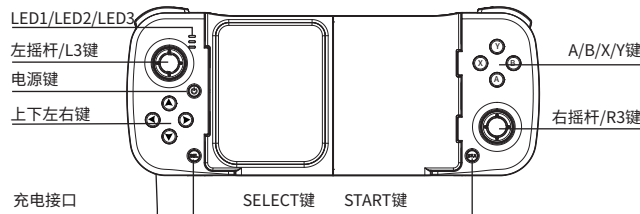

产品特性参数:


- 1、工作电压: DC3.7V
- 2、工作电流: 约 10mA
- 3、持续使用时间: >20H
- 4、休眠电流: <5uA
- 5、充电电压/电流: DC5V/500mA
- 6、蓝牙传输距离: <=8M
- 7、电池容量: 350mAh
- 8、待机时间: 满电放置 60 天

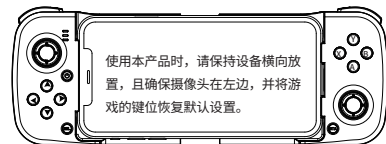

产品使用说明:

安卓 ShootingPlus V3 模式(鸿蒙系统与安卓 ShootingPlus V3 模式相同):



同时按 A+ ⊕ 2秒进入 V3 安卓模式,手柄 LED1 快闪,当安卓手机搜索到“BSP—D3”设备名时,选择连接。连接成功后,手柄 LED1 长亮。
已成功连接过,可以直接按 ⊕ LED1 灯慢闪,自动回连。

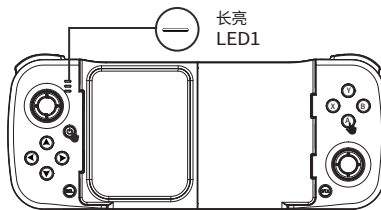

iOS ShootingPlus V3 模式:

同时按 Y+ ◎ 2 秒进入 V3 iOS 模式,手柄 LED2 快闪,当苹果手机搜索到“BSP—D3”设备名时,选择连接。连接成功后,手柄 LED2 长亮。

已成功连接过,可以直接按 ◎,LED2 灯慢闪,自动回连。

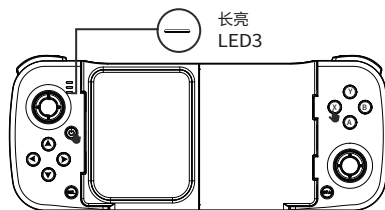
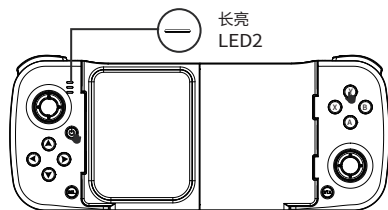


iOS MFi 模式:

同时按 B+ ◎ 2 秒进入 iOS MFi 模式,手柄 LED3 快闪,当苹果手机搜索到“DUALSHOCK 4 Wireless Controller”设备名时,选择连接。连接成功后,手柄 LED3 长亮。

已成功连接过,可以直接按 ◎,LED3 灯慢闪,自动回连。

MFi 游戏可以到 ShanWan MFi app 下载。

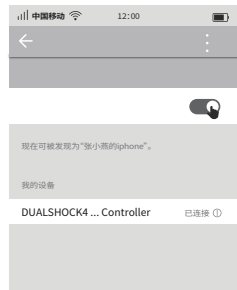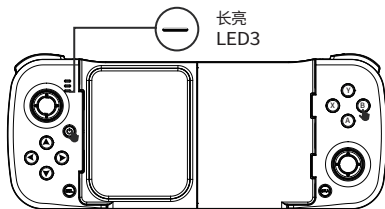

安卓/鸿蒙/iOS 按键映射功能:

关注公众号“ShootingPlus”,查看公众号内的默认操作说明,如需设置映射键位,请下载安装“ShootingPlus V3”APP,在APP内进行按键映射以及调整按键位。


ShootingPlus V3 App, iOS 系统可以到 APP Store 下载,安卓与鸿蒙系统可以到各手机应用市场下载。

安卓标准模式:

- 1、同时按 X+ ◎ 进入标准安卓模式,手柄 LED2 快闪,当安卓/鸿蒙手机搜索到“BSP—D3”设备名时,选择连接。连接成功后,手柄 LED2 长亮。
已成功连接过,可以直接 ◎,LED2 灯慢闪,自动回连。
- 2、安卓/鸿蒙标准模式游戏下载,可下载各种游戏厅,进入平台下载所需要的游戏。


PC X-input 蓝牙模式:

同时按 RB + ◎ 2 秒进入 X-input 蓝牙模式, 手柄 LED1/ LED2 快闪, 当 PC 搜索到 "Xbox Wireless Controller" 设备名时, 选择连接。连接成功后, 手柄 LED1/ LED2 长亮。
已成功连接过, 可以直接按 ◎, LED1 与 LED2 灯慢闪, 自动回连。

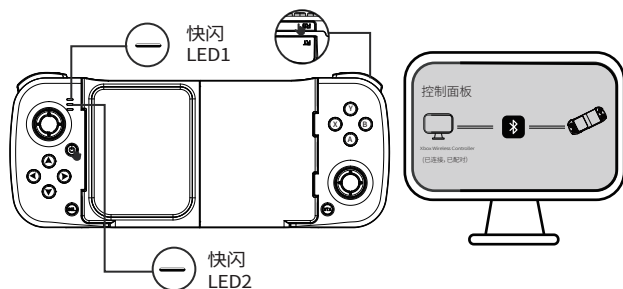

SWITCH 模式:

在 SWITCH 主机, 选择手柄 Controllers- 更改握把/顺序 Change Grip/order, 进入到 SWITCH 主机配对模式界面 Press L+R on the controller。
按住 RT+ ◎ 2 秒进入 SWITCH 模式配对, 手柄 LED1 与 LED2 快闪, 配对成功为 LED3 长亮。成功连接过, 可以直接按 ◎, LED1 与 LED2 灯慢闪, 自动回连。

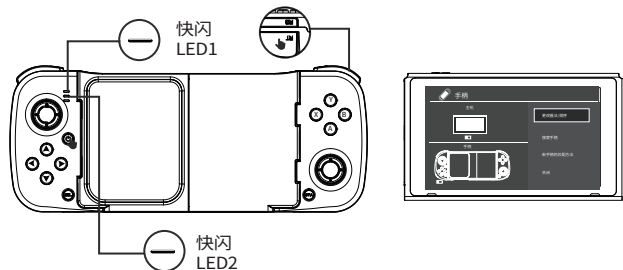

PS3模式:

将手柄用 TYPE-C USB 数据线直接与 PS3 主机连接, 按 进得对码, 手柄 LED1 与 LED2 快闪, 连接成功后 LED3 长亮。
已成功连接过, 可以直接按 ◎, LED1 与 LED2 灯慢闪, 自动回连。

有线模式:

有线模式下自动识别各个系统平台, 可以支持的系统平台有安卓、PC(D-input 与 X-input)、PS3 与 Switch。

- 1、X-input 有线模式连接成功后 LED 1 常亮。D-input 有线模式连接成功后 LED 2 常亮
- 2、在 PC 上, 按 ◎ 2 秒可以对 D-input 与 X-input 之间切换。
- 3、PS3/SWITCH 主机默认 LED3 长亮

2.4G 模式 (需选配):

2.4G 模式下自动识别各个系统平台, 可以支持的系统平台有安卓、PC(D-input 与 X-input)、PS3 与 Switch。

- 1、按住 L1+ ◎ 2 秒进入 2.4G 模式, 手柄 LED1 与 LED2 快闪, 连接成功后 LED1 与 LED2 长亮。
- 2、在 PC 上, 按住 SELECT+START 键 3 秒可以对 D-input 与 X-input 之间切换。
- 3、已成功连接过, 可以直接按 ◎, 手柄 LED1 与 LED2 慢闪, 自动回连。

背部单个扩展设置:

- 1、按住 SEL 键不放再按 M1, 此时指示灯快闪。
- 2、设置模式开启后, 手柄键入什么键就会录入到什么键至 M1。
(如: 按一下 X 键, 则 M1 等于 X 键)
- 3、如要设置宏连招, 则按顺序键入所需按键即可。
(如: 按 A→B→X→Y, 则 M1 等于按 A、B、X、Y 的功能顺序连招)
最高可设置十二个键
- 4、按键按完后按 M1 即可完成编程此时 LED 灯长亮。

背部按键清除:

- 1、按住SEL键不放再按M1, 此时指示灯快闪。
- 2、清除模式开启后, 此时再次按下M1就能清除M1所有键位。

注意: 此时不要按下任何按键

- 3、按键按完后, 即为完成清除编程, 此时灯光长亮。

M2键清除方式同上

(注意: 此设置方式可支持MFI、SWITCH 主机、PC电脑)

手柄充电/休眠/唤醒功能:

- 1、手柄充电功能:

- A、低电时, 右边青色LED指示灯快闪提示;
- B、充电时, 右边青色LED指示灯慢闪提示;
- C、充满时, 右边青色LED指示灯长亮提示;

- 2、手柄休眠/唤醒/关机功能:

- A、手柄在 15 分钟内没有任何按键操作时自动关机休眠;
- B、当需要重新使用时需按 ◎ 键唤醒即可回连;
- C、在开机状态下, 长按 ◎ 键 3 秒, 产品关机, 所有 LED 指示灯熄灭。

注意事项:

- 1、请不要把本产品放在潮湿或高温地方存储;
- 2、不要敲击、摔打、棒打、刺穿、或试图去分解本产品, 以免对产品造成不必要的损害;
- 3、产品内置电池, 请勿和垃圾一起丢弃;
- 4、不要在靠近火或其它热源的地方对手柄进行充电;
- 5、非专业人员请勿拆卸本产品, 否则不在售后保修服务内。

产品清单:



无线手柄 X1



说明书 X1




TYPE-C USB 线 X1。


Description of application:

1. This product adopts ergonomic design and feels comfortable.
2. With stretch and shrink function, it can stretch and store mobile phones with different lengths of 135-173mm.
3. Bluetooth 5.0 EDR / ble connection is adopted, and the controller is connected with mobile phones and other hosts through Bluetooth.
4. It supports shootingplus V3 app, which can be downloaded through various mobile application markets.
5. Support Android and Hongmeng hid standard mode, and can play all kinds of game hall games that support HID standard mode.
6. Support systems above Android 6.0 (i.e. shootingplus V3 Android mode).
7. Support multiple touch of IOS 10.1 to 13.3.1 systems (i.e. shootingplus V3 IOS mode); Support single touch for IOS 13.4 and above systems
8. Support MFI games for systems above IOS 13.0. MFI games can be downloaded from Shanwan MFI app.
9. PS3 / switch game console is supported to play games with Bluetooth connection, but there is no gyroscope function.
10. Support Bluetooth connection of windows 10 system laptop and play X-input games.
11. Support USB cable and can play PC / PS3 / switch games.
12. In other modes, M1 and M2 can set back key, single key and macro.
13. The key is equipped with cool LED backlight (press R3 + ◎ at the same time to turn on or off the key backlight).

- ★ Due to the problem of mobile phone system, some mobile phones may not support this device
- ★ Some games cannot be connected to this product due to irresistible factors such as software upgrade or source code change of the official game platform Our company is not responsible for the operation. Our company reserves the right of final interpretation.


Function key diagram:

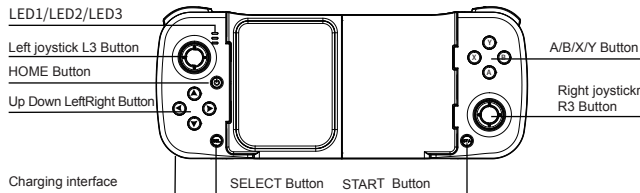

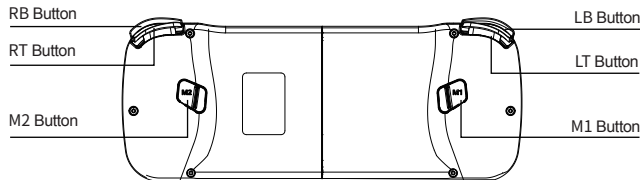

Characteristic parameters:



1. Working voltage: DC3.7v
2. Working current: About 10mA
3. Duration: > 20h
4. Sleep current: < 5uA
5. Charging voltage / current: DC5V / 500mA
6. Bluetooth transmission distance: < = 8M
7. Battery capacity: 350mAh
8. Standby time: 60 days at full power

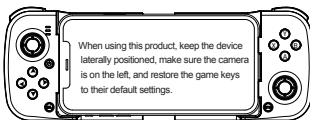

Operation instructions:

Android shootingplus V3 mode (Hongmeng system is the same as Android shootingplus V3 mode):



At the same time, press A + ⊕ 2 seconds to enter V3 Android mode, and the controller LED1 flashes. When the Android phone searches for the "BSP-D3" device name, select connection. After the connection is successful, the controller LED1 will be on for a long time. It has been successfully connected. You can press the ⊕ directly, and the LED1 light flashes slowly and connects back automatically.

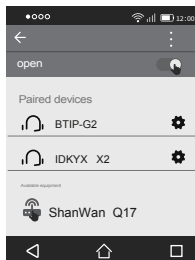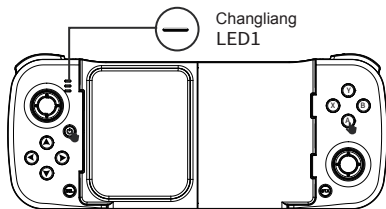

ShootingPlus V3 IOS mode:

Press the Y + ⊕ for 2 seconds at the same time to enter the V3 IOS mode, and the controller LED2 flashes quickly. When the Apple phone searches for "BSP-D3" When selecting the device name, select connect. After the connection is successful, the handle LED2 will be on for a long time.

It has been successfully connected. You can press the ⊕ directly, and the LED 2 light flashes slowly and connects back automatically.

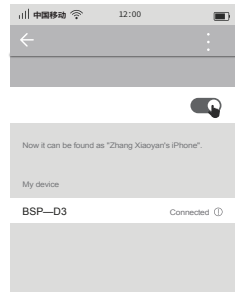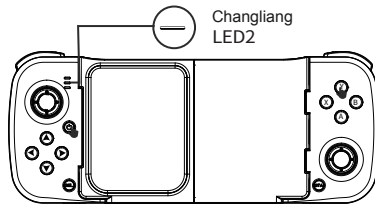

Android / Hongmeng / IOS key mapping function:

If you need to set up the mapping key, please download and install "ShootingPlus V3" APP, map the key and adjust the key position in APP.



Shootingplus V3 app, IOS system can be downloaded from App store, and Android and Hongmeng system can be downloaded from various mobile application markets.

Android standard mode:

1. At the same time, press the X + ⊕ to enter the standard Android mode, and the controller LED2 flashes. When the Android / Hongmeng mobile phone searches for the "BSP-D3" device name, select connection. After the connection is successful, the controller LED2 will be on for a long time.

It has been successfully connected. You can press the ⊕ directly, the LED2 light flashes slowly, and connect back automatically.



2. Android / Hongmeng standard mode game download, you can download various game halls and enter the platform to download the required games.

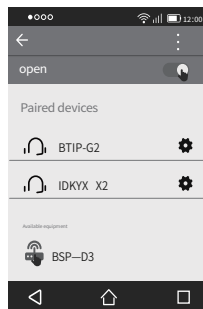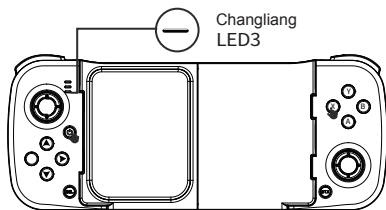

IOS MFI mode:

At the same time, press B + $\odot$ 2 seconds to enter IOS MFI mode, and the controller LED2 flashes. When the Apple phone searches for the device name of "DUALSHOCK 4 Wireless Controller", select connect. After the connection is successful, the controller LED3 Changliang, It has been successfully connected.



You can press it directly $\odot$,The LED3 flashes slowly and connects back automatically, MFI games can be downloaded from ShanWan Mfi app.

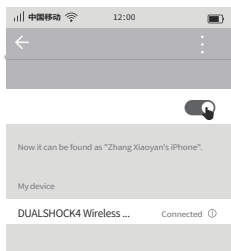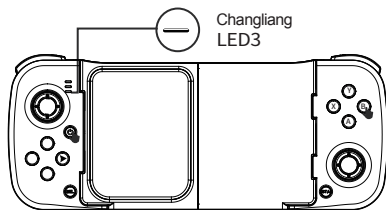

PC X-input Bluetooth Mode:

At the same time, press RB + $\odot$ 2 seconds to enter the X-input Bluetooth mode, controller LED1 and LED3 flash, and select connection when the PC searches for the device name of "Xbox Wireless Controller". When the connection is successful, Controller LED1 and LED2 flashes.

It has been successfully connected. You can press it directly $\odot$. LED1 and LED2 lights flash slowly and connect back automatically.

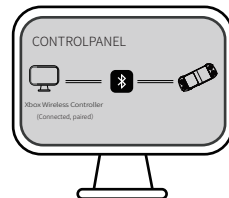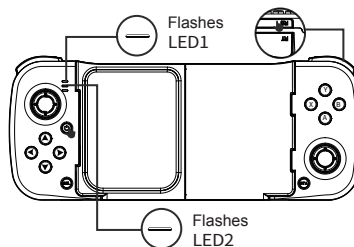


SWITCH Mode:

On the switch host, select Controllers Controllers — change grip / order to enter the switch host pairing mode interface press L + R on the controller.

At the same time, press RT + $\odot$ 2 seconds to enter the switch mode for pairing. The controller LED1 and LED2 flashes.

If the pairing is successful, the LED2 Slow flash and LED2 Slow flash are on for a long time. After successful connection, you can press directly $\odot$, LED1 and LED2 lights flash slowly and connect automatically.

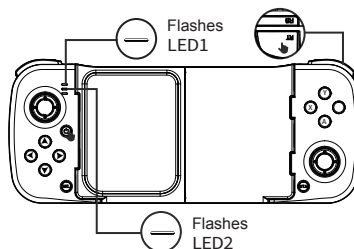

PS3 Mode:

Connect the handle with the PS3 / host directly with the type-C USB data cable, press the  to align the code, and the controllers LED1 and LED2 Flash, LED3 will light up after successful connection.

It has been successfully connected. You can press the  directly. LED1 and LED2 lights flash slowly and connect back automatically.

Wired mode:

Automatically identify each system platform in wired mode. The system platforms that can be supported include Android, PC (D-input and X-input) PS3 and switch.

1. LED 1 is on after the connection of X-input wired mode is successful. LED 2 is always on after D-input wired mode is successfully connected.
2. On the PC, press the  for 2 seconds to switch between D-input and X-input.
3. The default LED3 of PS3 / switch host is on for a long time.

2.4G mode (optional):

In 2.4G mode, each system platform is automatically identified. The system platforms that can be supported include Android, PC (D-input and X-input) PS3 and switch.

1. Press and hold the L1 +  for 2 seconds to enter the 2.4G mode. The controller LED1 and LED2 flash. After successful connection, LED1 and LED2 light up for a long time.
2. On the PC, press and hold the SELECT + START for 3 seconds to switch between D-input and X-input.
3. After successful connection, you can press the  directly, and the controller LED1 and LED2 flash slowly and connect back automatically.

Back single expansion setting:

1. Press and hold the SEL key and then press M1. At this time, the indicator flashes.
2. After the setting mode is turned on, the key entered by the handle will enter the key to M1. (for example, press the X key once, and M1 is used for the X key)
3. if you want to set the macro linked move, you can type the required keys in sequence. (for example: press A → B → X → Y, then M1, etc. are used for continuous recruitment according to the functional sequence of A, B, X and Y)
Up to twelve keys can be set.
4. after pressing the key, press M1 to complete the programming. At this time, the LED light is on for a long time.

Back key clear:

1. Press and hold the SEL key and then press M1. At this time, the indicator flashes.
2. After the clear mode is turned on, press M1 again to clear all M1 keys.
Note: do not press any key at this time
3. After pressing the key, the clear programming is completed, and the light is on for a long time.
M2 key clearing method is the same as above
(Note: this setting mode can support MFI, host, switch host and PC)

Controller charging / sleep / wake-up function:

1. Controller charging function:
 - A. When the power is low, the green LED on the right flashes;
 - B. When charging, the green LED on the right flashes slowly;
 - C. When full, the green LED indicator on the right is on for a long time;
2. Controller sleep / wake-up / shutdown function:
 - A. The controller will automatically shut down and sleep when there is no key operation within 15 minutes;
 - B. When it needs to be reused, press the  to wake up and connect back;
 - C. In the power on state, long press the  for 3 seconds, the product will shut down and all LED indicators will go out.

Matters needing attention:

1. Please do not store this product in a humid or high temperature place;
2. Do not knock, beat, stick, pierce, or try to decompose the product to avoid unnecessary damage to the product;
3. The built-in battery of the product should not be discarded with garbage;
4. Do not charge the controller near fire or other heat sources;
5. Non professionals are not allowed to disassemble this product, otherwise it will not be included in the after-sales warranty service.


Product list:



Wireless controller X1



Instruction x1



TYPE-C USB X1

適用説明:

- 1、本製品は人体工学設計を採用し、手触りが快適である。
- 2、延伸収縮機能を持ち、異なる長さが135-73 mmの携帯電話を延伸収納することができる。
- 3、Bluetooth 5.0 EDR/BLE接続を採用し、ハンドルはBluetoothを介して携帯電話などの各ホストと接続されています。
- 4、ShootingPlus V3 APPに対応しており、APPは各携帯電話アプリ市場を通じてダウンロードできます。
- 5、Androidと鸿蒙HID標準モードをサポートし、HID標準モードをサポートする各種ゲームセンターゲームを遊ぶことができます。
- 6、Android 6.0以上のシステム（ShootingPlus V3 Androidモード）をサポートしています。
- 7、iOS 10.1~13.3システム（ShootingPlus V3 iOSモード）の複数のタッチをサポートする。iOS 13.4および以上のシステムのシングルタッチをサポートします。
- 8、iOS 13.0以上のシステムMFIゲームをサポートし、MFIゲームはShanWan MFI appでダウンロードできます。
- 9、PS 3/PS 4/SWITCHゲーム本体のBluetooth接続をサポートしていますが、ジャイロ機能はありません。
- 10、Windows 10システムノートパソコンのBluetooth接続をサポートし、X-Inputゲームをプレイします。
- 11、USBケーブルに対応しており、PC/PS 3/SWITCHのゲームができます。
- 12、他のモードでは、M 1とM 2はバックキーのシングルキーとマクロを設定できます。
- 13、ボタンにはクールなLEDバックライトが付いています（R 3+ ◎ を同時に押すとキーバックライトをオンまたはオフできます）。

★ 携帯電話システムの問題で、個別の携帯電話はこの設備をサポートしていない可能性があります。

★ 公式ゲームプラットフォームのソフトウェアのアップグレードやソースコードの変更などの不可抗力な要素により、一部のゲームが本製品と接続できず、当社はいかなる責任も負いません。これに対して、当社は最終的な解釈権を保留しています。

機能キーの概略図:

LED1/LED2/LED3


左ロッカーバー/
L 3キー
電源キー
上下左右キー

充電コネクタ

SELECTキー


STARTキー

A/B/X/Yキー
右ロッカーバー/
R 3キー

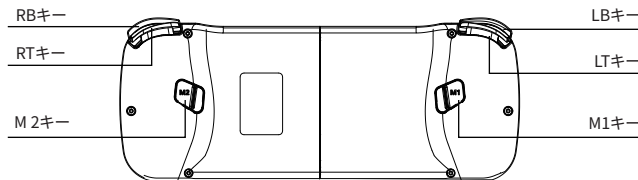

製品特性パラメータ:


- 1、動作電圧: DC 3.7 V
- 2、動作電流: 約10 mA
- 3、継続使用時間: >20 H
- 4、スリープ電流: <5 uA
- 5、充電電圧/電流: DC 5 V/500 mA
- 6、Bluetooth伝送距離: <=8 M
- 7、電池容量: 350 mAh
- 8、待機時間: 満充電60日間放置

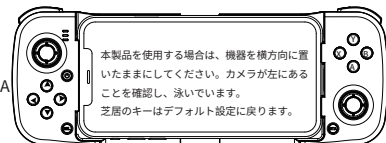

製品の使用説明:


Android ShootingPlus V3モード（鸿蒙システムとAndroid ShootingPlus V3モードは同じ）:

同時にA+ ◎ を2秒押ししてV3 Androidモードに入り、ハンドルLED 1がフラッシュしAndroid携帯電話が「BSP-D3」デバイス名を検索したときに接続を選択します。接続が成功すると、ハンドルLED 1が長く点灯します。正常に接続されました。◎ を直接押すことができ、LED 1ランプがゆっくり点滅し、自動的に接続を戻すことができます。

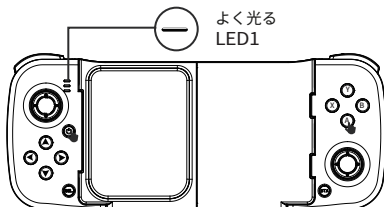

iOS ShootingPlusバージョン:

Y+ ◎ を2秒押ししてV3 iOSモードに入り、ハンドルLED 2がフラッシュし、アップルの携帯電話が「BSP-D3」デバイス名を検索したときに接続を選択します。接続が成功すると、ハンドルLED 2が長く点灯します。
正常に接続されました。◎ を直接押すことができ、LED 2ランプがゆっくり点滅し、自動的に接続を戻すことができます。

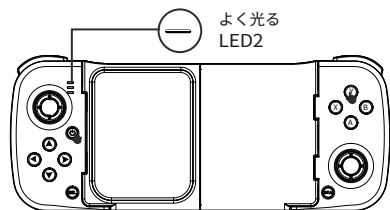


Android/鸿蒙/iOSキーマッピング機能:

公衆番号「ShootingPlus」に注目し、公衆番号内のデフォルトの操作説明を表示します。マッピングキーを設定する必要がある場合は、「ShootingPlus V3」アプリをダウンロードしてインストールし、アプリ内でキーマッピングを行い、キーを調整してください。ShootingPlus V3 App、iOSシステムはAPP Storeでダウンロードでき、Androidと鸿蒙システムは各携帯電話のアプリケーション市場でダウンロードできます。

Android標準モード:



- 1、同時にX+ ◎ を押して標準Androidモードに入り、ハンドルLED 2がフラッシュし、Android/鸿蒙携帯電話が「BSP-D3」デバイス名を検索したとき、接続を選択します。接続が成功すると、ハンドルLED 2が長く点灯します。
接続に成功しました。直接 ◎ 、LED 2ランプの点滅、自動再接続ができます。
- 2、Android/鸿蒙標準モードのゲームダウンロードは、様々なゲームセンターをダウンロードし、プラットフォームに入って必要なゲームをダウンロードすることができます。

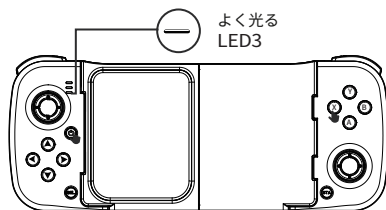

iOS MFIモード:

同時にB+ ◎ を2秒押ししてiOS MFIモードに入り、ハンドルLED 3がフラッシュし、アップルの携帯電話が「DUALSHOCK 4 Wireless Controller」デバイス名を検索したときに接続を選択します。接続が成功すると、ハンドルLED 3が長く点灯します。
正常に接続されました。◎ を直接押すことができ、LED 3ランプがゆっくり点滅し、自動的に接続を戻すことができます。


MFIゲームはShanWan MFI appにダウンロードできます。

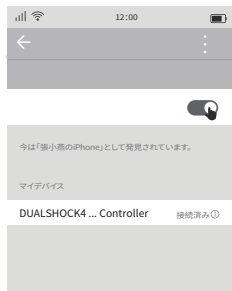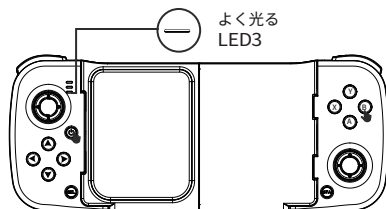

PC X-input Bluetoothモード:

同時にRB+ ◎ を2秒押ししてX-input Bluetoothモードに入り、ハンドルLED 1/LED 2がフラッシュし、PCが「Xbox Wireless Controller」デバイス名を検索したときに接続を選択します。接続が成功すると、ハンドルLED 1/LED 2が長く点灯します。


正常に接続されました。◎ を直接押すことができ、LED 1とLED 2のランプがゆっくり点滅し、自動的に接続を戻すことができます。

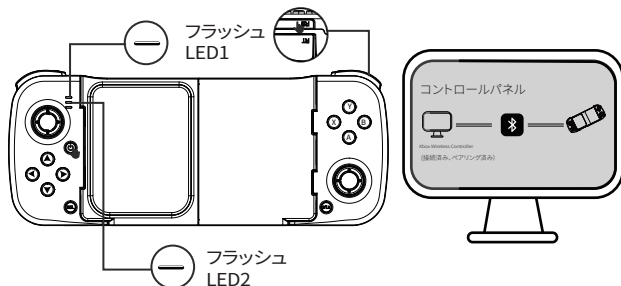

SWITCHモード:

SWITCHホストでは、ハンドルControllersを選択してグリップ/順序変更Grip/orderを変更し、SWITCHホストペアリングモードインタフェースPress L+R on the controllerに進みます。

RT+ ◎ を2秒間押し続けてSWITCHモードのペアリングに入り、ハンドルLED 1とLED 2がフラッシュし、ペアリングがLED 3のハイライトに成功しました。接続に成功したことがあります。◎ を直接押すことができ、LED 1とLED 2のランプがゆっくり点滅し、自動的に接続を戻すことができます。

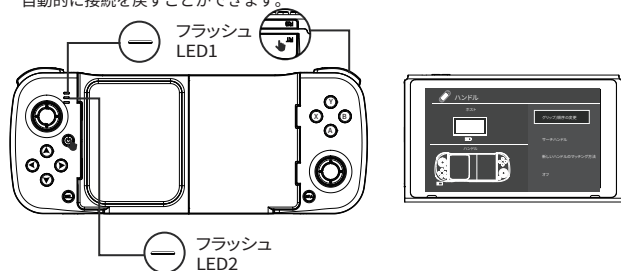

PS 3/PS 4モード:

ハンドルをTYPE-C USBデータケーブルでPS 3/PS 4ホストに直接接続し、◎ を押してコードを照合し、ハンドルLED 1とLED 2がフラッシュし、接続が成功するとLED 3が長く点灯します。

正常に接続されました。◎ を直接押すことができ、LED 1とLED 2のランプがゆっくり点滅し、自動的に接続を戻すことができます。

有線モード:

有線モードでは各システムプラットフォームを自動的に識別し、サポートできるシステムプラットフォームはAndroid、PC (D-inputとX-input)、PS 3とSwitchです。

- 1、X-input有線モード接続成功後、LED 1は常に点灯しています。D-input有線モード接続成功後LED 2は常に点灯
- 2、PCでは、◎ を2秒押しするとD-inputとX-inputを切り替えることができます。
- 3、PS 3/SWITCHホストデフォルトLED 3は長く点灯しています。

2.4 Gモード(オプションが必要):

2.4 Gモードで各システムプラットフォームを自動的に識別し、サポートできるシステムプラットフォームはAndroid、PC (D-inputとX-input)、PS 3とSwitchです。

- 1、L1+ ◎ を2秒間押し続けて2.4 Gモードに入り、ハンドルLED 1とLED 2がフラッシュし、接続が成功するとLED 1とLED 2が長く点灯します。
- 2、PCでSELECT+STARTキーを3秒押し続けるとD-inputとX-inputを切り替えることができます。
- 3、接続に成功しました。◎ を直接押して、ハンドルLED 1とLED 2をゆっくり点滅させて、自動的に接続を戻すことができます。

背面の個別の拡張設定:

- 1、SELキーを押したままM1を押さないと、LEDがフラッシュします。
- 2、設定モードがオンになると、ハンドルに何かキーを入力するとM1に何かキーが入力されます。
(例: Xキーを押すと、M1などはXキーに使用されます)
- 3、マクロ連携を設定するには、必要なキーを順番に入力すればいいです。
(例えば: A→B→X→Yであれば、M1などはA、B、X、Yの機能順に連携するために使用される) 最大12個のキーを設定可能
- 4、キーを押してからM1を押すとプログラミングが完了します。このときLEDランプは点灯します。

背部按键清除:

1. SELキーを押したままM1を押さないと、LEDがフラッシュします。
2. クリアモードがオンになったら、このとき再びM1を押すとM1のすべてのキーがクリアされます。

注意: この時はボタンを押さないでください

3. キーを押し終わったら、クリアプログラミングを完了するために、ライトが点灯します。
M2キークリア方式同上

(注意: この設定方式はMFI、PS4ホスト、SWITCHホスト、PCコンピュータに対応可能)

ハンドルの充電/スリープ/ウェイクアップ機能:

1. ハンドル充電機能:
 - A. 低電力時、右側の青色LEDランプのフラッシュ表示;
 - B. 充電時、右側の青色LEDランプの点滅が遅い。
 - C. 充填時、右側の青色LEDランプの長点灯のヒント;
2. ハンドルのスリープ/ウェイクアップ/シャットダウン機能:
 - A. ハンドルは15分以内にボタン操作がない場合、自動的に電源を切ってスリープします。
 - B. 再使用が必要な場合は ◎ を押して起動すると再接続できます。
 - C. 電源を入れた状態で、◎ を3秒間長く押して、製品は電源を切り、すべてのLEDランプは消灯します。

注意事項:

1. 本製品を湿気や高温の場所に保管しないでください。
2. たたいたり、転んだり、棒で打ったり、刺したり、本製品を分解しようとしたりしないで、製品に不必要な損害を与えないようにします。
3. 製品に電池を内蔵しているので、ゴミと一緒に捨てないでください。
4. 火や他の熱源に近い場所でハンドルを充電しないでください。
5. 専門外の人には本製品を分解しないでください。そうしないと、アフターサービスはありません。


製品リスト:



ワイヤレスハンドルX1



説明書X1



タイプC USB線X1.

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.