
Olike

OLIKE BEATZ WIRELESS PORTABLE AUDIO SV1 USER MANUAL

SPECIFICATIONS

Model	: CX-Pro1
Color	: Black
Bluetooth version	: 5.3
BT connection distance	: 10 meters
Rated power	: 5W*2
Input voltage	: DC-5V
Battery capacity	: 1200mAh
Play time	: 5 Hours
Charging time	: 2-3 Hours
Support input	: Bluetooth/USB/TF/AUX/
Weight	: 490g
Size	: 210X64X65mm

FUNCTION INSTRUCTION

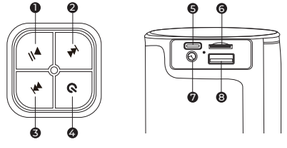

1. Play/Pause
2. V+/Next
3. V-/Previous
4. ON/OFF
5. Type-C
6. TF-Card
7. AUX
8. USB

POWER ON/OFF

Power on : When the speaker is powered off, long press the power on button The speaker will turn on and indicate a flashing blue light.
Power off : When the speaker is powered on, long press the power on button to turn off the speaker.

WIRELESS CONNECTION

1. Turn on the Bluetooth speaker, wait for pairing, use the Bluetooth function of the mobile phone to search for the Bluetooth speaker model of the device "Olike SV1", and click connect.
2. After the Bluetooth speaker is turned on, it will be connected to the last connected mobile phone before the shutdown (Bluetooth is in open state) to automatically connect, the phone does not need to re-search for connection and other steps.

MUSIC PLAY

1. When playing music, short click the PLAY & PAUSE BUTTON to pause the music and then click button again to restart to play
2. When playing music, press "⏮" to play the previous song
3. When playing music, press "⏭" to play the next song
4. Long press "⏮" the volume will decrease
5. Long press "⏭" the volume will increase

MODE SWITCH

In the power-on state, there is a TF card or flash disk inserted, and the TF card and flash disk are played by default. TF card or flash disk, the default is Bluetooth mode. Click the "Power On" button to switch the light.

CHARGING

1. The product has built in non-removable rechargeable battery, which can be charged by USB cable.
2. Charging voltage and current 5V 0.3A, Maximum 5V 1A.
3. When speaker charging, the red light on. Lights will be off when it is fully charged.

Olike
Ease Your Life

OUR HOTLINE : +62 822-9999-9669

Our company is committed to continuously improving the quality of our products, the descriptions stated in the manual book may be slightly different from the actual product.

Please read this manual carefully before using the product and keep it properly

Images are for illustrative purpose only. The actual product may vary.

www.olikeindonesia.com

Warning:
Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user 's authority to operate the equipment.

NOTE:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Statement:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

RF exposure compliance statement:
This device has been evaluated to meet the general RF exposure requirement

Olike **KARTU INFORMASI PENJUALAN**

Kartu Informasi Penjualan

Model Produk: _____
Tanggal Pembelian: _____
Nama Pembeli: _____
No. HP: _____
No. Seri: _____
Tanggal Kadaluarsa: _____
Keterangan Masalah: _____

Syarat Klaim:
1. Layanan garansi terbatas pada penggunaan normal dari masa garansi efektif, atau dikarenakan kualitas produk itu sendiri yang disebabkan oleh kerusakan non-manusiawi;
2. Batas waktu garansi adalah 6 bulan, jika kerusakan disebabkan bukan ulah manusia atau disebabkan oleh pabrik.
3. Produk yang diajukan tidak berupa perbaikan melainkan langsung digantikan barang baru.

Catatan:
Jika kartu garansi dirobek atau hilang, maka anda akan kehilangan hak kartu garansi, kami memiliki hak sepenuhnya untuk menginterpretasikan data.

Tanda Tangan Pelanggan:
Tanda Tangan Penjual: _____

Olike **KARTU GARANSI**

Kartu Informasi Penjualan

Model Produk: _____
Tanggal Pembelian: _____
Nama Pembeli: _____
No. HP: _____
No. Seri: _____
Tanggal Kadaluarsa: _____
Keterangan Masalah: _____

Syarat Klaim:
1. Layanan garansi terbatas pada penggunaan normal dari masa garansi efektif, atau dikarenakan kualitas produk itu sendiri yang disebabkan oleh kerusakan non-manusiawi;
2. Batas waktu garansi adalah 6 bulan, jika kerusakan disebabkan bukan ulah manusia atau disebabkan oleh pabrik.
3. Produk yang diajukan tidak berupa perbaikan melainkan langsung digantikan barang baru.

Catatan:
Jika kartu garansi dirobek atau hilang, maka anda akan kehilangan hak kartu garansi, kami memiliki hak sepenuhnya untuk menginterpretasikan data.

Tanda Tangan Pelanggan:
Tanda Tangan Penjual: _____

PENGISIAN

1. Produk ini memiliki baterai isi ulang yang tidak dapat dilepas, yang dapat diisi dengan kabel USB.
2. Pengisian tegangan dan arus 5V 0,3A, Maksimum 5V 1A.
3. Saat mengisi daya speaker, lampu merah menyala. Lampu akan mati saat terisi penuh.

MAIN MUSIK

1. Saat memutar musik, klik pendek TOMBOL MAINKAN & JEDA untuk menjeda musik lalu klik tombol lagi untuk memulai ulang untuk memutar
2. Saat memutar musik, tekan "⏮" untuk memutar lagu sebelumnya
3. Saat memutar musik, tekan "⏭" untuk memutar lagu berikutnya
4. Tekan lama "⏮" volume akan berkurang
5. Tekan lama "⏭" volume akan meningkat

MODE BERALIH

Dalam keadaan menyala, ada kartu TF atau flash disk yang dimasukkan, dan kartu TF dan flash disk diputar secara default. Kartu TF atau flash disk, defaultnya adalah mode Bluetooth. Klik tombol "Power On" untuk menyalakan lampu.

TWS mode : Saat kedua SV1 dihidupkan dan tidak tersambung ke perangkat, klik dua kali tombol daya salah satu SV1 untuk melakukan interkoneksi dan pemasangan.

1. Putar/Jeda
2. V+/Berikutnya
3. V-/Sebelumnya
4. Nyala/Mati
5. Tipe-C
6. TF-Card
7. AUX
8. USB

NYALA/MATIKAN

Nyalakan : Saat speaker dimatikan, tekan lama tombol power on. Speaker akan menyala dan menunjukkan lampu biru yang berkedip.
Matikan : Saat speaker dihidupkan, tekan lama tombol daya untuk mematikan speaker.

KONEKSI TANPA KABEL

1. Nyalakan speaker Bluetooth, tunggu pemasangan, gunakan fungsi Bluetooth ponsel untuk mencari model speaker Bluetooth perangkat "Olike SV1", dan klik sambungkan.
2. Setelah speaker Bluetooth dihidupkan, itu akan terhubung ke ponsel yang terakhir terhubung sebelum dimatikan (Bluetooth dalam keadaan terbuka) untuk terhubung secara otomatis, ponsel tidak perlu mencari kembali koneksi dan langkah lainnya.

SPESIFIKASI

Model	: CX-Pro1
Color	: Black
Bluetooth version	: 5.3
BT connection distance	: 10 meters
Rated power	: 5W*2
Input voltage	: DC-5V
Battery capacity	: 1200mAh
Play time	: 5 Hours
Charging time	: 2-3 Hours
Support input	: Bluetooth/USB/TF/AUX
Weight	: 490g
Size	: 210X64X65mm

INSTRUKSI FUNGSI

