尺寸:100*100mm
材质:100克双胶纸
双面印刷

MCHOSE 迈从

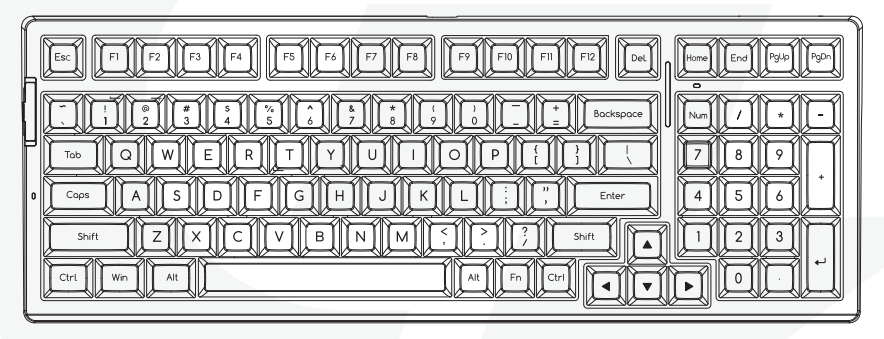

— G98 / G98 PRO用户指南 —

三模机械键盘

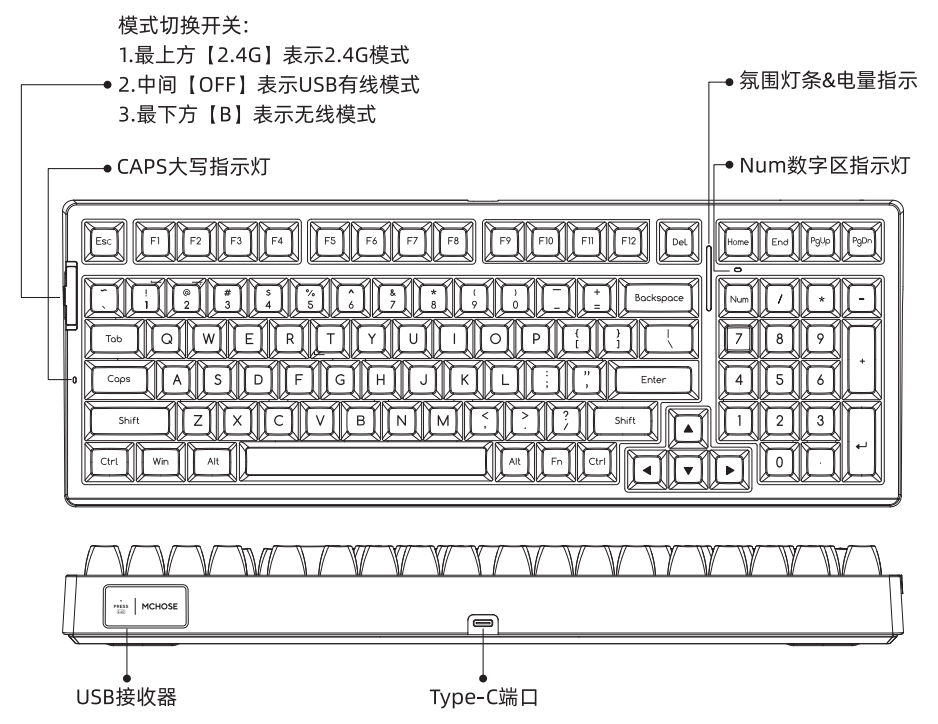

键盘关机：需将键盘拨到【OFF】有线模式，并拔掉端口连接，即可关机。
键盘回报率：有线模式 1000Hz，2.4G模式 1000Hz，无线模式 125Hz。

注意：本说明书中的图片均为示意图，可能与实物有偏差，请以实物为准。

·2.4G连接

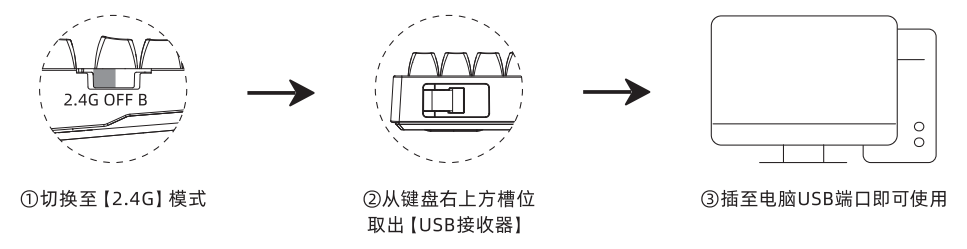

①切换至【2.4G】模式　②从键盘右上方槽位取出【USB接收器】　③插至电脑USB端口即可使用

·手动对码：上方开关拨到【2.4G模式】，然后长按3S【FN+`~】，【指示灯】青色灯快闪进入对码状态，此时将USB接收器插入电脑端口，【指示灯】青色灯亮2S，2.4G连接成功，此时即完成对码。
注：2.4G连接时先搜索再插接收器，出厂默认已对码。

·无线连接

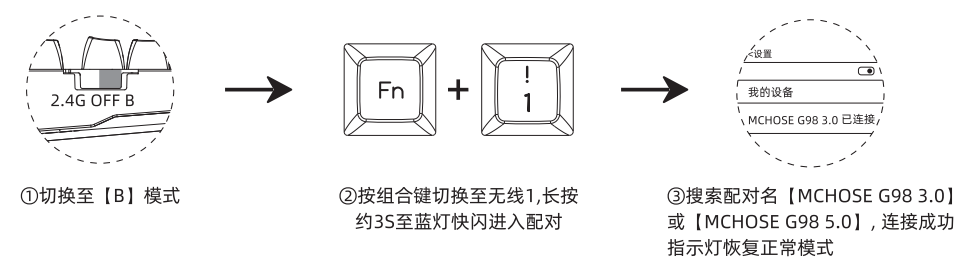

①切换至【B】模式　②按组合键切换至无线1,长按约3S至蓝灯快闪进入配对　③搜索配对名【MCHOSE G98 3.0】或【MCHOSE G98 5.0】，连接成功指示灯恢复正常模式

- ·G98版本无线通道1、2、3配对名称为【MCHOSE G98 3.0】或【MCHOSE G98 5.0】。
- ·G98 PRO版本无线通道1、2、3配对名称为【MCHOSE G98 PRO 3.0】或【MCHOSE G98 PRO 5.0】。
- ·无线通道2组合键为【FN+2@】，【指示灯】为蓝灯。
- ·无线通道3组合键为【FN+3#】，【指示灯】为蓝灯。
- ·长按组合键约3s至对应无线通道指示灯快闪，表示键盘进入对码或搜索模式，即可在设备中进行配对连接。
- ·按组合键Fn+数字键1!、2@或3#可以切换设备。

·有线连接

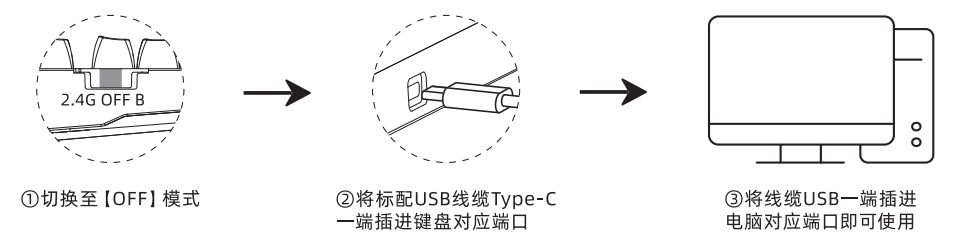

①切换至【OFF】模式　②将标配USB线缆Type-C一端插进键盘对应端口　③将线缆USB一端插进电脑对应端口即可使用

• 省电模式

键盘无线/2.4G模式下一分钟无任何操作自动进入省电模式，单击按键唤醒键盘。

• 灯效说明

FN+\|组合键切换15种RGB灯效和关闭共16种灯效：
随波逐流（恢复默认后灯效）、如影随形、正弦光波、旋转风车、七彩瀑布、花开富贵、游戏模式、关闭、常亮模式、呼吸模式、梦幻彩虹、一触即发、雨中漫步、按键涟漪、繁星点点、川流不息。
配合驱动带音乐律动RGB灯效，此灯效下有10种灯效模式可选。

• Fn组合键说明（灯光功能）

Fn +	ESC	~`	1!	2@	3#
	恢复默认	2.4G对码	无线设备1	无线设备2	无线设备3
	Q	W	E	R	|
	Android系统	Win系统	Mac系统	IOS系统	灯光模式切换
	TAB	↑	↓	←	→
	灯效颜色切换	灯光亮度+	灯光亮度-	灯光速度-	灯光速度+
	右Shift	/?	B	右Alt	右Ctrl
	切换氛围灯条模式	切换氛围灯条颜色	切换氛围灯条至电量模式	氛围灯条亮度循环	氛围灯条速度循环
	WIN	DEL	U	I	O
	锁/解锁WIN	INS	PRTSC	SCRLK	PAUSE

- · Fn+Win=锁定/解锁Win键（在Windows系统下，锁定Win键时指示灯常亮，Win键无法使用）。
- ·在Winodws系统下，如果切换为Mac/IOS系统模式，将对调Win和左Alt键，F1-F12为多媒体按键功能。
- ·Fn+1! =无线设备1，短按切换，长按3s配对。
- ·Fn+2@=无线设备2，短按切换，长按3s配对。
- ·Fn+3#=无线设备3，短按切换，长按3s配对。

• Windows系统：Fn组合键说明（多媒体功能）

键位	F1	F2	F3	F4	F5	F6
单按	F1	F2	F3	F4	F5	F6
Fn组合	主页	邮件	转换窗口	资源管理器	灯光亮度-	灯光亮度+
键位	F7	F8	F9	F10	F11	F12
单按	F7	F8	F9	F10	F11	F12
Fn组合	上一曲	播放/暂停	下一曲	静音	音量-	音量+

• Mac系统：Fn组合键说明（多媒体功能）

键位	F1	F2	F3	F4	F5	F6
单按	屏幕亮度-	屏幕亮度+	转换窗口	返回桌面	灯光亮度-	灯光亮度+
Fn组合	F1	F2	F3	F4	F5	F6
键位	F7	F8	F9	F10	F11	F12
单按	上一曲	播放/暂停	下一曲	静音	音量-	音量+
Fn组合	F7	F8	F9	F10	F11	F12

*在Winodws系统下，切换到Mac系统后将对调Win和左Alt键。

• Android系统：Fn组合键说明（多媒体功能）

键位	F1	F2	F3	F4	F5	F6
单按	屏幕亮度-	屏幕亮度+	转换窗口	返回桌面	灯光亮度-	灯光亮度+
Fn组合	F1	F2	F3	F4	F5	F6
键位	F7	F8	F9	F10	F11	F12
单按	上一曲	播放/暂停	下一曲	静音	音量-	音量+
Fn组合	F7	F8	F9	F10	F11	F12

• IOS系统：Fn组合键说明（多媒体功能）

键位	F1	F2	F3	F4	F5	F6
单按	屏幕亮度-	屏幕亮度+	转换窗口	返回桌面	灯光亮度-	灯光亮度+
Fn组合	F1	F2	F3	F4	F5	F6
键位	F7	F8	F9	F10	F11	F12
单按	上一曲	播放/暂停	下一曲	静音	音量-	音量+
Fn组合	F7	F8	F9	F10	F11	F12

*在Winodws系统下，切换到IOS系统后将对调Win和左Alt键。

• 电量显示

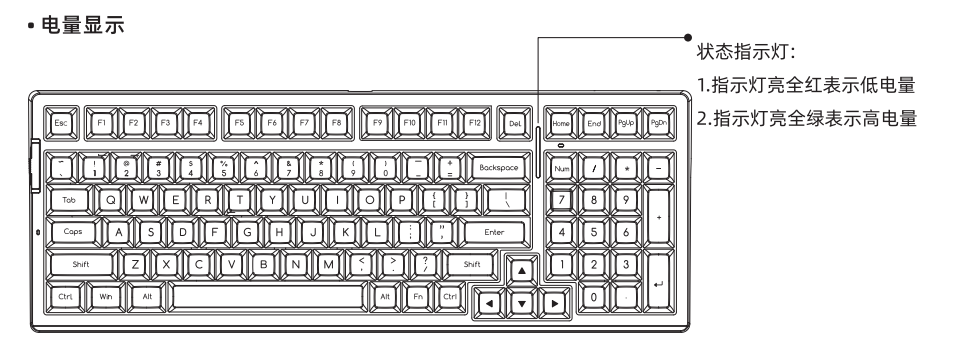

在2.4G/无线模式下（未插入USB），RGB氛围灯条可按FN+B显示键盘电量，满电全绿显示，随着电量消耗，绿色逐渐减少，低电量全红指示。

• 充电

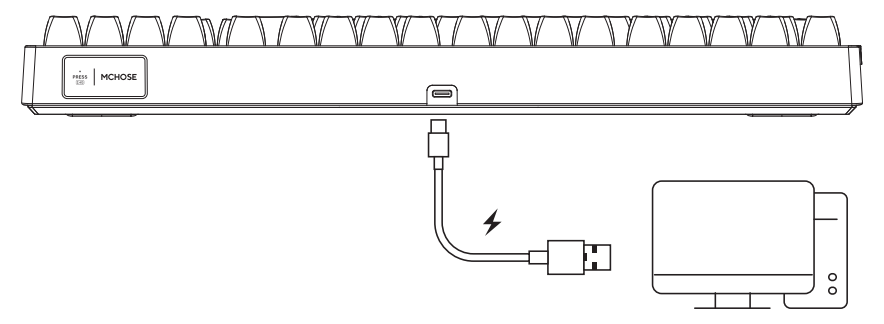

通过配备的USB线将键盘与电脑连接，即可为键盘充电。充电中RGB氛围灯条流光显示，充满长亮绿色。
当【氛围灯条】全红显示时，请及时给键盘进行充电。

·规格参数

产品型号：G98 / G98 PRO
传输方式：无线/2.4G/有线
充电接口：Type-C
充电电压/电流：DC 5V⎓1.5A

注意：本设备经过测试，符合 FCC 规则第 15 部分对 B 类数字设备的限制。 这些限制是旨在提供合理的保护，防止有害干扰住宅安装。 该设备产生、使用并可以辐射无线电波频率能量，如果不按照说明安装和使用，可能会对无线电通信造成有害干扰。 但是不能保证在特定安装中不会发生干扰。如果该设备确实对无线电或电视接收造成有害干扰（可以通过关闭和打开设备来确定），我们鼓励用户尝试通过以下一项或多项措施来纠正干扰：
- 重新调整或摆放接收天线。
- 增加设备和接收器之间的距离。
- 将设备连接到与接收器所连接电路不同的电路插座上。
- 请咨询经销商或经验丰富的广播/电视技术人员寻求帮助。

未经合规负责方明确批准的更改或修改可能会导致用户操作设备的权限失效。
本设备符合 FCC 规则第 15 部分的规定。 操作须满足以下两个条件：
(1) 该设备不会造成有害干扰。
(2) 该设备必须接受接收到的任何干扰，包括可能导致不期望操作的干扰。

充电说明

1. 建议仅使用电脑 USB 接口对键盘进行充电；
2. 请勿使用快充手机充电器对键盘充电；
3. 请勿使用劣质非标电源适配器对键盘进行充电；
4. 请勿使用过压过流电源适配器对键盘进行充电；
5. 充电时请远离高温设备；
6. 长时间不使用时请关闭电源开关。

以上充电说明同样适用于其他带充电功能设备（键盘 / 鼠标 / 耳机 / 音箱等）

保修卡

感谢您购买本公司产品，在保修期内如果产品出现任何质量问题，请联系我们。联系时请提供此保修卡，以便我们为您提供完善的售后服务。

产品型号：＿＿＿＿＿　用户姓名：＿＿＿＿＿
出厂编号：＿＿＿＿＿　保修地址：＿＿＿＿＿
购买日期：＿＿＿＿＿　保修联系人：＿＿＿＿＿
购买地址：＿＿＿＿＿　联系电话：＿＿＿＿＿
销 售 员：＿＿＿＿＿　邮　编：＿＿＿＿＿

合格证
品名：三模机械键盘
型号：
检验员：
QC PASS 检11

出厂日期												
2024	1	2	3	4	5	6	7	8	9	10	11	12
2025	1	2	3	4	5	6	7	8	9	10	11	12

执行标准：GB4943.1-2022

MCHOSE

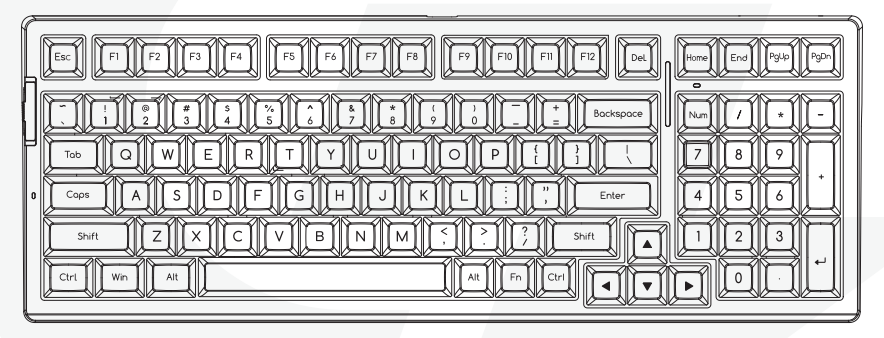

— G98 / G98 PRO User Guide —

MECHANICAL KEYBOARD

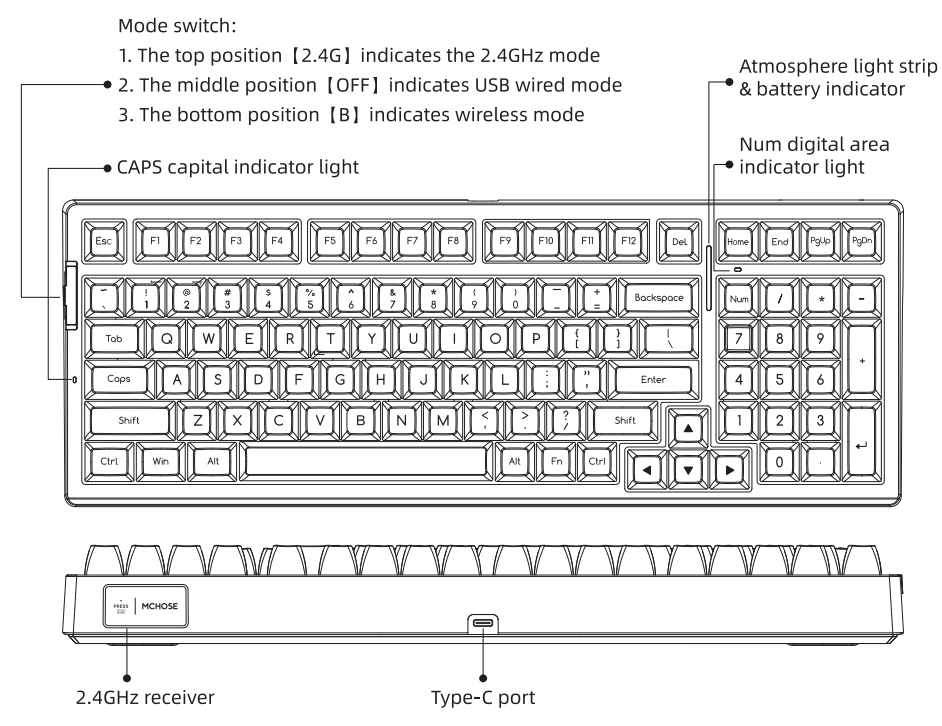
Mode switch:
1. The top position【2.4G】indicates the 2.4GHz mode
2. The middle position【OFF】indicates USB wired mode
3. The bottom position【B】indicates wireless mode
CAPS capital indicator light
Atmosphere light strip & battery indicator
Num digital area indicator light
2.4GHz receiver
Type-C port

Keyboard turning off: Switch the toggle to【OFF】, and unplug the cable to disconnect.
Keyboard return rate: Wired mode 1000Hz, 2.4GHz mode 1000Hz, wireless mode 125Hz.

Attention: The images in this manual are all schematic diagrams and may deviate from the actual product. Please refer to the actual product for accuracy.

·2.4GHZ CONNECTION

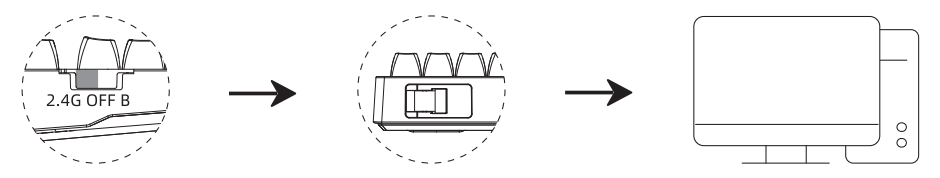

① Switch the toggle to【2.4G】to enter the 2.4GHz mode.　② Open the cover from the upper right corner of the keyboard and take out the USB receiver from the slot.　③ Insert the USB receiver into the USB port on your computer. The keyboard is now ready for use.

·Manual pairing dongle: Switch the toggle to the position【2.4G】to enter 2.4GHz mode. Press【FN+`~】and hold for 3 seconds. The indicator will quickly flash GREEN to enter the pairing mode. Plug the included dongle into the desired device. The indicator stays GREEN for 2 seconds and completes the 2.4GHz pairing.
Note: When connecting to 2.4GHz, search first and then plug the receiver. The dongle is default paired.

·WIRELESS CONNECTION

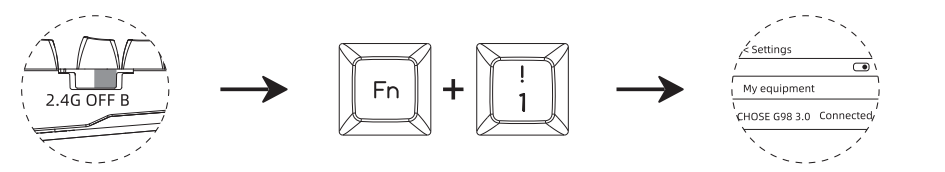

① Switch the toggle to【B】to enter the wireless mode.　② Press the combination key to switch to wireless1 and hold for about 3 seconds until the blue light flashes quickly to activate wireless pairing.　③ Search for the wireless device name【MCHOSE G98 3.0】or【MCHOSE G98 5.0】on your device, and click to connect, the wireless indicator light will go back to normal after successful pairing.

·G98 version：The wireless device names for channels 1, 2, and 3 are 【MCHOSE G98 3.0】 or 【MCHOSE G98 5.0】.
·G98 PRO version：The wireless device names for channels 1, 2, and 3 are 【MCHOSE G98 PRO 3.0】 or 【MCHOSE G98 PRO 5.0】.
·The combination key of wireless channel 2 is【FN+2@】, and the【indicator light】is blue;
·The combination key of wireless channel 3 is【FN+3#】, and the【indicator light】is blue;
Press the combination key and hold for about 3 seconds until the corresponding wireless channel indicator light flashes quickly, indicating that the keyboard has entered detect pairing or search mode, and can be paired and connected to the device;
·Press the combination key“Fn”+ number keys “1！”,“2@”, or “3#” to switch devices.

·WIRED CONNECTION

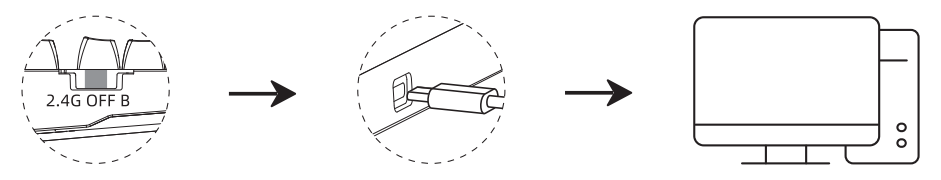

① Switch the toggle to【OFF】to enter the wired mode.　② Connect the cable to Type-C port of the keyboard.　③ Connect the cable to the USB port of the computer. The keyboard is ready to use.

·POWER SAVING MODE

In wireless/2.4GHz mode, the mouse will go to Auto-sleep mode after 1 minute of sitting idle. Press any button to wake it up.

• BACKLIGHT EFFECT

Press the “FN”+“\|” key combination to switch 15 RGB backlights and light off, a total of 16 lighting effects:
Following the flow (restoring default rear light effects), following the shadows, sinusoidal light waves, spinning windmills, colorful waterfalls, blooming flowers and wealth, game mode, off, Constant light mode, breathing mode, dreamy rainbow, ready to explode, strolling in the rain, button ripples, starry dots, an endless stream. In conjunction with the driver's RGB lighting effect with music rhythm, there are 10 lighting modes to choose from under this lighting effect.

• FN KEY COMBINATION DESCRIPTION (LIGHTING FUNCTION)

Fn +	ESC	~`	1!	2@	3#
	Restore default	2.4GHz pairing	wireless device 1	wireless device 2	wireless device 3
	Q	W	E	R	|
	Android system	Win system	Mac system	IOS system	Light mode switching
	TAB	↑	↓	←	→
	Light effect color switching	Light brightness+	Light brightness-	Light speed-	Light speed+
	Right Shift	/?	B	Right Alt	Right Ctrl
	Switching Atmosphere Light Bar Mode	Change the color of the light bar	Switch the light bar to power	Atmosphere light bar brightness cycle	Atmosphere light bar speed cycle
	WIN	DEL	U	I	O
	Lock/Unlock WIN	INS	PRTSC	SCRLK	PAUSE

·Fn+Win=Lock/Unlock Win Key (In Windows systems, the indicator light remains on when the Win key is locked, and the Win key cannot be used).
·In the Windows system, if switching to Mac/iOS system mode, the Win and Left Alt keys will be swapped, and F1-F12 is the multimedia button function.
·Fn+1!=wireless device 1, short press to switch, long press for 3 seconds to pair.
·Fn+2@=wireless device 2, short press to switch, long press for 3 seconds to pair.
·Fn+3#=wireless device 3, short press to switch, long press for 3 seconds to pair.

• WINDOWS SYSTEM: FN KEY COMBINATION INSTRUCTIONS (MULTIMEDIA FUNCTIONS)

Key position	F1	F2	F3	F4	F5	F6
single press	F1	F2	F3	F4	F5	F6
Fn combination	home page	mail	Convert Window	Resource Manager	Light brightness-	Light brightness+
Key position	F7	F8	F9	F10	F11	F12
single press	F7	F8	F9	F10	F11	F12
Fn combination	Previous song	play / Pause	Next song	Mute	volume-	volume+

• MAC SYSTEM: FN KEY COMBINATION INSTRUCTIONS (MULTIMEDIA FUNCTIONS)

Key position	F1	F2	F3	F4	F5	F6
single press	Screen brightness -	Screen brightness +	Convert Window	Return to desktop	Light brightness-	Light brightness+
Fn combination	F1	F2	F3	F4	F5	F6
Key position	F7	F8	F9	F10	F11	F12
single press	Previous song	play / Pause	Next song	Mute	volume-	volume+
Fn combination	F7	F8	F9	F10	F11	F12

*In the Windows system, after switching to the Mac system, the Win and Left Alt keys will be swapped.

• ANDROID SYSTEM: FN KEY COMBINATION INSTRUCTIONS (MULTIMEDIA FUNCTIONS)

Key position	F1	F2	F3	F4	F5	F6
single press	Screen brightness -	Screen brightness +	Convert Window	Return to desktop	Light brightness-	Light brightness+
Fn combination	F1	F2	F3	F4	F5	F6
Key position	F7	F8	F9	F10	F11	F12
single press	Previous song	play / Pause	Next song	Mute	volume-	volume+
Fn combination	F7	F8	F9	F10	F11	F12

• IOS SYSTEM: FN KEY COMBINATION INSTRUCTIONS (MULTIMEDIA FUNCTION)

Key position	F1	F2	F3	F4	F5	F6
single press	Screen brightness -	Screen brightness +	Convert Window	Return to desktop	Light brightness-	Light brightness+
Fn combination	F1	F2	F3	F4	F5	F6
Key position	F7	F8	F9	F10	F11	F12
single press	Previous song	play / Pause	Next song	Mute	volume-	volume+
Fn combination	F7	F8	F9	F10	F11	F12

*In the Windows system, after switching to the IOS system, the Win and Left Alt keys will be swapped.

• POWER DISPLAY

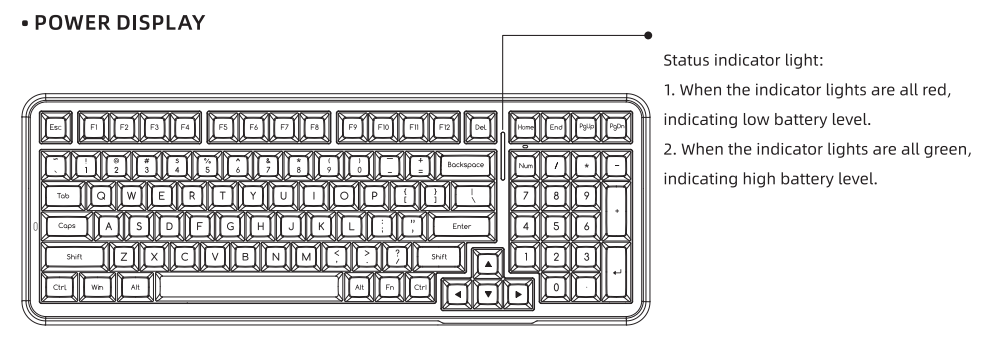
Status indicator light:
1. When the indicator lights are all red, indicating low battery level.
2. When the indicator lights are all green, indicating high battery level.

In 2.4GHz/wireless mode (without USB inserted), the RGB ambient light bar can display the keyboard battery level by pressing FN+B. When fully charged, it will be displayed in green. As the battery level decreases, the green color will gradually decrease, and when low, it will be displayed in red.

• CHARGING

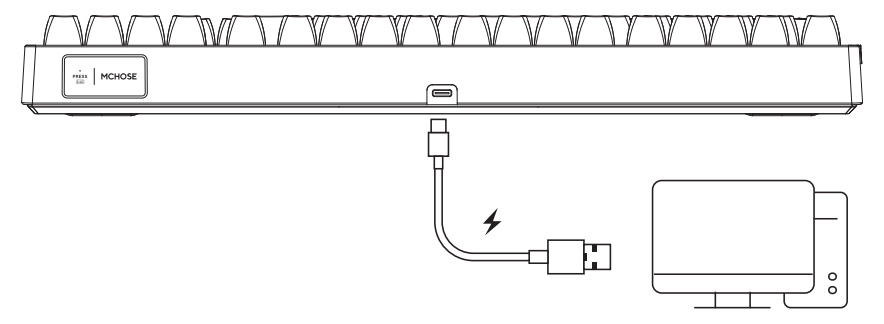

Connect the keyboard to the computer through the equipped USB cable to charge the keyboard. During charging, the RGB ambient light strip flash flowing. When the keyboard is fully charged, the light will stay GREEN.
When the ambient light bar stays RED, please charge the keyboard on time.

·SPECIFICATIONS

Product model: G98 / G98 PRO
Connectivity: wireless/2.4GHz/Wired
Charging interface: Type-C
Charging voltage/current: DC 5V⎓1.5A

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CHARGING INSTRUCTIONS

1. It is recommended to only use the computer USB interface to charge the keyboard;
2. Do not use a fast charging mobile phone charger to charge the keyboard;
3. Do not use inferior non-standard power adapters to charge the keyboard;
4. Do not use an overvoltage and overcurrent power adapter to charge the keyboard;
5. Please stay away from high-temperature equipment when charging;
6. Please turn off the power switch when not in use for a long time.

The above charging instructions also apply to other devices with charging functions (keyboard/mouse/headphones/speakers, etc.)

WARRANTY CARD

Thank you for purchasing our company's products. If there are any quality issues with the products during the warranty period, please contact us. Please provide this warranty card when contacting us so that we can provide you with comprehensive after-sales service.

Product model: ＿＿＿＿＿　User Name: ＿＿＿＿＿
Factory number: ＿＿＿＿＿　Warranty address: ＿＿＿＿＿
Purchase date: ＿＿＿＿＿　Warranty contact person: ＿＿＿＿＿
Purchase address: ＿＿＿＿＿　Contact phone number: ＿＿＿＿＿
Salesperson: ＿＿＿＿＿　Postal Code: ＿＿＿＿＿

CERTIFICATE OF CONFORMITY
Name: mechanical keyboard
Model:
inspector:
QC PASS 11

FACTORY DATE												
2024	1	2	3	4	5	6	7	8	9	10	11	12
2025	1	2	3	4	5	6	7	8	9	10	11	12

Executive standard: GB4943.1-2022