APP FUNCTION INTRODUCTION:

Scan the QR code below to download the dedicated app for operation

QR code for downloading the universal app for Apple and Android systems

APP FUNCTION INTRODUCTION:

1. After downloading, tap the APP icon to enter.
2. After entering the main interface, you can switch between Chinese and English on the main interface; Chinese is the default. Then click the Start button to enter.
3. Select the corresponding purchased product to enter.

APP FUNCTION INTRODUCTION:

APP has five functions-1. Voice 2. Feeding 3. Control 4. Programming 5. Content.

VOICE COMMAND INTRODUCTION:

Press and hold the microphone button on the screen, speak the command in Mandarin, and the robot dog will perform the corresponding actions. Actions and entertainment on the remote control can all be controlled by voice For example: swimming, patrolling, urinating, greeting, learning, acting cute, blessing, sitting down, lying down, handstand, push-ups, dancing, kung fu, etc.
Special Reminder: If the surrounding environment is too noisy, or the command is incorrect, and no text appears in the prompt box, the robot will not perform any action.

CONTROL AND CONTENT INTERFACE INTRODUCTION:

Tap the buttons on the interface with your finger, and the robot dog will perform the corresponding action.



FEEDING INTERFACE INTRODUCTION:

Tap the food icon on the interface with your finger, and the robot dog will make different sounds and perform different actions.

PROGRAMMING INTERFACE INTRODUCTION:

1. After entering the programming interface, select the action you want the robot dog to perform as shown in Figure 1.
2. After the action programming is completed, click "Execute" (Figure 2), and the robot dog will act according to the action you programmed.
3. If you are not satisfied with the action programming, you can click "Delete" (Figure 3) to reprogram the action.

Figure 1

Figure 2

Figure 3

FCC COMPLIANCE STATEMENTS
THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.
NOTE: THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS B DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE IN A RESIDENTIAL INSTALLATION. THIS EQUIPMENT GENERATES, USES AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTIONS, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. HOWEVER, THERE IS NO GUARANTEE THAT INTERFERENCE WILL NOT OCCUR IN A PARTICULAR INSTALLATION.
IF THIS EQUIPMENT DOES CAUSE HARMFUL INTERFERENCE TO RADIO OR TELEVISION RECEPTION, WHICH CAN BE DETERMINED BY TURNING THE EQUIPMENT OFF AND ON, THE USER IS ENCOURAGED TO TRY TO CORRECT THE INTERFERENCE BY ONE OR MORE OF THE FOLLOWING MEASURES:
-- REORIENT OR RELOCATE THE RECEIVING ANTENNA.
-- INCREASE THE SEPARATION BETWEEN THE EQUIPMENT AND RECEIVER.
-- CONNECT THE EQUIPMENT INTO AN OUTLET ON A CIRCUIT DIFFERENT FROM THAT TO WHICH THE RECEIVER IS CONNECTED.
-- CONSULT THE DEALER OR AN EXPERIENCED RADIO/TV TECHNICIAN FOR HELP.
CAUTION: CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

⚠ Warning:
- ★.Please install and use the product correctly according to the instructions or packaging instructions. Some parts are for adult assembly.
- ★.The product contains small parts, which may pose a risk of accidental ingestion or choking.
- ★.Please put away packaging materials promptly to prevent injury to children.
- ★.Regularly inspect the charger, power cord, plug, casing, and other components. If any damage is found, stop using the product until it is repaired .
- ★.Do not recharge non-rechargeable batteries.
- ★.Adult supervision is required when charging rechargeable batteries.
- ★.Disconnect the toy from the charger before cleaning.
- ★.Do not mix new and old batteries or different types of batteries. Remove depleted batteries promptly.
- ★.Never short-circuit, disassemble, drop, or throw batteries into fire.
- ★.Remove batteries if the product will not be used for an extended period.
- ★.Do not touch rotating parts with your hands to avoid personal injury.
- ★.Please clean this product with a clean, soft cloth.
- ★.The user is responsible for ensuring that the product does not cause harm to themselves or others. The manufacturer and distributor shall not be liable for any injury or property damage caused to themselves or others due to improper operation the manufacturer and distributor shall not be held responsible for any losses.
- ★.This packaging and instruction manual contain important product information, please keep it.

IMPORTANT SAFETY INSTRUCTIONS FOR LITHIUM BATTERY USE

a. During charging, personnel should not leave the area unattended, and the charging time should not be too long. If the battery becomes hot during charging, please stop charging immediately to avoid battery damage. etc.
b. Do not charge the battery near flammable or explosive materials. If the battery develops an odor or suddenly becomes hot or deformed during use or charging, if the battery changes color or exhibits other abnormal phenomena, please stop using it immediately.
c. If the battery leaks, avoid contact with skin and eyes. If contact occurs, immediately flush with plenty of cold water and seek medical attention.
d. Only use the original factory-supplied charging cable to charge the product, and ensure that the charging cable meets your local standards.
e. Do not put the battery in fire, microwave oven, or pressure vessel.
f. Do not use solvents, industrial alcohol, or other flammable solvents to clean the product and charger.
g. The product consists of plastic, electronic components, and batteries. Do not dispose of these items as ordinary garbage. Please follow local waste recycling requirements sorting and disposal.

Charging Instructions:

1.Connect the 3.7V rechargeable lithium battery to the USB charging cable.
2.Insert the other end of the USB charging cable into the USB charging port.

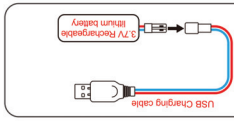

Switch: press and hold the bottom switch. the robot dog will then give a voice prompt. If the robot dog is not used for a long time, it will automatically power off. you will need to power it on again before playing.

CHARGING AND SWITCH INTRODUCTION

Unscrew the back cover of the remote control with a screwdriver. Install the batteries according to the correct positive and negative polarity, and then replace the battery cover. The remote control uses 2X1.5 "AA" batteries.batteries (not included)

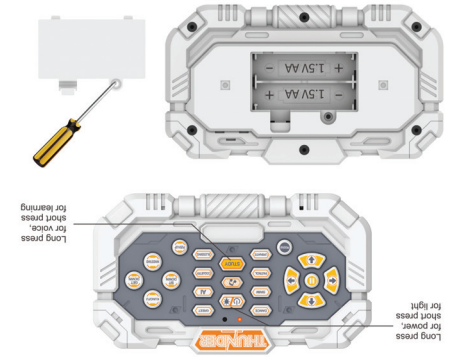

REMOTE CONTROL INTRODUCTION

Battery Precautions
01. Battery type: The product uses one 3.7V rechargeable lithium battery, and the remote control uses two 1.5V AA non-rechargeable batteries.
02. Batteries should be removed and inserted correctly according to the polarity and voltage marking on the toy's battery compartment.
03. Non-rechargeable batteries cannot be recharged;
04. Different types of batteries or new and old batteries cannot be mixed;
05. Only batteries of the same model or equivalent to the recommended model can be used;
06. Batteries should be inserted with the correct polarity;
07. Used batteries should be removed from the toy;
08. Rechargeable batteries should only be charged under adult supervision;
09. Rechargeable batteries should be removed from the toy before charging;
10. The power terminals must not be short-circuited.
11. USB charging cables are not toys.Charing using toy chargers should be checked regularly for damage to their wires, plugs, casings, and other parts if damage is found, stop using the toy until it is repaired.
-This toy is only to be connected to equipment bearing either of the following symbols: ⊡ or ⊡

Press and hold the remote control's power button to connect the remote control to the car; press the remote control's buttons, and the robot dog will perform the corresponding actions.
1. Basic Functions—Forward, Left Turn, Right Turn, Backward, Stop.
2. Actions—Swimming, Patrolling, Urinating, Greeting, Acting cute, Blessing, Sitting, Lying down, Handstand, Push-ups, Programming (except for the AI/Song/Learning button, all signal buttons on the remote control can be programmed).
3. Entertainment—AI,Kung Fu,Dance,Song and Learning.
4. Voice Control.

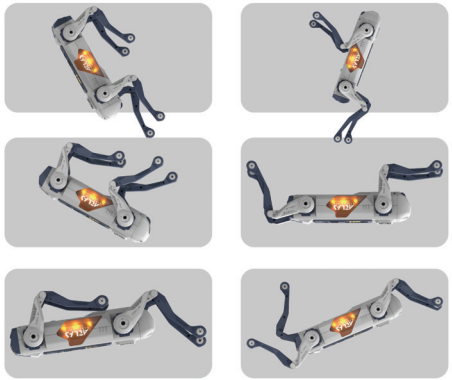

INTELLIGENT DOG FUNCTION INTRODUCTION: