User Manual



Please read the instruction thoroughly before using this product and keep it for future reference.

English




① Headphone ② Micro SD ③ Front Camera
④ Power Button ⑤ Volume + ⑥ Volume -
⑦ Reset Button ⑧ Type-C ⑨ Speaker
⑩ Auxiliary Camera ⑪ Rear Camera ⑫ Flash

Getting Started

Power ON/Power OFF

-Power ON:Press and hold the Power button until the LCD screen turns on.Select your language and set up your tablet following the start guide.

-Power OFF:Press and hold the Power button until the Device Options menu appears,it will show “Power Off”and“Restart”, select “Power Off”to turn off the tablet.

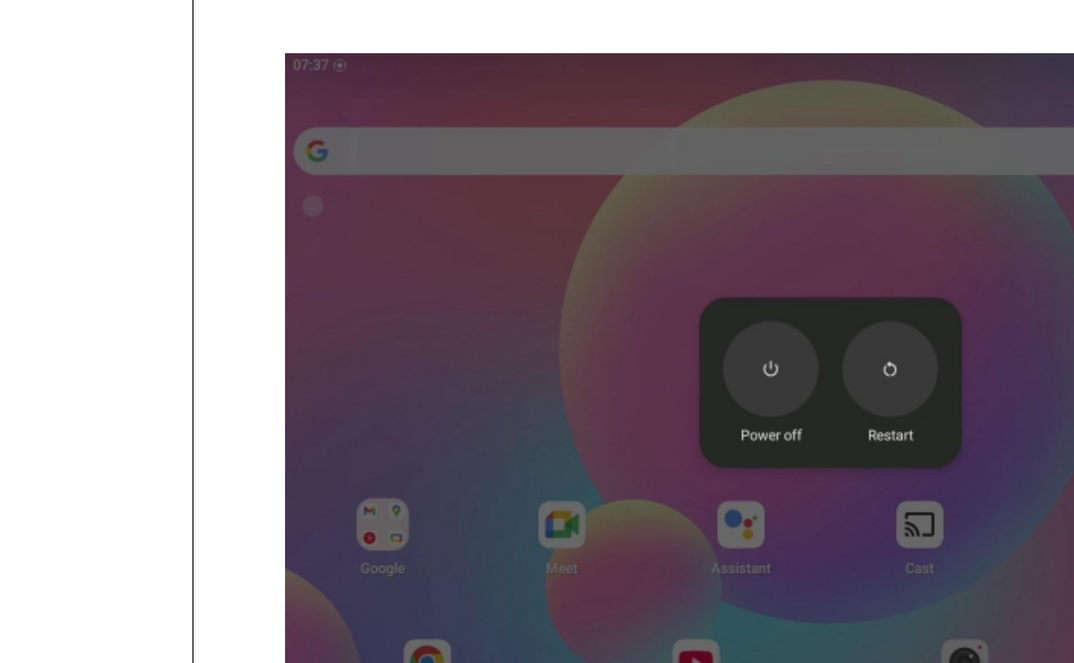

-Emergency:Click this icon to make an emergency call.

-Reboot:If it’s frozen,press and hold the power button for 15s to do a force reboot.

Sleep Mode


When the tablet is on,you can turn off the screen to save battery power.Simply press the power button once to turn the screen off.Press the power button again to turn the screen back on.

Tip: Go to **Settings-Display-Advanced-Screen timeout** to set the time gap for initiating “sleep mode”.

Battery

A RECHARGEABLE Li-ion battery is installed in the tablet
We suggest you drain the battery completely once a month if you only use your tablet occasionally.
Do not dispose of the tablet in a fire.

Home sttings & Widgets & Wallpaper&style

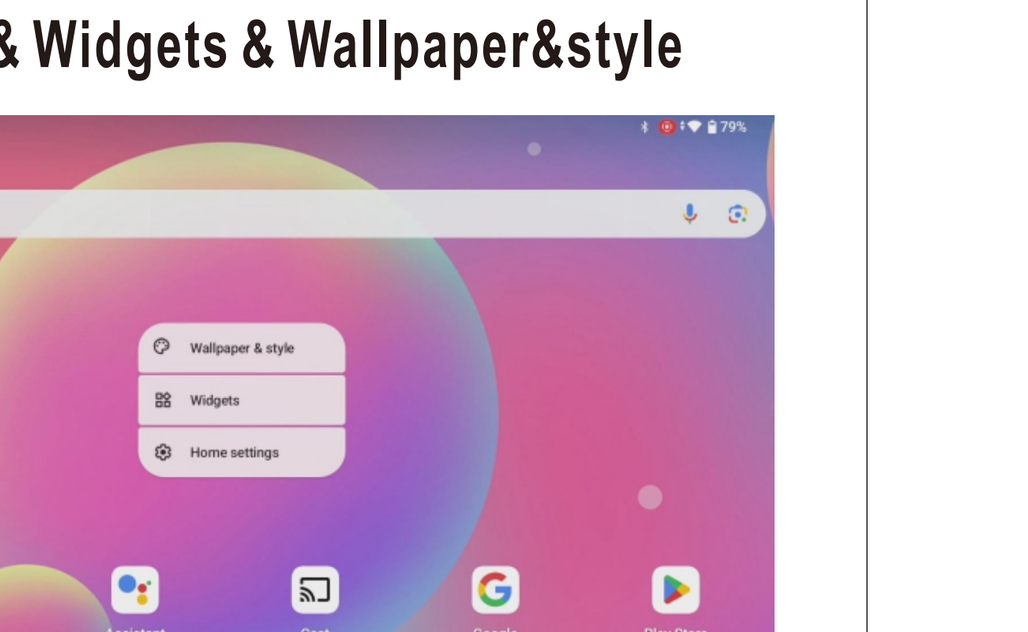

Tap and hold your finger in any blank space on the home screen, you will see a pop-up menu:“Home Settings”,“widgets”and “Wallpaper buttons” will be displayed.

-Select“Home Settings” you can enable/disable“Add icons to Home Screen” This is applicable to any new Apps installed from“Play Store”.You can also change settings for“pulldown actions”,“notification dots“home screen style”and more.


-Select“Widgets”touch and hold any application(e.g.clock), then slide and add it to the Home screen,and remove it by sliding to“X Remve” above.

Tip:
Hold one icon and drag it on top of another icon to create a new folder on the home screen. Open the folder;click "Unnamed Folder" to rename the folder.

-Select "Wallpapers style" to change the current wallpaper of the tablet from default wallpapers, live wallpapers, or photos.

Basic Settings

Swipe down vertically from the top to enter quick notification menu.

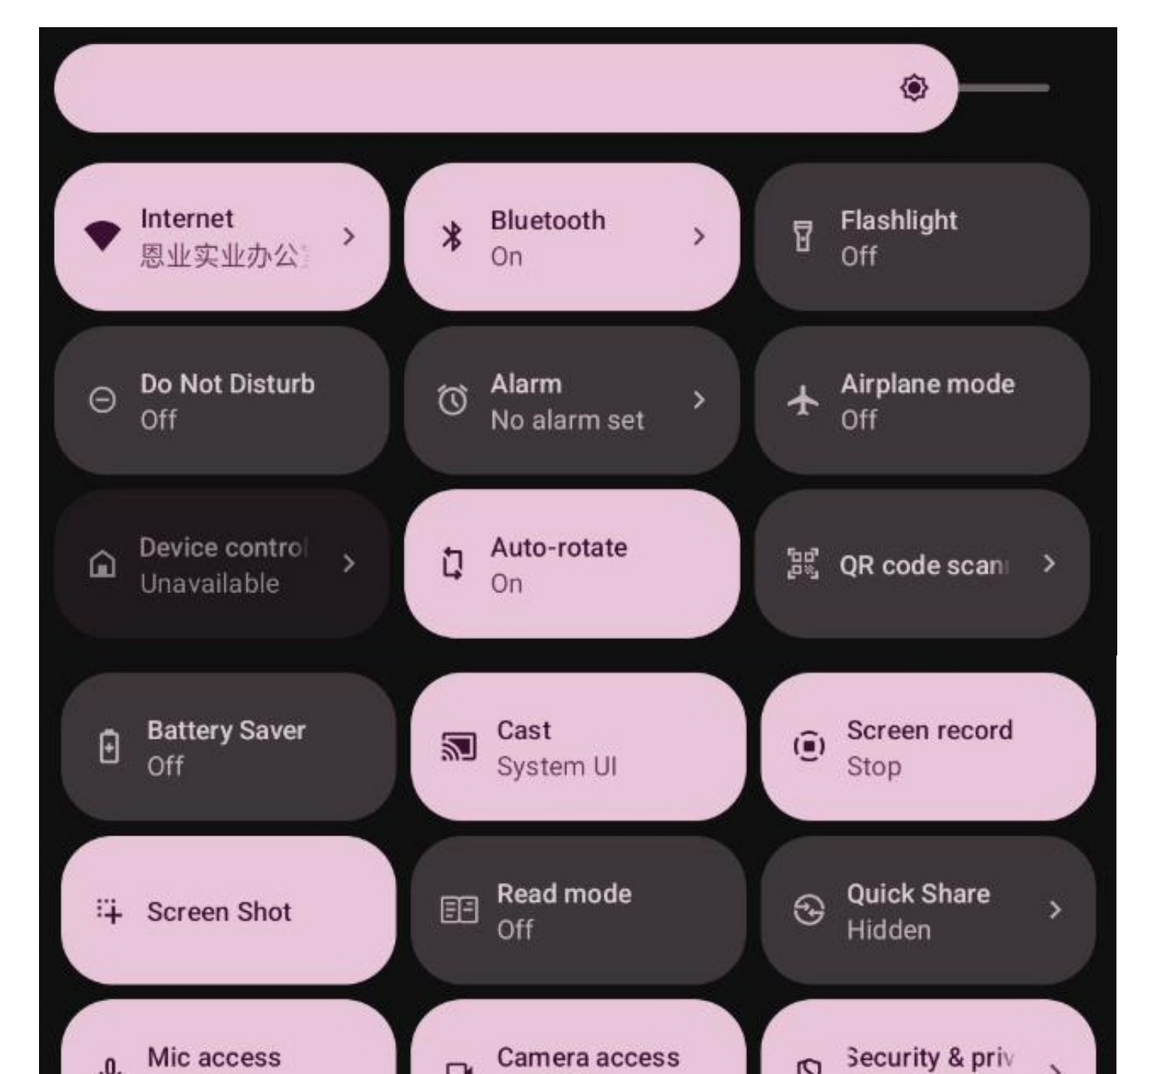

WiFi: Tap to connect/disconnect to a wireless network.
Bluetooth: Enable/disable the Bluetooth of this tablet.

Flashlight: Turn on/off the Flashlight of this tablet.
Do not disturb: Block sound after enabling this function.
Alarm: Turn on or off the alarm clock.
Airplane mode: Turn on/off all network connectivity.
Auto-rotate: Turn on/off the “Auto-rotate" of the screen.
Battery Saver: Tap to choose the power setting youprefer to save battery time.
Cast: Cast screen to device.
Night Light: Enable/disable the eye protection function.
Screen record: Tap to record screen action.
Screen Shot: Enable/disable screenshots.
Read mode: Enable/disable Read mode.
Quick Share: Enable/disable quick sharing.

Tap the ✎ icon to change the options in the “Quick Settings”. Long press each icon to enter the interface of the detailed setting pages.


Detailed Settings

Swipe down from the top of the screen, tap ⚙ icon to enter the detailed setting interface. Or tap the "Settings" App from the home screen to enter.

Network & internet
- Connect to WiFi
- Enable/disable “Airplane Mode
- Monitor the data usage And more

Connected deices
- Turn on/off Bluetooth
- Pair with Bluetooth devices and check the paired Devices
- Check the received files from other devices via Bluetooth connection
- Add and check printers and more

Apps & notifications
- Check the Apps recently opened
- Check all the Apps on the Tablet
- Set the App permissions
- Uninstall third-party apps
- Adjust App notification settings
- Clear the cache of the Apps
- Check the screen time and more

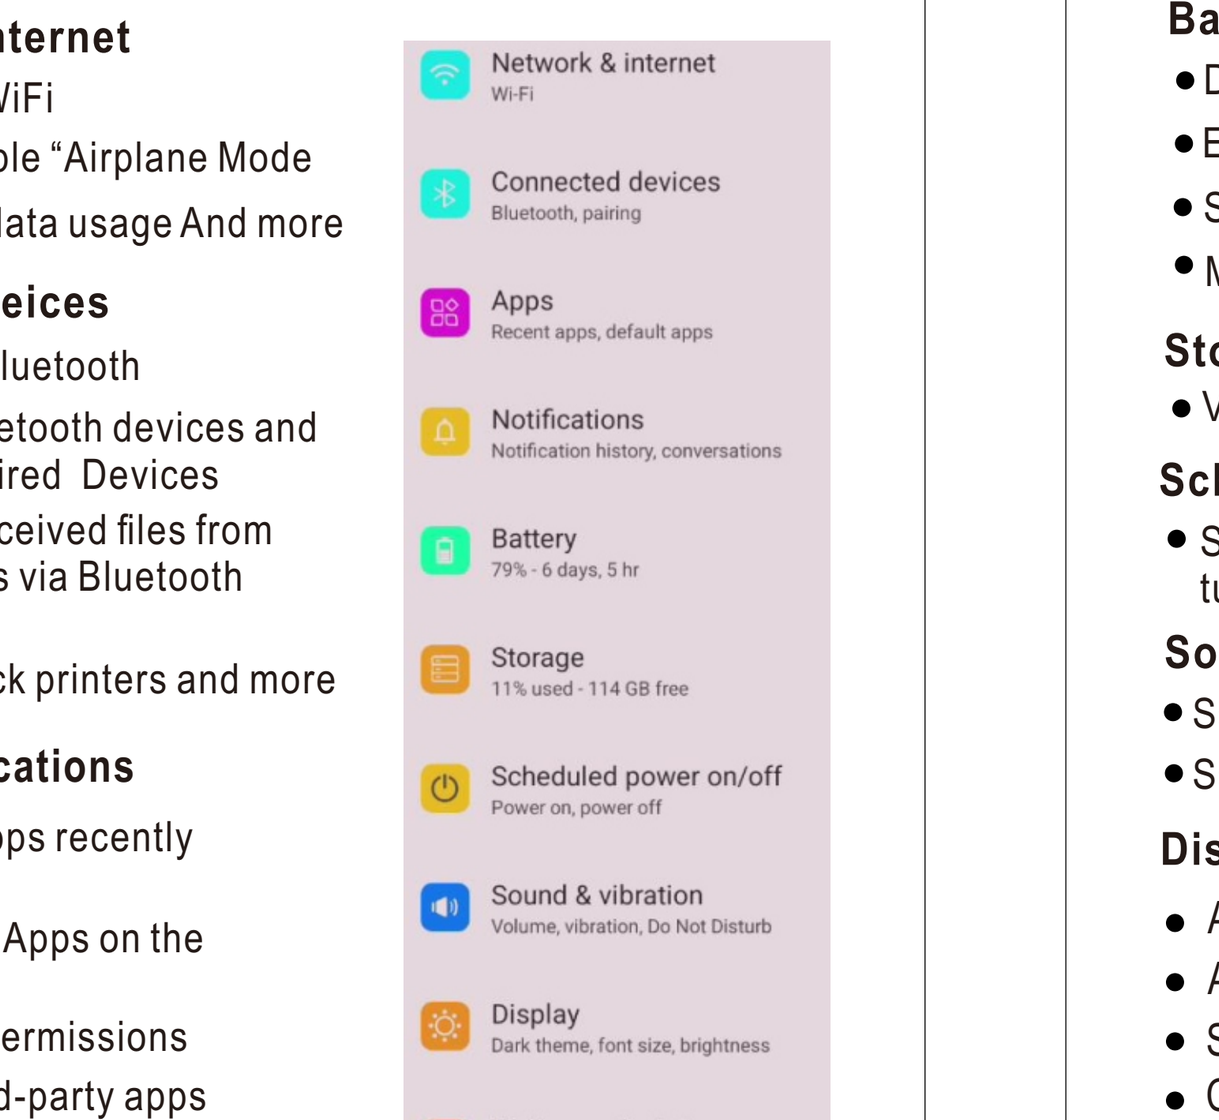

Battery
- Display or hide the remaining power as a percentage
- Enable/disable Battery Manager
- Set Power saving optimization
- Manage the battery optimization for apps and more

Storage
- View and manage your storage space

Scheduled power ON/OFF
- Set the time and days of the week for the tablet to automatically turn on/off

Sound & vibaration
- Set the volumes for notifications, media and alarm
- Set the vibration motor is turned on or off


Display
- Adjust the screen brightness
- Adjust the font size and display size
- Set a screen saver
- Change the wall paper
- Adjust the time for entering the sleep mode
- Adjust Color and Contrast of display
- Set to check the notifications and other info and more

Wallpater & style
- Replace the wallpaper
- Set whether dark themes are turned on or off

Accessibility
- For vision and hearingimpaired users,manage settings for Screen readers,Display, Interaction,controls and more

Security & Privacy
- Set screen lock pattern (password,PIN,Swipe stc.) and more
- Set App permissions,autofill services and more

Safety & emergency
- Open Personal Security.
- Fill in medical information, emergency contact person, emergency assistance, disaster alert and more.

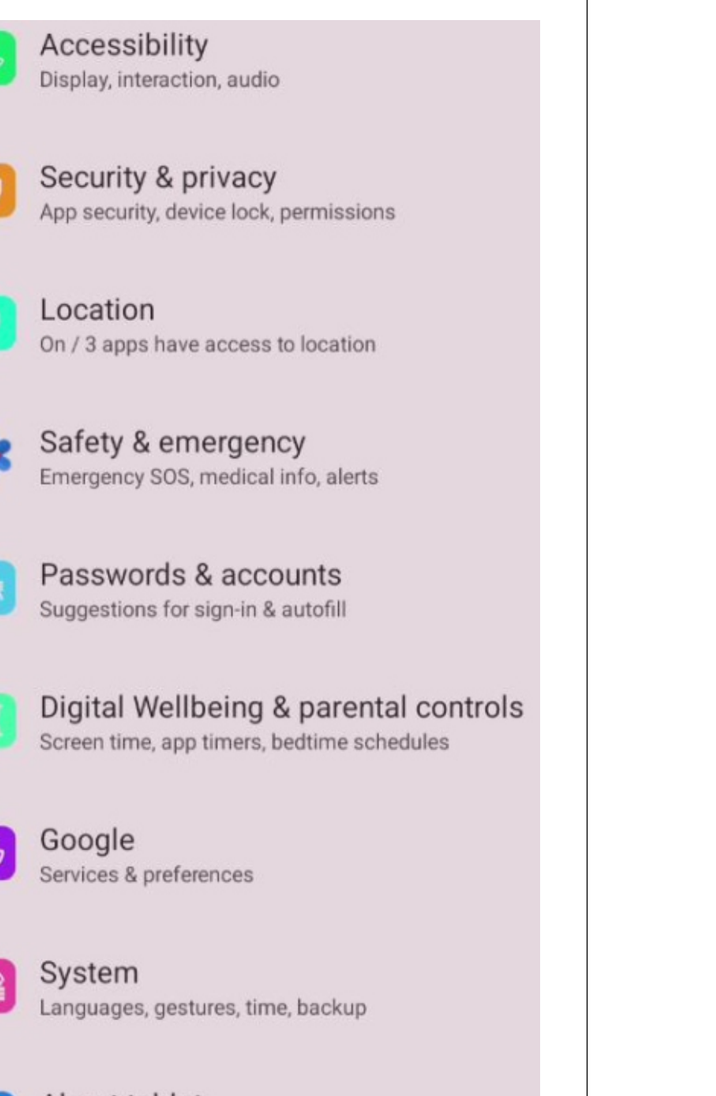

- Set emergency location information service on or off.
- Wireless emergency alarm on or off.

Passwords & accounts
- Set password, automatically fill in service, add account and more
- Set automatic synchronization of application data on and off

DigitalWellbeing&parentalcontrols
- Check your app usage based on Screen time,Notifications received,or Times opened from Dashboard
- Set a schedule for Wind Down and turn on the setting you prefer
- Manage the related notification settings to reduce interruptions
- Set up Parental controls to help your kids balance their screen time and more.

Google
- Set the preferences for Google-related services

System
- Set Language:Tap Language & input - Languages - Add a language to add your language.
- Restore Factory Setting: Tap Advanced-Reset options-Erase all data(factory reset)to restore the factory setting.
(Please note that if you perform a Hard Reset,all user applications and user data will be deleted.Please remember to back up any important data before performing a Hard Reset).
- Set date and time
- Turn ON/OFF the Back up to Google Drive
- Check and update the tablet’s system and more

About tablet
- Basic information of device

Network Connection

Turn on the Wi-Fi

Tap “Network & Internet” and turn on the “WiFi” all available connections will be listed.Select your WiFi and input the correct password.


Internet Navigation

Please make sure the tablet is connected to a working WiFi network before navigating the internet.

You may use the pre-installed Chrome browser or download one from Play Store.

Bluetooth

Tap “Connected devices” - tap Connection preferences - tap Bluetooth and turn on the “Bluetooth” on your tablet and your Bluetooth device first.

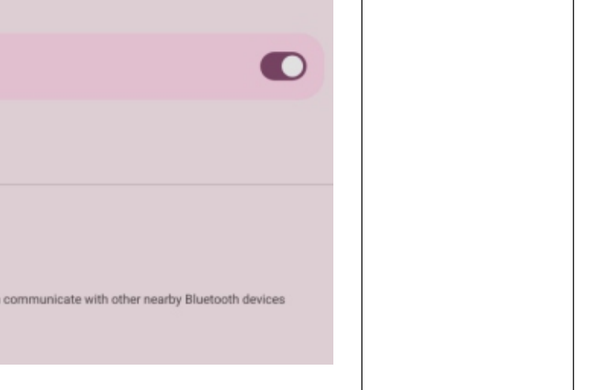

- Enter Settings-connected devices-Pair new device to enter the scanning interface. Devices available will be displayed after a few seconds.

- Tap the desired device to get a pairing code and click PAIR on both devices. The automatic connection is applied to some devices.

App Management

- Open Play Store on the home screen.
- Log in your Google account,search and download the Apps you need.

Move the APP
Tap and hold on the App,and slide it onto the desired places.

Remove the App from Home Screen
Tap and hold on the App,slide to X Remove above,to remove it from your Home Screen.

Uninstall the APP
Touch and hold the App,then slide to the 🗑 above,to uninstall the App.

Optional Connections

Connecting to a computer


- Connect your tablet to the computer with a USB cable.
- Go to your computer and find your tablet to transfer files between your tablet and computer.

Tips:

Go to Quick Settings,tap Android system Charging this device to set USB preference.


USB is controlled by This device(default).

- **File Transfer:**for file transfer
- **USB tethering:**share tablet’s internet connection via USB
- **MIDI:**Play MIDI instruments on the tablet
- **PTP:**Transfer photos between the devices
- **No date transfer:**to charge tablet only

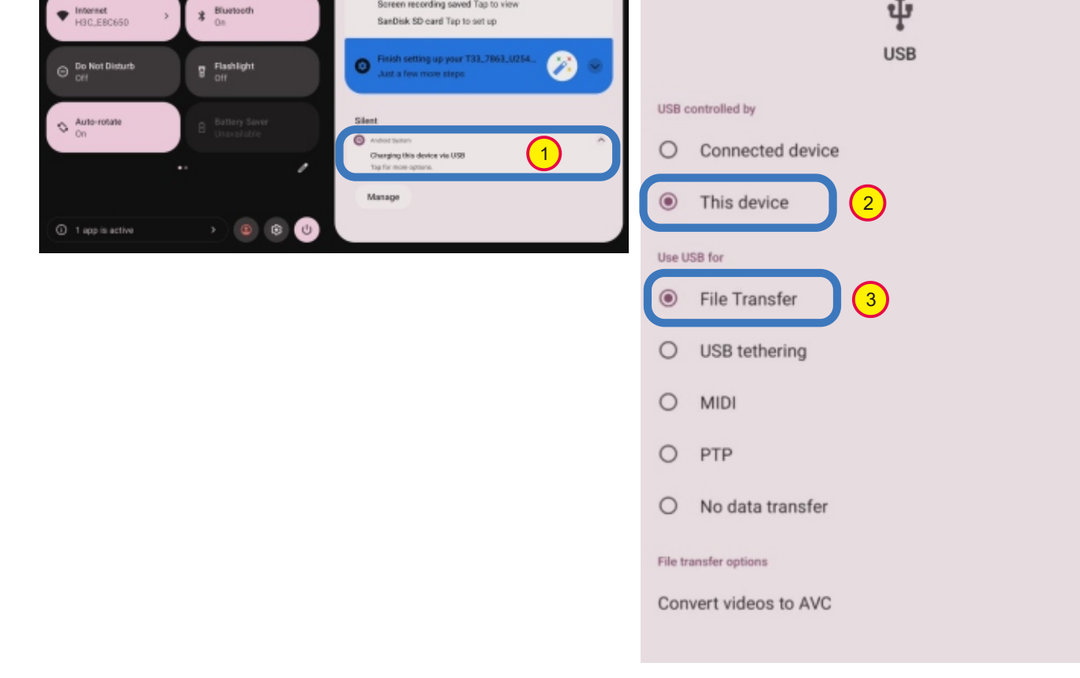

Connecting to an external SD card

- Install the micro SD card into the micro SD card slot and go to Quick Setting.
- Tap SET UP,Set the micro SD card as portable storage by selecting Portage Storage. Enter Micro SD Card storage to move files between the card and tablet.

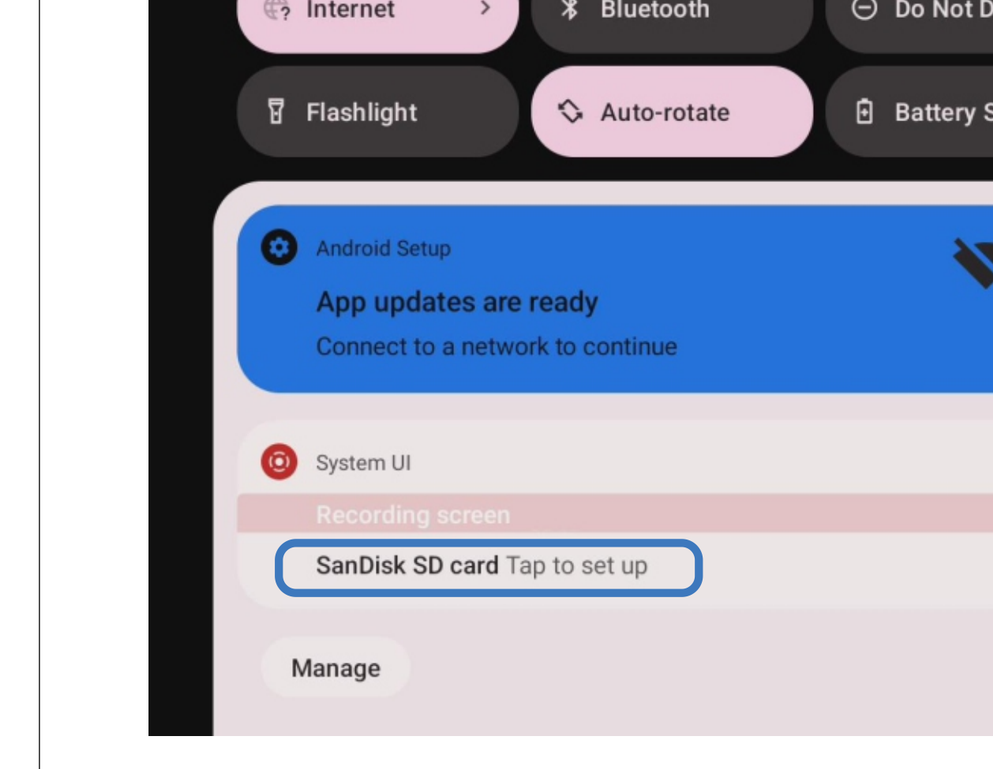

Specification

Display	10.1 Inch
CPU	T606 Octa-Core 1. 6GHz
Resolution	1280*800 IPS
ROM	128 GB
RAM	16GB(4GB+12GB virtual)
Operation System	Android
Audio	Dual speakers
Ports	Type C/3.5mm earphone port/MicroSD Card Slot
WiFi	IEEE 802.11a/b/g/n/ac,Dual-band 2.4GHz/5GHz
Front Camera	5 MP
Rear Camera	13 MP+2 MP
Power supply	5V/2A Type-C USB
Bluetooth	BT 5.0
GPS	Enable
Language	Support multi-language

Troubleshooting

Q1.The tablet doesn’t power on.
- Reboot your tablet after charging for 30 minutes.
- Press the power button in case your device is in sleep mode.
- Press the power button for about 7-8s to reboot.
- Press the Reset button with a pin to reboot the tablet.

Q2.The tablet doesn’t charge.
- Keep your device plugged in for 30 minutes if it was completely drainde.
- Check and make sure the charger is properly plugged into the charging port.
- Try another compatible USB cable and adapter.

Q3.Error message during operation.
- Uninstall the application with an error message and download it to install again.You can also update certain applications with the error.
- Press the Reset button with a pin to reboot the tablet.

Q4.The tablet can’t be detected by the computer.
- Try another USB cable.
- Connect your tablet to a different port on your PC.
- Instead of Charge only,choose Media device(MTP) Or Camera (PTP)when connecting the tablet to the computer.

Q5.Device cannot connect to Wifi.
- Make sure the WiFi on your tablet is ON.
- Make sure you input the correct password.
- Restart the router.
- Make sure there is no filtering setting or device connection limit in your router setting.
- Forget the original Wi-Fi connection,reset the router,and connect again.

Q6.The storage space of the tablet is not enough.
- Delete any applications you don’t use.
- Clean the caches in your device regularly.
- Install a micro SD card to expand the storage.

Q7.The tablet comes with scratches on the screen.
- Check if the scratches are on the film,if yes,please remove the film.

Q8.The screen is unresponsive.
- Check if the screen is dusty or greasy.If yes,please gently wipe the screen with a cloth.

Q9.How to use your voice to search for a fact?
- Tap the microphone icon on Google Search bar,tell the tablet what you want to know and it will show you the search results.

FCC COMPLIANCE STATEMENT:
This device complies with part 15 of the FCC Rules.
Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received,
including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.
This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the part responsible for compliance could void the user’s authority to operate the equipment.

FCC Radiation Exposure Statement
The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.