Comfytemp

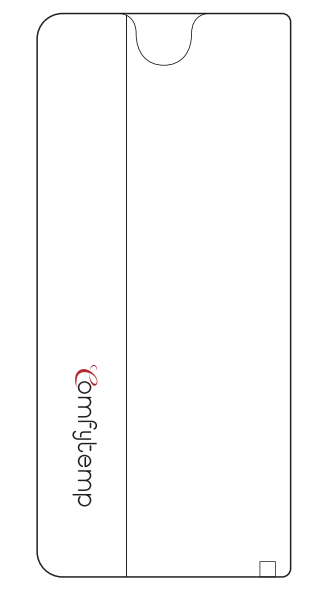

READ THIS MANUAL COMPLETELY AND CAREFULLY BEFORE USING THIS PRODUCT

Keep this manual in a safe location for future reference

Model: K90S1
V1.0
EN DE

Table of contents

EN..........1-18
DE..........19-36

---

1. Intended Use

This sauna blanket is designed for personal use to provide warmth and promote relaxation. It is not intended for medical purposes and should not be used for diagnosing, treating, or preventing any medical conditions.
Key purposes and usage scenarios include:

- **Home Use:** Ideal for relaxing muscles, reducing stress, and enhancing overall well-being at home.
- **Relaxation:** Designed to offer a soothing heat experience for relaxation and a sense of well-being.

2. Product Diagram

2.1 Sauna blanket

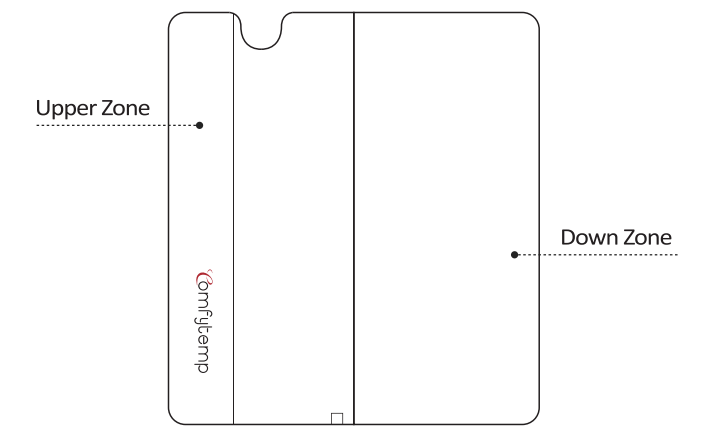

2.2 Remote control

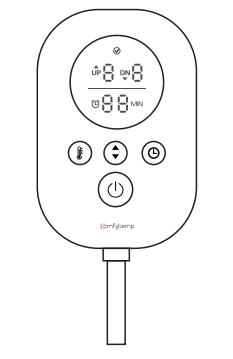

(1) Button

Button	Corresponding function
Power button	Power on/off
Temperature button	Selectable from 1 to 6 levels
Timer button	Selectable from 10 to 90 minutes
Up-down zone selection	Selection of upper and down zone

(2) Display

UI	Meaning
✓	BLE connection success icon
UP 8	Upper zone temperature level display
DN 8	Down zone temperature level display
88 MIN	Timer selection and countdown

3. Use

3.1 Before Use

(1) Place the sauna blanket on a flat and clean surface.

(2) Make sure the power is on and the coupler is connected properly.



(3) Wear long sleeves and pants, or place a bath towel underneath for comfort and safety.

(4) Please remove all metal accessories before use.



(5) Please zip up completely when in use to avoid heat loss.

3.2 Button control

(1) Press the ⏻ button to turn on.

(2) Press the 🌡 button to select heating levels from 1 → 6 for the UPPER ZONE.

(3) Press the ▲▼ button to switch control area to DOWN ZONE.

(4) Press the 🌡 button to select heating levels from 1 → 6 for the DOWN ZONE.

(5) Press the 🕒 button to select the timer from 10 → 90 minutes.

3.3 APP Control

(1) Scan the QR code to download the App or APK file . Or, search for "Comfytemp" in the app store to download it.

ios android

(2) Create an account.

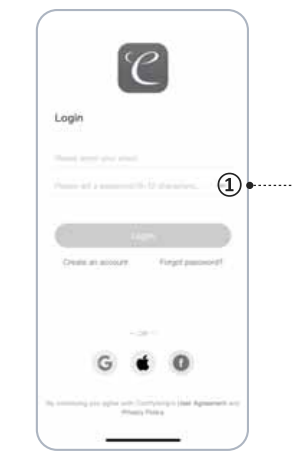

(3) Briefly press to turn on the device, the BLE is ready to be connected.
When BLE is connected, the icon ✓ is on.

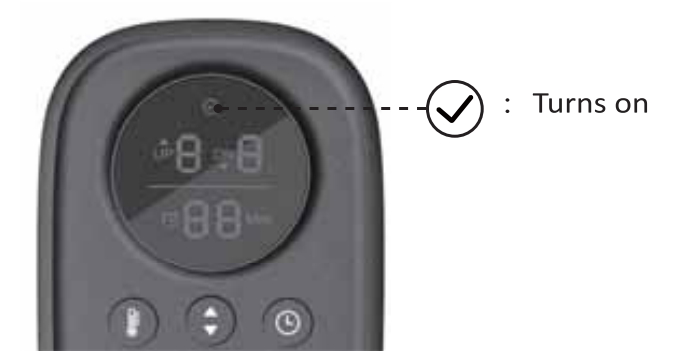

(4) Look for the device's BLE connection.

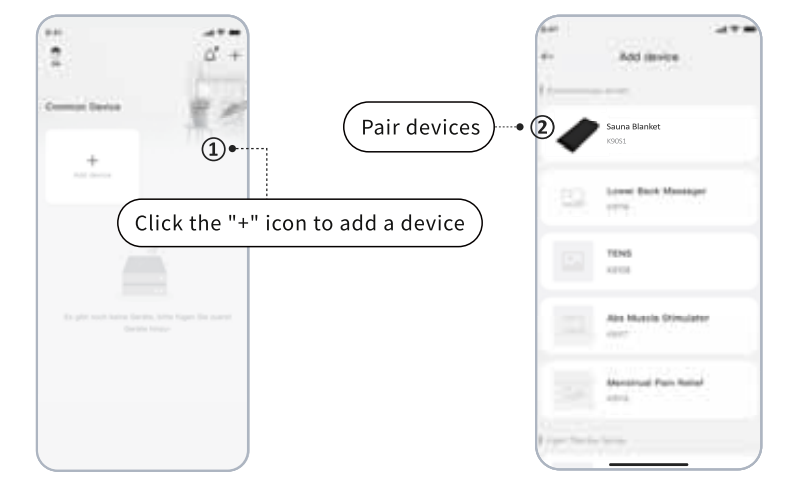

(5) Begin using the products and associated apps.

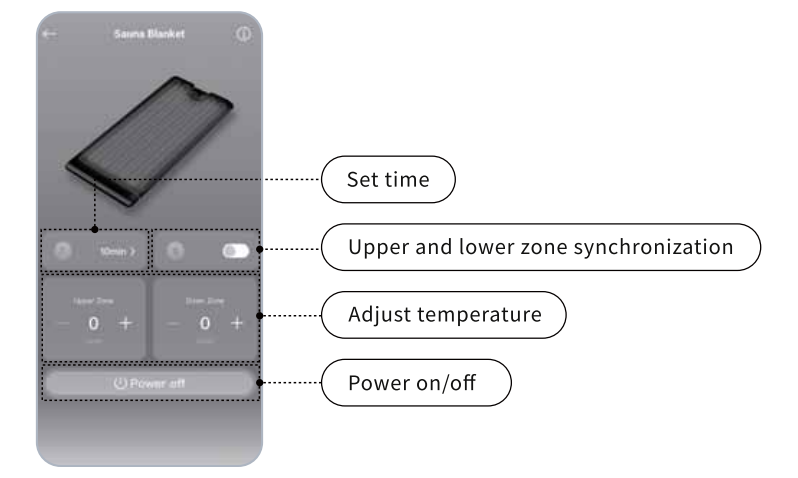

3.4 After Use

Ensure it cools down before folding after use.

4. Product Specificaitons

4.1 Product Technical Specifications

Item Name		sauna blanket
Item Dimensions		70.8×78.7in
Material		Waterproof Flame Retardant Oxford Fabric, Fire-retardant needle-punched cotton
Cable Length		13 feet
AC Voltage		110-120V
Rated Power		420w
BLE Version		5.3
BLE range		10m (Lab conditions, no obstructions, no interference)
Function	Up/down Zone Control	Support
	Heating Level	6 levels optional
	Timing	10~90minutes optional

4.2 Temperature Parameters

The temperature data is based on laboratory tests under ideal conditions. Actual results may vary due to different real-world conditions and variations in individual units.

Level	Temperature
0	Not heating
1	122 ℉
2	131 ℉
3	140 ℉
4	149 ℉
5	158 ℉
6	167 ℉

5. Cleaning Instructions

Proper cleaning and maintenance of your sauna blanket will ensure its longevity and optimal performance. Follow these guidelines:

(1) Disconnect from Power: Always unplug the sauna blanket from the electrical outlet before cleaning.

(2) Surface Cleaning: Use a damp cloth to gently wipe the surface of the sauna blanket. Do not immerse the blanket in water or any other liquid.

(3) Mild Detergent: If necessary, use a mild detergent on the cloth to clean stubborn spots. Avoid using harsh chemicals or abrasive materials.

(4) Drying: After cleaning, allow the sauna blanket to air dry completely before storing or using it again. Do not use a hairdryer or any other heating device to dry the blanket.

6. Trouble Shooting

Problem01: The sauna blanket is not heating up.
How to proceed:
(1) Ensure the power cord is securely plugged into a functioning outlet.
(2) Check if the control unit is turned on and the display is active.
(3) Increase the temperature setting using the control unit or app.

Problem02: The sauna blanket shuts off during use.
How to proceed:
(1) Check the timer setting and extend the time if necessary.
(2) Allow the blanket to cool down and restart it after a few minutes. Ensure the ventilation is adequate.

Problem03: Uneven heating in different areas of the blanket.
How to proceed:
(1) Ensure the blanket is laid out flat and free of folds or creases.
(2) If the issue persists, discontinue use and contact customer service for assistance.

Problem04: The control unit display shows an error code (e.g., F, F1, F2, F3).
How to proceed:
(1) When F is displayed, it means the coupler is not connected or the upper and lower areas are damaged.
(2) When F1 is displayed, it means the upper area is damaged.
(3) When F2 is displayed, it means that the lower area is damaged.
(4) When F3 is displayed, it means the controller temperature is too high , Please wait until the controller returns to room temperature before using it.
(5) If the problem persists, contact customer service for further assistance.

Problem05: Not Sweating While Using the Sauna Blanket.
How to proceed:
(1) Increase the temperature setting using the control unit or app to a higher level that is comfortable yet effective for inducing sweat.
(2) Extend the duration of your session. Start with shorter sessions and gradually increase the time up to the recommended limit, allowing your body to acclimate and start sweating.
(3) Ensure you are well-hydrated before using the sauna blanket. Drink a glass of water 30 minutes prior to your session to help your body sweat more effectively.
(4) Wear lightweight, moisture-wicking clothing to better absorb heat. Heavy or restrictive clothing can hinder the sweating process.

7. Caution

1. Do not use this sauna blanket with an infant, an immobile person, or anyone insensitive to heat, such as a person with poor blood circulation.
2. Do not fold or crease the sauna blanket during use. This may damage the heating elements.
3. Do not route electrical cords between the blanket and other surfaces. Do not allow the cords to be pinched.
4. Keep the control unit away from areas that may become damp or wet, such as near an open window.
5. Do not use pins or sharp objects on the sauna blanket as they may damage the electric wiring.
6. Ensure the sauna blanket is used with the correct voltage supply as indicated on the product.
7. Turn off or unplug the sauna blanket when not in use.
8. Excessive heating may result from improper folding when the blanket is in use.
9. If improper operation of the sauna blanket is observed, discontinue its use immediately and consult the manufacturer or the dealer regarding its repair.
10. Do not use the sauna blanket on rocking chairs, recliners, or other furniture which may impede its flat positioning.
11. Do not tuck the blanket under the body or any other furniture. All portions of the blanket should be visible at all times.
12. Wrapping of the cord around the controller may damage the cord. Loop loosely when storing.

13. Do not dry-clean the sauna blanket. Cleaning solvents may have a deteriorating effect on the insulation of the heating element.
14. This appliance has a polarized plug (one blade is wider than the other) as a safety feature. This plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
15. Please consult a doctor before using this product and exercise caution when using it for individuals with heart disease, hypertension, acute illnesses, infectious diseases, severe diabetes, pregnant women, after alcohol consumption, epilepsy, respiratory system diseases, skin diseases, and kidney diseases.

8. Storage

Clean and dry:

- Ensure the heating pad is thoroughly cleaned and completely dry before storing.

Fold:

- Neatly fold the heating pad, avoiding excessive pressure and folds on the heating elements.

Storage location:

- Store in a dry, cool place away from direct sunlight and high temperatures.
- Avoid storing in damp or corrosive environments.

Protection:

- Use the original packaging or a clean storage bag to protect the pad from dust and dirt.

MAINTENANCE TIPS

Regular Inspection: Regularly check the sauna blanket for any signs of wear and tear, such as frayed edges or exposed wires. Discontinue use if any damage is found.
Proper Storage: Store the sauna blanket in a cool, dry place away from direct sunlight and heat sources. Avoid placing heavy objects on top of the blanket.
Avoid Folding: When storing, avoid folding the sauna blanket tightly. Instead, roll it loosely to prevent damage to the heating elements.
Follow Usage Guidelines: Adhere to the recommended usage duration and settings to prolong the life of your sauna blanket.

9. Safety Instructions & Warnings

Signs and symbols

READ AND UNDERSTAND THIS ENTIRE MANUAL INCLUDING THE SAFETY SECTION AND ALL INSTRUCTIONS AND WARNINGS COMPLETELY AND CAREFULLY BEFORE USING THIS PRODUCT. FOLLOW ALL SAFETY INSTRUCTIONS AND WARNINGS TO AVOID HAZARDOUS SITUATIONS AND TO MAKE CORRECT USE OF THIS PRODUCT.

Read all instructions before use
Do not bleach
Keep away from sharp objects
Do not tumble dry
Do not use when folded or bunched up
Do not iron
Keep away from children under three years of age

Warranty

24 Hrs Quick Customer Support
30 Days Free Return
365 Days Warranty

If you have questions or concerns, don't hesitate to contract us directly at:

US Customer Services Hotline
1(833)990-0618
Monday to Friday, 9 AM to 5 PM EST
Email: help@comfytemp.com

---

1. Verwendungszweck

Diese Saunadecke ist für den persönlichen Gebrauch konzipiert, um Wärme zu spenden und Entspannung zu fördern. Sie ist nicht für medizinische Zwecke bestimmt und sollte nicht zur Diagnose, Behandlung oder Vorbeugung von Krankheiten verwendet werden.
Hauptzwecke und Nutzungsszenarien umfassen:

- **Heimgebrauch:** Ideal zum Entspannen der Muskeln, Stressabbau und zur Verbesserung des allgemeinen Wohlbefindens zu Hause.
- **Entspannung:** Entwickelt, um eine beruhigende Wärmeerfahrung für Entspannung und ein Gefühl des Wohlbefindens zu bieten.

2. Produktdiagramm

1. Saunadecke

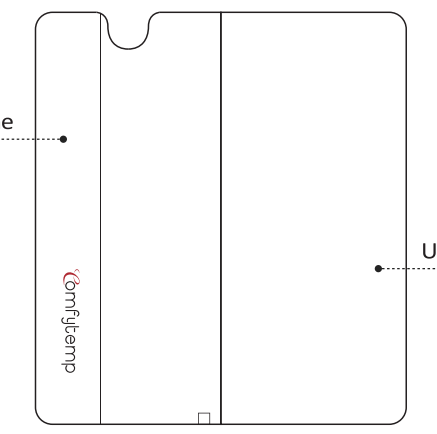

2. Fernbedienung

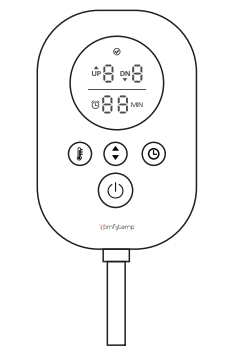

(1) Tasten

Tasten	Entsprechende Funktion
Ein-/Ausschalter	Ein-/Ausschalten
Temperaturtaste	Wählbar von 1 bis 6 Stufen
Timer-Taste	Wählbar von 10 bis 90 Minuten
Auswahl der oberen und unteren Zonen	Auswahl der oberen und unteren Zonen

(2) Anzeige

Benutzeroberfläche	Bedeutung
✓	BLE-Verbindung erfolgreiches Symbol
UP 8	Temperaturstufenauswahl für die obere Zone
DN 8	Temperaturstufenauswahl für die untere Zone
88 MIN	Timer-Auswahl und Countdown

3. Verwendung

3.1 Vor Gebrauch

(1) Stellen Sie die Saunadecke auf eine ebene und saubere Oberfläche.

(2) Stellen Sie sicher, dass die Stromversorgung eingeschaltet ist und der Stecker ordnungsgemäß angeschlossen ist.



(3) Tragen Sie lange Ärmel und Hosen oder legen Sie ein Badetuch darunter für Sicherheit und Komfort.

(4) Bitte entfernen Sie vor der Benutzung alle metallischen Accessoires.



(5) Bitte schließen Sie den Reißverschluss vollständig, um Wärmeverlust zu vermeiden.



3.2 Button-Steuerung

(1) Drücken Sie die Taste ⏻ , um einzuschalten.

(2) Drücken Sie die Taste 🌡 , um Heizstufen von 1 → 6 für die OBERE ZONE auszuwählen.

(3) Drücken Sie die ▲▼ -Taste, um den Steuerbereich auf UNTEN ZONE zu wechseln.

(4) Drücken Sie die 🌡 -Taste, um die Heizstufen von 1 → 6 für die UNTEN ZONE auszuwählen.

(5) Drücken Sie die 🕒 -Taste, um den Timer von 10 → 90 Minuten auszuwählen.

3.3 APP Steuerung

(1) Scannen Sie den QR-Code, um die App oder APK-Datei herunterzuladen. Oder suchen Sie im App Store nach "Comfytemp", um die App herunterzuladen.

ios android

(2) Erstellen Sie ein Konto.

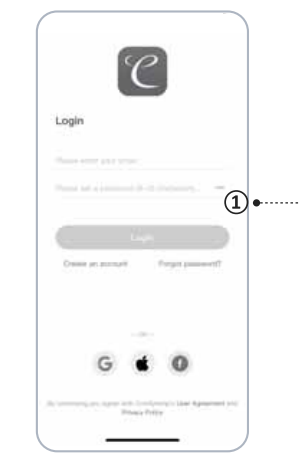

(3) Kurz drücken, um das Gerät einzuschalten. Das BLE ist bereit zur Verbindung. Wenn das BLE verbunden ist, erscheint das Symbol ✓.

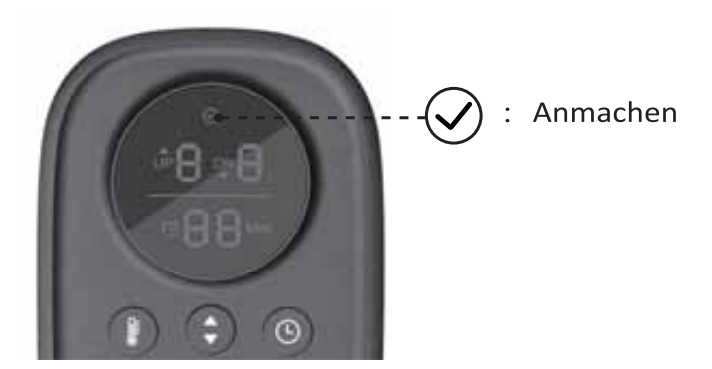

(4) Suchen Sie nach der BLE-Verbindung des Geräts.

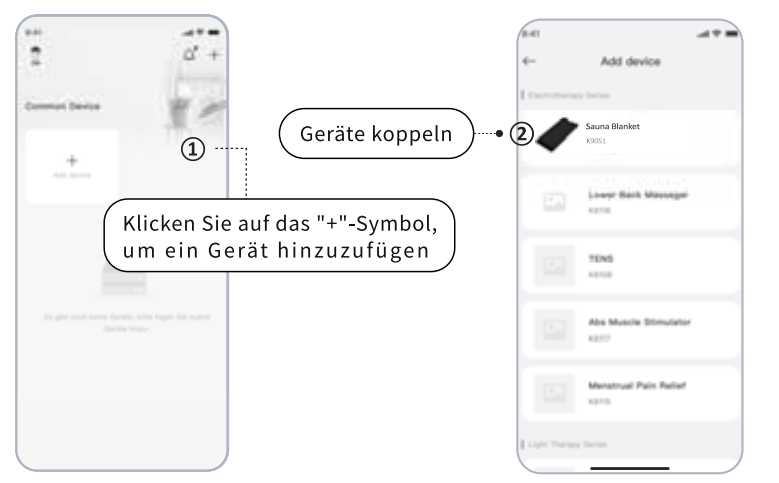

(5) Beginnen Sie mit der Nutzung der Produkte und der zugehörigen Apps.

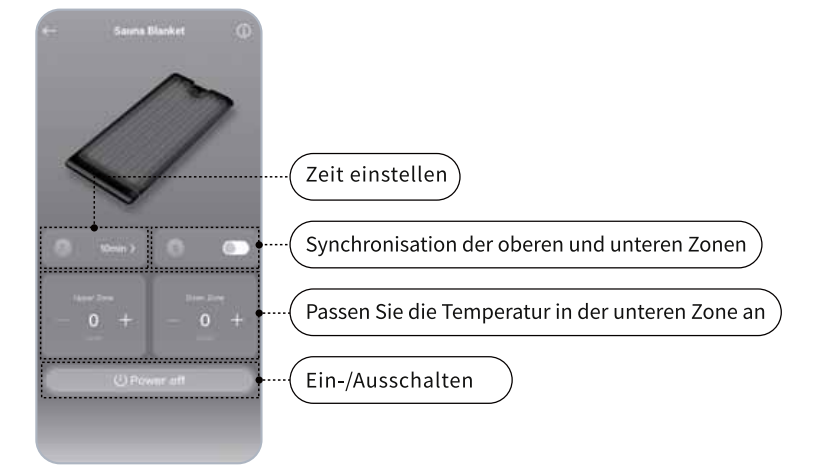
Sauna Blanket
Zeit einstellen
Synchronisation der oberen und unteren Zonen
Passen Sie die Temperatur in der unteren Zone an
Ein-/Ausschalten

3.4 Nach Gebrauch

Stellen Sie sicher, dass es abkühlt, bevor Sie es nach dem Gebrauch zusammenfalten.

4. Produktspezifikationen

4.1 Produktspezifikationen

Produktname		Saunadecke
Produktmaße		70.8×78.7in
Material		Wasserdichtes, flammhemmendes Oxford-Gewebe, flammhemmende Nadelfilzbaumwolle
Cable Length		4M
AC-Spannung		110-120V
Nennleistung		420w
BLE-Version		5.3
BLE-Reichweite		10m(Laborbedingungen, keine Hindernisse, keine Störungen)
Funktion	Obere/untere	Zonenkontrolle
	Heizstufen	6 Stufen optional
	Timer	10~90 Minuten optional

4.2 Temperaturparameter

Die Temperaturdaten basieren auf Labortests unter idealen Bedingungen. Die tatsächlichen Ergebnisse können je nach realen Bedingungen und Variationen der einzelnen Einheiten abweichen.

Stufe	Temperatur
0	Nicht heizen
1	50°C
2	55°C
3	60°C
4	65°C
5	70°C
6	75°C

5. Reinigungsanweisungen

Eine ordnungsgemäße Reinigung und Wartung Ihrer Saunadecke gewährleistet ihre Langlebigkeit und optimale Leistung. Befolgen Sie diese Richtlinien:

(1) Vom Stromnetz trennen: Ziehen Sie immer den Netzstecker der Saunadecke aus der Steckdose, bevor Sie sie reinigen.

(2) Oberflächenreinigung: Verwenden Sie ein feuchtes Tuch, um die Oberfläche der Saunadecke vorsichtig abzuwischen. Tauchen Sie die Decke nicht in Wasser oder andere Flüssigkeiten.

(3) Mildes Reinigungsmittel: Verwenden Sie bei Bedarf ein mildes Reinigungsmittel auf dem Tuch, um hartnäckige Flecken zu entfernen. Vermeiden Sie die Verwendung von starken Chemikalien oder scheuernden Materialien.

(4) Trocknung: Lassen Sie die Saunadecke nach der Reinigung vollständig an der Luft trocknen, bevor Sie sie lagern oder erneut verwenden. Verwenden Sie keinen Haartrockner oder andere Heizgeräte zum Trocknen der Decke.

6. Fehlerbehebung

Problem01: Die Saunadecke heizt nicht.
Wie vorzugehen ist:
(1) Stellen Sie sicher, dass das Netzkabel sicher in eine funktionierende Steckdose eingesteckt ist.
(2) Überprüfen Sie, ob die Steuereinheit eingeschaltet ist und das Display aktiv ist.
(3) Erhöhen Sie die Temperatureinstellung mit der Steuereinheit oder App.

Problem02: Die Saunadecke schaltet sich während des Gebrauchs ab.
Wie vorzugehen ist:
(1) Überprüfen Sie die Timer-Einstellung und verlängern Sie die Zeit bei Bedarf.
(2) Lassen Sie die Decke abkühlen und starten Sie sie nach ein paar Minuten neu. Stellen Sie sicher, dass die Belüftung ausreichend ist.

Problem03: Ungleichmäßige Erwärmung in verschiedenen Bereichen der Decke.
Wie vorzugehen ist:
(1) Stellen Sie sicher, dass die Decke flach ausgelegt und frei von Falten oder Knicken ist.
(2) Wenn das Problem weiterhin besteht, stellen Sie die Verwendung ein und wenden Sie sich an den Kundendienst.

Problem04: Das Display der Steuereinheit zeigt einen Fehlercode an (z. B. F, F1, F2, F3).
Wie vorzugehen ist:
(1) Wenn F angezeigt wird, bedeutet dies, dass der Koppler nicht angeschlossen ist oder die oberen und unteren Bereiche beschädigt sind.
(2) Wenn F1 angezeigt wird, bedeutet dies, dass der obere Bereich beschädigt ist.
(3) Wenn F2 angezeigt wird, bedeutet dies, dass der untere Bereich beschädigt ist.
(4) Wenn F3 angezeigt wird, bedeutet dies, dass die Temperatur des Controllers zu hoch ist. Bitte warten Sie, bis der Controller wieder Raumtemperatur erreicht hat, bevor Sie ihn verwenden.
(5) Wenn das Problem weiterhin besteht, wenden Sie sich an den Kundendienst.

Problem05: Kein Schwitzen während der Verwendung der Saunadecke.
Wie vorzugehen ist:
(1) Erhöhen Sie die Temperatureinstellung mit der Steuereinheit oder App auf ein höheres Niveau, das angenehm und effektiv zum Schwitzen anregt.
(2) Verlängern Sie die Dauer Ihrer Sitzung. Beginnen Sie mit kürzeren Sitzungen und verlängern Sie die Zeit schrittweise bis zur empfohlenen Grenze, damit sich Ihr Körper anpassen kann und zu schwitzen beginnt.
(3) Stellen Sie sicher, dass Sie vor der Verwendung der Saunadecke gut hydriert sind. Trinken Sie 30 Minuten vor Ihrer Sitzung ein Glas Wasser, um Ihrem Körper beim Schwitzen zu helfen.
(4) Tragen Sie leichte, feuchtigkeitsableitende Kleidung, um die Wärme besser aufzunehmen. Schwere oder einschränkende Kleidung kann den Schwitzprozess behindern.

7. Vorsicht

1. Verwenden Sie diese Saunadecke nicht bei Säuglingen, unbeweglichen Personen oder Personen, die unempfindlich gegenüber Wärme sind, wie z. B. Personen mit schlechter Durchblutung.
2. Falten oder knicken Sie die Saunadecke während des Gebrauchs nicht. Dies kann die Heizelemente beschädigen.
3. Verlegen Sie keine Stromkabel zwischen der Decke und anderen Oberflächen. Achten Sie darauf, dass die Kabel nicht eingeklemmt werden.
4. Halten Sie die Steuereinheit von Bereichen fern, die feucht oder nass werden könnten, wie z. B. in der Nähe eines offenen Fensters.
5. Verwenden Sie keine Nadeln oder scharfen Gegenstände auf der Saunadecke, da diese die elektrischen Leitungen beschädigen könnten.
6. Stellen Sie sicher, dass die Saunadecke mit der auf dem Produkt angegebenen richtigen Spannung betrieben wird.
7. Schalten Sie die Saunadecke aus oder ziehen Sie den Stecker, wenn sie nicht in Gebrauch ist.
8. Übermäßige Erwärmung kann durch unsachgemäßes Falten während des Gebrauchs verursacht werden.
9. Wenn eine unsachgemäße Bedienung der Saunadecke festgestellt wird, stellen Sie die Verwendung sofort ein und wenden Sie sich bezüglich der Reparatur an den Hersteller oder Händler.
10. Verwenden Sie die Saunadecke nicht auf Schaukelstühlen, Liegen oder anderen Möbeln, die ihre flache Positionierung behindern könnten.
11. Stecken Sie die Decke nicht unter den Körper oder andere Möbel. Alle Teile der Decke sollten jederzeit sichtbar sein.

12. Das Umwickeln des Kabels um die Steuereinheit kann das Kabel beschädigen. Wickeln Sie es locker, wenn Sie es lagern.
13. Reinigen Sie die Saunadecke nicht chemisch. Reinigungsmittel können die Isolierung des Heizelements beeinträchtigen.
14. Dieses Gerät hat einen polarisierten Stecker (ein Stift ist breiter als der andere) als Sicherheitsmerkmal. Dieser Stecker passt nur in eine Richtung in eine polarisierte Steckdose. Wenn der Stecker nicht vollständig in die Steckdose passt, drehen Sie den Stecker um. Wenn er immer noch nicht passt, wenden Sie sich an einen qualifizierten Elektriker. Versuchen Sie nicht, dieses Sicherheitsmerkmal zu umgehen.
15. Bitte konsultieren Sie vor der Verwendung dieses Produkts einen Arzt und seien Sie vorsichtig bei der Verwendung bei Personen mit Herzerkrankungen, Bluthochdruck, akuten Erkrankungen, Infektionskrankheiten, schwerem Diabetes, schwangeren Frauen, nach Alkoholkonsum, Epilepsie, Erkrankungen der Atemwege, Hautkrankheiten und Nierenerkrankungen.

8. Lagerung

Reinigen und trocknen:

- Stellen Sie sicher, dass das Heizkissen vor der Lagerung gründlich gereinigt und vollständig getrocknet ist.

Falten:

- Falten Sie das Heizkissen ordentlich, vermeiden Sie übermäßigen Druck und Falten auf den Heizelementen.

Lagerort:

- Lagern Sie es an einem trockenen, kühlen Ort, fern von direkter Sonneneinstrahlung und hohen Temperaturen.
- Vermeiden Sie die Lagerung in feuchten oder korrosiven Umgebungen.

Schutz:

- Verwenden Sie die Originalverpackung oder einen sauberen Aufbewahrungsbeutel, um das Kissen vor Staub und Schmutz zu schützen.

WARTUNGSTIPPS

Regelmäßige Inspektion: Überprüfen Sie die Saunadecke regelmäßig auf Anzeichen von Abnutzung, wie ausgefranste Ränder oder freiliegende Drähte. Stellen Sie die Verwendung ein, wenn Schäden festgestellt werden.
Richtige Lagerung: Lagern Sie die Saunadecke an einem kühlen, trockenen Ort, fern von direkter Sonneneinstrahlung und Wärmequellen. Vermeiden Sie das Ablegen schwerer Gegenstände auf der Decke.
Falten vermeiden: Vermeiden Sie es, die Saunadecke bei der Lagerung fest zu falten. Rollen Sie sie stattdessen locker auf, um Schäden an den Heizelementen zu vermeiden.
Befolgen Sie die Verwendungshinweise: Halten Sie sich an die empfohlenen Nutzungsdauer und Einstellungen, um die Lebensdauer Ihrer Saunadecke zu verlängern.

9. Sicherheitshinweise und Warnungen

Zeichen und Symbole

LESEN UND VERSTEHEN SIE DIESES GESAMTE HANDBUCH, EINSCHLIESSLICH DES SICHERHEITSABSCHNITTS UND ALLER ANWEISUNGEN UND WARNUNGEN, VOLLSTÄNDIG UND SORGFÄLTIG, BEVOR SIE DIESES PRODUKT VERWENDEN. BEFOLGEN SIE ALLE SICHERHEITSANWEISUNGEN UND WARNUNGEN, UM GEFÄHRLICHE SITUATIONEN ZU VERMEIDEN UND DAS PRODUKT KORREKT ZU VERWENDEN.

Lesen Sie alle Anweisungen vor der Verwendung
Nicht bleichen
Von scharfen Gegenständen fernhalten
Nicht im Wäschetrockner trocknen
Nicht verwenden, wenn es gefaltet oder gebündelt ist
Nicht bügeln
Von Kindern unter drei Jahren fernhalten

Warranty

24 Hrs Schnell Kundendienst
30 Tage Kostenlose Rückgabe
365 Tage Garantie

Wenn Sie mit unseren Produkten nicht zufrieden sind,
zögern Sie bitte nicht, uns eine E-Mail an
help@comfytemp.com

www.comfytemp.com

Product Name: Sauna blanket
Model: K90S1

EU REP
Company: E-CrossStu GmbH
Address: Mainzer Landstr.69, 60329 Frankfurt am Main,Hessen
E-mail: e-crossstu@outlook.com , E-CrossStu@web.de
Telephone: +49 69332967674

UK REP
Company: YH Consulting Limited
Address: C/O YH Consulting Limited Office 147,Centurion House, London Road,Staines-upon-Thames, Surrey,TW18 4AX,London
E-mail: H2YHUK@gmail.com
Telephone: +44 07514-677868

Manufacturer: Shenzhen Yicai Health Technology Co. , Ltd
Address: 11th floor, Zhengian Building, Yousong Community, Longhua Street, Longhua District, Shenzhen,Guangdong, China, 518110.

Email: help@comfytemp.com

CE RoHS UK CA FC
MADE IN CHINA

FCC Warnning:

This equipment has been tested and found to comply with the limits for a Class B digital device,pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection againstharmful interference in a residential installation. This equipment generates, uses and can radiateradio frequency energy and, if not installed and used in accordance with the instructions, maycause harmful interference to radio communications. However, there is no guarantee thatinterference will not occur in a particular installation. If this equipment does cause harmfulinterference to radio or television reception, which can be determined by turning the equipmentoff and on, the user is encouraged to try to correct the interference by one or more of thefollowing measures:
Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.

尺寸10*14cm_80g书写纸_黑白印刷_装订成册