

產品說明

iOS 專屬設計：

支援 iOS 與 iPadOS 15.1 以上版本 輕鬆連線。

雙電池供電：

採用 2 顆 AA 電池，行動更自由。

智慧行走：


自訂自動繞圓走或單點直徑移動，提升遇怪機會、快速孵蛋、直奔道館、任務輕鬆完成。

路線續走：

免開 APP，從上次起點位置繼續走。

全自動收集：

自動抓怪、自動收集道具。

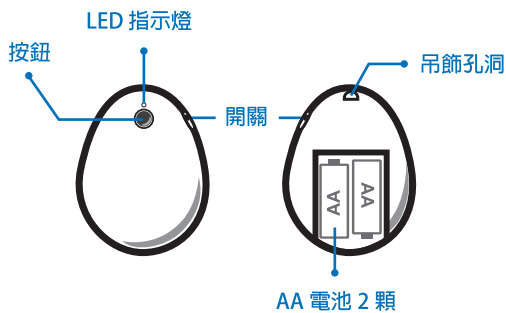

使用方式

(1) 操作步驟：

1. 打開裝置的電池倉，放入 2 顆 AA 電池。
2. 開啟 (往上推) 側邊電源開關，當 LED 指示燈亮起，表示已正常開機。

(2) 下載與開啟 Ultra Catcher APP



- (5) 點選「前往藍牙設定」進入「設定」>「藍牙」>點選「Rocket Balloon」進行藍牙連線



(3) 點選「允許」使用藍牙

(6) 回至 APP

授權使用 GPS 點選「使用 APP 期間允許」
選取相同的裝置名稱進行連線。

(4) 點選「允許」傳送通知

Ultra Catcher APP 操作

單點移動

點選 ，拖動地圖，將旗子移至範圍內的指定位置，放開拖動即開始前往該位置。

繞圓移動

- 點擊 ，選擇行走半徑
500 公尺 / 1000 公尺 / 1500 公尺，由外往內逆時鐘行走。
- 點擊  停止移動。

『繞圓移動功能』開關：雙擊按鈕 → 燈變青藍色 → 再長按到燈閃爍。

繞圓移動中 新增 單點移動

於繞圓移動中，點選 ，拖動地圖將旗子移至停留點，放開拖動即開始前往該地點，結束後會停留 30 秒，在繼續執行繞圓移動。

* 如欲長距離移動 >1km，請移除裝置以防止不正常 GPS 位移

路線續走

打開 Rocket Balloon，不開啟 Ultra Catcher App!


1. 雙擊按鍵 → 指示燈呈青藍色恆亮
2. 長按到燈開始閃爍

Rocket Balloon 會把 GPS 回到上次 Ultra Catcher App 的起點，套用上次的半徑，並自動開始行走。

提醒：上次連線的起點位置要與現在位置的 **15 公里範圍內**

自動捕捉設定

1. 打開 Pokémon GO App 後，點選【主選單】
2. 點選【設定】
3. 在設定頁面中，選擇【已連結的裝置與服務】
4. 點選【外部裝置】
5. 短按 Rocket Balloon 按鈕，點選閃爍的【Pokémon GO Plus】進行配對
6. 回到遊戲主畫面，當右上方圖示變色時，表示連線成功!

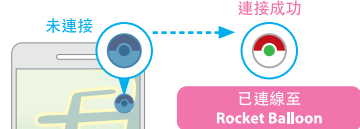

狀態燈號顯示

燈 號	Pokemon go 狀態	Ultra Catcher 狀態	
		GPS 藍牙	移動功能
 閃爍	斷線	斷線	斷線
 恆亮	斷線	連線	斷線
 閃爍	連線	斷線	斷線
 恆亮	連線	連線	斷線
 恆亮	斷線	連線	連線
 恆亮	連線	連線	連線

燈 號	狀 態
 藍燈	發現補給站
 綠燈	發現寶可夢
 黃燈	發現未知寶可夢
 白燈	捕捉中
	道具滿了
 七彩燈	抓寶 / 補給成功
 紅燈	寶可夢逃脫
	沒有紅球了
	寶可夢盒子已滿
	補給遠離失敗

無法
連線
時

當本產品已配對過其它手機或錯亂導致無法連線：
 • 請先到藍牙裝置移除【Pokémon GO Plus】。
 • 到遊戲中，退出【Pokémon GO Plus】裝置。
 • 點選閃爍的【Pokémon GO Plus】進行連線。

遊戲設定因素每一小時會自動斷線，須至遊戲中重新連接。

恢復 GPS 位置

- (1) 將 Rocket Balloon 斷電
- (2) 前往 手機「設定」>「隱私權與安全性」>「定位服務」
- (3) 關閉定位服務一分鐘
- (4) 重新開啟定位服務

P/N：Rocket Balloon

M/N：ZPP0073



更多資訊請上官網
www.gamerznationtech.com



保存溫度：-5°C~45°C
環境溫度：
0°C~35°C (32°F~95°F)



無防水防塵功能

需使用擁有低耗能藍牙連線的智慧型手機並且搭載 Pokémon GO 遊戲 APP。
建議使用 iPhone 6S 或更高版本並帶有 iOS 15.1 或更高版本。

客戶服務：ultracatcher.service@gmail.com

本產品不是由 Nintendo, The Pokémon Company 或 Niantic 公司所贊助、認可、同意出品，為非原廠官方 認證產品。

根據低功率射頻器材技術規範：
取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前述合法通信，指依電信管理法規作業之無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

XXXXXXXXXXXX

Unboxing

Designed for iOS:

Supports iOS and iPadOS 15.1 or later for easy and stable connection.

Dual Battery Power:

Powered by two AA batteries for greater mobility and convenience.

Smart Walking:


Customize automatic circular walking or point-to-point movement to increase encounter rates, hatch eggs faster, head straight to Gyms, and complete tasks with ease.

Route Continuation:

No need to reopen the app — continues walking from the last starting point automatically.

Fully Automated Collection:

Automatically captures monsters and collects items.

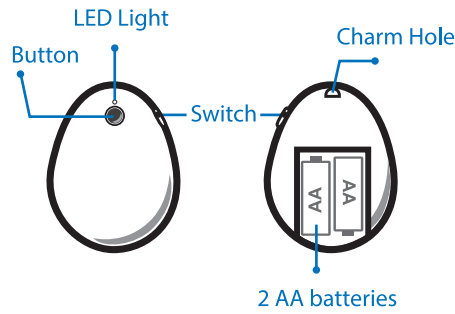

Instructions

(1) Operating Steps:

1. Open the device's battery compartment and insert 2 AA batteries.
2. Switch on the side power button (push upward). When the LED indicator lights up, it means the device has powered on successfully.

(2) Launch the Ultra Catcher APP.



(5) Tap "Go to Bluetooth Settings"

Go the "Settings" > "Bluetooth", then select Rocket Balloon from the list to connect.



(3) Tap "Allow" to enable Bluetooth usage.

(6) Return to the Ultra Catcher APP

Tap "Allow While Using App" to grant Bluetooth and GPS permissions. Ready to Go !

(4) Allow push notifications

Ultra Catcher APP Operations

Single-Point Movement

Tap the , drag the map, and move the flag to the designated location within the range. Release the drag to start moving to that location.

Circular Movement

- Tap the  and select a walking radius of 500m / 1000m / 1500m. Movement will proceed counterclockwise from the outside toward the inside.
- Click the  to stop moving.

"Circular Movement" On/Off : Double-press the button → light turns cyan → press and hold until the light starts flashing.

Adding Single-Point Movement During Circular Movement

While in circular movement, tap the , drag the map, and move the flag to the stop point. Release the drag to start moving to that location. After arrival, the character will stay for 30 seconds before resuming circular movement.

***If you want to move long distances (>1km), please remove the device to prevent abnormal GPS displacement.**

Route Continuation

Open Rocket Balloon without launching the Ultra Catcher App !


1. Double-press the button → the indicator light turns solid cyan.
2. Press and hold until the light starts flashing.

Rocket Balloon will restore the GPS location to the last starting point used in the Ultra Catcher App, apply the previous walking radius, and automatically begin movement.

Reminder : The previous starting point must be within **15 km** of your current location.

P/N : Rocket Balloon

M/N : ZPP0073

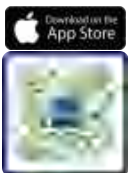

more information:
www.gamerznationtech.com



Storage temperature:
-5°C to 30°C
Environmental temperature:
0°C ~ 35°C (32°F ~ 95°F)



This product is not
waterproof or dustproof.

Requires a smartphone with low-energy Bluetooth capability and the Pokémon Go game app installed. It is recommended to use an iPhone 6S or later with iOS 15.1 or higher.

Customer Service:
ultracatcher.service@gmail.com

Automatic Pokemon Catching Setup


1. Tap the Main Menu



2. Tap [Settings]




3. Tap [Connected Devices and Services]




4. Tap [Accessory Devices]



5. Short press the Rocket Balloon button, then tap the flashing [Pokémon GO Plus] to pair.



6. Waiting for pairing. When the pokeball icon turns on, it means pairing is successful.

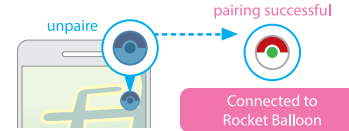

Game Status Indicator Lights

LED	Pokemon go	Ultra Catcher	
		Bluetooth GPS	Movement
 Flashing	Disconnected	Disconnected	Disconnected
 Solid light	Disconnected	Connected	Disconnected
 Flashing	Connected	Disconnected	Disconnected
 Solid light	Connected	Connected	Disconnected
 Solid light	Disconnected	Connected	Connected
 Solid light	Connected	Connected	Connected

LED	Situation
 Blue	Found a PokéStop.
 Green	Found a Pokémon.
 Yellow	Found an unknown Pokémon.
 White	Capturing Pokémon.
	Item bag is full.
 Rainbow	Successfully caught/stocked up on Poké Balls.
 Red	Pokémon fled.
	Out of Poké Balls.
	Pokémon storage is full.
	Failed to spin PokéStop

When unable to connect

When the product has been paired with another phone or confusion leads to inability to connect:

- Remove [Pokemon GO Plus] from Bluetooth devices.
- In the game, disconnect [Pokemon GO Plus] device.
- Tap the blinking [Pokemon GO Plus] to connect.

Due to game settings, it automatically disconnects every hour.
You need to reconnect in the game.

Restore GPS Location

- (1) Power off Pocket Hunter
- (2) Go to your phone's "Settings" > "Privacy & Security" > "Location Services"
- (3) Turn off Location Services for 1 min
- (4) Turn Location Services back on

This Product is not sponsored, endorsed, or approved by Nintendo, The Pokémon Company or Niantic.

    FCC ID : 2BGQP-ZPM005Q

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

製品説明

iOS 専用設計：

iOS および iPadOS 15.1 以降に対応、簡単かつ安定した接続が可能。

デュアル電池駆動：

単三電池 2 本で動作、より自由で便利なモビリティを実現。

スマートウォーキング：


自動の円移動やポイント移動を自由に設定でき、ポケモン遭遇率の向上、タマゴ孵化の効率化、ジムへの直行、タスクの簡単クリアをサポート。

ルート継続：

アプリを再起動する必要なし。前回のスタート地点から自動でウォーキングを再開。

全自動コレクション：

モンスターを自動で捕獲し、アイテムを自動で収集。

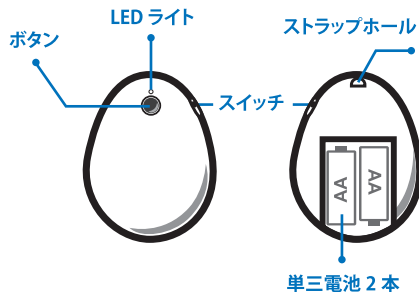

使い方

(1) 操作手順：

1. デバイスの電池ボックスを開け、単三電池（AA）を 2 本入れます。
2. 側面の電源スイッチを上押しして ON にします。
LED インジケータが点灯すれば、正常に起動しています。

(2) Ultra Catcher app を開けてください。



(5) 「Bluetooth 設定へ」をクリックしてください。

「設定」>「Bluetooth」>「Rocket Balloon」で Bluetooth 接続をしてください。



(3) Bluetooth の使用「許可」をクリックしてください。

(4) プッシュ通知を許可する

- (6) Ultra Catcher アプリに戻る
GPS の使用を許可するには「アプリの使用中的み許可」を選択してください。
同じデバイス名を選んで接続を行ってください。

Ultra Catcher アプリ操作方法

単一ポイント移動

アイコンをタップし、地図をドラッグして旗を指定エリア内の位置に移動します。
ドラッグを離すと、その場所への移動が開始されます。

円形ルート移動

アイコンをタップし、移動半径を選択します（500m / 1000m / 1500m）。外側から内側に向かって反時計回りに移動します。



アイコンをクリックして移動を停止する。

「周回移動機能」オン／オフ：ボタンをダブルクリック → ランプがシアンに変化 → 点滅するまで長押し。

「円形移動」中に「単一ポイント移動」を追加

円形移動中にアイコンをタップし、地図をドラッグして旗を一時停止ポイントに移動します。
ドラッグを離すと、その地点に移動が開始され、到着後 30 秒間停止し、その後自動的に円形移動を再開します。

* 長距離（1km 以上）移動する場合は、不正な GPS の位置ずれを防ぐためにデバイスを取り外してください。

ルート継続

Ultra Catcher アプリを開かずに、ロケットバルーンを起動！


1. ボタンをダブルクリック → インジケータランプがシアン色で点灯。
2. ランプが点滅し始めるまで長押し。

ロケットバルーンは前回 Ultra Catcher アプリで使用したスタート地点に GPS を戻し、前回の周回半径を適用して自動で歩行を開始します。

注意：前回のスタート地点は現在位置から **15km 以内** である必要があります。

P/N：Rocket Balloon

M/N：ZPP0073

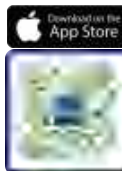

詳細情報
www.gamerznationtech.com



保存温度：-5℃～45℃
環境温度：0℃～35℃
(32° F～95° F)



この製品は防水性や防塵性がありません。

低消費電力のBluetooth接続が可能なスマートフォンとPokémon Goアプリが必要です。


iPhone 6S以降で、iOS 15.1以上のバージョンを推奨します。

顧客サポート

ultracatcher.service@gmail.com



自動ポケモン捕獲設定

1. Pokémon GO アプリを開き、【メインメニュー】をタップします。
2. 【設定】をタップします。
3. 【デバイス/サービスの接続】をタップします。
4. 【外部デバイス】をタップします。



5. 点滅している【Pokémon GO Plus】をタップしてペアリングを行います。

6. ゲームのメイン画面に戻り、右上のアイコンが色を変えたら、接続が成功したことを示します！

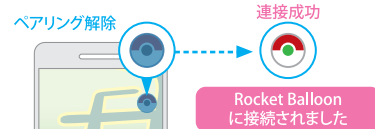

ステータスインジケータ表示

インジケータ	Pokemon go	Ultra Catcher	
		Bluetooth GPS	移動機能
● 点滅	未接続	未接続	未接続
● 常時点灯	未接続	接続中	未接続
● 点滅	接続中	未接続	未接続
● 常時点灯	接続中	接続中	未接続
● 常時点灯	未接続	接続中	接続中
● 常時点灯	接続中	接続中	接続中

インジケータ	状態
● 藍燈	ポケストップ発見
● 緑燈	ポケモン発見
● 黄燈	未知のポケモン発見
○ 白燈	捕獲中
● レインボーライト	アイテムバッグ一杯です
● 赤い光	ゲット / 補給成功
	ポケモンが逃げました
	モンスターボールがなくなりました
	ポケモンボックス一杯です
	ポケストップから遠いので失敗

無法連線時

本製品が他の携帯電話とペアリングされているか、混乱して接続できない場合は以下の手順に従ってください：

- ・Bluetooth デバイスから [Pokémon GO Plus] を削除してください。
- ・ゲーム内で、[Pokémon GO Plus] デバイスを切断してください。
- ・点滅している [Pokémon GO Plus] をタップして再接続してください。

ゲーム設定の影響で、1 時間ごとに自動的に切断され、ゲーム内で再接続する必要があります。

GPS 位置の復元

- (1) Pocket Hunter の電源を切ってください。
- (2) 「設定」>「プライバシーとセキュリティ」>「位置情報サービス」に進んでください。
- (3) 位置情報サービスを 1 分間オフにしてください。
- (4) 位置情報サービスを再起動してください。

この製品は Nintendo、The Pokémon Company、Niantic が正式承認されるものではありません。