



欢迎使用微型计算机，为了保证本产品正常使用，您在使用之前，请仔细阅读本产品的《操作说明》、《安装说明》、《电脑保修条款说明》。


操作说明

① 开箱及检查

📋 清单:主机×1、赠品:说明书×1、适配器×1、

🔍 请检查产品主机包装箱的外观是否有明显的外伤，附件是否齐全，如有明显的外伤或附件不符可联系经销商。

② 产品接口及功能示意图

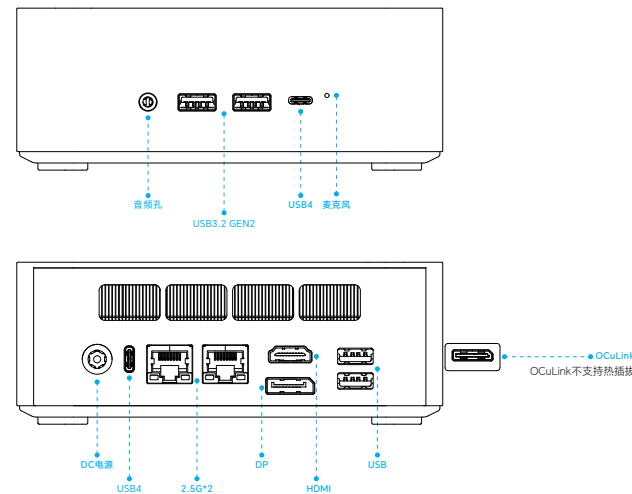

③ 使用环境说明

☆ 工作温度:0-35℃

☆ 工作湿度:10%~90%无凝结

☆ 请使用标配适配器，否则可能造成无显、烧毁或其他机械损坏。请按照当地法规处理废弃电池。

注* 产品包装、logo 字体及标识等可能因版本更新或生产批次不同而调整，说明书中的图片、文字描述仅为示意，实际以实物为准

硬盘安装说明


第一步：按照右图实例摆放，拧下固定底盖四周的四颗螺丝，小心取下底盖。

第二步：即可安装内存与SSD硬盘

F7 快速启动 delete 进入BIOS

当遇到下面几种情况时，开机速度可能会变慢：

意外重启、重置BIOS/更换内存条、更换SSD。通常而言，在正常运行一次开机后，启动速度恢复正常。

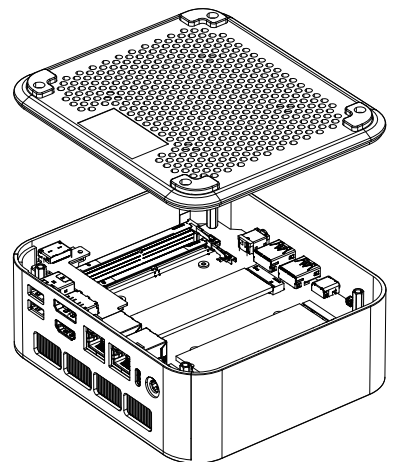

④ 使用注意事项

☆ 请在220V交流电压下适用您的主机，在不适合的电压下工作将导致触电、起火或损坏主机。

☆ 请不要在主机运行时插拔电源或移动主机，否则可能会造成主机宕机或部件损坏。

☆ 本手册所提到的产品规格及图片文字等信息仅供参考，具体硬件配置以随机装箱单为准。

☆ 未经授权禁止复制或使用时此说明书中涉及的任何内容。

☆ 对于不是由本司所提供的设备或软件，本公司不承担任何使用性或可靠性。

电脑保修条款说明

① 保修服务方式

☆ 产品在线技术支持服务热线:0755-82684719

☆ 产品检测与维修服务:

☆ 服务中心地址:广东省深圳市龙华区东环二路65号中佳创意园C2栋4楼

☆ 用户在送修前将存储设备内的资料先自行备份，工程师仅负责检测与维修，对于送修过程中因任何因素造成的资料遗失，本公司不予负责，请理解支持!

☆ 对于已经超过免费维修范围的电脑，将按照实际情况收取相关维修费用。

☆ 超过免费保修期的电脑，经工程师检测报价后因故不同意维修的，用户需支付检测费用。

注:无论您通过何种方式来寻求技术支持服务，请明确告知使用的产品型号，购买所在平台，购买时间，详细故障现象等，以便于工程师能更加准确快速地判断出故障原因，谢谢!

⑤ 三包凭证说明

☆ ‘七日’规定:产品自您收到的次日起（遇到法定节假日顺延，包含双休日）七日内，发生性能故障，消费者可选择退货、换货或维修。

☆ ‘十五日’规定:产品自售出之日起15日内，发生性能故障，消费者可以选择换货或维修。

⑥ 本凭证是商品三包的重要依据，请妥善保管!

用户信息	用户姓名		联系电话	
	通信地址			
	E-mail			
商品信息	产品系列		出厂编号	见产品包装标签
	公司名称	深圳市天钡科技有限公司		
	公司地址	深圳市龙华区东环二路65号中佳创意园C2栋4楼		
	服务热线	0755-82684719		
销售信息	经销商名称			
	通信地址		调试日期	
	联系电话		销售日期	



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



天钡中文官网
微信扫码关注了解更多讯息



Official Website
Scan the QR code for more information



AOOSTAR在线客服中心
AOOSTAR Online Customer Service Center
AOOSTAR オンラインカスタマーサービスセンター
Центр онлайн-поддержки AOOSTAR

全国服务电话:

0755-82684719

深圳市天钡科技有限公司

深圳市龙华区东环二路65号中佳创意园C2栋4楼


Welcome to use microcomputer. In order to ensure the normal use of this product, please read the Operation Manual, Installation Manual and Warranty Terms and Conditions carefully before using.

Operation Instructions

① Unpacking and Inspection

- ❖ List: Main unit x 1, Free gift: Manual x 1, Adapter x 1. If there are any discrepancies with the accessories, please contact the dealer.
- ❖ Check packaging, appearance for damage & accessories for

② Product Interface and Function Diagram

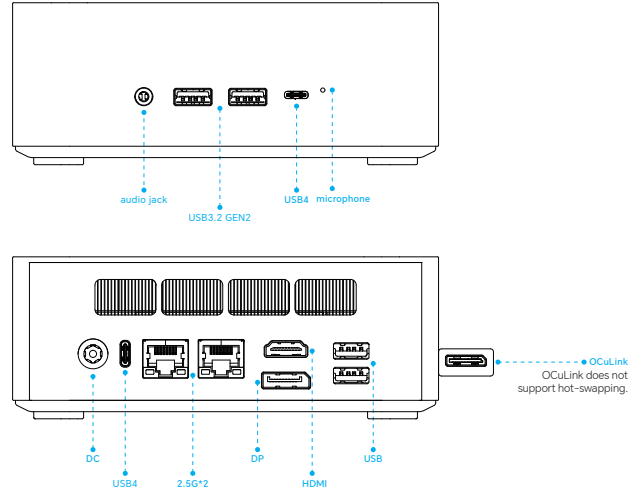

Installation instructions

Step 1: Arrange the components as shown in the example on the right. Unscrew the four screws securing the bottom cover around its perimeter, and carefully remove the bottom cover.


Step 2: You can now proceed to install the memory and SSD.

Press F7 for quick boot and press Delete to enter BIOS.

The startup speed may slow down under the following circumstances:

Unexpected restarts, BIOS resets/memory module replacements, or SSD swaps may slow down the startup speed.

Generally, after a normal power-on and shutdown cycle, the startup speed will return to normal.

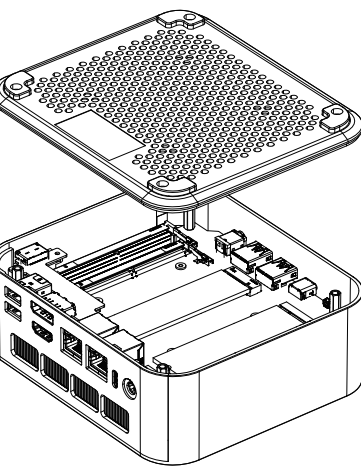

③ Operating Environment Instructions

- ☆ Operating Temperature: 0~35℃
- ☆ Operating Humidity: 10%~90% non-condensing
- ☆ Please use the standard adapter, otherwise it may cause no display, burnout or other mechanical damage.

☆ Please dispose of used batteries according to local regulations.

④ Precautions for Use

- ☆ Please do not plug or unplug the power supply or move the main-frame while it is running, otherwise it may cause the mainframe to crash or damage the components.
- ☆ Please ensure that the power socket and the power interface are in close contact, as loose contact may lead to the risk of fire.
- ☆ Please try to avoid frequently restarting or turning on the mainframe to extend its service life.
- ☆ Please back up important data in a timely manner. The manufacturer is not responsible for any data loss caused by any circumstances.
- ☆ Note: The manufacturer will not be held responsible for any problems or equipment damage caused by improper use or use in an unsafe environment.


ウェルカム・マイクロコンピューターを使用する際は、本製品の正常な使用を保証するために、使用前に本製品の「操作説明書」、「設置説明書」、「パソコン保証条項説明書」をよくお読みください。

操作説明書

① 開封と検査

- ❖ リスト: 本体×1、プレゼント: 説明書×1、アダプター×1、または付属品が不足している場合はディーラーに連絡してください。
- ❖ 箱に外傷がなく、付属品がすべて揃っていることを確認してください。

② 製品のインターフェースと機能図

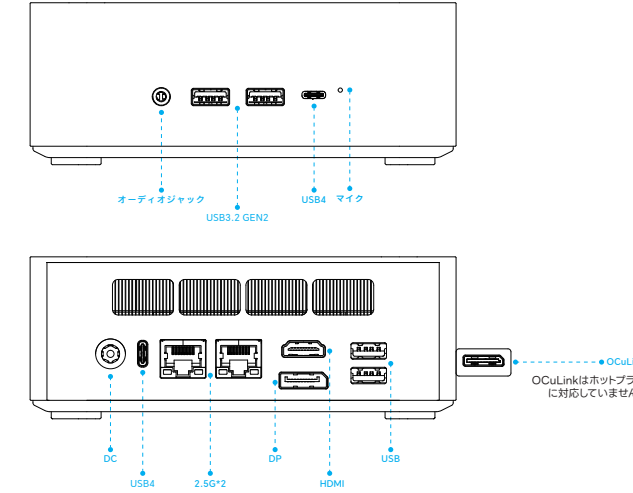

設置説明書


ステップ1: 右図の例に従って配置し、底カバーの周囲を固定している4本のネジを外し、底カバーを慎重に取り外します。

ステップ2: メモリとSSDハードディスクを取り付けることができます。

F7でクイックスタート、DeleteキーでBIOSに入ります。

次のような状況に遭遇した場合、起動速度が遅くなる可能性があります。

予期せぬ再起動、BIOSのリセット/メモリの交換、SSDの交換。
通常、一度正常に電源を入れ切りを行うと、起動速度は正常に戻ります。

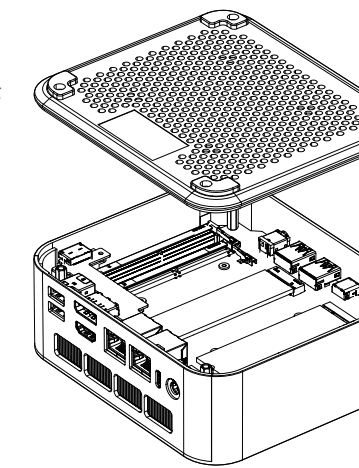

④ 使用環境の説明

- ☆ 動作温度: 0-35℃
- ☆ 動作湿度: 10%~90% (結露無し)
- ☆ 標準アダプターを使用してください。そうでないと、画面表示がなくなり、焼損またはその他の機械的損傷を引き起こす可能性があります。

☆ 廃棄電池は、地元の規制に従って処分してください。

④ 使用上の注意事項

- ☆ ホストを実行中に電源を抜き差ししたり、ホストを移動しないでください。そうするとホストがダウンしたり、部品が損傷する恐れがあります。
- ☆ 電源プラグと電源ジャックがしっかりと接触していることを確認してください。接触不良は火災の危険性をもたらす可能性があります。
- ☆ ホストの使用寿命を延ばすために、ホストの頻繁な再起動や電源オンオフを避けてください。
- ☆ 重要なデータをユーザーが定期的にバックアップしてください。製造業者は、いかなる状況によってもデータの喪失について責任を負いません。
- ❖ 注: 不正な使用や安全でない環境での使用によって発生した問題や機器の損傷については、一切の責任を負いません。

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.