产品说明书 尺寸:50x75mm 材质:80g书写纸 双面印刷 风琴折

MINISO

PRODUCT MANUAL

Wireless Earbud MS125

PLEASE READ THIS MANUAL CAREFULLY BEFORE USING THE PRODUCT AND KEEP IT IN A SAFE PLACE.

CATALOGUE

01 How to wear headphones correctly —— 5
02 Product Description —— 9
03 Touch Operation —— 12
04 Charging compartment operation —— 21
05 Item list —— 33
06 Warranty Statement —— 36

Welcome to MINISO Wireless Earphones

Take out and pair it

When using for the first time, take out the left and right earphones at the same time. When the white light of the earphones flashes, the earphones will enter automatic pairing mode.

How to wear headphones correctly

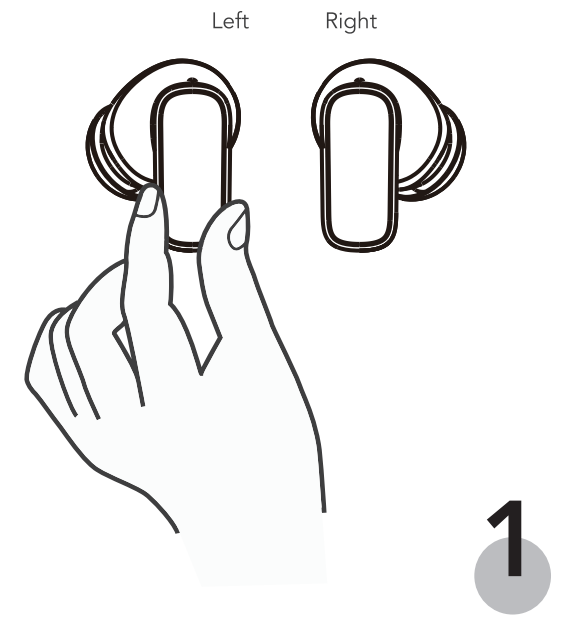

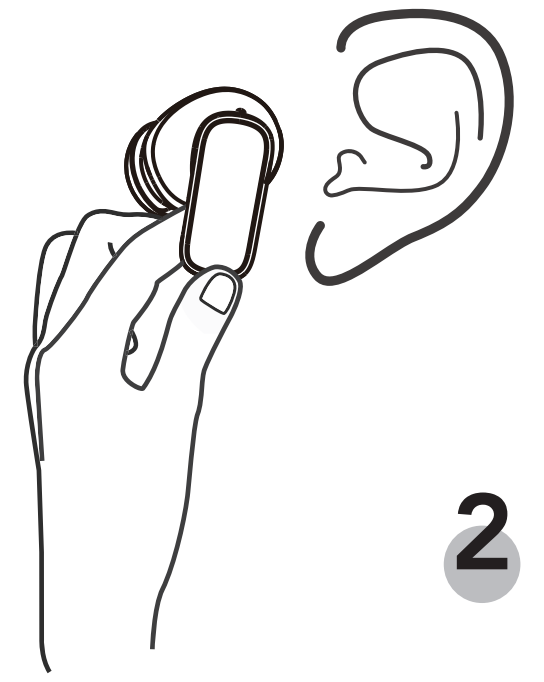

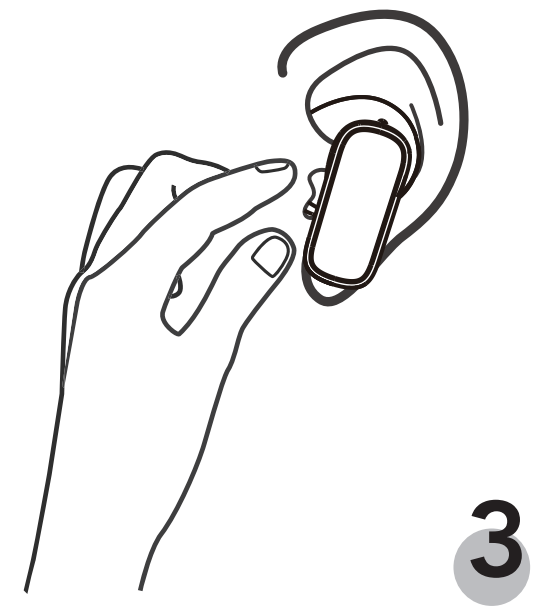

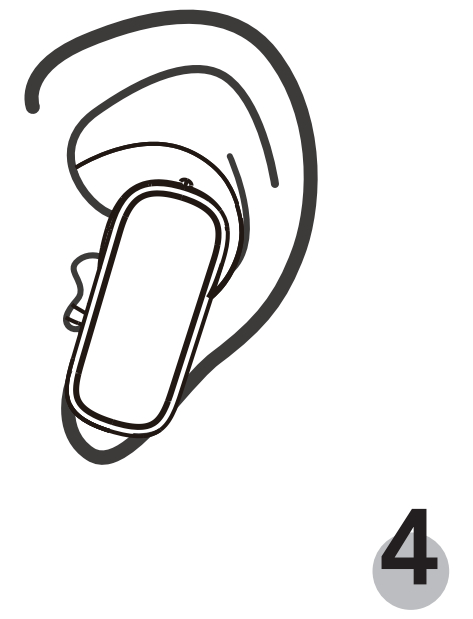

Product Description

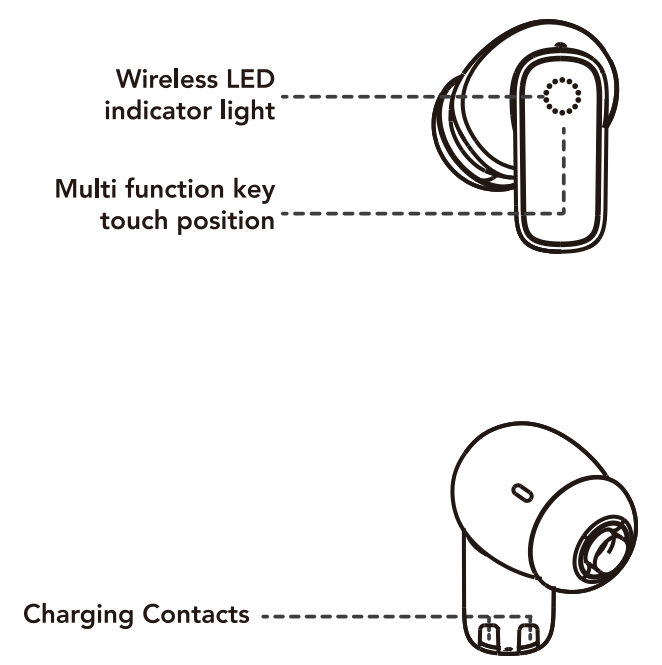
Wireless LED indicator light
Multi function key touch position
Charging Contacts

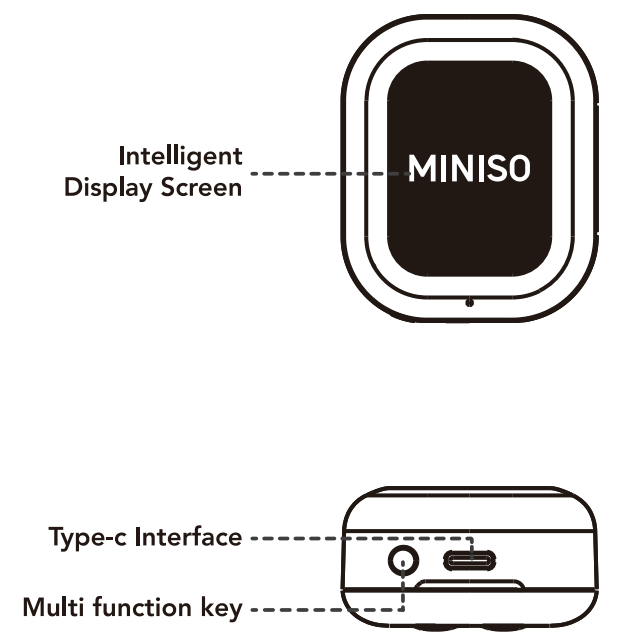

Specification of Product

Model of Product: MS125
Version: V6.0
Effective Distance: Approx. 10m
Speaker Diameter: ϕ13mm
Impedance: 16Ω
Frequency Respinse: 20Hz-20KHz
Microphone Sensitivity: -42dB±1dB
Earphone Input: 5V⎓30mA
Charging Case Input: 5V⎓350mA
Charging Case Output: 5V⎓60mA
Earphone Battery Capacity: 30mAh
Charging Case Battery Capacity:350mAh
Duration: Approx. 4 H (Earphone)
Earphone Charging Time: Approx. 1.5 H
Charging Time of the Charging Case: Approx. 2 H

Touch Operation

Connect with wireless device

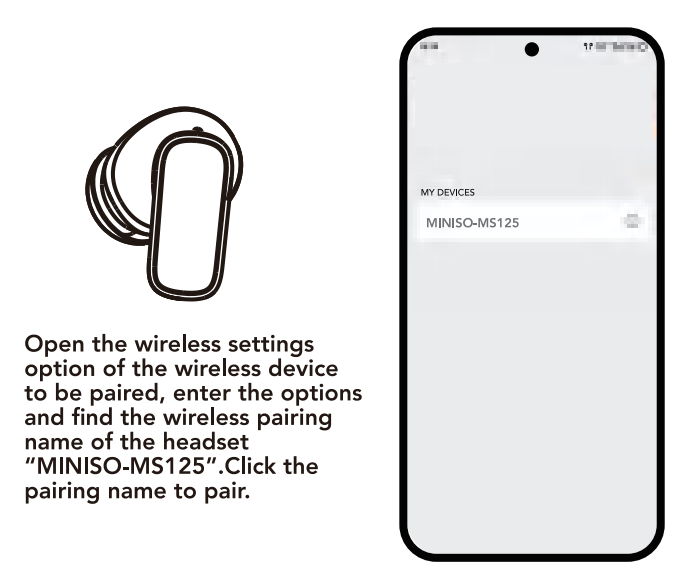

Open the wireless settings option of the wireless device to be paired, enter the options and find the wireless pairing name of the headset "MINISO-MS125".Click the pairing name to pair.

Indicator Light Description

- When the headset is turned on: flashing white light.
- When the headset is turned off: The white light flashes three times and then goes off.
- Pairing status: After successful pairing, the main earphone's white light flashes and the secondary earphone goes off
- Connection successful: no light.

- Headphone Charging: The white light on the earphones is always on. After being fully charged, the white light on the earphones goes off.
- Charging of the Charging case: The charging case display screen shows the battery level, and when fully charged, the charging case screen shows 100%

*Note: After the charging status is displayed on the display screen of the Charging Case, it will automatically turn off after about 30 seconds of inactivity. Sliding can enter the display screen.

Power On

Automatic power on: The earphones are in the charging case, open the charging case cover, the Earphone will be powered on, with the prompt sound of "Du".
Manual power-on: Long press for 3 seconds, the Earphone will be powered on, with the prompt sound of "Du".

Power Off

Auto power off: Put the Earphone in the charging case, close the charging case cover,the Earphone will be powered off, with the prompt sound of "Du".
Manual power off: Long press for 5 seconds, the Earphone will be powered off, with the prompt sound of "Du".

Note: After turning on the device, if it is not paired and connected to the wireless device for 3 minutes, it will automatically shut down; Exceeded the effective connection distance and did not connect to the wireless device. After 3 minutes, it will automatically shut down with a beep sound.

Once Press

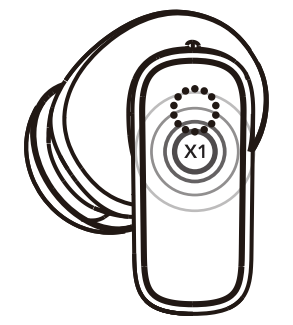

Music mode	Phone mode
▶/⏯	☎
Play/Pause	Call Answer/End

Double Press

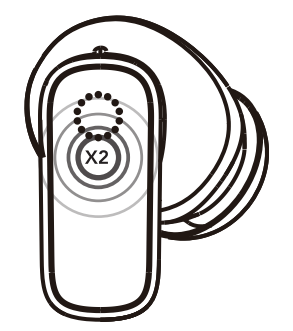

Music mode

🔈+	🔈−
Double press the right ear: Volume up	Double press the left ear: Volume decreases

Long Press

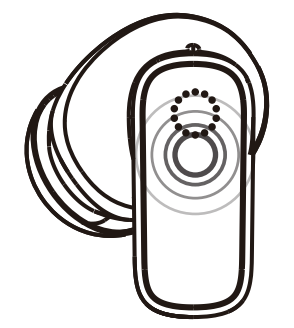

Wake up voice assistant

When using both ears, press and hold the left ear multi-function button for 2 seconds to activate the voice assistant.
When using one earphone, press and hold the left (or right) earphone for 2 seconds to activate the voice assistant

Phone mode

Press and hold the left (or right) ear multi-function button for two seconds: call rejection

Triple Press

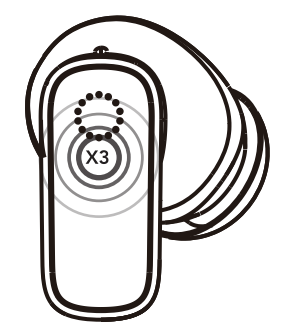

Music mode

⏮	⏭
Triple press on the left ear: Previous song	Triple press on the right ear: next song

Clear wireless pairing history

When both ears cannot be paired, you need to clear all connected devices and click the left and right earphones 5 times at the same time.

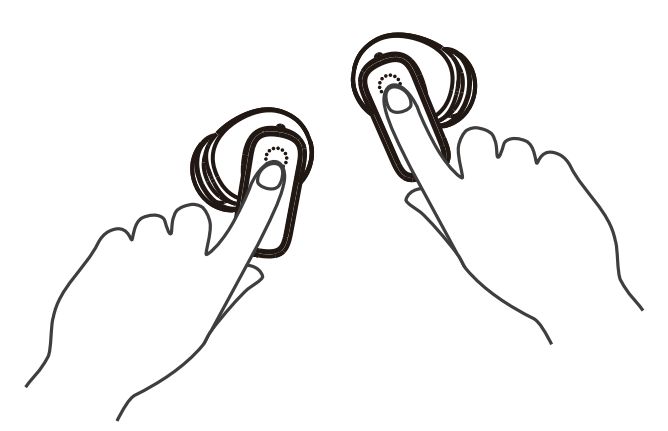

Wireless pairing mode

1. When there is no pairing record for the left and right earphones, the left and right earphones will automatically pair after they are turned on. After successful pairing, there will be two beeps.
2. When the left and right earphones have pairing records, they will automatically connect back when they are turned on, and the prompt will sound "beep"

Switch between game mode and music mode

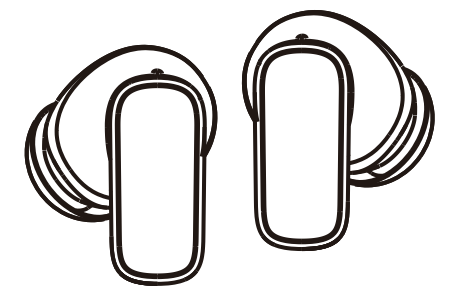

Game mode	Music mode
🎮	♪
Press and hold the multi-function button on the right ear for 2 seconds	Press and hold again for 2 seconds

Note 1: When using one earphone, you cannot switch between game mode and music mode.
Note 2: The factory setting defaults to music mode

Charging compartment operation

Open the display screen

Method 1: When the screen is turned off, double click on the charging compartment display screen to turn it on.
Method 2: Click the multifunctional button on the charging case, and the charging compartment display screen will light up.

Turn off the display screen

Automatic shutdown: The screen will turn off automatically after 30 seconds of inactivity.
Manual shutdown: Click the multifunctional button on the charging case to shut down the display screen.

Note 1: First time use,please activate power on
Operation method: Charge and activate the charging compartment through the TYPE-C interface.
Tip: This product defaults to shutdown mode when it leaves the factory, and it needs to be activated and turned on by charging for the first time.
Note 2: In the case of a stuck charging compartment, in non-charging mode, press and hold the Reset button at the bottom for 10 seconds to forcibly restart the charging compartment.

Icon Introduction

Wireless status

Red status: The charging compartment is not connected to the headphones

White status: The charging compartment is connected to the earphones

Blue status: The earphones are connected to a Bluetooth device

Battery status

Charging status indicator icon for the charging compartment
Display battery status

Ⓛ Ⓡ

Headphone charging status indicator icon
Green: The earphones are charging in the charging compartment
White: fully charged
Grey: headphones are currently in use

正面

Lock screen interface

Unlock: Swipe to unlock the screen

Menu interface

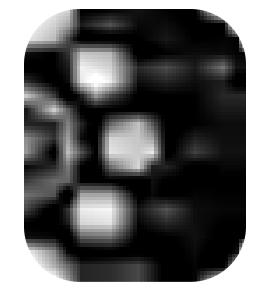

Swipe to select the corresponding function to use

Music interface

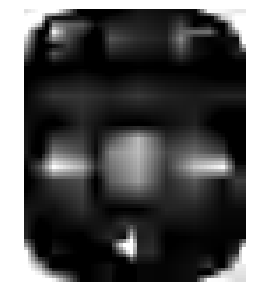

⏪	▶/⏯	⏩
Previous Song	Play/Pause	Next Song

Volume adjustment interface

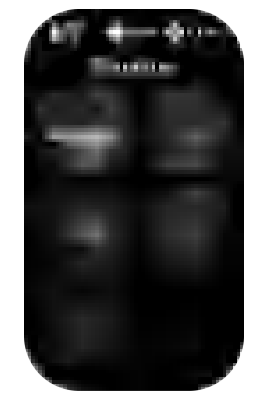

Switch between different EQ sound effects: Standard,Rock,POP,Classic,Jazz

Tiktok page flipping and like function

Needs to be connected to a wireless device such as a cell phone
1.This function is only available for use with TIKTOK software, and other software may not be able to use it.
2.This feature may have compatibility issues with some phones, and some phones may not be able to use it.
3.If there are situations where it cannot be used, please ignore this feature.

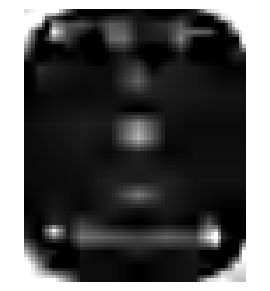

♡	⊙
Clicking on this icon will short video will be liked	Tap the switch to enable the headset to control Tiktok. When turned off,the headset cannot control Tiktok
︽	︾
Clicking on this icon will switch to the previous short video	Clicking on this icon will switch to the next short video

Find my earphones interface

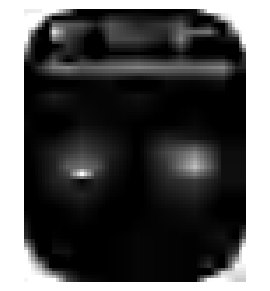

Ⓛ Ⓡ

Click the headphone button on the interface, and the headphone speaker will continue to emit sound. Click the headphone button again, and the headphone speaker wil stop emitting sound Swipe right to exit this interface

Voice assistant interface

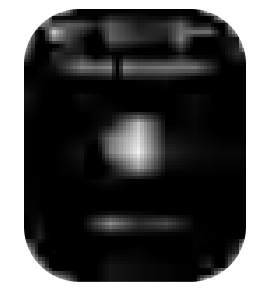

Click to activate the voice assistant

Photography function

This function is only available for taking photos with the built-in camera of the phone. Other shooting software may not be able to use it. This feature may have compatibility issues with some phones, and somephones may not be able to use it.

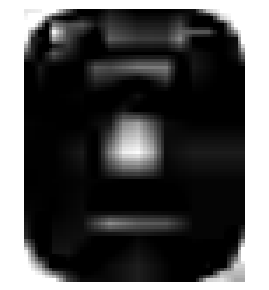

Open the phone camera, click the button, and the phone will start taking photos

Game interface

Bird: Click on the screen to help the bird avoid obstacles

Settings interface

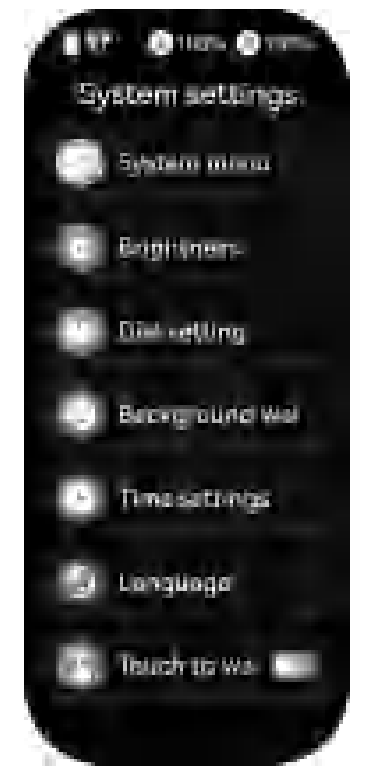

Slide to select the settings to be modified
Touch to wake up:After closing, cannot double-click the screen to wake up

Ststem menu interface

System menu, can restore factory settings, restart, shut down

Brightness setting interface

Slide up and down: Adjust screen brightness
Swipe left: can modify sleep time

Dial setting interface

◀ ▶

Click to switch between different lock screen wallpapers

Background wallpaper interface

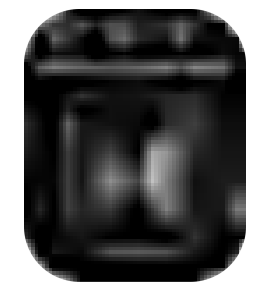

◀ ▶

Click to switch between different background wallpapers, the current screen is the selecte background wallpaper

Time setting interface

Automatic update:
When the charging compartment, headphones, and phone are connected, the time on the phone will be automatically updated to the charging compartment
Manual update: Click the button to enter manual settings

Language switching interface

Click to switch languages from different countries

Definition of multifunctional button functions

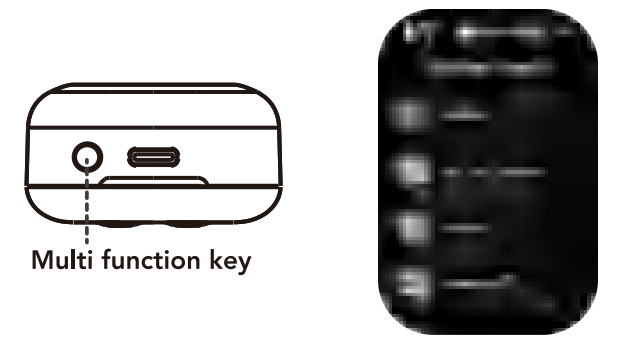

Press once: Turn the screen on/off.
Press three times: Connect the earphones to the charging case (When the earphones are in the charging compartment and the charging compartment cover is opened).
Press and hold for five seconds: Enter the system menu (About, Factory reset, Restart, Power off)
Press and hold for three seconds: Power on when the device is off

Item list



Headphones *1

Charging case *1



Instruction *1



Charging cable *1

Lanyard *1

FCC ID: 2BHJR-MS125

FCC Warning:
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference
(2) this device must accept any interference received, including interference that may cause undesired operation.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.
*RF warning for Portable device:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

US REP	Company Name: MIRAMONT SOLUTIONS LLC Address: 19 GEORGETOWN, IRVINE, CA 92612 United States Contact Name: Wenyi Wang Telephone No: 951 401 3633 Email: wenyiwang@miramontsolutions.com

The above guarantee does not apply to the following situations

1. The validity period of the three guarantees has exceeded;
2. Altering of the warranty cards and product code do not match the product itself;
3. Failure of damages caused by misuse, abuse or improper transportation, use, maintenance or storage;
4. Failure of damages caused by force majeure (such as earthquake, war, fire, etc.) or accident;
5. Zippers and tower buckles are damaged due to excessive force;
6. Off-line or tear caused by overloading;
7. Any damage caused by sharp objects;
8. Products with signs of burn damage or water logging;
9. Damage caused by unauthorized dismantling and modification;
10. Aging, discoloration, wear, cracking and other losses that occur during normal use of the product.
11. If the product's original logo or label is changed or damaged, this warranty will be invalid.

The completeness and appearance of the product and accompanying materials are not covered by the warranty. You should inspect the product on site when receiving it and raise objections to any discrepancies.

MINISO Product service policy

If you encounter a problem, please contact our customer service to solve it.

Customer Service Email: customercare@yhemi.net

FC RoHS CE

Warranty statement

MINISO product warranty card

Product number			SN number	
User info	name		Purchase date	
	telephone			
	address			
	Invoice number			
Sales unit information	name	(stamp)		
	address			
	telephone			

Warranty Policy

Disclaimer:
This manual does not come with any form of warranty,position expression or other implication. The products, specifications and information mentioned inthis manual are for reference only, and the content will be updated on the website at any time without prior notice.
Warranty statement:
The following guarantee is made for the products attached to this document: If the product is damaged due to quality defects under normal use within twelve(12) months from the date of your purchase (the "Warranty Period"), and if it can be repaired, it will be repaired free of charge; If the manufacturer confirms that it cannot be repaired, it will be replaced free of charge; the repaired product will continue to be covered by the warranty for the remaining warranty period (a minimum of not less than 30 days). The purchase date shall be based on the sales invoice date; if the purchase date cannot be determined, the warranty period shall be calculated as thirteen(13) months from the product production date.
If you want to apply for warranty, please call the product service hotline first and follow our instructions. When applying for a warranty, you are required to provide a valid sales invoice that is accurate, complete and clearly filled out.

Guidelines for safe and effective use

Note: Please read this information first before using your wireless headset.
If the user makes modifications or modifications to this wireless headset without permission, the user will lose the right to continue to enjoy the services included in the device
①Electromagnetic interference:
Electronic devices: To avoid the effects of electromagnetic interference or configuration incompatibility, please turn off your wireless device in accordance with regulations in places with clear instructions.
Civil Aviation: After boarding the plane, please turn off your wireless headset according to the flight attendant's instructions. It is strictly prohibited to use wireless headsets during flight to avoid interference with the aircraft communication system.
②Safety matters:
Placement: It is recommended that when you are not using the wireless headset, place it in a place where it will not be squeezed. Squeezing may cause damage to the product or personal injury.
Children:Do not let children play with wireless headsets.Some of the small parts are detachable and may be swallowed and cause danger.

Important safety tips

- Except for the operation methods specifically marked in the manual, please do not attempt to disassemble or replace any parts in the product.
- This product contains a built-in rechargeable battery, It is prohibited to hit, squeeze, Puncture, or short-circuit the battery. If there are abnormal phenomena such as excessive temperature, deformation, bulging,or leajage, please stop using it. Do not expose the battery to open flames or sunlight. Do not use the battery after it has been immersed in water or in high-temperature or high-pressure environments such as the sun,heaters, or stoves. After using the earphones, do not place the earphones in a humid, dusty, oily smoke, steam, direct sunlight or other high-temperature and high-pressure environment to avoid damage to the earphones and battery. The battery can be charged and discharged for a limited number of times and will eventually age. If the battery is used abnormally, it can be replaced with a new one. However, do not replace the battery by yourself. If the battery is not replaced properly, there is a risk of explosion. It can only be replaced by an after-sales service provider of the same or equivalent type. battery usage.
- After the product is used and scrapped, do not throw the product into a fire. The waste should be disposed of in strict accordance with the garbage classification. Please use this product reasonably and correctly to avoid causing certain injuries and environmental damage.
- During the use of headphones, due to long distances, obstacles in the middle, or a series of interferences such as other radio signals, wireless signals, WIFI signals, etc., the headphones are used when listening to music, watching videos, playing games, etc., there will be occasional lags, voice out-of-sync or disconnection. If this happens, please reconnect the headphones or stay away from interference.
- When charging, please use a charging device with an output voltage of DC 5V/1A. You must choose a charging device from a regular manufacturer that has obtained CCC safety certification. Do not use a fast-charging charger to avoid excessive battery load, which may cause The battery is damaged. Do not charge continuously for longer than the specified charging time. Do not use it while charging to avoid damage.

Enjoy the company of MINISO

Copyright@2026 MINISO Group affiliated companies and its licensors. All rights reserved

Creating sound to live with

反面