
产品说明书 尺寸:50x75mm 材质:80g书写纸 双面印刷 风琴折

htc
无线蓝牙耳机32

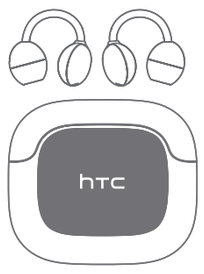

快速入门指南
使用前请阅读使用说明书
HTC NE32

产品规格

型号:HTC NE32

蓝牙
范围:≈10m
版本:6.0

喇叭
直径:10mm
阻抗:16Ω

耳机功率
输入:5V⎓40mA
电池容量:40mAh
使用时间:≈5小时
充电时间:≈1.5小时

充电仓功率
输入:5V⎓500mA
输出:5V⎓80mA
电池容量:500mAh
充电时间:≈2小时
充电仓充满电时,能给耳机充电约3次


物品清单



充电仓




2 耳机




快速入门指南　USB-C充电线

部件

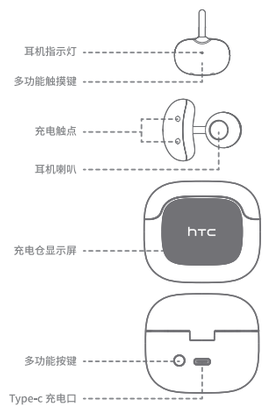

取出耳机并配对

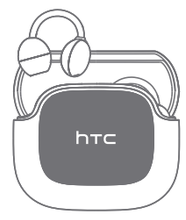

如果您是第一次使用耳机,请将两个耳机从充电仓中取出,其中一个耳机的LED灯将会闪烁白灯,表示它们处于配对模式。
注:
·如果耳机未与任何设备配对,打开后会自动进入配对模式。配对成功后,您会听到两声滴滴声。
·如果耳机之前已配对,打开后会自动重新连接。连接时您会听到嘟嘟声。

如何佩戴耳机










开机和关机

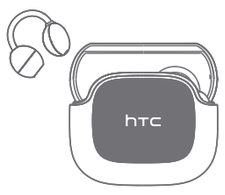

开机
自动开机:将耳机从充电仓中取出,耳机开机。
手动开机:长按3秒,耳机开机。

关机
自动关机:耳机放入充电仓中,耳机关机。
手动关机:长按5秒,耳机关机。

注:当耳机开机后,3分钟未与蓝牙设备配对,便会自动关机;当配对的蓝牙设备超出信号有效连接距离,且未重新连接时,3分钟后,耳机自动关机。

连接到蓝牙设备



在您的设备上,打开蓝牙并选择连接到"HTC NE32"。

基本操作




功能操作
·暂停/播放:轻触任一耳机一次
·音量加:轻触右耳机二次
·音量减:轻触左耳机二次
·上一曲:轻触左耳机三次
·下一曲:轻触右耳机三次
·接听/挂断电话:轻触任一耳机一次
·通话拒接:按住任一耳机2秒
·启动语音助手:按住左耳机2秒
注:单耳使用时,按住已开机的耳机2秒,均可激活语音助手
·游戏模式与音乐模式切换:按住右耳机2秒切换
注:单耳使用时,无法切换游戏模式和音乐模式
注:出厂设置默认为音乐模式
注:通知声音较大的是游戏模式

指示灯显示

耳机指示灯	状态
白灯闪烁	两个耳机:开机 单耳机:未配对
灭灯	配对成功或充满电

如何清除蓝牙配对历史记录

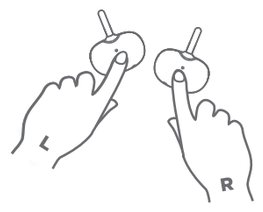

双耳从充电仓取出后会自动开机配对,耳机未与蓝牙设备连接或耳机从蓝牙设备取消连接状态下,分别对左耳机和右耳机连续五击多功能键,提示音"嘟"四声后,耳机自动关机后将双耳机放回充电仓,再将双耳机取出,双耳机会自动配对,完成后即可连接蓝牙设备使用。
适用于以下情况:
A:双耳无法配对时,单边音时,双配对名时。
B:使用单耳机分别连接不同蓝牙设备时。
C:清除连接的所有蓝牙设备时。

特别提示:
当单边耳机出现无声,或者无法配对时,
请按以上恢复重置操作。

充电仓基本操作



打开显示屏
触控亮屏:屏幕关闭时,轻触显示区域二次
按键亮屏:单击多功能按键

关闭显示屏
自动关机:点亮显示屏,30秒无操作后,显示屏将自动熄灭。
手动关机:点击充电仓多功能按键一次,充电仓显示屏熄灭。

注:首次使用需要初始激活。
执行以下任一操作:
-通过USB Type-C接口给充电仓充电激活。
-按住充电仓多功能按键八秒钟。

多功能按键功能



单击:打开/关闭屏幕。
三击:充电仓与耳机进行配对。
按住4秒:进入系统菜单:"关机"和"重启"、"恢复出厂"。
按住5秒:关机状态下,开机。
按住8秒:开机状态下,恢复出厂设置。

图标介绍

	状态
红色	耳机在充电盒中,未连接到耳机
白色	充电仓已连接到耳机,但耳机未连接到手机
	状态
白色	充电仓已连接到耳机,且耳机已连接到手机
LR	状态
白色	耳机充电中
灰色	耳机使用中

充电仓显示屏功能介绍

锁屏界面



滑动解锁屏幕
解锁屏幕后,向左或向右滑动即可浏览这些功能

菜单



点击进入对应功能界面

音乐播放



音量减　上一曲　播放/暂停　下一曲　音量加

抖音翻页和点赞功能


确保您的耳机已连接到手机抖音软件已打开。
对于iOS设备,必须在"设置">中
打开AssistiveTouch辅助功能>触控>辅助触控。



切换到上一个短视频　点赞当前页面的短视频　切换到下一个短视频

此功能仅适用于抖音软件使用,可能不兼容所有手机型号。

均衡器

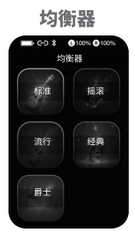

点击切换对应均衡器预设

寻找耳机



根据您要查找的耳机,点击 L 或 R。
找到耳机后,再次点击以停止蜂鸣声。

相机功能

需要连接到蓝牙设备使用,如手机



打开相机软件,单击按钮,设备开始拍照
此功能仅适用于手机自带相机使用,可能不兼容所有手机型号。

语音助手



点击启动语音助手

游戏



小鸟:点击屏幕,让鸟穿过障碍物

亮度调节



调整亮度:上下滑动调节亮度
亮屏时间:界面左滑切换亮屏时间,可选择亮屏的时间

翻译



同步显示APP翻译内容

设置



点击进入对应功能设置

表盘设置



可在主界面长按3秒切换其他表盘壁纸

背景壁纸



可切换其他背景

时间设置



可设置当前的时间和日期,时间格式

语言设置



可切换不同国家/地区的语言,
恢复出厂开机后会跳转语言选择

触摸唤醒



打开时可以触屏点亮屏幕
关闭时无法触屏点亮屏幕
默认为打开

产品中有害物质名称及含量

产品中有害物质的名称及含量

部件名称	有害物质					
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬(Cr(VI))	多溴联苯(PBB)	多溴二苯醚(PBDE)
印刷电路组件	○	○	○	○	○	○
外壳等小结构件	○	○	○	○	○	○

本表格依据SJ/T 11364的规定编制。
○:表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572 规定的限量要求以下。
×:表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572 规定的限量要求。
表单标记"X"的部件,皆因全球技术发展水平限制而无法实现有害物质的替代。

印刷电路板组件:包括印刷电路板及其零部件,
电子元器件等,根据产品型号不同,
您所购买的产品可能不会含有以上所有部件

重要安全说明

在使用本产品之前,请仔细阅读本说明书中的所有安全说明。

常规安全说明
·小心使用本产品,并将其存放在没有极端温度、高温高压和潮湿的清洁环境中。确保产品存放在不易弯曲或挤压的地方。
·维修和更换只能由授权的售后服务人员进行。
请勿自行拆卸或更换产品的任何部件,以防受伤或损坏设备。
对产品的任何未经授权的修改都将使保修无效。
·仅在允许蓝牙传输的环境中使用本产品。

个人安全说明
·如果产品有明显缺陷或出现膨胀或温度过高等异常,请勿使用。
·执行需要全神贯注的高风险任务时,请勿使用本产品。
·为了保护您的听力,请勿长时间高音量收听
·请将产品及其包装放在儿童和宠物接触不到的地方,以防发生吞咽和窒息等事故


电池安全说明
该产品内置可充电电池,请阅读以下说明,确保安全使用和处置。
·请勿将产品长时间暴露在热源中,如明火或阳光直射。
·仅将产品存放在环境温度为 0°C 至 35°C (32°F 至 95°F)的环境中。
·请勿在易产生灰尘、烟雾、高温、高压或高湿度的环境中使用或存放本产品。
·保持产品干燥,远离液体或湿气。
·只能使用经 FCC 或 CCC 认证、输出电压为DC 5V/1A的充电器。
·充电时不要使用产品。
·产品充电时间不要超过 8 小时。
·按照当地的废物管理规定负责任地处理产品。

售后服务电话:4009933981

法律声明
商标和许可:
HTC和HTC标志为HTC公司的商标,
授权给深圳市卜兰沃德科技有限公司使用。
2025版权©归深圳市卜兰沃德科技有限公司。
本文件仅供参考,不构成任何形式的保证,本公司保留所有权利。

htc

htc
Wireless Earphones 32

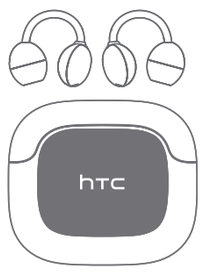

Quick Start Guide
HTC NE32

Product Specifications

Model: HTC NE32


Bluetooth
Range: ≈ 10 m
Version: 6.0

Speaker
Diameter: 10 mm
Impedance: 16 Ω

Earphone power
Input: 5 V⎓40 mA
Battery capacity: 40 mAh
Battery life: ≈ 5 hrs
Charging time: ≈ 1.5 hrs

Charging case power
Input: 5 V⎓500 mA
Output: 5 V⎓80 mA
Battery capacity: 500 mAh
Charging time: ≈ 2 hrs
Earphone recharges: 3 charges (when case is fully charged)

What's in the box

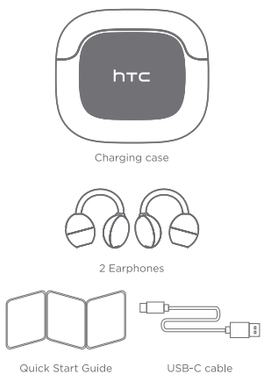


Charging case


2 Earphones

Quick Start Guide　USB-C cable

Components

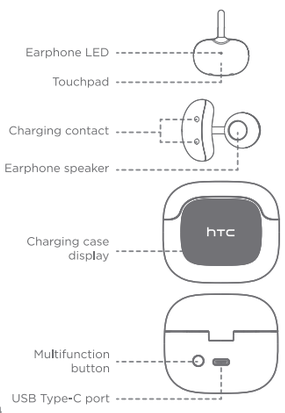


Take out and pair the earphones

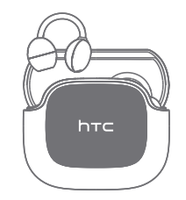


If you're using the earphones for the first time, remove both from the charging case. The LED on one earphone will blink white, indicating that they are in pairing mode.


Note:
• If the earphones have not been paired with each other, they will automatically enter pairing mode when turned on. You'll hear two beeps when pairing is successful.
• If the earphones have been paired before, they will automatically reconnect to each other when turned on. You'll hear a beep when they connect.

How to put on the earphones

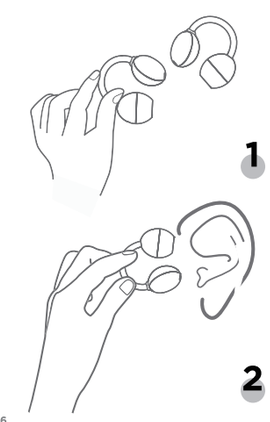

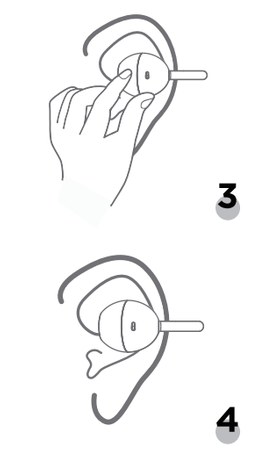

Power on and off

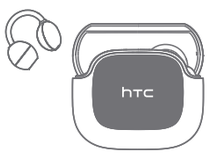

Power on
Taking the earphones out of the charging case will automatically turn them on.
To manually turn on each earphone, press and hold the touchpad for three seconds.

Power off
Placing the earphones in the charging case will automatically turn them off.
To manually turn off each earphone, press and hold the touchpad for five seconds.

Note: If the earphones are not paired with a Bluetooth device within three minutes after powering on, they will automatically power off. They will also power off after three minutes if the paired Bluetooth device moves out of the effective connection range and has not reconnected.

Connect to Bluetooth device

On your device, turn on Bluetooth and choose to connect to "HTC NE32".

Basic operations

Key functions
• Play/Pause: Tap either earphone once.
• Volume up: Tap the right earphone twice.
• Volume down: Tap the left earphone twice.
• Play previous track: Tap the left earphone three times.
• Play next track: Tap the right earphone three times.
• Answer/End call: Tap either earphone once.
• Reject call: Press and hold either earphone for two seconds.
• Activate voice assistant: Press and hold the left earphone for two seconds.
Note: When using a single earphone only, press and hold the active earphone for two seconds.
• Switch between Game and Music modes: Music mode is the default mode. Press and hold the right earphone for two seconds to switch between modes. (The louder notification sound indicates Game mode.)
Note: Mode switching is disabled when you're using a single earphone only.

Indicator LEDs

Earphone LED	Status
Blinking white	Both earphones: Powered on Single earphone: Unpaired
Off	Paired or fully charged

How to reset the earphones

If the earphones fail to pair or reconnect to each other, reset them by tapping both earphones five times simultaneously. Note: Resetting the earphones will clear the Bluetooth pairing history.

Case display: Basic operations

Turn on display
Tap the display twice or press the multifunction button once.

Turn off display
Press the multifunction button once to turn off the display.
The display automatically turns off after 30 seconds of inactivity.

Note: Initial activation required for first-time use.
Do any of the following:
- Charge the charging case via the USB Type-C port.
- Press and hold the multifunction button for eight seconds.

Multifunction button operations

Press once: Turn the screen on/off.
Press three times: Link earphones to charging case.
Press and hold for four seconds to: Open the system menu ("Restore Factory Settings" and "Screen Off" or "Restart").
Press and hold for five seconds to: Power on the screen.
Press and hold for eight seconds to: Restore to factory settings.

Status Icons Guide

	Status
Solid red	Earphones in case, not connected to phone
Solid white	Case connected to earphones, but earphones offline
	Status
Solid white	Case connected to earphones, earphones paired to phone
LR	Status
Solid white	Earphones charging
Solid gray	Earphones in use

Case display: Feature overview

Lock screen

Swipe to unlock the screen.

Menu (Gear style)

Tap an item to access its options.

Music

Volume down　Previous Track　Play/Pause　Next Track　Volume up

TikTok

Make sure your earphones are connected to your phone and the TikTok app is open.
For iOS devices, AssistiveTouch must be turned on in Settings > Accessibility > Touch > AssistiveTouch.

Switch to the previous video　Like the current video　Switch to the next video

This feature only works with the TikTok app and may not be compatible with all phone models.

Equalizer

Switch between the preset equalizer settings

Find My Earbuds

Tap L or R depending on which earbuds you want to find.
Tap again when you find the earbuds to stop the beep.

Camera

Make sure your earphones are connected to your phone.

Tap to open the phone's camera app and then press the multifunction button to take photos.
This feature only works with the pre-installed camera app and may not be supported on all phone models.

Activate Voice Assistant

Tap to activate your phone's voice assistant.

Game

Birds: Tap the screen to navigate the bird through the obstacles.

Brightness

Brightness Control: Swipe up or down.
Screen timeout: Swipe left to select a time for the screen to turn off when left idle.

Translation

Displays translated content synchronized with the connected app.

Settings

Tap an item to access its options.

Wallpaper

On the Home screen, press and hold the screen for three second to change the wallpaper. You can also change it in Settings.

Background WallPaper

Toggle between background options.

Time settings

Set current time/date and format preferences.

Language

Switch between different country/region languages.
Requires re-selection after factory reset.

Tap to wake

Turn on or off to allow tapping the display to turn it on.
Turn off to prevent display from accidentally turning on.

Important Safety Instructions

Carefully read all the safety instructions in this document before using the product.

General safety instructions
• Use the product with care and store it in a clean environment that is free from extreme temperature, pressure, and humidity. Make sure that the product is stored in a location where it cannot be bent or squeezed.
• Repairs and replacements should only be performed by authorized after-sales service staff. Do not attempt to disassemble or replace any part of the product yourself to prevent injuries or damage to the device. Any unauthorized modification to the product voids the warranty.
• Only use the product in environments where Bluetooth transmission is permitted.

Personal safety instructions
• Do not use the product if it is obviously defective or exhibits abnormalities such as bulging or excessive heating.
• Do not use the product when performing high-risk tasks that require your full attention.
• For your hearing protection, do not listen at high volume for long periods.
• Keep the product and its packaging out of reach of children and pets to prevent accidents such as swallowing and choking.

Battery safety instructions
The product has a built-in rechargeable battery. Read the following instructions to ensure safe use and disposal.
• Keep the product away from prolonged exposure to heat sources such as open fires or direct sunlight.
• Only store the product in environments with ambient temperatures of 0°C to 35°C (32°F to 95°F).
• Do not use or store the product in dust-prone, smoke-prone, high-temperature, high-pressure, or highly humid environments.
• Keep the product dry and away from liquids or moisture.
• Only use an FCC or CCC-certified charger with an output voltage of 5 V/1 A DC.
• Do not use the product while charging.
• Do not leave the product charging for longer than eight hours.
• Dispose of the product responsibly according to your local waste management guidelines.

FCC ID: 2BHJR-NE32

FCC Caution:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

*RF warning for Portable device:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

US REP
Company name: MIRAMONT SOLUTIONS LLC
Company address: 34218 HOURGLASS ST, TEMECULA, CA 92592 United States
FRN: 0036313369
Agent name: Wenyi Wang
Title: CEO
Email: wenyiwang@miramontsolutions.com
Phone: 951 401 3633

Customer Service Email: service@yhemi.net

Legal notice
Trademarks and permissions:
HTC and the HTC logo are trademarks of HTC Corporation and used under license by Shenzhen Brands World Technology Co., Ltd.
Copyright © 2025 Shenzhen Brands World Technology Co., Ltd.
All rights reserved.
THIS DOCUMENT IS FOR INFORMATION PURPOSES ONLY AND DOES NOT CONSTITUTE ANY KIND OF WARRANTY.

htc