产品说明书 尺寸:50x75mm 材质:80g书写纸 双面印刷 风琴折

htc
无线蓝牙耳机



快速入门指南
使用前请阅读使用说明书
HTC NE48

产品规格

型号:NE48

蓝牙
范围:≈10m
版本:6.0

喇叭
直径:13mm
阻抗:32Ω

耳机功率
输入:5V⎓25mA
电池容量:25mAh
使用时间:≈3.5小时
充电时间:≈1.5小时

充电仓功率
输入:5V⎓400mA
输出:5V⎓50mA
电池容量:400mAh
充电时间:≈1.5小时
充电仓充满电时,能给耳机充电约4次

物品清单




2 耳机




充电仓

快速入门指南　USB-C充电线　挂绳

部件

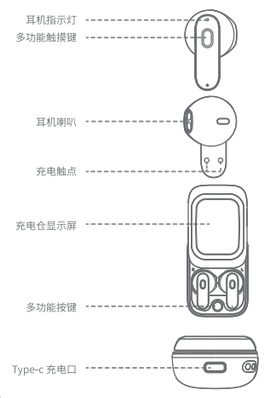


取出耳机并配对

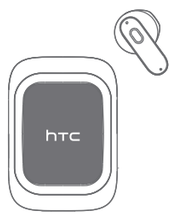

如果您是第一次使用耳机,请将两个耳机从充电仓中取出,其中一个耳机的LED灯将会闪烁青灯,表示它们处于配对模式。
注:
·如果耳机未与任何设备配对,打开后会自动进入配对模式。配对成功后,您会听到提示声。
·如果耳机之前已配对,打开后会自动重新连接。连接时您会听到提示声。

如何佩戴耳机

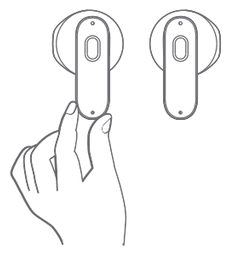

1



2



3



4

开机和关机



开机
自动开机:耳机在充电仓中,滑动打开充电仓屏幕盖子,耳机开机。
手动开机:长按3秒,耳机开机。

关机
自动关机:耳机放入充电仓中,滑动关闭充电仓屏幕盖子,耳机关机。
手动关机:长按5秒,耳机关机。

注:当耳机开机后,3分钟未与蓝牙设备配对,便会自动关机;当配对的蓝牙设备超出信号有效连接距离,且未重新连接时,3分钟后,耳机自动关机。

连接到蓝牙设备



在您的设备上,打开蓝牙
并选择连接到"HTC NE48"。

基本操作




功能操作
・暂停/播放:轻触任一耳机一次
・音量加:轻触右耳机二次
・音量减:轻触左耳机二次
・上一曲:轻触左耳机三次
・下一曲:轻触右耳机三次
・接听/挂断电话:轻触任一耳机一次
・通话拒接:按住任一耳机2秒
・启动语音助手:按住左耳机2秒
注:单耳使用时,按住已开机的耳机2秒,均可激活语音助手
・游戏模式与音乐模式切换:按住右耳机2秒切换
注:单耳使用时,无法切换游戏模式和音乐模式
注:出厂设置默认为音乐模式
注:通知声音较大的是游戏模式

指示灯显示

耳机指示灯	状态
青灯闪烁	两个耳机:开机 单耳机:未配对
灭灯	配对成功或充满电

如何清除蓝牙配对历史记录

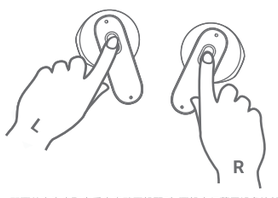

双耳从充电仓取出后会自动开机配对,耳机未与蓝牙设备连接或耳机从蓝牙设备取消连接状态下,分别对左耳机和右耳机连续五击多功能键,提示音"嘟"四声后,耳机自动关机后将双耳机放回充电仓,再将双耳机取出,双耳机会自动配对,完成后即可连接蓝牙设备使用。
适用于以下情况:
A:双耳无法配对时,单边音时,双配对名时。
B:使用单耳机分别连接不同蓝牙设备时。
C:清除连接的所有蓝牙设备时。

特别提示:
当单边耳机出现无声,或者无法配对时,
请按以上恢复重置操作。

充电仓基本操作




打开显示屏
滑盖亮屏:滑动屏幕盖子,屏幕自动激活
触控亮屏:屏幕关闭时,双击显示区域(须打开触控唤醒功能)
按键亮屏:点击多功能按键

关闭显示屏
自动关机:点亮显示屏,30秒无操作后,显示屏将自动熄灭。
手动关机:点击充电仓多功能按键一次,充电仓显示屏熄灭。

注:首次使用需要初始激活。
执行以下任一操作:
-通过USB Type-C接口给充电仓充电激活。
-按住充电仓多功能按键五秒钟。

多功能按键功能

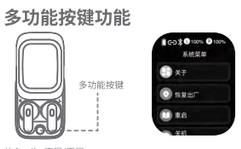

单击一次:亮屏/灭屏
三击:充电仓与耳机进行配对。
长按1秒:关于,重启,关机,恢复出厂设置
长按10秒:强制重启,关机状态长按5秒开机

图标介绍

	状态
红色	耳机未连接到手机和充电仓
白色	充电仓已连接到耳机,耳机未连接到手机
绿色	充电仓已连接到耳机,且耳机已连接到手机
L R	状态
白色	耳机在盒中
绿色	耳机充电中(在盒中)
	状态
带绿色闪电	充电仓充电中

充电仓显示屏功能介绍

主界面



进入语音助手界面　进入抖音界面　进入拍照界面　进入音乐界面

向右滑动:
进入功能菜单界面
向下滑动:
进入快速访问菜单
向左滑动:
进入音乐界面

功能菜单



点击进入对应功能界面

快速访问菜单



点击进入对应功能界面

音乐播放



上一曲　播放/暂停　下一曲　音量控制

AI翻译



同步显示APP翻译内容

均衡器



切换均衡器预设

自定义功能设置



点击以设置需要的功能模式

空间音效



音乐模式　游戏模式

寻找耳机



耳机和充电仓连接后,根据要寻找的耳机,
点击 L R ,寻找状态耳机会发出滴滴报警声

语音助手



点击
进行语音控制(需连耳机)

计算机



点击以进行计算

游戏



点击小鸟开始游戏

系统设置



向上滚动并轻点某一选项,以访问其选项

系统菜单



点击进入关于,恢复出厂,重启,关机
对应功能设置。

亮度调节



上下滑动提高或降低屏幕亮度
左滑设置休眠时间。

表盘



换表盘,点击表盘图片以应用它

背景壁纸



换壁纸,点击图片以应用它

时间设定



可设置当前的时间和日期,时间格式

语言



切换不同国家/地区的语言

触屏唤醒



点击开关按钮以打开或关闭(可关闭防止意外亮起)

音量



上下滑动提高或降低音量

抖音翻页和点赞功能

确保您的耳机已连接到手机抖音软件已打开。
对于iOS设备,必须在"设置">中
打开辅助功能>触摸>辅助触摸。



切换到
上一个短视频　点赞
当前页面的短视频　切换到
下一个短视频

此功能仅适用于抖音软件使用,可能不兼容所有手机型号。

相机功能

需要连接到蓝牙设备使用,如手机



打开相机软件,单击按钮,设备开始拍照
此功能仅适用于手机自带相机使用,可能不兼容所有手机型号。

产品中有害物质名称及含量

产品中有害物质的名称及含量

部件名称	有害物质					
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬(Cr(VI))	多溴联苯(PBB)	多溴二苯醚(PBDE)
印刷电路组件	○	○	○	○	○	○
外壳等小结构件	○	○	○	○	○	○

本表格依据SJ/T 11364的规定编制。
○:表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572 规定的限量要求以下。
:表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572 规定的限量要求。
表单标记"X"的部件,皆因全球技术发展水平限制而无法实现有害物质的替代。

印刷电路板组件:包括印刷电路板及其零部件,
电子元器件等,根据产品型号不同,
您所购买的产品可能不会含有以上所有部件。

重要安全说明
在使用本产品之前,请仔细阅读本说明书中的所有安全说明。

常规安全说明
・小心使用本产品,并将其存放在没有极端温度、高温高压和潮湿的清洁环境中,确保产品存放在不易弯曲或挤压的地方。
・维修和更换只能由授权的售后服务人员进行。
请勿自行拆卸或更换产品的任何部件,以防受伤或损坏设备。
对产品的任何未经授权的修改都将使保修无效。
・仅在允许蓝牙传输的环境中使用本产品。


个人安全说明
・如果产品有明显缺陷或出现膨胀或温度过高等异常,请勿使用。
・执行需要全神贯注的高风险任务时,请勿使用本产品。
・为了保护您的听力,请勿长时间高音量收听。
・请将产品及其包装放在儿童和宠物接触不到的地方,
以防发生吞咽和窒息等事故。

电池安全说明
该产品内置可充电电池,请阅读以下说明,确保安全使用和处置。
・请勿将产品长时间暴露在热源中,如明火或阳光直射。
・仅将产品存放在环境温度为 0°C 至 35°C(32°F 至 95°F)的环境中。
・请勿在易产生灰尘、烟雾、高温、高压或高湿度的环境中使用或存放本产品。
・保持产品干燥,远离液体或湿气。
・只能使用经 FCC 或 CCC 认证、输出电压为DC 5V/1A的充电器。
・充电时不要使用产品。
・产品充电时间不要超过8小时。
・按照当地的废物管理规定负责任地处理产品。

售后服务电话:4009933981

法律声明
商标和许可:
HTC和HTC标志为HTC公司的商标,
授权给深圳市卜兰沃德科技有限公司使用。
2025版权©归深圳市卜兰沃德科技有限公司。
本文件仅供参考,不构成任何形式的保证,本公司保留所有权利。

htc
Wireless Earphones

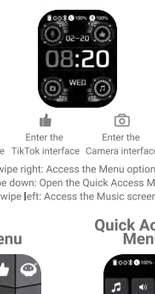

Quick Start Guide
HTC NE48

Product Specifications

Model:NE48

Bluetooth
Range: ≈ 10 m
Version: 6.0

Speaker
Diameter: 13 mm
Impedance: 32 Ω

Earphone power
Input: 5 V⎓25 mA
Battery capacity: 25 mAh
Battery life: ≈ 3.5 hrs
Charging time: ≈ 1.5 hrs

Charging case power
Input: 5 V⎓400 mA
Output: 5 V⎓50 mA
Battery capacity: 400 mAh
Charging time: ≈ 1.5 hrs
Earphone recharges: 4 charges (when case is fully charged)

What's in the box

2 Earphones

Charging case

Quick Start Guide　USB-C cable　Lanyard

Components

Take out and pair the earphones

If you're using the earphones for the first time, remove both from the charging case. The LED on one earphone will blink cyan, indicating that they are in pairing mode.
Note:
・If the earphones have not been paired with each other, they will automatically enter pairing mode when turned on. You'll hear two beeps when pairing is successful.
・If the earphones have been paired before, they will automatically reconnect to each other when turned on. You'll hear a beep when they connect.

How to put on the earphones

Power on and off

Power on
Sliding the charging case's screen cover will automatically turn on the earphones
To manually turn on each earphone, press and hold the touchpad for three seconds.
Power off
Placing the earphones in the charging case and closing the screen cover will automatically turn them off.
To manually turn off each earphone, press and hold the touchpad for five seconds.

Note: If the earphones are not paired with a Bluetooth device within three minutes after powering on, they will automatically power off. They will also power off after three minutes if the paired Bluetooth device moves out of the effective connection range and has not reconnected.

Connect to Bluetooth device

On your device, turn on Bluetooth and choose to connect to "HTC NE48".

Basic operations

Key functions
・Play/Pause: Tap either earphone once.
・Volume up: Tap the right earphone twice.
・Volume down: Tap the left earphone twice.
・Play previous track: Tap the left earphone three times.
・Play next track: Tap the right earphone three times.
・Answer/End call: Tap either earphone once.
・Reject call: Press and hold either earphone for two seconds.
・Activate voice assistant: Press and hold the left earphone for two seconds.
Note: When using a single earphone only, press and hold the active earphone for two seconds.
・Switch between Game and Music modes: Music mode is the default mode. Press and hold the right earphone for two seconds to switch between modes. (The louder notification sound indicates Game mode.)
Note: Mode switching is disabled when you're using a single earphone only.

Indicator LEDs

Earphone LED	Status
Blinking cyan	Both earphones: Powered on Single earphone: Unpaired
Off	Paired or fully charged

How to reset the earphones

If the earphones fail to pair or reconnect to each other, reset them by tapping both earphones five times simultaneously.
Note: Resetting the earphones will clear the Bluetooth pairing history.

Case display: Basic operations

Turn on display
・Slide the screen cover
・Tap the display twice (Touch to wake up must be on).
・Press the multifunction button once.
Turn off display
Press the multifunction button once to turn off the display.
The display automatically turns off after 30 seconds of inactivity.

Note: Initial activation required for first-time use.
Do any of the following:
・Charge the charging case via the USB Type-C port.
・Press and hold the multifunction button for five seconds.

Multifunction button operations

Multifunction button

Press once: Turn the screen on/off.
Press three times: Link earphones to charging case.
Press and hold for five seconds: Power on case (when off)
Press and hold for one seconds: Open the system menu (About, Factory reset, Reset, and Power off).
Press and hold for ten seconds: Restart case (when on)

Status icon guide

	Status
Solid red	Case not connected to earphones, earphones not connected to phon
Solid white	Case connected to earphones, earphones not connected to phone.
Solid green	Case connected to earphones, earphones paired to phone
L100% R100%	Status
Solid white	Earphone in case
Solid green	Earphone charging (in case)
	Status
Green lightning icon	Charging case is being charged

Case display: Feature overview

Lock screen

Enter the Voice Assistant interface　Enter the TikTok interface　Enter the Camera interface　Enter the Music interface

Swipe right: Access the Menu options.
Swipe down: Open the Quick Access Menu.
Swipe left: Access the Music screen.

Menu

Quick Access Menu

Tap an item to access its options.

Music

Previous track　Play/Pause　Next track　Volume control

AI Translation

Displays translated content synchronized with the connected app.

Equalizer

Tap a preset equalizer to use it.

Custom function settings

Click to set the desired function mode.

Spatial sound

Music mode　Game mode

Find My Earbuds

Tap L or R depending on which earphone you want to find.
Tap again when you find the earphone to stop the beep.

Voice Assistant

Tap to activate your phone's voice assistant.

Computer

Click to calculate.

Game

Tap "Birds" to start the game.

Settings

Scroll up and tap an item to access its options.

System Menu

Tap to enter About,Restore Factory Setti, Restart, power Off

Brightness

Swipe up or down to increase or decrease the screen brightness.
Swipe left to set the sleep time

Dial setting

Choose the wallpaper and the type of clock to use for the lock screen.

Background wallpaper

Choose the image to use for the menu.

Time settings

Tap the date or time to set it.
Choose also the time format you want to use.

Language

Tap the language to use for the case display.

Touch to wake up

Turn on or off to allow tapping the display to turn it on.
Turn off to prevent the display from accidentally turning on.

Volume

Swipe up or down to increase or decrease the volume.

TikTok

Make sure your earphones are connected to your phone and the TikTok app is open.
For iOS devices, AssistiveTouch must be turned on in Settings > Accessibility > Touch > AssistiveTouch.

Go back to the previous video　Like the current video　Go to the next video

This feature only works with the TikTok app and may not be compatible with all phone models.

Camera

Make sure your earphones are connected to your phone.

Tap to open the phone's camera app and then press the multifunction button to take photos.
This feature only works with the pre-installed camera app and may not be supported on all phone models.

Important Safety Instructions

Carefully read all the safety instructions in this document before using the product.

General safety instructions
・Use the product with care and store it in a clean environment that is free from extreme temperature, pressure, and humidity. Make sure that the product is stored in a location where it cannot be bent or squeezed.
・Repairs and replacements should only be performed by authorized after-sales service staff. Do not attempt to disassemble or replace any part of the product yourself to prevent injuries or damage to the device. Any unauthorized modification to the product voids the warranty.
・Only use the product in environments where Bluetooth transmission is permitted.

Personal safety instructions
・Do not use the product if it is obviously defective or exhibits abnormalities such as bulging or excessive heating.
・Do not use the product when performing high-risk tasks that require your full attention.
・For your hearing protection, do not listen at high volume for long periods.
・Keep the product and its packaging out of reach of children and pets to prevent accidents such as swallowing and choking.

Battery safety instructions
The product has a built-in rechargeable battery. Read the following instructions to ensure safe use and disposal.
・Keep the product away from prolonged exposure to heat sources such as open fires or direct sunlight.
・Only store the product in environments with ambient temperatures of 0°C to 35°C (32°F to 95°F).
・Do not use or store the product in dust-prone, smoke-prone, high-temperature, high-pressure, or highly humid environments.
・Keep the product dry and away from liquids or moisture.
・Only use an FCC or CCC-certified charger with an output voltage of 5 V/1 A DC.
・Do not use the product while charging.
・Do not leave the product charging for longer than eight hours.
・Dispose of the product responsibly according to your local waste management guidelines.

FCC ID: 2BHJR-NE48

FCC Caution:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
・Reorient or relocate the receiving antenna.
・Increase the separation between the equipment and receiver.
・Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

・Consult the dealer or an experienced radio/TV technician for help.

*RF warning for Portable device:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

US REP
Company name: MIRAMONT SOLUTIONS LLC
Company address: 19 GEORGETOWN, IRVINE, CA 92612 United States
FRN: 0036313369
Agent name: Wenyi Wang
Title: CEO
Email: wenyiwang@miramontsolutions.com
Phone: 951 401 3633

Customer Service Email: service@yhemi.net

Legal notice
Trademarks and permissions:
HTC and the HTC logo are trademarks of HTC Corporation and used under license by Shenzhen Brands World Technology Co., Ltd.
Copyright © 2025 Shenzhen Brands World Technology Co., Ltd.
All rights reserved.
THIS DOCUMENT IS FOR INFORMATION PURPOSES ONLY AND DOES NOT CONSTITUTE ANY KIND OF WARRANTY.