
产品说明书 尺寸:50x75mm 材质:80g书写纸 双面印刷 风琴折

htc
无线蓝牙耳机54

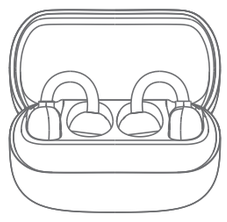

快速入门指南
使用前请阅读使用说明书
HTC NE54

2

产品规格

型号:HTC NE54

蓝牙
范围:≈10m
版本:6.0


喇叭
直径:10mm
阻抗:16Ω

耳机功率
输入:5V⎓25mA
电池容量:25mAh
使用时间:≈3.5小时
充电时间:≈1小时


充电仓功率
输入:5V⎓400mA
输出:5V⎓50mA
电池容量:400mAh
充电时间:≈1.5小时
充电仓充满电时,能给耳机充电约6次

3


物品清单



2 耳机　　充电仓




快速入门指南



USB-C充电线


4

部件

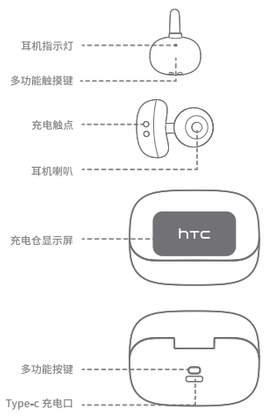

5

取出耳机并配对

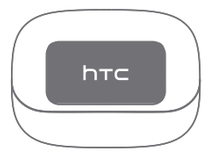

如果您是第一次使用耳机,请将两个耳机从充电仓中取出,其中一个耳机的LED灯将会交替闪烁白灯红灯,表示它们处于配对模式。
注:
·如果耳机未与任何设备配对,打开后会自动进入配对模式。配对成功后,您会听到两声滴滴声。
·如果耳机之前已配对,打开后会自动重新连接。连接时您会听到嘟嘟声。

6

如何佩戴耳机



1

7



2

8




3

9



4

开机和关机

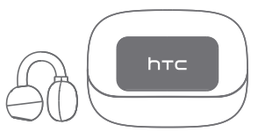

开机
自动开机:将耳机从充电仓中取出,耳机开机。
手动开机:长按3秒,耳机开机。
关机
自动关机:耳机放入充电仓中,耳机关机。
手动关机:长按5秒,耳机关机。

注:当耳机开机后,3分钟未与蓝牙设备配对,便会自动关机;当配对的蓝牙设备超出信号有效连接距离,且未重新连接时,3分钟后,耳机自动关机。

10

连接到蓝牙设备



在您的设备上,打开蓝牙
并选择连接到"HTC NE54"。

11

基本操作



12

功能操作
·暂停/播放:轻触任一耳机一次
·音量加:轻触右耳机二次
·音量减:轻触左耳机二次
·上一曲:轻触左耳机三次
·下一曲:轻触右耳机三次
·接听/挂断电话:轻触任一耳机一次
·通话拒接:按住任一耳机2秒
·启动语音助手:按住左耳机2秒
注:单耳使用时,按住已开机的耳机2秒,均可激活语音助手
·游戏模式与音乐模式切换:按住右耳机2秒切换
注:单耳使用时,无法切换游戏模式和音乐模式
注:出厂设置默认为音乐模式
注:通知声音较大的是游戏模式


指示灯显示

耳机指示灯	状态
白灯和红灯交替闪烁	两个耳机:开机 单耳机:未配对
白灯常亮	充电中
灭灯	配对成功或充满电
充电仓显示屏	**状态**
蓝色闪电图标	充电仓充电中
蓝色图标	充电仓充满电

注意:为了保护您的隐私并节省电量,无任何操作时,显示屏在30秒后熄灭。

13

如何清除蓝牙配对历史记录

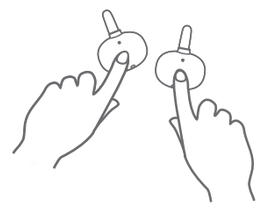


双耳从充电仓取出后会自动开机配对,耳机未与蓝牙设备连接或耳机从蓝牙设备取消连接状态下,分别对左耳机和右耳机连续五击多功能键,提示音"嘟"四声后,耳机自动关机后将双耳机放回充电仓,再将双耳机取出,双耳机会自动配对,完成后即可连接蓝牙设备使用。
适用于以下情况:
A:双耳无法配对时,单边音时,双配对名时。
B:使用单耳机分别连接不同蓝牙设备时。
C:清除连接的所有蓝牙设备时。

特别提示:
当单边耳机出现无声,或者无法配对时,
请按以上恢复重置操作。

14

充电仓基本操作

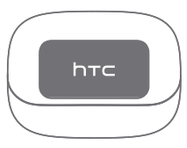

打开显示屏
触控亮屏:屏幕关闭时,轻触显示区域
按键亮屏:单击多功能按键

关闭显示屏
自动关机:点亮显示屏,30秒无操作后,显示屏将自动熄灭。
手动关机:点击充电仓多功能按键一次,充电仓显示屏熄灭。

注:首次使用,请激活开机
方法1:通过Type-C接口给充电仓充电激活开机
方法2:长按充电仓多功能按键5秒开机
提示:本产品出厂时默认为关机模式,首次使用需要激活开机。

15

多功能按键功能



多功能按键

单击一次:开关屏幕。
长按5秒:开机。
长按5秒:重启,关机,恢复出厂设置。
长按8秒:自动重启。

图标介绍

	状态
红色	耳机在充电盒中,未连接到耳机
白色	充电仓已连接到耳机,但耳机未连接到手机
蓝色	充电仓已连接到耳机,且耳机已连接到手机
L R	状态
蓝色闪烁	耳机充电中
蓝色常亮	耳机充满电

16

充电仓显示屏功能介绍

主界面



向右滑动:进入菜单界面

AI翻译



同步显示APP翻译内容

17

音乐播放



上一曲　播放/暂停　下一曲

时间设置界面



自动更新:当充电仓、耳机和手机连接时,
手机上的时间将自动更新到充电仓
手动更新:点击按钮进入手动设置

18

音量调整



降低音量
最低音乐音量为0

增加音量
最大音量为16

空间音效界面



音乐模式　电影模式　游戏模式

19

均衡器



请在不同的EQ音效之间切换:
标准、摇滚、流行、经典、爵士

闹钟设置界面



设置闹钟时间:5分钟、10分钟、30分钟、60分钟

20

屏幕亮度



屏幕亮度:点击左右按键调节亮度

语言切换



可切换多个国家语言

21

背景壁纸



可切换其他背景,默认为当前背景

查找耳机



耳机和充电仓连接后点击可查找左、右耳机,
查找状态耳机会发出滴滴报警声

22

TIKTOK翻页和点赞功能

需要连接到蓝牙设备使用,如手机
1.此功能仅限TIKTOK软件使用,其他软件存在无法使用的情况
2.此功能能存在部分手机兼容性问题,可能存在部分手机无法使用
3.如果存在无法使用的情况,请忽略此功能



◄ 切换到上一个短视频　♡ 点赞当前页面的短视频　► 切换到下一个短视频

23

拍摄功能

需要连接到蓝牙设备使用,如手机
1.此功能仅限手机自带相机拍照使用,
其他拍摄软件可能存在无法使用的情况
2.此功能存在部分手机兼容性问题,可能存在部分手机无法使用
3.如果存在无法使用的情况,请忽略此功能



打开拍摄软件,单击按钮,设备开始拍照

24

产品中有害物质名称及含量

产品中有害物质的名称及含量

部件名称	有害物质					
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬(Cr(VI))	多溴联苯(PBB)	多溴二苯醚(PBDE)
印刷电路组件	○	○	○	○	○	○
外壳等小结构件	○	○	○	○	○	○

本表格依据SJ/T 11364的规定编制。
○:表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572 规定的限量要求以下。
×:表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572 规定的限量要求。
表单标记"X"的部件,皆因全球技术发展水平限制而无法实现有害物质的替代。

印刷电路板组件:包括印刷电路板及其零部件,
电子元器件等,根据产品型号不同,
您所购买的产品可能不会含有以上所有部件

25

重要安全说明

在使用本产品之前,请仔细阅读本说明书中的所有安全说明。

常规安全说明
·小心使用本产品,并将其存放在没有极端温度、高温高压和潮湿的清洁环境中。确保产品存放在不易弯曲或挤压的地方。
·维修和更换只能由授权的售后服务人员进行。
请勿自行拆卸或更换产品的任何部件,以防受伤或损坏设备。
对产品的任何未经授权的修改都将使保修无效。
·仅在允许蓝牙传输的环境中使用本产品。

个人安全说明
·如果产品有明显缺陷或出现膨胀或温度过高等异常,请勿使用。
·执行需要全神贯注的高风险任务时,请勿使用本产品。
·为了保护您的听力,请勿长时间高音量收听
·请将产品及其包装放在儿童和宠物接触不到的地方,
以防发生吞咽和窒息等事故


电池安全说明
该产品内置可充电电池,请阅读以下说明,确保安全使用和处置。
·请勿将产品长时间暴露在热源中,如明火或阳光直射。
·仅将产品存放在环境温度为 0°C 至 35°C (32°F 至 95°F)的环境中。
·请勿在易产生灰尘、烟雾、高温、高压或高湿度的环境中使用或存放本产品。
·保持产品干燥,远离液体或湿气。
·只能使用经 FCC 或 CCC 认证、输出电压为DC 5V/1A的充电器。
·充电时不要使用产品。
·产品充电时间不要超过 8 小时。
·按照当地的废物管理规定负责任地处理产品。

26

售后服务电话:4009933981

法律声明
商标和许可:
HTC和HTC标志为HTC公司的商标,
授权给深圳市卜兰沃德科技有限公司使用。
2025版权©归深圳市卜兰沃德科技有限公司。
本文件仅供参考,不构成任何形式的保证,本公司保留所有权利。

htc
Wireless Earphones 54

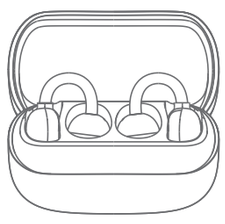

Quick Start Guide
HTC NE54

2

Product Specifications

Model: HTC NE54

Bluetooth
Range: ≈ 10 m
Version: 6.0


Speaker
Diameter: 10 mm
Impedance: 16Ω

Earphone power
Input: 5 V⎓25 mA
Battery capacity: 25 mAh
Battery life: ≈ 3.5 hrs
Charging time: ≈ 1 hrs

Charging case power
Input: 5 V⎓400 mA
Output: 5 V⎓50 mA
Battery capacity: 400 mAh
Charging time: ≈ 2 hrs
Earphone recharges: 6 charges (when case is fully charged)

3

What's in the box

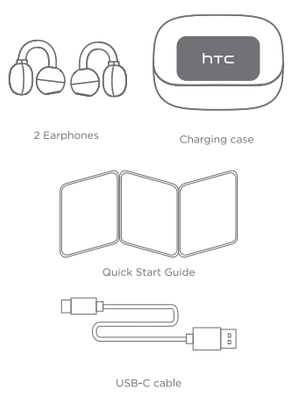


2 Earphones　Charging case

Quick Start Guide

USB-C cable


4

Components

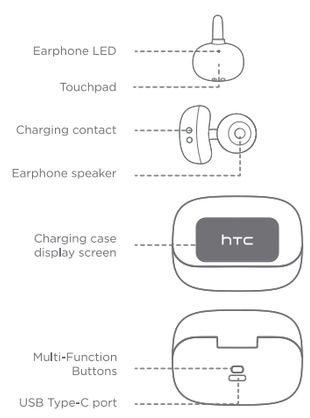

5

Take out and pair the earphones

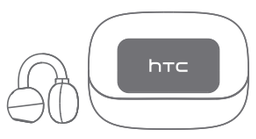



If you're using the earphones for the first time, remove both from the charging case. The LED on one earphone will blink white and red alternately, indicating that they are in pairing mode.

Note:
• If the earphones have not been paired with each other, they will automatically enter pairing mode when turned on. You'll hear two beeps when pairing is successful.
• If the earphones have been paired before, they will automatically reconnect to each other when turned on. You'll hear a beep when they connect.

6


How to put on the earphones

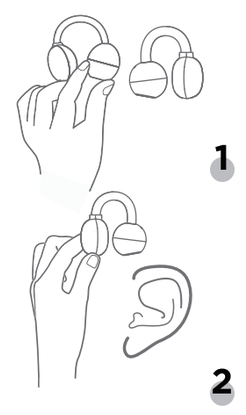

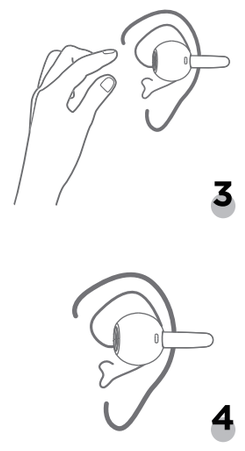

7

Power on and off

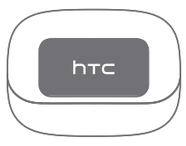


Power on
Taking the earphones out of the charging case will automatically turn them on.
To manually turn on each earphone, press and hold the touchpad for three seconds.

Power off
Placing the earphones in the charging case will automatically turn them off.
To manually turn off each earphone, press and hold the touchpad for five seconds.

Note: If the earphones are not paired with a Bluetooth device within three minutes after powering on, they will automatically power off. They will also power off after three minutes if the paired Bluetooth device moves out of the effective connection range and has not reconnected.

8


Connect to Bluetooth device

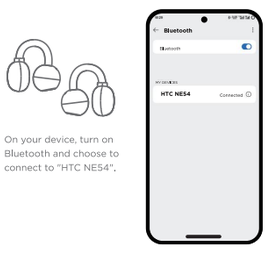

On your device, turn on Bluetooth and choose to connect to "HTC NE54".

9

Basic operations

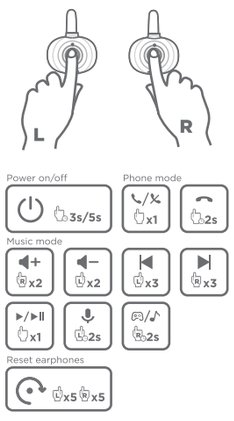

10

Key functions
• Play/Pause: Tap either earphone once.
• Volume up: Tap the right earphone twice.
• Volume down: Tap the left earphone twice.
• Play previous track: Tap the left earphone three times.
• Play next track: Tap the right earphone three times.
• Answer/End call: Tap either earphone once.
• Reject call: Press and hold either earphone for two seconds.
• Activate voice assistant: Press and hold the left earphone for two seconds.
Note: When using a single earphone only, press and hold the active earphone for two seconds.
• Switch between Game and Music modes: Music mode is the default mode. Press and hold the right earphone for two seconds to switch between modes. (The louder notification sound indicates Game mode.)
Note: Mode switching is disabled when you're using a single earphone only.

Indicator LEDs


Earphone LED	Status
Blinking white and red	Both earphones: Powered on Single earphone: Unpaired
Solid white	Charging
Off	Paired or fully charged
Charging case display screen	**Status**
Blue lightning icon	Case charging
Solid blue icon	Case fully charged

Note: The display screen turns off after 30 seconds of inactivity to protect privacy and save power.

11

How to reset the earphones

If the earphones fail to pair or reconnect to each other, reset them by tapping both earphones five times simultaneously.
Note: Resetting the earphones will clear the Bluetooth pairing history.

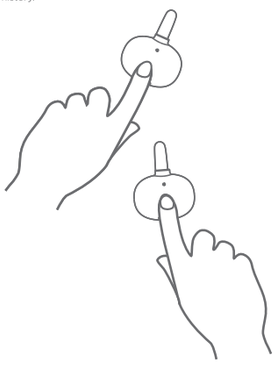

12

Case Display Screen: Basic Operations

Activate the Display Screen
Touch Activation: Tap the display area when screen is off.
Button Activation: Single-click the multi-function button.

Deactivate the Display Screen
Auto-Deactivation: Display turns off automatically after 30 seconds of inactivity.
Manual Deactivation: Press the multi-function button once to turn off the display.

Note: Initial activation required for first-time use
Method 1: Charge the charging case via the Type-C port to activate and power on.
Method 2: Press and hold the multi-function button for 5 seconds to power on.
Tip: The product is preset in shutdown mode upon factory shipment. Initial activation is required before first use.

13

Multi-Function Button Operations

Click once: On/Off screen.
Long press for 5 seconds: Power on.
Long press for 5 seconds: Restart, power off, restore factory settings.
Long press for 8 seconds: Auto - restart.

Status Icons Guide

	Status
Solid red	Earphones in case, not connected to phone
Solid white	Case connected to earphones, but earphones offline
Solid blue	Case connected to earphones, earphones paired to phone
L R	**Status**
Blinking blue	Earphone Charging
Solid blue	Earphone fully charged

14

Case Display Screen: Feature Overview

Home Screen

Swipe right: Access the Menu Interface

AI Translation

Displays translated content synchronized with the connected app.

15

Music Playback Functions

◄ Previous Track　►/II Play/Pause　► Next Track

Time setting interface

Setup
Automatic update: When the charging case, headphones, and phone are connected, the time on the phone will be automatically updated to the charging case
Manual update: Click the button to enter manual settings

16

Volume adjustment

Reduce volume, minimum music is 0　Increase volume, maximum volume is 16

Spatial sound interface

Music Mode　Movie Mode　Game Mode

17

Equalizer

Please switch between different EQ sound effects:
Standard, Rock,Pop, Classic, Jazz

Alarm clock interface

Switching requires setting the alarm time:
5 minutes, 10 minutes, 30 minutes, 60 minutes

18

Brightness

Screen brightness: Please click the left/right buttons to adjust the brightness.

Language

You can switch between multiple national languages

19

Wallpaper settings

You can switch to other backgrounds,
with the current background as the default.

Find headphones

Click to find left or right earbud when connected to the charging case,
The earbud will beep continuously during location mode.

20

TIKTOK Page Fflipping and Like Function

After connecting the earphones to the mobile phone and entering TIKTOK, you can adjust the volume, switch to the previous video, switch to the next video, and give a like using the charging case,(For iOS devices, you need to enable AssistiveTouch in Settings > Accessibility > Touch > AssistiveTouch.)
1.This function is only available for use with TIKTOK software. Other apps may not support it.
2.This feature may have compatibility issues with certain phones, and some phones may not be able to use it,
3.If this feature is unavailable, please disregard it.

◄ Switch to the previous video　♡ Like the current video　► Switch to the next video

21

Camera Control

Requires Bluetooth connection to a compatible device (e.g., smartphone).
1.Native camera exclusivity-Only works with the device's pre-installed camera application, Third-party photography apps are unsupported.
2.Compatibility limitations -Functional restrictions may occur on certain smartphone models.
3.Non-functional handling-Disable this feature if inoperative on your device.

Open the phone camera, click the button, and the phone will start taking photos
Note: When not in shooting mode, clicking this photo button will increase the volume

22

Important Safety Instructions

Carefully read all the safety instructions in this document before using the product.

General safety instructions
• Use the product with care and store it in a clean environment that is free from extreme temperature, pressure, and humidity. Make sure that the product is stored in a location where it cannot be bent or squeezed.
• Repairs and replacements should only be performed by authorized after-sales service staff, Do not attempt to disassemble or replace any part of the product yourself to prevent injuries or damage to the device, Any unauthorized modification to the product voids the warranty.
• Only use the product in environments where Bluetooth transmission is permitted.

Personal safety instructions
• Do not use the product if it is obviously defective or exhibits abnormalities such as bulging or excessive heating.
• Do not use the product when performing high-risk tasks that require your full attention.
• For your hearing protection, do not listen at high volume for long periods.
• Keep the product and its packaging out of reach of children and pets to prevent accidents such as swallowing and choking.

23

Battery safety instructions
The product has a built-in rechargeable battery, Read the following instructions to ensure safe use and disposal.
• Keep the product away from prolonged exposure to heat sources such as open fires or direct sunlight.
• Only store the product in environments with ambient temperatures of 0°C to 35°C (32°F to 95°F).
• Do not use or store the product in dust-prone, smoke-prone, high-temperature, high-pressure, or highly humid environments.
• Keep the product dry and away from liquids or moisture.
• Only use an FCC or CCC-certified charger with an output voltage of 5 V/1 A DC.
• Do not use the product while charging.
• Do not leave the product charging for longer than 8 hours.
• Dispose of the product responsibly according to your local waste management guidelines.

24

FCC ID: 2BHJR-NE54

FCC Caution.
This device complies with part 15 of the FCC Rules, Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications, However, there is no guarantee that interference will not occur in a particular installation, If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

25

-Consult the dealer or an experienced radio/TV technician for help.
*RF warning for Portable device:
The device has been evaluated to meet general RF exposure requirement, The device can be used in portable exposure condition without restriction.

US REP
Company name: MIRAMONT SOLUTIONS LLC
Company address: 34218 HOURGLASS ST, TEMECULA, CA 92592 United States
FRN: 0036313369
Agent name: Wenyi Wang
Title: CEO
Email: wenyiwang@miramontsolutions,com
Phone: 951 401 3633

26

Customer Service Email: service@yhemi.net

Legal notice
Trademarks and permissions:
HTC and the HTC logo are trademarks of HTC Corporation and used under license by Shenzhen Brands World Technology Co., Ltd.
Copyright © 2025 Shenzhen Brands World Technology Co., Ltd.
All rights reserved.
THIS DOCUMENT IS FOR INFORMATION PURPOSES ONLY AND DOES NOT CONSTITUTE ANY KIND OF WARRANTY.