


MT-211

VINYL RECORDS WITH BUILT-IN SPEAKERS, 3-SPEED, BELT DRIVE
VINTAGE PHONOGRAPH AND FM RECEPTION, RADIO RECEPTION




INSTRUCTION MANUAL


FRONT

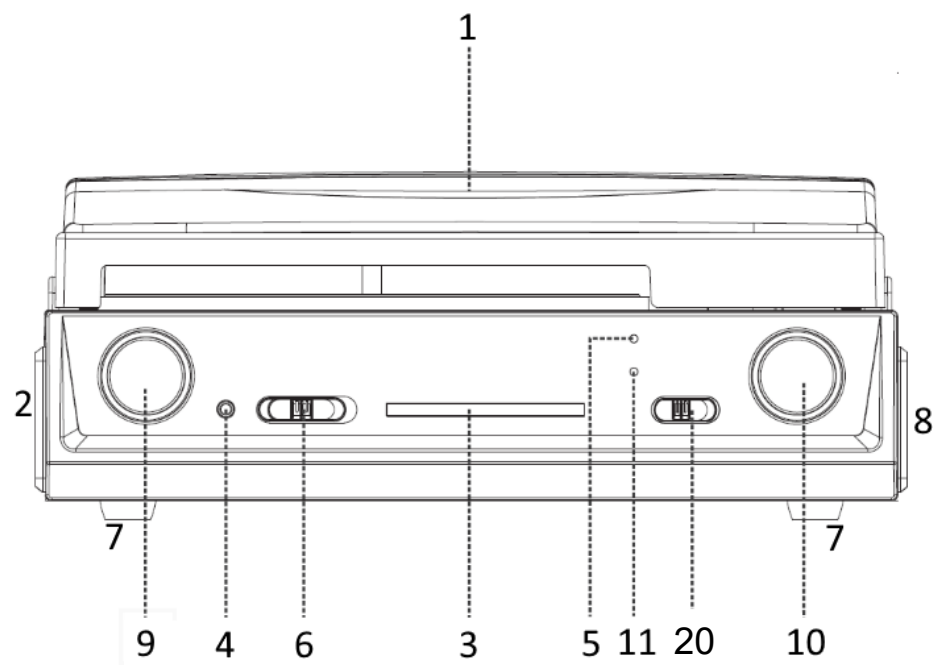

TOP

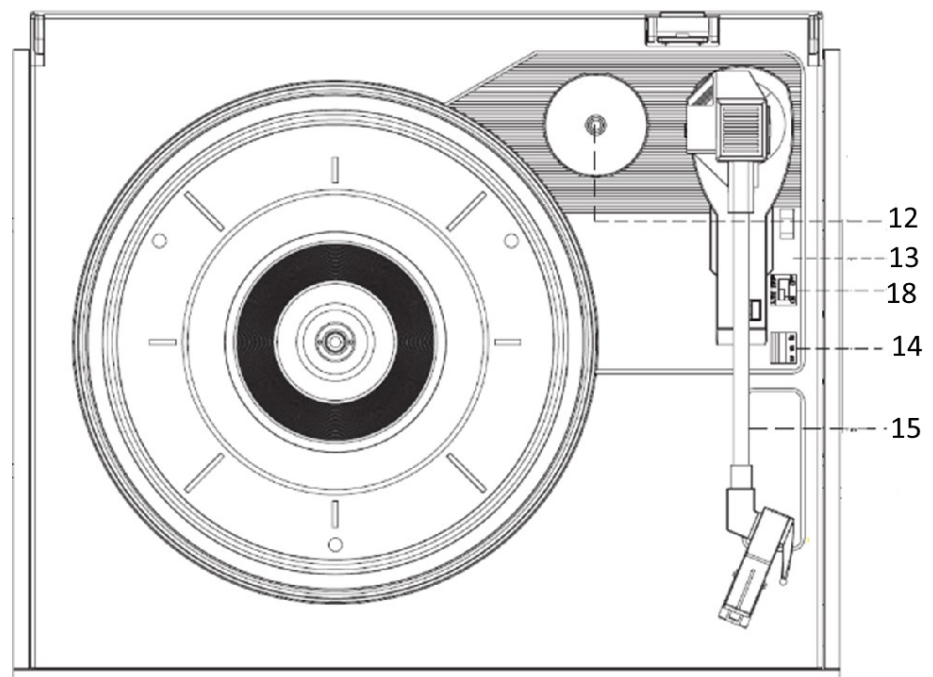

REAR

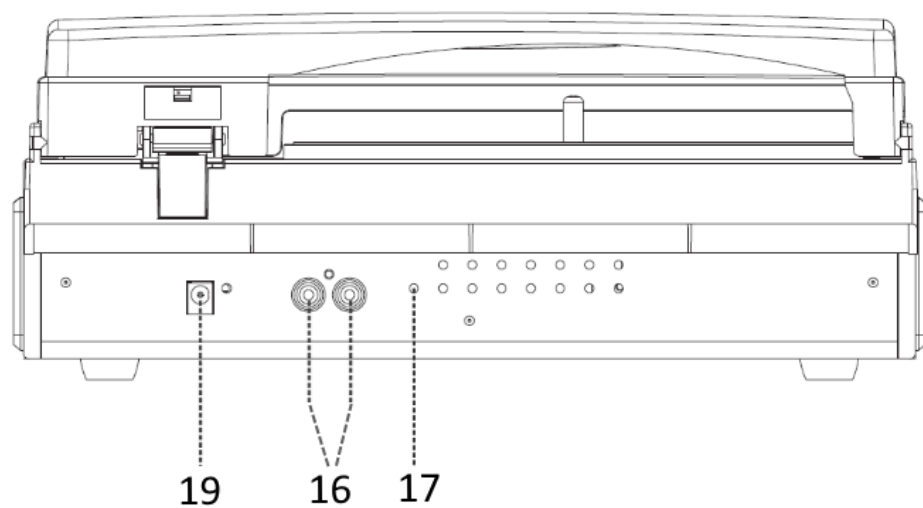

LOCATION OF CONTROLS

1. DUST COVER
2. LEFT SPEAKER
3. DIAL POINTER
4. 3.5MM HEADPHONE JACK
5. POWER LED INDICATOR
6. FUNCTION SELECTOR (OFF/PHONO/TUNER)
7. RUBBER FEET
8. RIGHT SPEAKER
9. VOLUME KNOB
10. TUNING KNOB
11. FM-STEREO INDICATOR
12. SPINDLE ADAPTOR
13. TONEARM LEVER
14. 33/45/78 RPM SPEED SELECTOR
15. PICK-UP HOLDER
16. AUDIO-OUT
17. FM RECEPTION, RADIO RECEPTION
18. ON/OFF PHONO
19. DC INPUT
20. MONO/STEREO SELECTOR

POWER SOURCES

You can power your stereo system by plugging the power AC/DC adaptor into a wall AC power outlet. Check that the rated voltage of your appliance matches your local volt.

FM RADIO OPERATION

1. Set the Function Selector (6) to the TUNER position. The red Power Indicator (5) will light up.
2. Tune to the desired radio station by turning the Tuning control (10).
3. Adjust the volume control (9) to the desired level.
4. Switch FM RADIO MONO & STEREO selector (18) to choose between mono and stereo mode.
5. To switch off the radio set the Function Selector (6) to the OFF position.

ANTENNA

For FM reception there is a built-in FM antenna wire (17) at the rear of the unit. Move the wire around to obtain the best reception.

TURNTABLE OPERATION

1. Set the Function Selector (6) to the PHONO position. Place a record on the turntable, over the central spindle. Place the EP adapter over the central spindle when playing 17cm EP records. Set the Speed Selector (14) to 33/45/78 .
2. Release the tonearm clamp, and remove the protective cap from the stylus.
3. Lift the Tonearm with the Tonearm Lift Lever (13).
4. Move the tonearm to the beginning of the record.
5. Gently lower the arm onto the record with the Tonearm Lift lever to start playing.
6. When the record is finished the tonearm will automatically stop. Lift the tonearm from the record and return it to the rest.

Notes:

- To stop manually, lift the tonearm from the record and return it to the rest.
- Do not stop or turn the platter manually.
- Moving or jarring the turntable without securing the Tonearm clamp could result in damage to the Tonearm.
- Replace the protective cap on the stylus when not in use.

HEADPHONE JACK & LINE OUT SOCKET

This system can be connected with headphone (4) or external amplifier/speaker by 3.5mm earphone jack.

This system can be connected with external device (eg amplifier and speaker) by line-out socket (16) at rear cabinet.

TECNICAL SPECIFICATIONS

Power Supply:	AC/DC Adaptor (230VAC 50 Hz/12VDC 1A)
Radio Frequency Coverage FM:	87.5 - 108 MHz.
Speakers Output Power:	2 x 1.5 Wrms.
General	
Line Out:	RCA plugs (pre-amplified)
Earphone:	3.5mm Jack

Specifications and design are subject to possible modifications without notice due to improvement.

WARNINGS

The exclamation point within the triangle is a warning sign alerting the user of important instructions accompanying the product.



The lightening flash with arrowhead symbol within the triangle is a warning sign alerting the user of "dangerous voltage" inside the unit.



To reduce the risk of electric shock, do not remove the cover. No user serviceable parts inside the unit. Refer all servicing to qualified personnel.



Ensure all connections are properly made before operating the unit.




This unit must not be exposed to moisture or rain.



This unit should be positioned so that it is properly ventilated. Avoid placing it, for example, close to curtains, on the carpet or in a built-in installation such as a bookcase.

Do not expose this unit to direct sunlight or heat radiating sources.

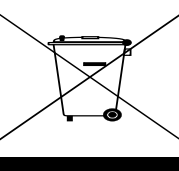**CORRECT DISPOSAL OF THIS PRODUCT
(Waste Electrical & Electronic Equipment)**


This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.

Household users should contact the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.


MT-211




BEDIENUNGSANLEITUNG

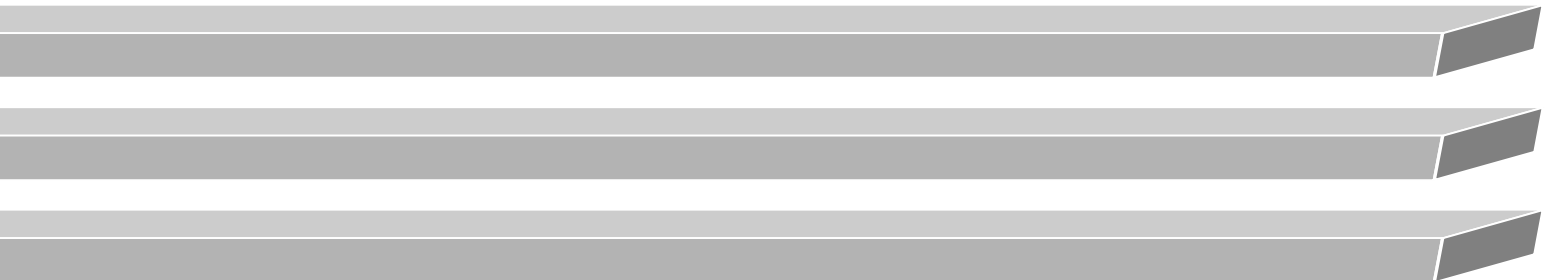


FRONT

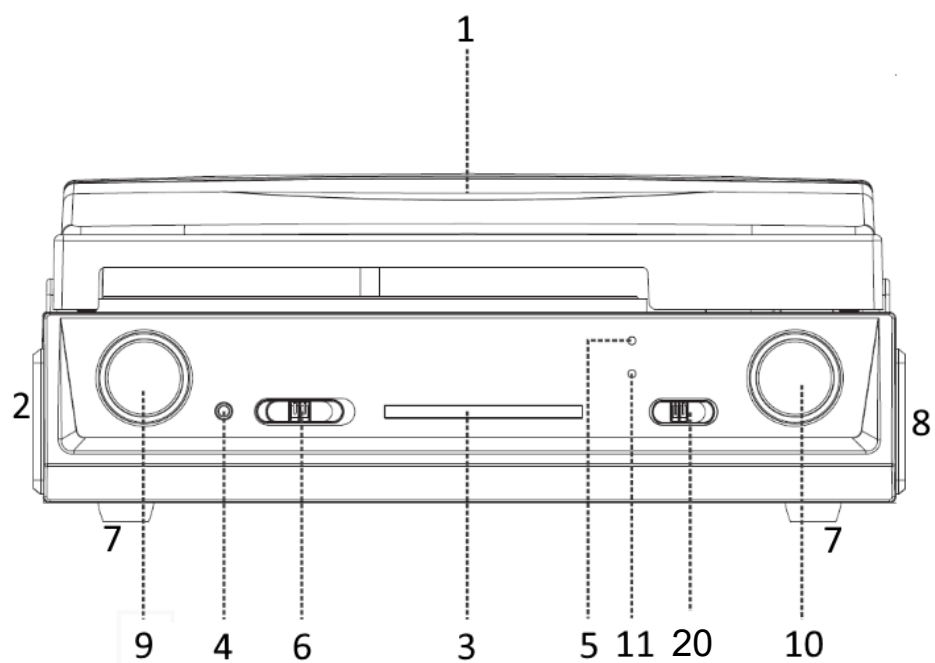

TOP

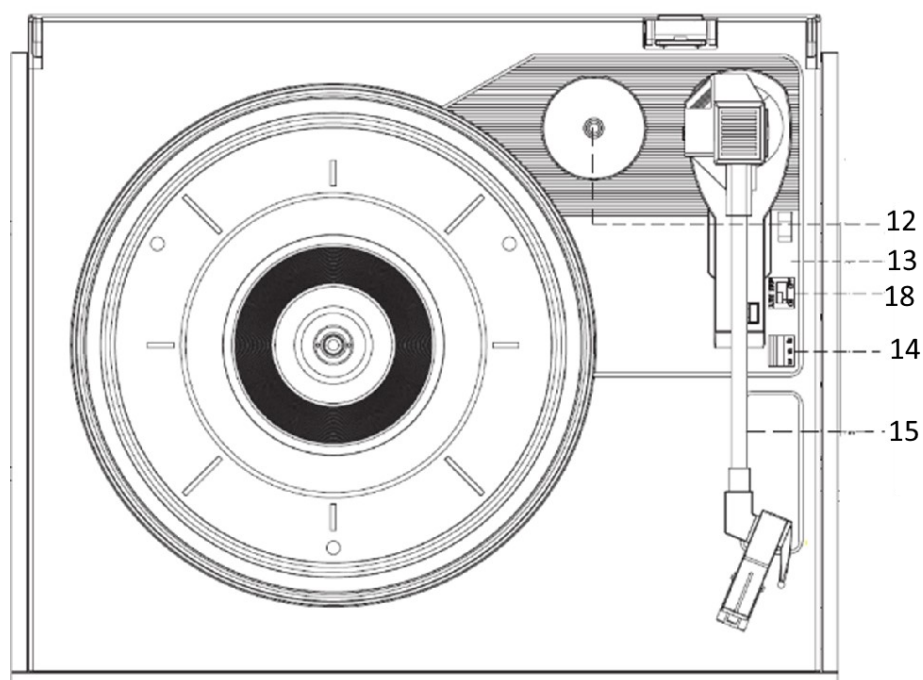

REAR

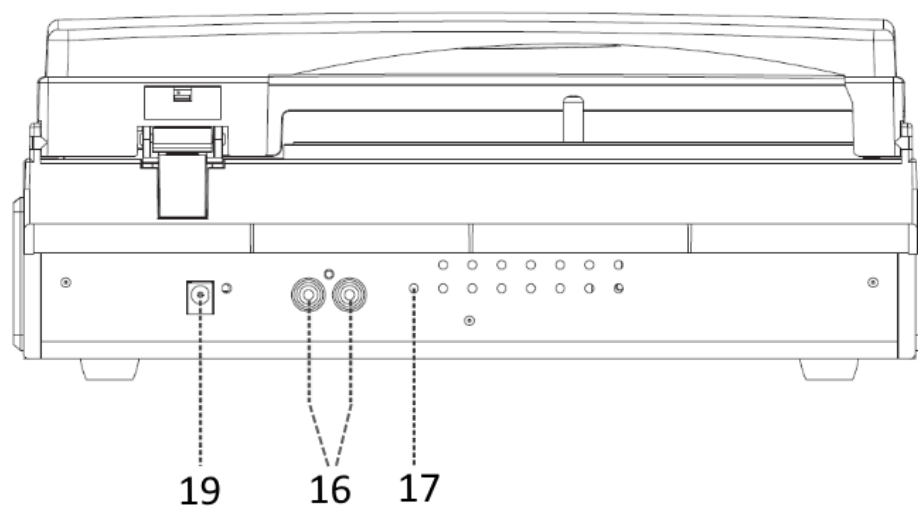

LAGE DER BEDIENUNGSELEMENTE

1. ABDECKUNG
2. LAUTSPRECHER LINKS
3. ABSTIMMSKALA
4. KOPFHÖRER
5. EIN-ANZEIGE
6. FUNKTION-WAHLSCHALTER (OFF/PHONO/TUNER)
7. KUMMERFÜSSE
8. LAUTSPRECHER RECHTS
9. LAUTSTÄRKE-REGLER
10. ABSTIMM-KNOPF
11. UKW-STEREO-ANZEIGE
12. 45-DISC-ADAPTER
13. TONARM-HEBEL
14. 33/45/78 U./MIN. GESCHWINDIGKEITSCHALTER
15. TONARM-ABLAGE
16. VORVERSTÄRKTEAUSGANG (AUDIO-OUT)
17. UKW-ANTENNE
18. ON/OFF PHONO
19. DC-EINGANG
20. MONO-/STEREO-WAHLSCHALTER

STROMQUELLEN

Sie können Ihr tragbares Stereosystem mit Strom versorgen, indem Sie die Steckdose an der Wand stecken. Prüfen Sie, dass die Nennspannung des Geräts mit Ihrer lokalen Spannung übereinstimmt.

RADIOBETRIEB

1. Stellen Sie den Funktionswahlsch. (6) auf TUNER. Die EIN-Anzeige erleuchtet (5).
2. Stimmen Sie die gewünschte Radiostation mit dem Abstimmregler (10) ab.
3. Stellen Sie den Lautstärkeregler (9) auf die gewünschte Stufe ein.
4. Schalten Sie den FM RADIO MONO & STEREO-Wahlschalter (18), um zwischen Mono- und Stereomodus zu wählen.

Antenne: Für den UKW-Empfang befindet sich auf der Rückseite des Gerätes ein eingebauter UKWAntennendraht (17). Bewegen Sie den Draht hin und her, bis der beste Empfang erreicht wird.

PLATTENSPIELER BETRIEB

1. Stellen Sie den Funktionswahlschalter (6) auf PHONO.
2. Legen Sie eine Schallplatte auf die mittlere Spindel des Plattentellers. Legen Sie den EP-Adapter auf die mittlere Spindel, wenn Sie 17 cm-EP-Platten abspielen.
3. Stellen Sie die Drehzahl-Wahlschalter (14) auf 33 oder 45 oder 78 U./Min., entsprechend der Schallplatte.
4. Entriegeln Sie die Tonarm-Klemme und entfernen Sie die Schutzklappe von der Wiedergabenadel.
5. Heben Sie den Tonarm mit dem Tonarm-Hebel (13) an.
6. Bewegen Sie den Tonarm an den Anfang der Platte oder eines bestimmten Titels.
7. Senken Sie den Tonarm vorsichtig mit dem Tonarm-Hebel auf die Platte, um die Wiedergabe zu starten.

8. Am Ende der Platte, heben Sie den Tonarm und bringen Sie es zum Rest.

Hinweise:

- Wenn Sie die Platte während der Wiedergabe stoppen wollen, den Tonarm von der Platte heben und zur Ruhe zurückbringen.
- Drehen oder stoppen Sie den Plattenteller nicht manuell.
- Wenn Sie den Plattenteller bewegen oder anstossen, ohne den Tonarm mit der Klemme gesichert zu haben, konnte der Tonarm beschädigt werden. Stecken Sie die Schutzkappe auf die Wiedergabenadel, wenn das Gerät nicht benutzt wird.

REARPHONE JACK & LINE OUT SOCKET

- Dieses System kann mit dem Kopfhörer oder externen Verstärker/Lautsprecher über 3.5mm (4) Earphone Jack verbunden werden.

Dieses System kann mit einem externen Gerät (z.B. Verstärker und Lautsprecher) (16) über einen Leitungsanschluss am hinteren Schrank verbunden werden.

TECHNISCHE DATEN

Stromversorgung:	AC/DC Adaptor (230VAC 50 Hz/12VDC 1A)
Radiofrequenzbereich FM:	87.5 - 108 MHz.
Lautsprecher Ausgangsleistung:	2 x 1.5 Wrms
Allgemeine	
Audio Ausgang:	Cinch- BÜchse (vorverstärkt)
ERDHÖRHÖRER	3.5mm Jack
Earphone:	3.5mm Jack

Ausführung und Spezifikationen unterliegen unangekündigten Änderungen.

SICHERHEITSHINWEISE



Das Ausrufszeichen im Dreieck weist den Benutzer auf wichtige Bedienungs- und Wartungsanweisungen (Service) in diesem Handbuch hin, die unbedingt zu befolgen sind.



Um die Gefahr elektrischer Schläge auszuschließen, Gehäuse auf keinen Fall abnehmen.



Im Innern befinden sich keine vom Benutzer selbst instandsetzbaren Teile. Reparaturen dürfen nur von einer autorisierten Fachwerkstatt durchgeführt werden.



Setzen Sie das Gerät weder Feuchtigkeit noch Regen aus.



Schalten Sie das System erst dann ein, wenn Sie alle Verbindungen genau geprüft haben.

Stellen Sie das Gerät so auf, dass immer eine ungestörte Frischluftzufuhr sichergestellt ist. Es ist zum Beispiel keinesfalls auf Teppiche und in der Nähe von Gardinen zu stellen oder in Bücherregale einzubauen.



Setzen Sie das Gerät weder direkter Sonneneinstrahlung noch Wärmequellen aus.

KORREKTE ENTSORGUNG DIESES PRODUKTS (Elektromüll)



Die Kennzeichnung auf dem Produkt bzw. auf der dazugehörigen Literatur gibt an, dass es nach seiner Lebensdauer nicht zusammen mit dem normalen Haushaltsmüll entsorgt werden darf.

Private Nutzer sollten den Händler, bei dem das Produkt gekauft wurde, oder die zuständigen Behörden kontaktieren, um in Erfahrung zu bringen, wie sie das Gerät auf umweltfreundliche Weise recyceln können.

Gewerbliche Nutzer sollten sich an Ihren Lieferanten wenden und die Bedingungen des Verkaufsvertrags konsultieren. Dieses Produkt darf nicht zusammen mit anderem Gewerbemüll entsorgt werden.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.