ELECTRIC HEATED SOCKS

User Manual

Please read this manual carefully before using

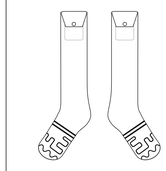

封面

Language Catalogue

English·····P1-P8
Deutsche·····P9-P16
Français·····P17-P24
Italiano·····P25-P32
Español·····P33-P40
Nederland·····P41-P48

封面内页

PRODUCT INFORMATION

SPECIFICATION

Product Name: Electric heated socks
Brand: VICEPLUS
Dimension: 19*11.5*7.8cm
Rated Voltage: 5V/2A
Rated Power: 10W
Charging Time: 4-5H
Heating: 3 gear
Single Power Supply: 8000mAh
Level: 4 levels temperature settings
Heating Method: heating wire
Thermal Range: 45-75°C
Main Material: 22.5% viscose fiber, 52.5% nylon, 10% polisetere,15% elastan

INFORMAZIONI SULLE TAGLIE

WASHING INSTRUCTIONS

1. The water temperature should not exceed 122°F (50°C)
2.The battery must be removed before cleaning, and the battery connecting wire must be sorted and put back into the battery bag.(note that the battery cannot be washed with water)
3.Socks must being put into the laundry bag when machine washed. Hand wash is recommended for more safety.
4.Turn the power cord out and dry it naturally.
5.Do not use a high temperature iron or dry it at high temperature

HOW TO USE

1.Check the battery level of the special battery for socks, and charge them to the full state.
2.Distinguish between left and right socks and wear them correctly, keep the battery pocket on the outside of the shins.
3.When not using the product, please unplug the plug from the battery for storage.

4.Tie the battery to your calf, then put on socks, insert the typeC plug into the battery.
5.The battery has four green indicator lights to display power status. The number of lit indicators shows the current power level:
1 lit indicator means 0%-25% power;
2 lit indicators mean 25%-50% power;
3 lit indicators mean 50%-75% power;
4 lit indicators mean 75%-100% power.
The red indicator light is gear indication, specifically:
One light: I (Low-temperature gear)
Three lights: II (Medium-high temperature gear)
Two lights: II (Medium-temperature gear)
One light: I (Low-temperature gear)
6.Battery button: when the battery is inserted into the sock, press and hold the button for 3 seconds to turn on the battery. After startup, short press the shaft to switch gears. The default IV gear (high temperature gear) works during startup. Press the button to switch between the III gear . II gear and I gear. When the battery is not inserted into the sock, short press the switch button is invalid, and only a green indicator is displayed indicating the battery status.

MAINTENANCE

1 Note: In extremely cold temperatures, the activity of lithium batteries may decrease, leading to a corresponding reduction in usage duration, and the perceived temperature may also decrease.
2.Cannot start function: the battery may be low, please charge it.
3.In order to ensure the best charging efficiency, it is recommended to charge 2 batteries the same time.
4.Any other abnormal conditions can be solved, please contact us at service@viceplustech.com

BATTERY CONTROL INSTRUCTIONS

1.Power on by holding down the power button. The red light will stay steadily lit, indicating the heating socks are now active.
Note:
The battery features memory function. The number of steadily lit red lights corresponds to the temperature setting last used before shutdown. For initial use, all four red lights typically remain steadily lit.
-The APP provides a rapid heating function. When activated, all 4 red lights will blink continuously for 2 minutes, after which the temperature setting will automatically switch to III.
2.Briefly press the battery button to switch between temperature levels.
3.To turn off the socks, long-press the button until the lights turn off, indicating heating has stopped.

DISCLAIMER:

1. Do not approach high-temperature,flammable or explosive objects.
2.Do not hit the battery with force, and do not disassemble or reassemble it.

SAFETY INSTRUCTIONS:

1.Please heat up the socks with the supplied battery.
2.Recommended to recharge and activate it every 60 days if the battery is not used frequently.
3.It is not recommended to use it under a high-temperature grade for a long time without knowing the cooling efficiency, it is recommended to charge 2 batteries the same time.
4.Any other abnormal conditions can be solved, please contact us at service@viceplustech.com

BATTERY CONTROL INSTRUCTIONS

PACKING LIST

Heated Socks 1Pair
5000mAh Battery 1Pair
Double Ended Type-C Charging Cable
Washing Bag
User Manual

THIS WARRANTY EXCLUDES

(a) damage caused by accident, abuse, mishandling, or transport;
(b) units subjected to unauthorized repair;
(c)units not utilized in accordance with the VICEPLUS care instructions;
(d) damage exceeding the cost of the product;
(e) deterioration of the delivered product resulting from abnormal storage and/or safeguardingconditions online seller's premises, and failure to provide the dated proof of purchase.

VICEPLUS brand will not be responsible for any legal liability for personal and propertysafety problems caused by not using the products according to the above terms and conditions.

WARRANTY

IF WITHIN ONE YEAR FROM THE DATE OF PURCHASE, THIS PRODUCT FAILS DUE TOA DEFECT IN MATERIAL OR WORKMANSHIP, VICEPLUS WILL REPAIR OR REPL ACE THEPRODUCT, OR NECESSARY COMPONENTS, FREE OF CHARGE.

APP TEMPERATURE CONTROL INSTRUCTIONS

1.Use your mobile phone to scan the QR code on the last page to download the Bluetooth temperature control APP (VWARMFT).
2.The stockings must be connected to the battery, and the Bluetooth APP function is available; if the battery is pulled out, the Bluetooth Master APP cannot connect to the battery control.
3.Turn on the mobile phone positioning and Bluetooth functions for APP Bluetooth control.
4.If the mobile app is not connected to the battery device after the battery device is powered on, please check whether other permissions of the mobile app are opened.

5.To connect an additional pair of heated socks, first make sure the power cable of the previously connected pair is unplugged,then open the APP before finally plugging in and Bluetooth-connecting the new pair to prevent signal interference and connection conflicts from multiple active devices.
6.After the battery is connected to the sock, by default, the application will automatically connect to the battery device will automatically connect to the battery when Bluetooth is enabled.
7.It is recommended that the battery of each pair of socks is commonly used to match fixed mobile phone without unbinding or reconnecting.

HOW TO DOWNLOAD APP?

1.Scan QR code below to download APP.
2.Depending on your phone type, select the corresponding link to download the application.

GENERIC QR CODE

APP MAIN INTERFACE DESCRIPTION

Battery Recovery Description

The symbol of the crossed-out garbage can on batteries or accumulators means that they must not be disposed of with household waste at the end of their useful life. Batteries or accumulators contain mercury (Hg), cadmium (Cd) or lead (Pb).
you will find the respective chemical symbol below the symbol of the crossed-out garbage can. You are legally obliged to return old batteries and accumulators after use. You can do this free of charge in the retail store or at another collection point near you. Addresses more suitable

WEEE recovery instructions .
Information on electrical and electronic equipment
The following note is aimed at private end users who use electrical and / or electronic equipment.
1. Separate collection of old devices
Electrical and electronic equipment that has become waste is known as old equipment. Owners of old devices must collect them separately from unsorted municipal waste. This also includes old batteries and rechargeable batteries that are not enclosed in the housing of the old device, but in special collection and return systems.
2. Batteries and accumulators
Old devices have to separate old batteries and accumulators, which are not enclosed by the old device, from the old device before handing in the old device for disposal. This does not apply if the old device is handed over to public waste disposal authorities and separated there from other old devices for preparation for reuse.
3. Options for returning old devices
If you own old devices, you can hand them in to the return or collection of old devices set up and available by the public waste disposal authorities for the purpose of proper disposal of old devices. If necessary, it is also possible to return old devices to distributors who take back old devices for the purpose of reusing the equipment. You can obtain more detailed information on this from the respective collection or return point.
4. Data protection notice
Old devices often contain sensitive personal data. This applies in particular to information and telecommunications equipment such as computers and smartphones. In your own interest, please note that each end user is responsible for deleting the data on the old devices to be disposed of.
5. Meaning of the symbol "crossed out garbage can"
The symbol of a crossed-out garbage can regularly depicted on electrical and electronic devices indicates that the respective device will be separated from the unsorted Siedu at the end of its service life.

PRODUKT INFORMATIONEN

SPEZIFIKATION

Produktname: Elektrisch beheizte Socken
Marke: VICEPLUS
Abmessungen: 19 × 11,5 × 7,8 cm
Nennspannung: 5 V/2 A
Nennleistung: 10 W
Ladezeit: 4–5 h
Gewicht: 610 g
Batteriekapazität: 8000 mAh
Temperaturstufen: 4-stufige Regelung
Heizmethode: Heizdraht
Temperaturbereich: 45–75 °C
Hauptmaterialien:22,5 % Viskosefaser, 52,5 % Nylon, 10 % Polyester, 15 % Elasthan

GRÖSSENINFORMATION

WASCHHINWEISE

1. Wassertemperatur max. 122°F (50°C)
2.Vor der Reinigung Batterie entnehmen. Verbindungskabel ordnungsgemäß verlegen und in Batterietasche zurückführen. (Hinweis: Batterie nicht waschen!)
3.Socken im Wäschesack maschinenwaschen. Zur Sicherheit Handwäsche empfehlenswert.
4.Netzkabel herausnehmen und natürlich trocknen lassen
5.Keine Heißbügelung oder Trocknung bei hohen Temperaturen!

BEDIENUNGSANLEITUNG

1.Ladezustand der Spezialbatterie prüfen und vollständig aufladen.
2.Links/rechts Socken unterscheiden, korrekt anziehen. Batterietasche stets außen am Schienbein positionieren.
3.Bei Nichtgebrauch Stecker von Batterie trennen und getrennt lagern.
4.Zum Einschalten: Taste 3 Sekunden drücken. Socken anziehen, den Typ-C-Stecker in die Batterie einstecken.
5.die Batterie hat vier grüne Anzeigeleuchten, um den Energiestatus anzuzeigen.

Die Anzahl der leuchtenden Anzeigen zeigt die aktuelle Leistungsstufe an
1 leuchtende Anzeige bedeutet 0%-25% Leistung;
2 leuchtenden Anzeigen bedeuten 25%-50% Leistung;
3 leuchtenden Anzeigen bedeuten 50%-75% Leistung;
4 leuchtenden Anzeigen bedeuten 75%-100% Leistung.
Die rote Anzeige ist die Ganganzeige, insbesondere:
Eine Leuchte: I (Niedrigtemperatur-Gang)
Drei Leuchten: III (Mittelhochtemperatur-Gang)
Zwei Leuchten: II (Mitteltemperatur-Gang)
Ein Licht: I (Niedrigtemperatur-Gang)
6. Batterietaster: Wenn die Batterie in die Socke eingelegt ist, halten Sie die Taste 3 Sekunden lang gedrückt, um die Batterie zu öffnen und zu schließen. Drücken Sie nach dem Einschalten kurz
Wenn die Batterie nicht in den Socken eingesteckt ist, ist ein kurzer Druck auf den Schalter ungültig, und es wird nur eine grüne Anzeige für den Batteriestatus angezeigt.

WARTUNG

1.Hinweis: Bei Extremkälte kann die Aktivität von Lithium-Batterien nachlassen, was zu reduzierter Nutzungsdauer und geringerer empfundener Wärme führt.
2.Startunfähigkeit: Batterieladung möglicherweise niedrig. Vollständig aufladen.
3. Für optimale Ladeeffizienz beide Batterien gleichzeitig laden.
4.Bei ungelösten Störungen kontaktieren Sie uns unter service@viceplustech.com

ANWEISUNGEN ZUR BATTERIEKONTROLLE

1. Einschalten durch langes Drücken des Netzschalters. Rotes Dauerlicht zeigt aktiven Heizbetrieb.
Hinweise:
-Batterie hat Speicherfunktion: Anzahl roter Dauerlichter entspricht der zuletzt genutzten Temperaturstufe.
-Bei Erstnutzung leuchten alle vier Lichter dauerhaft aktiv.
-APP-Schnellheizfunktion: Alle 4 roten Lichter blinken 2 Minuten, danach Stufe IV.
2. Kurzes Drücken zum Wechseln der Temperaturstufen.
3. Ausschalten durch langes Drücken bis Lichter erlöschen (Heizfunktion beendet).

DISCLAIMER

1. Nähern Sie sich nicht hochtemperaturgeräten, brennbaren oder explosiven Gegenständen.
2.Schlagen Sie nicht mit Gewalt auf die Batterie und bauen Sie sie nicht auseinander oder wieder zusammen.

SICHERHEITSHINWEISE

1.Verwenden Sie ausschließlich mitgelieferte Batterie zum Aufheizen der Socken.
2.Bei seltenem Gebrauch: Batterie alle 60 Tage vollständig laden und aktivieren.
3.Nicht dauerhaft im Hochtemperaturmodus nutzen; wenn individuelle Hitzeresistenz unbekannt ist. Vermeiden Sie Unbedingen oder Verbrennungsrisiko!
4.Batterie in trockener, kühler Umgebung lagern.
5.Nicht während Nachtschlaf verwenden! Bei fortdauernder Körperwahrnehmung in Kälte reichzeitig Temperatur senken – individuelle Hitzetoleranz beachten.
6.Bei Nichtgebrauch Stecker abziehen und separat lagern.
7.Besonderer Vorsicht für Personen mit eingeschränkter Hitzewahrnehmung!
8.Ausschließlich als Haushalts-Gesundheitsprodukt nutzbar. Keine Diagnose-, Therapie- oder kommerzielle Anwendung!
9.Batterie von Hitzequellen und heißen Gegenständen fernhalten.

PACKLISTE

Beheizte Socken 1Paar
5000mAh Akku 1Paar
Doppelendiges Typ-C Ladekabel
Waschbeutel
Benutzerhandbuch

DIESE GARANTIE SCHLIESST AUS

(a) Schäden durch Unfall, zweckwidrigen Gebrauch, unsachgemäße Handhabung oder Transport durch den Kunden;
(b) unbefugt reparierte Einheiten;
(c)nicht gemäß VICEPLUS-Pflegehinweisen verwendete Einheiten;
(d) Schäden über dem Produktwert;
(e) Verschlechterung des Produkts durch unsachgemäße Lagerung/Handhabung beim Kunden sowie fehlenden datierten Kaufnachweis.

VICEPLUS haftet nicht für rechtliche Verantwortlichkeit bei Personen- oder Sachschäden durch Nichtbeachtung dieser Nutzungsbedingungen.

GARANTIE

SOFERN INNERHALB EINES JAHRES AB KAUFDATUM EIN MATERIAL- ODER VERARBEITUNGSFEHLER AUFTRITT, REPARIERT ODER ERSETZT VICEPLUS DAS PRODUKT ODER NOTWENDIGE KOMPONENTEN KOSTENFREI.

APP-ANWEISUNGEN ZUR TEMPERATURKONTROLLE

1. Verwenden Sie Ihr Mobiltelefon, um den QR-Code auf der letzten Seite zu scannen und die Bluetooth-Temperatursteuerung-App (WARMFT) herunterzuladen.
2. Die Strümpfe müssen mit dem Akku verbunden sein, damit die Bluetooth-App-Funktion verfügbar ist, wenn der Akku herausgezogen wird, kann die Bluetooth-Master-App keine Verbindung zur Akkusteuerung herstellen.
3.Aktivieren Sie die Standort- und Bluetooth-Funktionen des Mobiltelefons für die Bluetooth-Steuerung per App.
4.Wenn die mobile App nach dem Einschalten des Batteriegeräts keine Verbindung herstellt, überprüfen Sie bitte, ob weitere Berechtigungen der mobilen App aktiviert sind.

5. Um ein zusätzliches Paar beheizter Socken anzuschließen, stellen Sie zuerst sicher, dass das Stromkabel des zuvor verbundenen Paars ausgesteckt ist. Öffnen Sie dann die App, bevor Sie schließlich das neue Paar einstecken und per Bluetooth verbinden, um Signalstörungen und Verbindungskonflikte durch mehrere aktive Geräte zu verhindern.
6.Nachdem der Akku mit der Socke verbunden ist, stellt die Anwendung standardmäßig die letzte Verbindung wieder her, und das Erstgerät verbindet sich automatisch mit dem Akku, wenn Bluetooth aktiviert ist.
7.Es wird empfohlen, dass der Akku jedes Sockenpaars dauerhaft mit einem festen Mobiltelefon gekoppelt wird, ohne Entkopplung oder erneute Verbindung.

WIE KANN ICH DIE APP HERUNTERLADEN?

1. scannen Sie dem QR-Code unten, um die APP herunzuladen.
2. je nach Telefontyp wählen Sie den entsprechenden Link aus, um die Anwendung herunterzuladen.

GENERIC QR CODE

BESCHREIBUNG DER HAUPTSCHNITTSTELLE DER APP

die Gerätenformationen anzeigen
Zum Suchen und Verbinden der Socken anklicken
Zum Absenden Ihrer Fragen und Vorschläge anklicken
Zum Ein- und Ausschalten anklicken
Zum Einstellen der Temperaturstufe schieben
Zum Einstellen der Heizzeit schieben
Zum Einstellen der Temperaturstufe schieben
Zum Einstellen der Temperatur

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

* RF warning for Portable device:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

* RF warning for Portable device:
The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.

Cet appareil contient des émetteurs/récepteurs exemptés de licence qui sont conformes aux RSS exemptés de licence d'innovation, sciences et développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes:

1. Cet appareil ne peut pas causer d'interférences.
2. Cet appareil doit accepter toute interférence, y compris les interférences qui peuvent causer un fonctionnement indésirable de l'appareil.

Le dispositif a été conçu pour répondre à la demande générale de radioexposition.