


N40

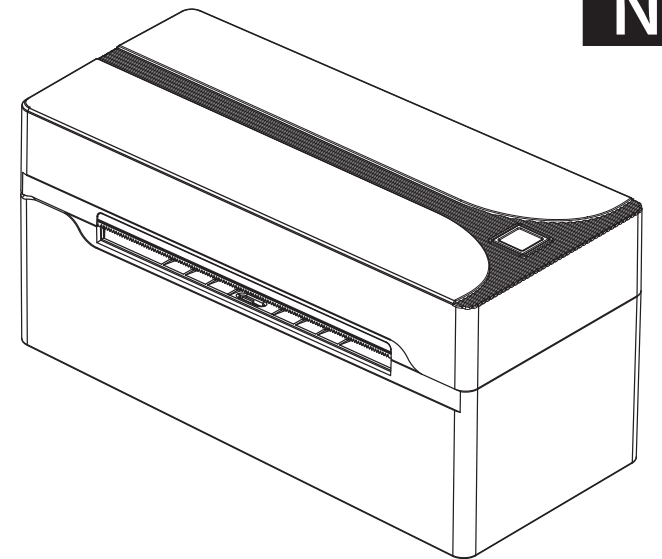

Quick Start Guide

Before using, please read this manual carefully and keep it properly for future reference

Printer x1

Type-C Cable x1

Power Adapter x1


4"×6" (101.6×152.4mm), Labels (20 pieces) x1

USB Adapter (Type-A to Type-C) x1

Quick Start Guide x1

01. Product Introduction


1.1 Printer Parts Instruction

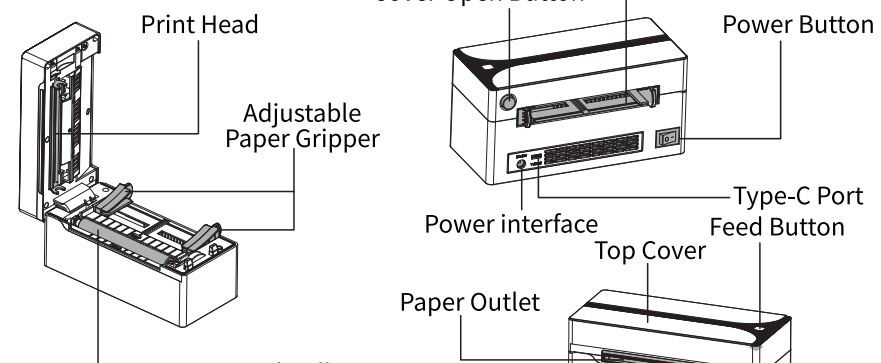

Print Head, Cover Open Button, Power Button, Adjustable Paper Gripper, Paper Feed Slot, Type-C Port, Feed Button, Paper Outlet, Top Cover, Paper Feed Roller, Paper Interface


02. Preparation Before Use

2.1 Remove printhead protective paper.

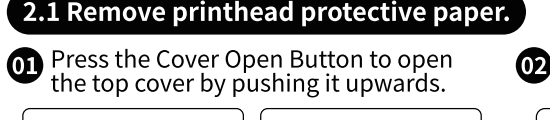

Press the Cover Open Button to open the top cover by pushing it upwards.

2.2 Connecting to the Power Supply

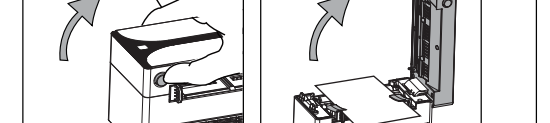

11 Plug the round end of the Power Adapter into the printer's Power Interface.

12 Insert the Power Cord plug into an outlet.

115 VAC, 230 VAC, 115 VAC, 230 VAC

03. App Download

Before using the printer, please install the "Nada Print" app from Google Play or the App Store.




Scan the QR code to download and install the "Nada Print" App for printing.

3.1 Print via mobile devices


DO NOT connect the printer in your phone's Settings.

01 Open the "Nada Print" app.

02 Turn on bluetooth on your phone.

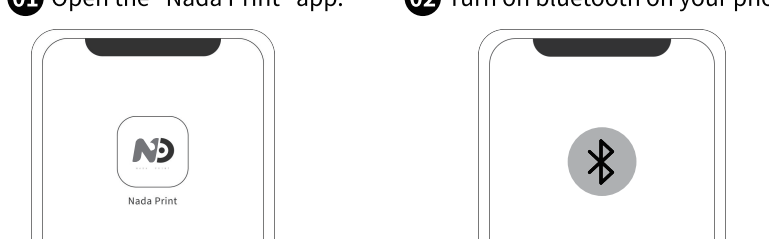

03. Press the Power Button on the back of the printer to turn it on. The Indicator Light on the Top Cover will be on.

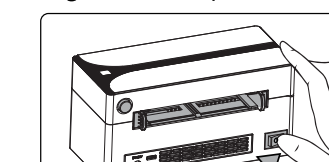


01 Fast flashing red light: No paper installed

Power on, Power off

2.3 Installing Label Paper

Insert the label paper into the paper slot with the print side facing up and the paper flat. When the printer automatically loads the paper, the installation is completed.

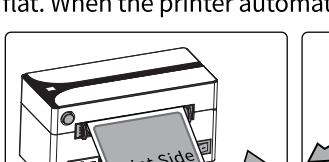

DHL recommends using 4"×6" (100×200 mm) labels

04. prining via computer

Downloading and Installing the Driver


Please visit the following website to download the driver.



01 For instructions on connecting the printer to your computer via Bluetooth, please visit nadain.com


Windows - Thermal Printer Installation

Double-click the file and install the driver.

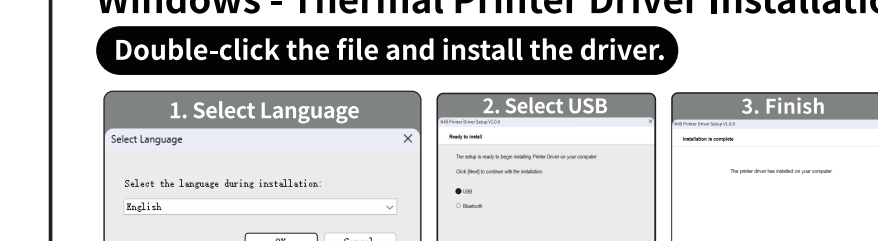

MAC- Thermal Printer Driver Installation


Double-click the file and install the driver.

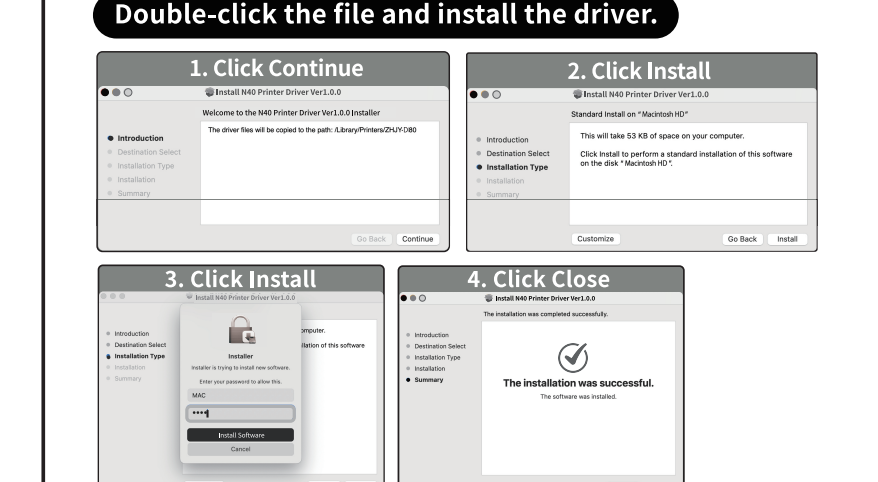

4.1 Connecting with USB Cable

01 Plug the USB Type-A (the wider end) into the Type-A port on the computer.


02 Plug the USB Type-C (the narrower end) into the Type-C port on the printer.

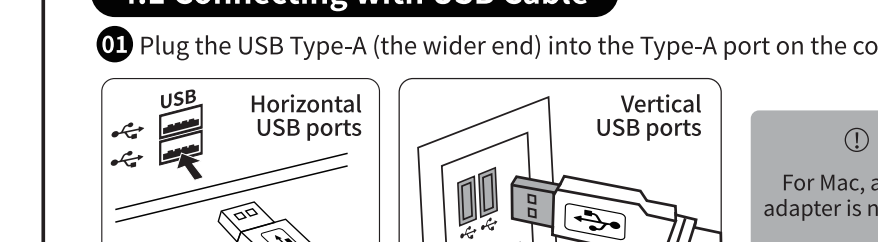

05. Print PDFs


01 Double-click to open the PDF file you wish to print.

02 Click [Print]

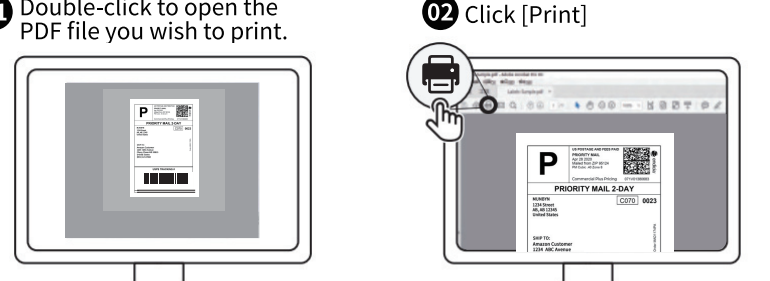


On the computer, select the N40 printer and choose the correct paper size and paper type in the Properties. Click "Print" to confirm once everything is correct.

5.1. Print PDFs on Windows

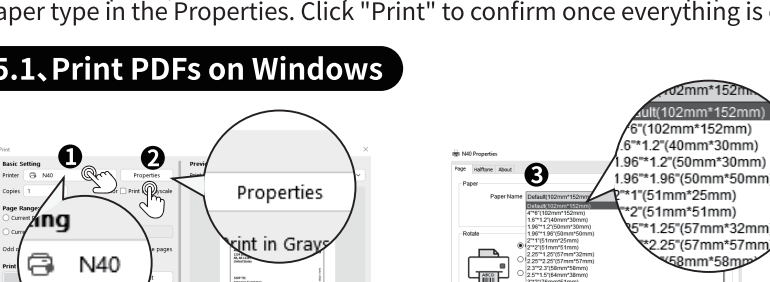

5.2. Print PDFs on MAC.

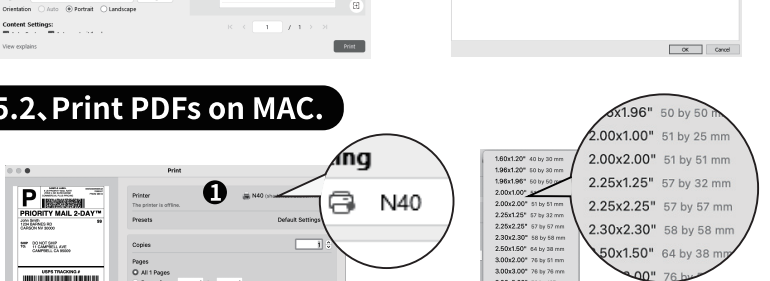

06. Nada Print Desktop Application


Note: Nada Print is an intuitive and user-friendly desktop editing application that enables effortless design creation, personalization, precise cropping, and high-quality printing of visually appealing projects. It offers full compatibility with both Windows and macOS platforms.

01 Open the link.

02 Download the Desktop Application compatible with your computer's operating system.




03 Once the download finishes, launch the desktop application to begin creating.

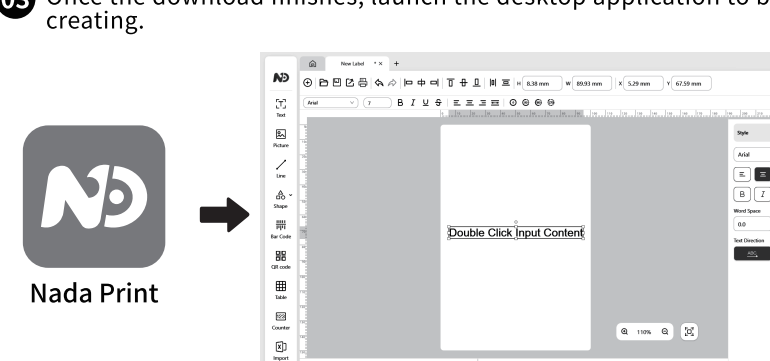

07. More Guidance and Video Tutorials

Visit the following URL for more guidance, video tutorials, and FAQs.

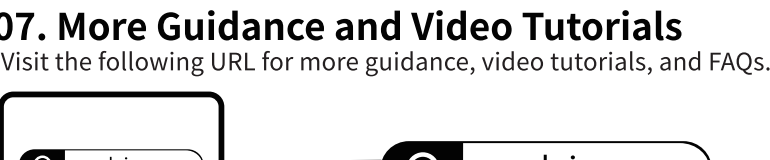

08. Additional Instructions

8.1 Indicator Light Instructions

Light	Printer Status	Recommended Action
Solid blue	Standby	/
Blue flashing slowly	Label jams or label detection error	Open cover and reload labels
Blue flashing quickly	Error in label learning mode	Confirm the label type and perform learning again
Solid red	Printer head is over-heated	Wait for the red light to turn blue
Red flashing slowly	Cover is not closed	Close the cover again
Red flashing quickly	Paper shortage	Reinstall the label paper
Solid purple	Printing	/
Purple flash	Pause printing	/

8.2 Button Instructions

Desired Action	Execution
Skip a label	While the blue light is steadily lit in standby mode (no print job in progress), press the button once.
Pause printing	When the printer is printing, press the Feeder Button once.
Resume printing	When the printer pauses printing, press the Feeder Button once to resume printing.
Print test page	Insert paper. While on standby, hold button for 4s until blue light flashes.
label learning mode (for cut label)	Insert paper. While on standby, hold the button for 5s until the blue light flashes twice.
label learning mode (for bar mark label)	Insert paper. While on standby, press and hold the button for 8 seconds until the blue light flashes three times.
Reset the printer	Insert paper. While on standby, press and hold the button for 10 seconds until the blue light flashes four times.

09. Specifications

Method	Direct Thermal
Resolution	203 dpi
Max Printing Speed	127 mm/s
Paper Width	25-110mm
Paper Thickness	0.08-0.2mm
Power Adapter	24V-1.5A
Printing Life	TPH 50KM
Operating Environment	Temperature: 5-45°C Relative Humidity: 20-85% (Non-condensing)
Storage Environment	Temperature: -20-60°C Relative Humidity: 5-90% (Non-condensing)

10. Pro Tips

Each time you change the label, please run the automatic label identification. -Press the feed button on the printer to skip a blank label. -Avoid poor quality labels as they can damage the printer. -Regularly clean the print head. -If the paper is jammed and the blue light is flashing slowly, run the automatic label identification. -Insert Label Printer into the same USB port on your computer every time. This will avoid creating duplicate copies of the printer in your operating system.

11. Safety Notices

The print head may be very hot after printing labels. Do not touch the print head. -Do not bend the power cord excessively or place objects on the cord. Do not use the printer if you find any irregularities as these could result in fire or electric shock. -Keep the printer out of reach of children. -Use only approved accessories and do not try to disassemble, repair the unit by yourself. -Keep the printer away from water and other objects that could penetrate the components. -Please unplug the printer when it is not in use for a long time.

12. Related Statements

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF exposure statement


IC RF exposure statement: The device has been evaluated to meet general IC RF exposure requirement. The device can be used in portable exposure condition without restriction. L'exploitation est autorisée aux deux conditions suivantes: 1. L'appareil ne doit pas produire de brouillage. 2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Notice

If the device cannot be turned on, please charge for one hour

Zhuhai Jiuyin Technology Co., Ltd.
Address: Room 302, Building 2, No.90 Chuangzhi Road, Tangjiawan Town, High-tech Zone, Zhuhai

N40

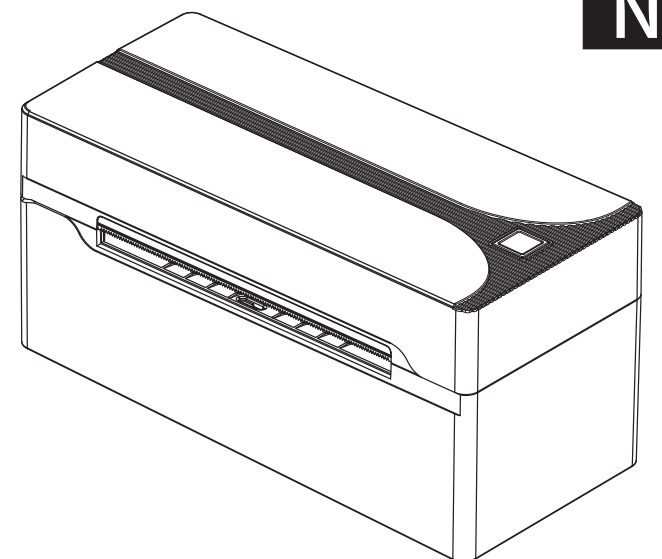

クイックスタートガイド

ご使用前に、本書をよくお読みいただき、将来の参照用に適切に保管してください。

プリンター x1

Type-C ケーブル x1


電源アダプター x1

4"×6" (101.6×152.4mm) ラベル x1 (20枚)

クイックスタートガイド x1

01. 製品紹介

1.1 プリンターの各部の説明

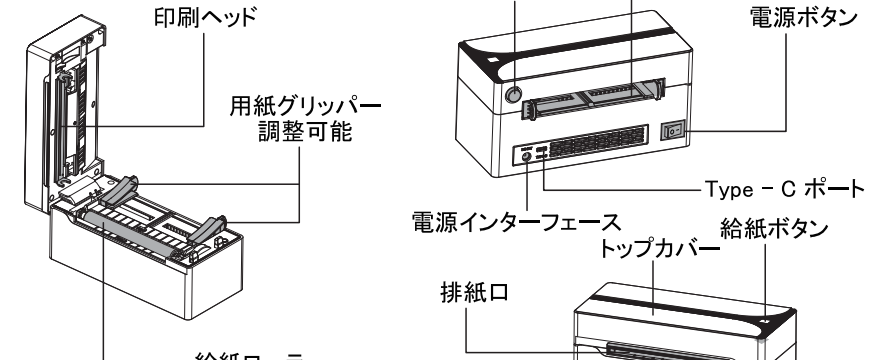

印刷ヘッド, カバーオープンボタン, 電源ボタン, 用紙グリップ, 誤装可能, 電源インターフェース, Type-Cポート, トップカバー, 給紙ローラー, 排紙口, 給紙口

02 使用前の準備

2.1 印刷ヘッドの保護紙を取り除く

01 カバーオープンボタンを押して、トップカバーを上に向けて開ける。

02 保護紙を取り除く。

2.2 電源への接続

01 電源アダプターの丸い端子をプリンターの電源インターフェースに差し込む。

02 電源コードのプラグをコンセントに差し込む。

115 VAC, 230 VAC, 115 VAC, 230 VAC

03. アプリのダウンロード

プリンターを使用する前に、Google Play または App Store から「Nada Print」アプリをインストールしてください。



01 QRコードをスキャンして、印刷用の「Nada Print」アプリをダウンロードする。インストールしてください。

02 携帯電話の Bluetooth をオンにします。

03 Nada Print アプリを開きます。

3.1 モバイルデバイス経由での印刷


携帯電話の設定でプリンターに接続しないでください。

01 「Nada Print」アプリを開きます。

02 携帯電話の Bluetooth をオンにします。



04. プリンターを電源ボタンを押して電源を入れます。トップカバーのインジケータライトが点灯します。

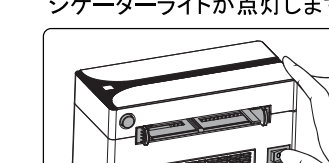

01 黄色いライトが点灯: 用紙が設置されていません

電源オン, 電源オフ

2.3 ラベル用紙の装着

印刷面を上にし、用紙を平らにして用紙スロットにラベル用紙を差し込みます。プリンターが自動的に用紙をロードすると、装着は完了します。




DHL は、4"×6" (100×200mm) のラベルの使用を推奨しています。

04. コンピューター経由での印刷

ドライバーをダウンロードとインストール

ドライバーをダウンロードするには、次のウェブサイトには、nada.com をご覧ください。

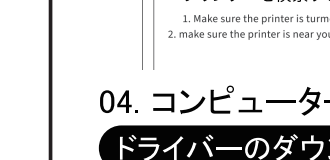

01 Bluetooth 経由でプリンターをコンピュータに接続するための手順については、nada.com をご覧ください。


Windows - サーマルプリンタードライバーのインストール

ファイルをダブルクリックしてドライバーをインストールしてください。



MAC - サーマルプリンタードライバーのインストール

ファイルをダブルクリックしてドライバーをインストールしてください。

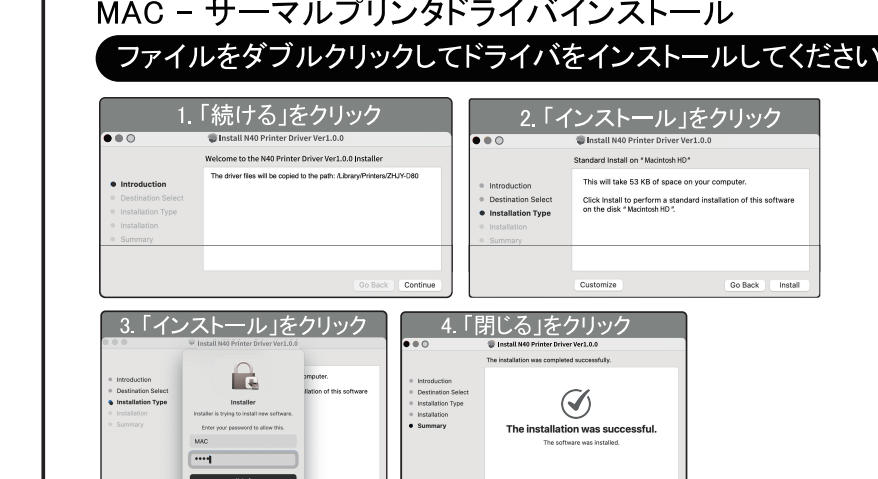

4.1 USBケーブルでの接続

01 USBタイプA (幅の広い方の端子) をコンピュータのタイプAポートに接続してください。


02 USBタイプC (幅の狭い方の端子) をプリンターのタイプCポートに接続してください。



05. PDFの印刷

01 印刷したいPDFファイルを開くためにダブルクリックします。

02 [印刷]をクリックします。

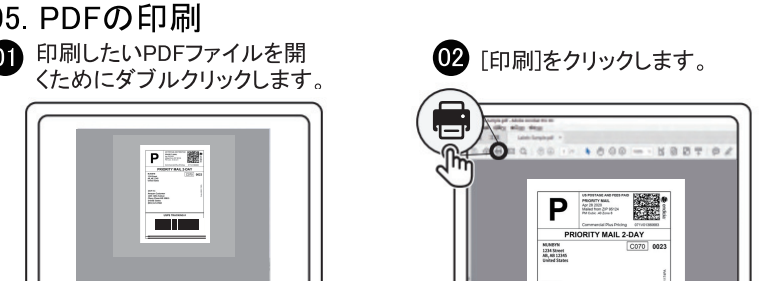

コンピュータ上で、N40プリンターを選択し、[プロパティ]で正しい用紙サイズと用紙タイプを選択してください。すべてが正しいことを確認したら、「印刷」をクリックしてください。

5.1. WindowsでPDFを印刷する



5.2. MACでPDFを印刷する



06. Nada プリントデスクトップアプリケーション


注: Nada Printは、直感的で使いやすいデスクトップ編集アプリケーションで、簡単なデザイン作成、カスタマイズ、精密な切り抜き、そして視覚的に魅力的なプロジェクトの高品質な印刷を可能にします。WindowsとmacOSプラットフォームの両方と完全に互換性があります。

01 リンクを開く。

02 コンピュータのオペレーティングシステムに対応したデスクトップアプリケーションをダウンロードします。




03 ダウンロードが完了したら、デスクトップアプリケーションを起動して作成を開始します。

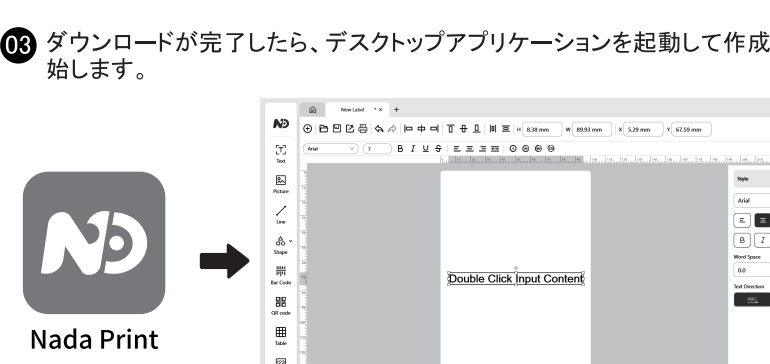

07. さらなるガイダンスとビデオチュートリアル

詳細なガイダンス、ビデオチュートリアル、およびFAQについては、次のURLを訪問してください。

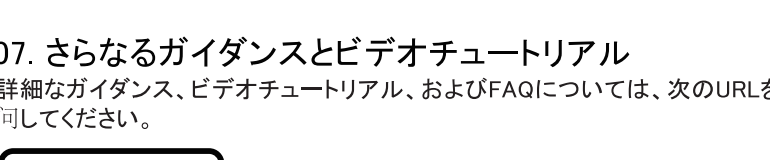

08. 追加の指示

8.1 インジケータライトの指示

ラット	プリンタステータス	推奨アクション
緑の点滅	待機中	/
ゆっくりと青の点滅	ラベルジャムまたはラベル検出エラー	カバーを開いてラベルを再ロードする
速く青の点滅	ラベル学習モードでエラー	ラベルタイプを確認し、再度学習を実行する
ゆっくりと赤の点滅	プリンタヘッドが過熱	赤いライトが青に変わるのを待つ
速く赤の点滅	カバーが開いていない	カバーを再び閉じる
緑の点滅	ラベル用紙不足	ラベル用紙を再インストールする
緑の点滅	印刷	/
紫の点滅	印刷一時停止	/

8.2 ボタンの指示

望ましいアクション	実行
ラベルをスキップ	待機モードで青のライトが一定に点灯している間(印刷ジョブ進行中ではない)、ボタンを押す
印刷を一時停止	プリンタが印刷の間、フィードボタンを押す
印刷を再開	プリンタが印刷を一時停止した間、フィードボタンを押して印刷を再開する
テストページを印刷	用紙を挿入する。待機中の間、青のライトが点滅するまで4秒間押し続ける。青のライトが4回点滅するまで待機する
ラベル学習モード(フックラベル用)	用紙(ペーパー、又は紙)をセットしてください。待機中に、ボタンを4秒間押し続ける。青のライトが4回点滅するまで待機する
ラベル学習モード(フックラベル用)	用紙を挿入する。待機中の間、青のライトが点滅するまで8秒間押し続ける
プリンタをリセット	用紙を挿入する。待機中の間、青のライトが4回点滅するまで10秒間ボタンを押す

09. 仕様

項目	直熱式
解像度	203 dpi
最大印刷速度	127 mm/s
用紙幅	25-110mm
用紙厚さ	0.08-0.2mm
電源アダプタ	24V-1.5A
印刷寿命	TPH 50KM
動作環境	温度: 5-45°C 相対湿度: 20-85% (結露なし)
保管環境	温度: -20-60°C 相対湿度: 5-90% (結露なし)

10. プロのヒント

- ラベルを変更するたびに、自動ラベル認識を実行してください。
- ラベルの品質を向上させるには、プリンターの選り好みを使用してください。
- 品質の高いラベルはプリンターを保護する可能性があるため、使用しないでください。
- プリンタヘッドを定期的に清掃してください。
- 印刷が正常に実行されない場合は、自動ラベル認識を実行してください。
- ラベルプリンターをコンピュータの同じUSBポートに再接入してください。これにより、オペレーティングシステムにプリンターの重複コピーが作成されるのを防ぎます。
- 電源コードを迅速に切り替えて、コードの上部に物を置いたりしないでください。
- 不規則な点が現れた場合はプリンターを使用しないでください。火災や感電の原因となる可能性があります。
- プリンターを子供の届かないところに保管してください。
- 承認されたアクセサリのみを使用し、自分でユニットを分解、修理しないでください。
- プリンターを水やコンプレックスに浸漬する可能性がある液体の液体に近く保管しないでください。
- 長時間使用しない場合はプリンターの電源プラグを抜いてください。

注意: デバイスが起動しない場合は、1時間充電してから再度お試しください。

珠海久印科技有限公司
住所: 珠海市高新技術産業開発区唐家鎮前鋒路90号2層302室