
Digital music player


Model: T60 User Manual

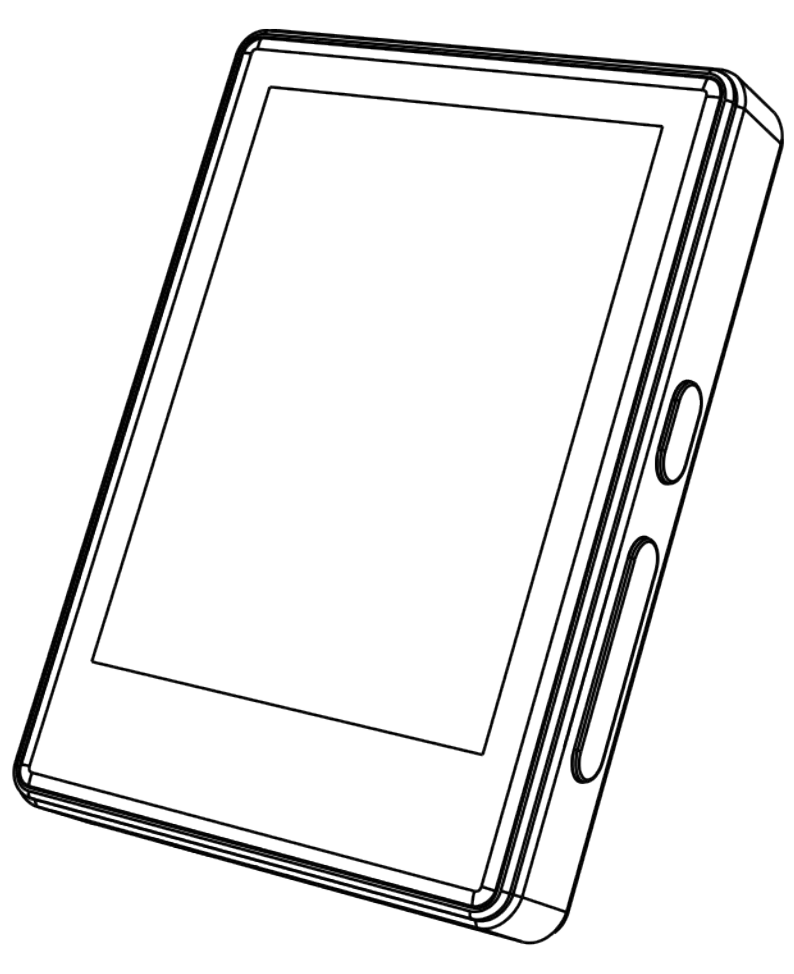

※ Please read the instructions carefully before using this product.

GETTING STARTED

INDEX TO PARTS AND CONTROLS

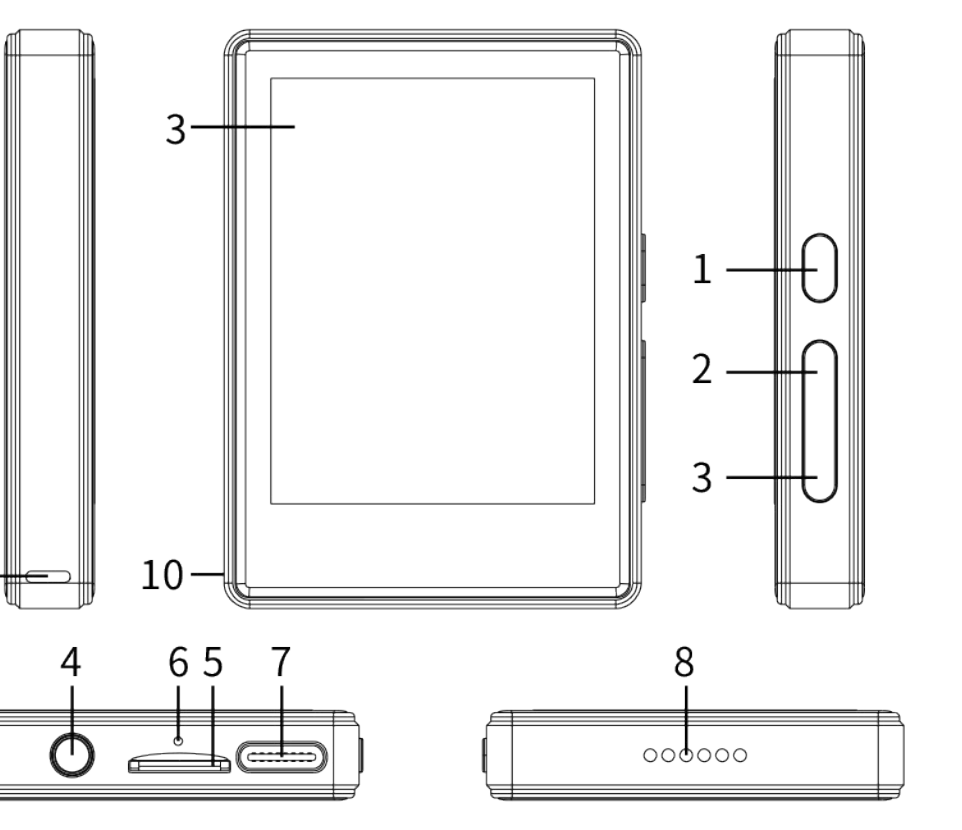


1	⏻/⏯	Press and hold: switch on/off the player
2	VOL+	Increase the volume
3	VOL-	Decrease the volume
4	🎧	3.5 mm headphone connector
5		TF Card Slot

6	Reset	Press the hole by using a thin stick if the product malfunctions.After pressing the reset button, the player will power off,please manually press the power button to turn it back on.
7	USB Port	USB connector for power charging and data transfer
8	Speaker	
9	Display Window	
10	Strap Hole	A strap is not supplied.

CHARGE BEFORE USING

Tip

- Make sure to use an DC adaptor that is no greater than 1A/5V.Any recorder that stops functioning after being charged with the incorrect DC adapter will not be covered under warranty.
- Smartphone fast charge adapter is not available.

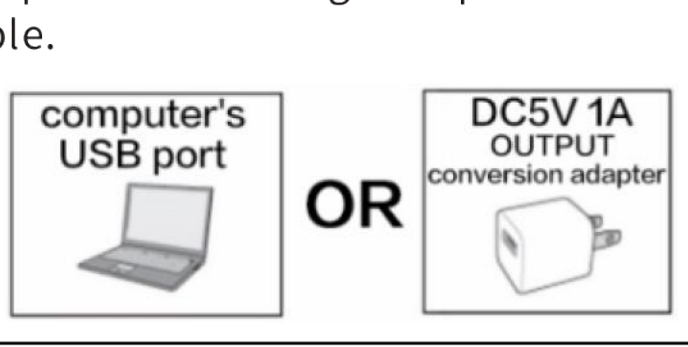

Notes

- When you connect T60 Music Player to a computer, you are briefly prompted to select: [**Charge & transfer**] or [**Charge & play**].
- T60 automatically applies [**Charge & transfer**], if no new selection is made.

How to charge the voice recorder

T60 Music Player has a built-in battery that can be charged through the USB port of a computer or USB adaptor.When charging, the battery icon in the top right corner turns green from white .

How to estimated battery level

You can check the remaining battery level by looking at the battery icon in the upper right corner of the display.

Less than 25% | 25%~50% | 50%~75% | 75%~100%

Turning the Player On or Off



Turning the power on

Press and hold"⏻/⏯"button for 5 seconds The recorder is turned on, and the"welcome"animation is display.

Turning the power off

Press and hold"⏻/⏯"button for 3 seconds.The recorder is turned off, and the" ⏻ "animation is display.

OPERATION OF MAIN FUNCTIONS

MUSIC

1.Find music on the player

After you sync the music player with your PC media library, find the music on the player.

In[Music],songs are sorted by metadata or ID3 tag under different collections: [**All songs**], [**Artists**], [**Albums**], or [**Favorites**].

All songs

Songs are sorted by song title in alphabetical order.

Artists

Songs are sorted by artist in alphabetical order; Under each artist, songs are sorted by album in alphabetical order.


Albums

Songs are sorted by album in alphabetical order.

Favorites

Display songs added to "My Favorites."

2.Play music

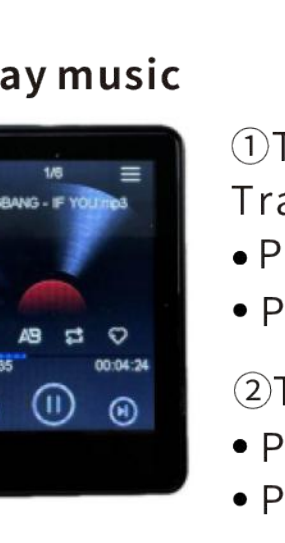

①Touch ⏮ to Previous Track / Rewind
- Press: Play the previous song.
- Press and hold: Rewind.

②Touch ⏭ Next Track / Fast Forward
- Press: Play the next song.
- Press and hold: Fast forward.

③Touch ⏯ to Play / Pause

④Touch ↩ back to exit

⑤Touch ≡ button enter to playing settings menu a related list will show as follows:

Return to Home Page

Press it will return to the home page.

Variable Speed Playback

Adjust the playback speed from -9x to +9x by sliding up or down.Click the "OK" button at the top right to save the setting.

Play Mode

Includes 3 play modes"Repeat 1" ,"Repeat All"and "Shuffle".

- Repeat All:Play all the songs in this unit repeatedly in a loop.The icon is displayed as" 🔁 ".
- Shuffle:Play songs/recording in this unit randomly.The icon is displayed as" 🔀 ".
- Repeat 1:Repeats the playback of the selected song. The icon is displayed as" 🔂 ".

Bookmarks

- How to add a bookmark:While playing a song, press the " 🔖 " option when you reach the desired point in the song.

- How to view a bookmark:Press and hold a saved bookmark will immediately jump the playback to the recorded time.
- How to delete a bookmark:Press and hold the bookmark you want to delete.Then to confirm, click"Yes".

Add to Playlist

Add the playing song to "My Favorites".After adding the song, the icon ♡ will change from an empty heart to a red heart ❤, indicating that it has been successfully added to your favorites.

Equalizer

The following 7 kinds of sound effects can be converted:
Normal,Pop,Rock,Jazz,Classical,Dance,Country

⑥Touch X to set variable speed playback
After clicking, the song's playback speed can be adjusted from -9x to +9x.When the speed is set to 0, the icon is displayed in white X. For any speed other than 0, the icon is displayed in blue X7.

⑦Touch AB to set AB repeat playback

- **First Click:** When you first click the icon, point A (starting point) is set, and the icon will turn blue AB.
- **Second Click:** On the second click, point B (ending point) is set, and the icon will turn green AB.
- **Third Click:** The third click will disable the A-B repeat function, and playback will resume as normal AB.

⑧Touch 🔁 to set playback mode
Tap the icon to switch between "Repeat All," "Shuffle Play," and "Repeat One" modes. The icon will change as follows:
- Repeat All: " 🔁 ".
- Shuffle: " 🔀 ".
- Repeat 1: " 🔂 ".

⑨Touch ♡ to add the song to"My Favorites"
Click the icon ♡ to add the current song to "My Favorites",the icon will turn to ❤, indicating that it has been successfully added to your favorites.

E-BOOK

Find"Ebook"icon on the home page to access to its function.

①Select a book.
②Touch" ▶ "to start automatic page-turning mode, touch" ❙❙ "to pause, touch the" ↩ "button to go to the previous screen.



③On the ebook reading interface,swipe left or right with your finger on the screen to read the next page or the previous page.

④Touch the" ≡ "button enter to the ebook settings menu a related list will show as follows:

Set Auto Page Turn Time

You can adjust the auto page turn time of the e-book from 03 seconds to 30 seconds. Tap the "OK" button in the top right to save the settings.

Background color

You can adjust the background color of the reading screen. The options are "Black," "White," and "Yellow".

Bookmarks

On ebook, you can add up to 5 bookmarks to the play page. Start play from the bookmarked play page as needed.

How to add a bookmark?

Save the current page of the e-book in bookmarks. Tap a bookmark to jump to the saved page.

How to delete a bookmark?

Press and hold the added bookmark for 2 seconds to bring up a confirmation popup for deletion. Click "Yes" to delete.

Note: When using a Mac operating system, only UTF-8 encoded TXT files are supported. Opening files with other encodings may result in garbled text.

FM RADIO

Note:Plug in the supplied earphones when you tune in to radio stations. The earphones double as antenna. For better reception, move the earphone cable in different directions.

1.Tune in to radio stations

Auto tune

The first time you tune in to the radio, start uto tune to search for stations.

①On the FM radio playing interface, touch" ≡ " button to access to the FM radio settings.

②Select [Auto Tune FM] and press it, the play screen will display the message " Radio Searching ". Once the auto tune is complete, the message " Auto Tune FM Completed " will appear.

Manual tune

Use Manual tune to search for a frequency or station.

①Press the "+/-"buttons to manually tune the FM frequency.

②Fine-tune the station by pressing the buttons to move in 0.1 MHz increments.

③Once you have tuned to the desired station, it will play automatically.

④Press" ⏮ "to jump to the previous saved radio station.

⑤Press" ⏭ "to Skip to the next saved radio station.

2.Saving Radio Stations
To save a station, press" ≡ " button to access to the FM radio settings, select[Preset FM Stations] >[1.FM

-/2.FM...] to set preset tradio stations.Press and hold the [1.FM-/2.FM...] to delet the preset FM stations.

3.Delet Radio Stations
Press" ≡ "button to access to the FM radio settings. Press [Clear All Preset FM],select[Yes].

4.How to select the FM band?
On the FM radio settings menu, touch the option "FM Frequency Band" then you could select the different Band.

United States Band: 87.0 MHZ ~ 108.0 MHZ

Japan Band: 76 MHZ ~ 90 MHZ

Europe Band: 87.0 MHZ ~ 108.0 MHZ

FOLDER

1. Opening a File
Tap a folder to enter it, then select and tap the file you want to open.

2. Deleting a Folder
Press and hold the folder you wish to delete. A confirmation pop-up will appear. Tap "Yes" to delete the folder.

3. Deleting a File
Press and hold the file you wish to delete. A confirmation pop-up will appear. Tap "Yes" to delete the file.

RECORDINGS

1.How to start recorder?

①On the playback screen, select [**Start Voice Recording**] to begin recording.

②Press the pause button"⏸"to pause the recording,and press it again to resume.

③Press the retune button" ↩ " end the recording, then press [**Yes**] to save it.Recordings are saved in the [**Recordings Library**].

Note: The recording file name follows this format:

20230913-093430-120min.wav

- **20230913:** The date of the recording (year/month/day)
- **093430:** The time of the recording (hour/minute/second)
- **120min:** The maximum recording duration (in minutes)
- wav: The file format

2.How to Playback Recordings?

Go to [Recorder] > [Recordings Library] to listen to the voice recordings.

3.How to set voice activated recorder?

Go to [Recorder] > [VOR] and toggle the VOR switch on.The " 🎙 "icon will appear on the display.

4.How to Set Recording Quality?

The default recording quality is Standard-Quality (128kbps).To switch to High-Quality Recording (705kbps), go to [Recorder] > [Recording Quality].

PICTURE

1.Add pictures to the player

① Connect the MP3 player to your computer using a USB cable.

② On your computer, navigate to [My Computer] or [Computer], then select [NO NAME] (the MP3 player). Create file folders on the device.

③ Drag and drop image files from your computer into the folders on the MP3 player. Alternatively, you can also drag and drop entire folders from your computer to the MP3 player.

2.View picture

To access the image viewer, tap the "Picture" icon on the main screen. Browse your image files by selecting the desired image.
- Swipe Down: Navigate to the previous image.
- Swipe Up: Move to the next image.
- Swipe Left/Right: Exit the image viewer by swiping left or right.

Note:
- The maximum supported image size is 240x320 pixels. Images with this resolution will display clearly.
- If the image size or aspect ratio is incorrect, the image may appear blurry. Ensure your images are correctly sized for the best display quality.

BLUETOOTH

Tap the "Bluetooth" icon on the main screen to enter the Bluetooth settings.

1.Bluetooth (Off/On)

You can toggle Bluetooth on or off. When Bluetooth is turned on, a white icon "ᛒ" will blink in the upper right corner of the screen. Once connected, the icon will turn blue"ᛒ".

2. Paired Devices

① Tap the name of a paired device to disconnect or unpair the device.

② Tap the name of an unpaired device to connect to that device.

3. Available Devices

Tap the icon on the right side to search for available devices. While searching, the icon will rotate.

Note: This device cannot connect to smartphones via Bluetooth. Please connect to Bluetooth headphones, speakers, or other BT devices.

4. Device Name

You can check the Bluetooth name of this device.

How to pair this mp3 player with Bluetooth speaker or Bluetooth headset? ①Make sure the bluetooth speaker or bluetooth headset power on and open the bluetooth mode.

②Turn on the bluetooth mode on mp3 player, and start to search for the bluetooth device around.

③After find the bluetooth device then choose the bluetooth device to start to pair with bluetooth speaker or bluetooth headset.

Note:

- Under Bluetooth playing mode only support following formats: MP3, WMA, WAV, FLAC, APE,OGG. This mp3 player can not pair with smart phone.
- When Bluetooth mode is enabled and wireless headphones are connected, the Photo and Recording functions cannot be used. Attempting to use these features will cause the music to pause.
- If you still have trouble to pair with your headphones or speaker,
- please contact our after-sales service (eakkorwork@outlook.com).We are always here to

SETTING

Tap "Settings" on the main interface to access various functions. The related options will be displayed as follows:

1.Language

Select from 6 available languages.

2.Date & Time

You can set the Date and Time by swiping up or down on the screen to adjust the numbers. Tap the "OK" button in the upper right corner to save your settings.

3.Brightness

Tap the "Brightness" option to access the brightness adjustment interface.Swipe up or down on the screen to adjust the brightness,and tap "OK" to save your settings.

4.Backlight Timer

If there is no operation and playback, the display will turn black. Choose a duration from 10 to 60 seconds in the "Settings" menu under "Backlight Timer."

5.Idle Shutdown

① Idle Shutdown: Turn the idle shutdown feature on/off.

② Set Idle Shutdown Time: Adjust the time from 1 minute to 60 minutes by swiping up or down on the screen. Tap the "OK" button in the upper right corner to save your settings. The device will automatically power off if no operations are performed within the set time.

※ When "Idle Shutdown" is turned off, the "Set Idle Shutdown Time" becomes invalid.

6.Timed Shutdown

① Timed Shutdown: Turn the timed shutdown feature on/off.

② Timed Shutdown Time Setting: Adjust the time from 1 minute to 99 minutes by swiping up or down on the screen. Tap the "OK" button in the upper right corner to save your settings. The device will automatically shut down at the set time, even if in use.

Note: When "Timed Shutdown" is turned off, the "Timed Shutdown Time Setting" becomes invalid.

7.Information

Display the software version and product model of the device.

8.Storage Status

Check remaining storage capacity in the "Settings" menu by selecting "Storage Status." This helps manage space for new recordings.

9.Factory Setting

Restore the device to original factory settings by selecting "Factory Settings" in the "Settings" menu. This resets configurations but does not delete recorded files.

10.Update Playlist

Access the "Playlist" option to add or remove recordings for easier navigation. Save your changes after customizing your playlist.

11.Formatting SD Card

Format the SD card by selecting "Format SD Card" in the "Settings" menu. Remember to back up important files, as formatting erases all data on the card.

Note:Please back up your important recording files to your computer before formatting.

ALARM

Tap the "Alarm" icon on the main screen to enter.

1.Alarm ON/OFF

To turn the alarm on or off, simply navigate to the alarm settings. Toggle the alarm switch to "ON" or "OFF." When the alarm is activated, an alarm icon " ⏰ " will appear on the screen, indicating that it is set.

2.Add Alarm

You can add a new alarm by selecting the "Add Alarm" option. Adjust the alarm time by swiping the numbers up or down. Once you've set

your desired time, press "OK" to confirm. You can create multiple alarms if needed.

3.Alarm Cycle

The alarm cycle allows you to choose how often the alarm repeats. Select from options such as Once, Daily, or Working Day.

PRODUCT SPECIFICATION

Product Name	Product Name: Digital music player
Product Model	T60
Dimension	49.5x68.2x12.4mm
Weight	71g
Display size	2.8 inch
MicroSD card	SD cards up to 128 GB are supported
Recording format	WAV
Music format	MP3/WAV/FLAC/APE/WMA /OGG
Frequency responce	20Hz-20kHz
SNR	90dB

Microphone	Non-directional microphone
Operating temperature	-15℃--45℃
Batte ry Capacity	500mAh
Battery voltage	3.7V
Charging voltage	USB 5V
Charging current	300mA-500mA
Charging time	about 1.5~2 hours
Supported OS	WindowsXP/Vista/Win7 /Win8/Win10/Mac

SUPPORT AND TROUBLESHOOTING

Unable to Power On	• Is the charging cable functioning properly? Or is the battery still charged? • If the device won't turn on after charging and pressing the "Power" button, it may indicate a malfunction or end of life.

Sudden Shutdown	• Check if the battery is drained. Please verify on the LCD screen and charge the device. • The auto power-off feature may have activated. Try pressing the "Power" button again. • Consider formatting the memory card.
Unable to Connect to Bluetooth Devices	• Ensure the Bluetooth device is in pairing mode. Set it to pairing mode and retry. • Check the distance and rem ove obstacles. Place the Bluetooth device within 1 meter of the device. • Verify if the pairing information has been deleted and reconfigure if needed. • This device cannot connect to smartphones via Bluetooth; connect Bluetooth headphones or speakers instead.

Unable to Connect to Phone via OTG Function	• If you can't connect with the latest iOS version, revert to an earlier version and try again. • Ensure the OTG adapter and USB cable are securely connected.
Unable to Be Recognized by Computer	• After connecting to the computer, select "File Transfer" from the "Connection Type Selection" menu on the device. Avoid selecting "Charge Only." This menu disappears after 10 seconds, so select promptly. • The battery may be depleted; charge for at least 30 minutes. • Connect to the computer only after completing the initial setup. • Format the memory card before connecting. • Ensure the computer's operating system (OS) is supported.

	• If there are connection issues, try using a different USB cable. • Use a USB cable that supports data transfer.

FCC Caution:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
– Connect the equipment into an outlet on a circuit different

from that to which the receiver is connected.
– Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.