


说明书尺寸: 70*90MM

PANTONE 2297C

PANTONE Black 3C

OMNIBAR

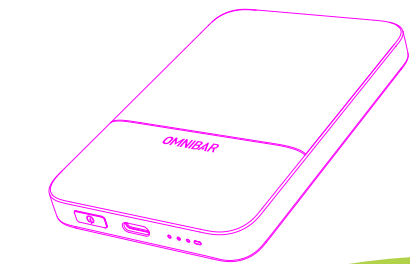

5000mAh

MAGNET POWER BANK USER GUIDE
3000mAh倍速充电移动电源用户指南
3000mAh倍速充電移動電源用戶指南
3000mAh倍速充電移動電源用戶指南

IMPORTANT SAFETY INSTRUCTIONS

Before using this power bank, please carefully read all warnings and instructions. To avoid risks like explosions, fires, electric shocks, or personal injury, adhere strictly to these guidelines and those from the manufacturers of any equipment you use with the power bank. Omnibar may update this information without prior notice. For the latest updates and the most recent User Manual, visit www.omnibar.com.

WARNINGS

INSTRUCTIONS PERTAINING TO RISK OF FIRE, ELECTRIC SHOCK, OR PERSONAL INJURY.

With great power comes great responsibility! When using this power bank, basic safety precautions should always be followed. Please read all the instructions before using the product:

- **KEEP AWAY FROM CHILDREN:** Don't allow children to operate or play with the power bank.
- **ALWAYS KEEP DRY:** Protect the power bank from rain, snow, and any form of liquid. Do not charge or use the power bank if it's exposed to liquid. If internal components get wet, your power station MUST be disposed of. Isolate it in a fire safe location before disposal. Failure to comply with these guidelines could cause serious damage, injury, or worse. Contact your local fire department if you see any sparks or small burning.
- **FLAME-FREE ZONE:** Keep smoking, sparks, and flames away from the power bank.
- **AVOID STATIC:** Do not expose the device to strong electrostatic or electromagnetic interference.
- **HANDLE GENTLY:** Avoid dropping or severe impacts to ensure the power bank works properly.
- **NO TAMPERING:** Do not attempt to open the power bank casing. Never allow foreign objects to enter into inputs, outputs or ventilation holes.
- **NO BATTERY REPLACEMENT:** Do not try to replace or alter the power bank battery. It is rechargeable but not replaceable.
- **PROFESSIONAL SERVICING ONLY:** Only a qualified repair person should service the device using the correct parts to ensure continued safety.

TECHNICAL SPECIFICATIONS

MODEL: P9B5K6

CAPACITY: 5000mAh (3.7V 18.5Wh)

RATED CAPACITY: 2000mAh (5V=2.4A)

USB-C INPUT: 5V=3A 9V=2A (18W Max)

USB-C OUTPUT: 5V=2.4A 9V=2.2A 12V=1.67A (20W Max)

WIRELESS OUTPUT: 5W / 7.5W / 10W / 15W

TOTAL OUTPUT: 5V=2.4A

MATERIALS: Fireproof PC+ABS Plastic

SIZE: 104*68*13.3mm

WEIGHT: 131g

IN THE BOX

Power Bank X1
211 USB-C to USB-C Charging Cable X1
Instruction Manual X1


PRODUCT OVERVIEW



Recharging Power Bank



Charging Your Phone or Tablet Using Charging Cables



Charging an iPhone and Other Devices Wirelessly



OPERATING GUIDELINES

- **AVOID WATER:** When traveling, take care to keep it dry; avoid rain, snow and any water. It's also best to keep it cool and shaded from direct sunlight.
- **KEEP IT COOL:** Give your power bank some breathing room. Don't stack things on it or block its ventilation while in use or in storage.
- **COOL DOWN BEFORE CHARGING:** After a full discharge, let your power bank chill for 1-2 hours before recharging. It's like letting it take a nap and prolongs the life of your battery!
- **RECHARGE REGULARLY:** To preserve the battery, use and recharge the power bank at least once every 3 months.
- **ONE PORT, ONE DEVICE:** Don't overload it! Only power one device per port or socket on the power bank. Never connect a multi-outlet power strip, surge protector or extension cord.
- **USE CERTIFIED ACCESSORIES ONLY:** Ensure all accessories, attachments and appliances used with the power bank are safety certified to avoid potential hazards.
- **PULL THE PLUG:** When disconnecting, pull the plug not the cord. It's less likely to break into an accidental tug-of-war, damaging your cables or power bank.
- **INSPECT CORDS:** Ensure that cords, plugs, and cables are not damaged before using with these products.
- **CHECK FOR DAMAGE:** If you spot any cracks or damage, stop using the power bank immediately. Avoid contact with any leaked liquid. The battery acid can be irritating or worse. If it touches skin or eyes, flush with water and seek medical attention.
- **AVOID USING DAMAGED UNITS:** Do not operate the power bank or any connected devices if they are damaged or altered.

OPERATION INSTRUCTIONS

- **To check battery status:** Press the button once to check the battery status (remaining power). The indicator will light up about 30s before it automatically turns off.
- **When charging using a cable:** The power bank will automatically start to output when you connect a charging cable to it. However, due to compatibility issues, for some phones you need to press the power button once to start charging. The output mode will stay for 30s after you press the button, during which if there's a no device connected, the mode will automatically shut down.
- **When charging wirelessly:** This product has an auto-wake function for wireless charging, just place your phone onto it, and it will automatically start charging. But for some phones, due to compatibility issues, the wireless charging function needs to be activated by pressing the button. Press it once, the battery indicator will light up and the wireless charging is turned on, and you can place your device on it. If there's no load connected for the wireless charging in 30s, the power bank will automatically shut off the wireless charging function.

WIRELESS CHARGING TIPS

Place your phone (on the wireless charging area (as it shows in the picture)) for wireless charging. The distance between the charging phone and the power bank must be within 8mm for wireless charging to work. If not, it will stop charging, and you need to adjust the phone's position.

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna. (2) Increase the separation between the equipment and receiver. (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. (4) Consult the dealer or an experienced radio/TV technician for help.

Omnibar is a trademark of Omnibar LLC. All the images and text in this user guide are the copyright of Omnibar. The photos and illustrations in this guide may differ from the actual product.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

WEEE INFORMATION



Disposal and recycling information: This product and battery should not be used as household garbage or thrown into the fire. When you wish to dispose of the product and battery, please handle the battery according to the local environment all laws to avoid explosion.



WARNING: Do not disassemble, crush, or expose to fire or high temperatures. If significant swelling occurs, discontinue use immediately. Never use after submersion in water.

Only suitable for safe use in non-tropical climates

Made in China



重要安全说明

请务必仔细阅读本指南, 请仔细阅读所有警告和说明, 为避免爆炸、火灾、触电或人身伤害等风险, 请严格遵守这些准则以及您与移动电源一起使用的任何设备制造商的准则。Omnibar 可能会在不事先通知的情况下更新此信息。如需最新更新和最新的用户手册, 请访问 www.omnibar.com

警告

有关火灾、触电或人身伤害风险的说明。

能力越大, 责任越大!

使用此移动电源时, 应始终遵循基本的安全预防措施。使用产品前, 请阅读所有说明:

- **避免人员受伤:** 请勿让儿童操作或使用移动电源。
- **始终保持干燥:** 保持移动电源免受雨水、雪水和任何形式的液体的侵蚀。如果移动电源接触到液体, 请勿充电或使用。如果内部组件被侵蚀, 则必须丢弃移动电源, 丢弃前请将其隔离在安全的位置。不当处理这些液体可能会导致严重损坏、受伤或更糟的情况。如果您看到任何火花或闻到异味, 请联系当地消防队寻求帮助。
- **无火区:** 请勿将烟蒂、火花和火焰靠近移动电源。
- **避免静电:** 请勿将设备靠近强静电或高温环境。
- **轻柔轻放:** 避免跌落或严重撞击, 以确保移动电源正常工作。
- **禁止篡改:** 请勿尝试打开移动电源外壳。切勿让异物进入输入、输出口。
- **不可更换电池:** 请勿尝试更换或回收移动电源电池。
- **仅供专业人士维修:** 只有合格的维修人员才能使用正确的零件维修设备, 以确保安全。

技术规格

型号: P9B5K6

电池类型: 聚合物锂电池

能量转换效率: >70%

容量: 5000mAh (3.7V 18.5Wh)

额定容量: 2000mAh (5V=2.4A)

USB-C输入: 5V=3A 9V=2A (18W Max)

USB-C输出: 5V=2.4A 9V=2.2A 12V=1.67A (20W Max)

无线输出: 5W / 7.5W / 10W / 15W

总输出: 5V=2.4A

材料: 防火 PC+ABS 塑料

尺寸: 104*68*8.8*13.3mm

重量: 131g


执行标准: GB 4943.1-2022; GB 31241-2022

制造商: 深圳市凯欣科技有限公司

包装内容

移动电源 X1
211 USB-C to USB-C 充电线 X1
使用说明书 X1


产品概述



使用充电线为手机或平板电脑充电



为 iPhone 和其他设备无线充电



操作指南

- **避免溺水:** 旅行时, 注意保持干燥, 避免雨、雪和任何液体。最好保持干燥并避免阳光直射。
- **保持干燥:** 让您的移动电源留出一丝呼吸空间, 使用或储存时, 请勿在其上堆放物品或阻塞通风口。
- **充电前冷却:** 完全放电后, 让您的移动电源冷却 1-2 小时后再充电, 延长使用寿命!
- **定期充电:** 为保护电池, 请至少每 3 个月使用和充电一次移动电源。
- **一个端口, 一个设备:** 不得超过 1 个移动电源上的每个端口连接多个设备。切勿连接多个电源板、电源保护板或延长线。
- **仅使用经过认证的配件:** 确保与移动电源一起使用的配件、附件和设备都经过安全认证, 以避免存在风险。
- **谨慎插拔:** 断开连接时, 请拔插头, 避免拉扯造成数据线或移动电源损坏。
- **检查电线:** 在使用电源之前, 请检查电线、插头和数据线是否有损坏。
- **检查损坏情况:** 如果发现任何损坏或损坏, 请立即停止使用移动电源, 避免连接任何潜在的液体。电池液体可能会刺激皮肤或眼睛, 如果接触到皮肤或眼睛, 请用水冲洗并就医。
- **避免使用损坏的设备:** 如果移动电源或任何连接的设备已损坏或改变, 请勿操作它们。

操作说明

- **检查电池状态:** 按一下按钮检查电池状态 (剩余电量), 指示灯亮约 30 秒后自动熄灭。
- **有线充电时:** 连接充电线后, 移动电源自动开始输出。但由于兼容性问题, 部分手机需要按一下电源键才开始充电。按一下按钮后指示灯会持续亮起时, 期间请无其他设备连接, 将自动关闭。
- **无线充电时:** 本产品具有无线充电自动唤醒功能, 将手机放置于其上, 即可自动开始充电。但由于兼容性问题, 部分手机需要按一下按钮才能开始无线充电功能。按一下按钮后, 电池指示灯亮起, 开启无线充电, 即可放置设备。若 30 秒内无任何负载连接进行无线充电, 则本产品将自动关闭无线充电功能。

无线充电技巧

将手机放置在无线充电区域 (如图所示) 即可进行无线充电。充电手机与移动电源之间的距离必须在 8 毫米以内才能进行无线充电, 否则将停止充电。您需调整手机的位置。

FCC 符合性声明

本设备符合 FCC 规则第 15 部分的规定。操作须遵守以下两个条件: (1) 本设备不得造成有害干扰; (2) 本设备必须接受任何接收的干扰, 包括可能导致意外操作的干扰。

警告: 未经合格负责方明确批准的更改或修改可能会使用户无权操作该设备。这些限制旨在为住宅安装提供合理的保护, 防止有害干扰。本设备会产生、使用并辐射射频能量。如果不按照说明进行安装和使用, 可能会对无线电信号造成有害干扰。但是, 不能保证在特定安装中不会发生干扰。如果本设备造成无线电信号接收或传输故障 (可通过关闭接收/发送设备解决), 则建议用户尝试通过以下一种或多种措施来纠正干扰: (1) 重新调整或重新放置接收天线; (2) 增加设备与接收器之间的距离; (3) 将设备连接到与接收器所连接电路不同的电路板上; (4) 咨询经销商或经验丰富的无线电技术专家寻求帮助。

Omnibar 是 Omnibar LLC 的商标。本用户指南中的所有图片和文字均为 Omnibar 的版权所有。本指南中的图片和封面可能与实际产品不同。

该装置已经过认证, 可满足一般射频暴露要求。本装置可在便携式暴露条件下使用, 不受任何限制。

电子废弃物说明

处置废旧或本产品电池不应作为家庭垃圾或垃圾焚烧。当您决定处置本产品电池时, 请根据当地环境法规处理电池, 以避免爆炸。

警告: 禁止拆解、维修、挤压或投入火中, 若出现严重膨胀, 切勿继续使用。切勿置于热源环境中, 浸水后禁止使用。

仅适用于非易燃气体安全使用
中国制造



重要安全注意事项

此的PowerBank在使用前, 请仔细阅读所有警告和指示。为避免火灾、爆炸、触电、人身伤害等风险, 请务必遵守以下指南。Omnibar 可能会在不事先通知的情况下更新此信息。如需最新更新和最新的用户手册, 请访问 www.omnibar.com 寻求帮助。

警告

火灾、爆炸, 或触电, 或人身伤害的危险性警告。

请勿将PowerBank用于任何可能造成伤害的操作。

此的PowerBank在使用前, 请仔细阅读所有警告和指示。为避免火灾、爆炸、触电、人身伤害等风险, 请务必遵守以下指南。Omnibar 可能会在不事先通知的情况下更新此信息。如需最新更新和最新的用户手册, 请访问 www.omnibar.com 寻求帮助。

- **避免人员受伤:** 请勿让儿童操作或使用PowerBank。
- **始终保持干燥:** 保持PowerBank免受雨水、雪水和任何形式的液体的侵蚀。如果PowerBank接触到液体, 请勿充电或使用。如果内部组件被侵蚀, 则必须丢弃PowerBank, 丢弃前请将其隔离在安全的位置。不当处理这些液体可能会导致严重损坏、受伤或更糟的情况。如果您看到任何火花或闻到异味, 请联系当地消防队寻求帮助。
- **无火区:** 请勿将烟蒂、火花和火焰靠近PowerBank。
- **避免静电:** 请勿将设备靠近强静电或高温环境。
- **轻柔轻放:** 避免跌落或严重撞击, 以确保PowerBank正常工作。
- **禁止篡改:** 请勿尝试打开PowerBank外壳。切勿让异物进入输入、输出口。
- **不可更换电池:** 请勿尝试更换或回收PowerBank电池。
- **仅供专业人士维修:** 只有合格的维修人员才能使用正确的零件维修设备, 以确保安全。

技术仕様

モデル: P9B5K6

容量: 5000mAh (3.7V 18.5Wh)

定額容量: 2000mAh (5V=2.4A)

USB-C入力: 5V=3A 9V=2A (18W Max)

USB-C出力: 5V=2.4A 9V=2.2A 12V=1.67A (20W Max)

無線出力: 5W / 7.5W / 10W / 15W

合計出力: 5V=2.4A

素材: 防火 PC+ABS プラスチック

サイズ: 104*68*8.8*13.3mm

重量: 131g

箱の中

電力銀行 X1
211 USB-C to USB-C 充電ケーブル X1
マニュアル X1


製品概要




チャージ電力銀行



充電ケーブルを使用して携帯電話やタブレットを充電します



iPhoneなどのデバイスをワイヤレスで充電する



運用ガイドライン

- **水を通さない:** 旅行中は、雨や雪、水を通じて乾いた状態を保つようにしてください。また、直射日光を避け直射日光に当てないでください。
- **速く乾かす:** PowerBankに余熱を持たせないでください。使用中に保管中に、ものに物を重ねたり、速乾剤を近づけないでください。
- **充電前に冷却:** 完全放電後、PowerBankを冷却してから充電してください。
- **定期的な充電:** バッテリーを維持するためには、少なくとも3ヶ月に1回はPowerBankを充電してください。
- **1つのポートに1つのデバイス:** 過負荷を回避するために、PowerBankのポートは1つのポートに1つのデバイスにのみ充電を許可してください。マルチコンセントの電源タップ、サージプロテクター、延長コードを接続しないでください。
- **認定アクセサリのみを使用してください:** 過剰な熱を回避するために、PowerBankで使用するすべてのアクセサリ、プラグ、ケーブルは安全に設計されていることを確認してください。
- **プラグを抜く:** 取り外すときは、コードではなくプラグを握ってください。そうすることで、誤って引っこねたりケーブルやPowerBankが損傷する可能性が低くなります。
- **ケーブルを確認する:** PowerBankを使用する前に、コード、プラグ、ケーブルが損傷していないことを確認してください。
- **損傷がひどい:** 損傷がひどい場合、またはコード、プラグ、ケーブルの使用を直ちに中止してください。濡れた液体に触れないようにしてください。バッテリーの漏れは刺激性があり、さらに悪い場合があります。皮膚や目に触れた場合は、水でよく洗い、医師の診察を受けてください。
- **損傷したユニットの使用を避ける:** PowerBankまたは接続されたデバイスが損傷または改造されている場合は、使用しないでください。

操作手順

- **バッテリーの状態を確認するには:** ボタンを1回押して、バッテリーの状態 (残量) を確認します。インジケータは約30秒間点灯し、その後自動的に消滅します。
- **ケーブルを使用して充電する場合:** 充電ケーブルを接続すると、PowerBankは自動的に出力を開始します。ただし、互換性の問題により、一部のデバイスでは、充電を開始するために電源ボタンを1回押す必要があります。出力モードはボタンを押してから30秒間維持され、その間にデバイスが接続されていない場合は、モードは自動的にシャットダウンします。
- **ワイヤレス充電する場合:** この製品はワイヤレス充電の自動エイク機能があり、携帯電話を置くだけで自動的に充電を開始します。ただし、一部の電話では、互換性の問題により、ボタンを押してからワイヤレス充電を開始する必要があります。
- **1回押して、バッテリーインジケータを点灯し、ワイヤレス充電がオンになり、デバイスを書くことができます。** ワイヤレス充電の負荷が30秒間継続されていない場合、製品はワイヤレス充電機能を自動的にオフにします。

無線充電のヒント

携帯電話をワイヤレス充電エリアに置くように置き、ワイヤレス充電を行います。携帯電話と充電エリアとの距離は8mm以内でなければなりません。そうでなければ充電が停止し、携帯電話の位置を調整する必要があります。

FCC適合宣言です

このデバイスは、FCC規則のパート15に準拠しています。操作には、次の2つの条件が適用されます: (1) このデバイスが有害な干渉を引き起こしていません。 (2) このデバイスは、望まない干渉を引き起こす可能性のある他のあらゆる干渉を受け、変化した干渉をすべて受け入れる必要があります。

警告: 準拠責任者によって明示的に承認されていない変更または修正を行うと、ユーザーの機器操作が保証がなくなる場合があります。これらの制限は、住宅への設置において有害な干渉に対する適切な保護を提供するように設計されています。この機器は、無線周波数エネルギーを生成、使用、および放射する可能性があります。適切な電圧と電流を必要としない場合、無線周波数に有害な干渉を引き起こす可能性があります。ただし、特定の設置で干渉を発生しないという保証はありません。この機器がラジオやテレビの受信に有害な干渉を引き起こしている場合 (通常の電波の干渉によって確認できます)、ユーザーは次の1つ以上の対策を実行して干渉を修正することを勧めます: (1) 受信アンテナの向きを変える。 (2) 機器と受信機の距離を増やす。 (3) 受信機が接続されている回路とは別の回路のコンセンに接続を継続します。 (4) 販売店または経験豊富なラジオ/テレビ技術者に相談してください。

Omnibar は Omnibar LLC の商標です。このユーザーガイドのすべての画像とテキストの著作権は Omnibar が所有します。このガイドの写真やイラストは実際の製品と異なる場合があります。

この装置は、一般的な無制限定数の露出条件を満たすように評価されています。この装置は、任意の使用を受けることなく、携帯型の露出条件下で使用することができます。

WEEE情報



廃棄およびリサイクルに関する情報: この製品およびバッテリーは、家庭ごみとして処分しないでください。適切な処分方法については、製品およびバッテリーの製造元にお問い合わせください。廃棄物の処理は、環境保護のために必要です。廃棄物の処理は、環境保護のために必要です。廃棄物の処理は、環境保護のために必要です。

警告: 分解、粉砕、火や高温への曝露をしないでください。漏れ、膨脹、発熱、または使用を中止してください。水に浸した後は絶対に使用しないでください。

非熱帯気候での安全使用のために適しています

中国製です



LIST OF TOXIC AND HAZARDOUS SUBSTANCES IN ELECTRONIC PRODUCTS

Part Name	Poisonous Or Harmful Substance Or Element					
	(Pb)	(Hg)	(Cd)	(Cr(VI))	(PBB)	(PBDE)
Internal Components	X	O	O	O	O	O
Shell	X	O	O	O	O	O
Other	X	O	O	O	O	O

This form is prepared in accordance with SJ/T 11364. Q: Indicates that the content of the hazardous substance in all homogeneous materials of the component is below the limit requirements stipulated in SJ/T 26572.

X: Indicates that the content of the hazardous substance in at least one homogeneous material of the component exceeds the limit requirements stipulated in SJ/T 26572. For the parts marked "X" in the table, the replacement of hazardous substances cannot be realized due to the limitation of global technological development level. The product you purchase may not contain all of the above components.

WARRANTY

This device has a 1-year warranty, covering 12 months from the date of purchase (the "warranty period"). During the warranty period, if a device failure occurs under normal use (due to a manufacturing defect), Omnibar will repair or replace the device. The company reserves the right to verify that proper use and maintenance guidelines were followed.

CONDITIONS THAT VOID THIS WARRANTY:

1. Unauthorized repair, disassembly, or alteration of any kind.
2. Evidence of abnormal usage or misuse.
3. Damage from dropping, abuse, or negligence.
4. Damages caused by failure to follow the operating instructions.
5. Tampering with the product's original serial number label and other similar markings.

6. Fake products, including those indicated by a missing product serial number or nonconformity between the product model and serial number.
7. Improper storage, such as long-term exposure to humidity or temperatures outside the parameters specified in the technical specifications of this user's guide.
8. Expiration of the product warranty.

FORC MAJURE: Omnibar shall not be liable for any failure or delay in performing any of its obligations under this warranty if such failure or delay is caused by or results from events beyond its reasonable control, including, but not limited to:

- A. Natural disasters (e.g., earthquakes, floods, hurricanes, wildfires)
- B. Acts of God
- C. War, invasion, or acts of terrorism
- D. Civil unrest, riots, or strikes
- E. Government actions, regulations, or restrictions
- F. Epidemics, pandemics, or quarantines
- G. Power outages or electrical failures
- H. Supply chain disruptions

Dear user, this warranty card is your future warranty application voucher, please cooperate with the seller to fill in and properly keep it for later!

User Information	
User name	E-mail
Contact Number	Zip code
Address of correspondence	
Product name	Model number
Product barcode/number/batch number	
Product Information	
Name	
Address	
Contact Number	Zip code
Date of sale	Invoice number
Remarks	