
User ***Manual***


3+

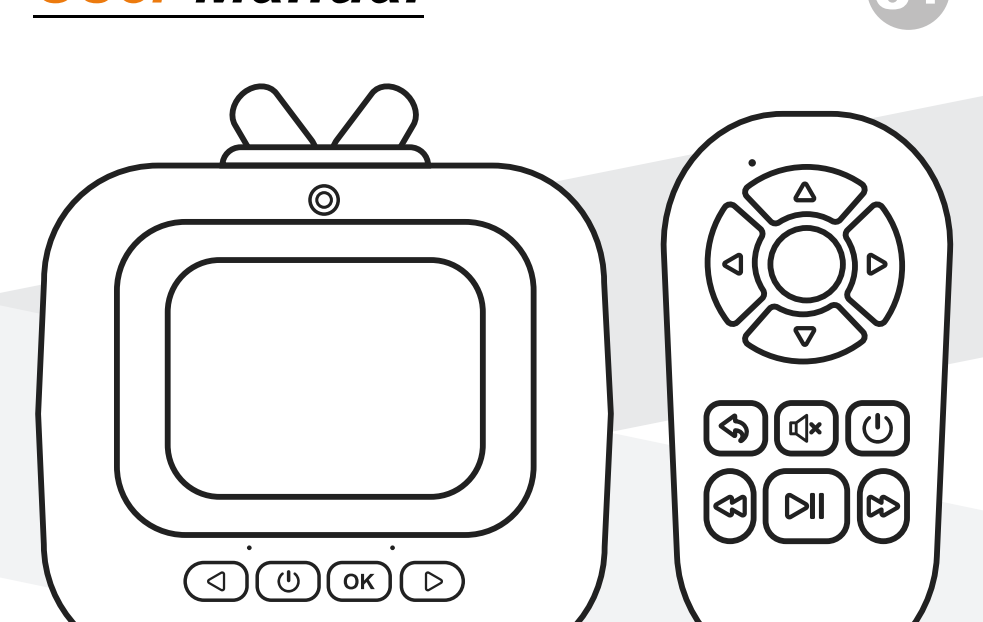

Childrens Toy TV Instructions

EN

TV Structure Description

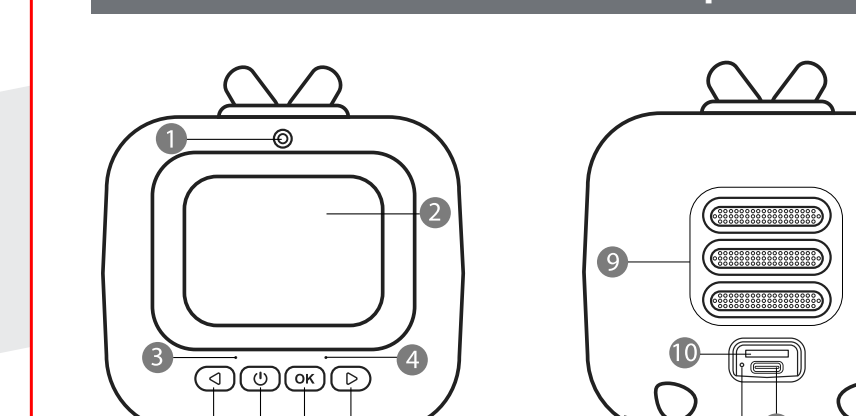


1.Camera	7.OK Button
2.Display Screen	8.Right Button
3.Microphone/Charging Indicator Light	9.Speaker
4.Working Light	10.TF Card Slot
5.Left Button	11.Reset Hole
6.Power Button	12.TYPE-C Charging Port

Button Function Definitions

1.Camera	Photo/Video
3.Microphone/Charging Indicator Light	Microphone/Charging Status Indicator
4.Working Light	Working Status Indicator
5.Left Button	Menu Function Selection Button / Volume up key
6.Power Button	Long Press to Power On/Off
7.OK Button	Short Press to Confirm / Pop-up List Button
8.Right Button	Menu Function Selection Button / Volume down key
11.Reset Hole	Factory Reset in Case of System Freeze

Remote Control Description

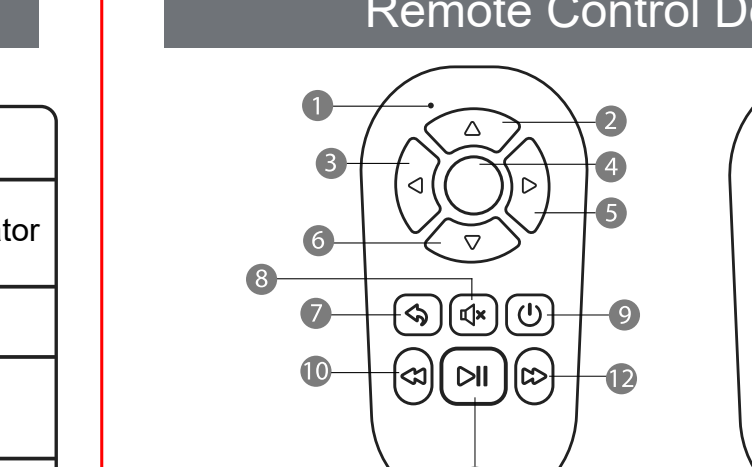

1.Indicator Light	8.Mute Button
2.Up Button	9.Power Off Button
3.Left Button	10.Rewind Button
4.OK Button	11.Pause/Play Button
5.Right Button	12.Fast Forward Button
6.Down Button	
7.Back Button	

Button Function Definitions

Up/Down/Left/Right Buttons	Menu switch/left and right switch playback content/up and down keys to adjust volume
OK Button	①Short press to confirm selection. ②Press to bring up the list.
Back Button	Return to the previous menu.
Mute Button	Toggle sound on/off. (Only works in Story and Music modes.)
Power Off Button	Quick power off button. This button is used solely to turn off the TV via the remote control. When the TV is on, press this button to turn it off. This button cannot be used to turn the TV on. To turn the TV on, use the Power Button on the TV itself.

Operation Guide

1.Power On/Off:

*Press and hold the ⏻ Power Button on the TV to turn it on or off.

*Press the ⏻ Power Off Button on the remote control to quickly turn off the TV.

*In standby mode, press any button on the TV or press any button on the remote control (except the Power Off Button) to wake up the TV screen.

*If the device does not power on after receiving it, please connect the original charger and charge it for 1-2 hours to activate the device, ensuring the battery is in optimal working condition.

*If the product has not been used for over 20 days, please charge the device for 1-2 hours every 20 days to avoid deep discharge that may damage the battery.

*Before long-term storage, it is recommended to turn off the device and disconnect any external connections, and store it in a dry, cool environment.


2.Remote Control Usage:

*The remote control requires 2 AAA batteries (not included).

For child safety, the battery compartment is secured with screws. Please use a screwdriver (not included) to open the cover and install the batteries correctly, ensuring the correct polarity.


3.Charging Method:

*Connect the TV to a USB power source using a TYPE-C cable for charging. The charging indicator will light up red during charging, and the light will turn off when fully charged (as shown in the image below).



4.Reset Operation:

*If the TV freezes due to incorrect operation, use a thin pin (not included) to press the reset hole to turn the TV off and restart it.




5.Inserting the Memory Card

*Insert the memory card. Make sure to insert the metal contacts first. Push the memory card inward until you hear a click.

*The memory card can only be inserted in one way.Do not force the card in if it will not go in smoothly.

*To remove the memory card, simply push in and the card will eject out.



Main Functions

After turning on the TV, press △▽◁▷ to select a desired function, and press OK to confirm and enter the selected feature.

1.Story Playback

*Press the △▽◁▷ buttons to select between Bedtime, Inspirational, Fairy Tale, or Animal stories. Press OK to confirm and enter the selected story category.

*Press the ◁▷ button on the TV or the △▽ button on the remote control to adjust the volume. Press the mute button on the remote control to mute the sound. Press the ▷II button to play/pause the current story.The ◁▷ button on the remote control can switch the play--back content, and press to rewind or fast forward the playback content.Press OK to bring up the list.

*Press the back button on the remote or the Power Button on the TV to return to the previous menu.

2.Music

*Select the music icon, and press OK to confirm and enter the music playback interface.Press the ◁▷ button on the TV or the △▽ button on the remote control to adjust the volume.Press the mute button on the remote control to mute the sound.

*Press the ▷II button to play/pause the current music.

The ◁▷ button on the remote control can switch the playback content, and press to rewind or fast forward the playback content.

*Press OK to bring up the list.

Note: Please save the downloaded music files to the "Music Channel" "Classical Music" folder of the TF card Only MP3, AAC and WAV formats are supported

3.Video Recording

*Select the Video icon, and press OK to confirm and enter the recording interface.

*Press OK to start or stop the recording.

*Recorded videos can be played back in the Cartoon Playback feature.

4. Games

*Select the Games icon and press OK to confirm and enter the game list.

*Use the △▽◁▷ buttons on the remote to select a game, and press OK to start playing.

*During gameplay, the △▽◁▷ buttons on the remote control can be used to move up, down, left, or right.

*In the games Super Pets and Candy Box, press the △▽◁▷ button on the remote to select the target you want to swap.

(The ◁▷ button on the TV can only be used to move up or down to choose the target to swap.)

*Press OK to confirm the selected target, and use the △▽◁▷ buttons to select another target to swap.

*Press OK to confirm the swap. Once the positions are swapped, connected targets of the same type will disappear, and points will be awarded.

5. Album

*Select the Album icon and press OK to enter the album interface.

*Once inside, use the ◁▷ buttons on the remote to navigate between Camera and Album to either take photos or view saved ones.

*In the Camera interface, press OK to take a photo. The photo will be automatically saved to the album.

*While browsing the album, press OK briefly to select and delete the chosen photo.

6.Cartoon Playback

*Supports playing MP4 format videos downloaded by users and saved in the SD card.

*Videos recorded on the TV will also be played here.

Note: Please save the downloaded MP4 video file to the "Video" folder of the TF card .

7. Calendar

*Select the Calendar icon and press OK to view the calendar.

*Use the Up, Down, Left, and Right buttons to select the date and time.

8. Alarm

*Select the Alarm icon to enter the alarm setup interface, where you can set multiple alarms.

*In the alarm list, select an alarm and press OK to enter the alarm setup interface. Here, you can set the alarm time, ringtone, and other options. Once set, press OK to confirm.

*When the alarm rings, a prompt will appear. Choose "Off" or "Snooze" in the prompt, and confirm to turn off or snooze the alarm.

(In the alarm list, press the ▷II button to uncheck the box and turn off the alarm.)

9. Settings

1.Set the time& date:Use the Up, Down, Left, and Right buttons to select time and date settings. Press OK to enter the time and date setup interface. Use the remote △▽◁▷ buttons to adjust the time or date values, and press OK to confirm and save.

2.Set target language.

3.Set different volume levels.

4.Adjust the screen brightness and set the time when the screen is it without working condition.

5.Restore factory settings.

6.View version number.

7. Connect to Bluetooth

① Click "OK" to check the Bluetooth checkbox.

② Select the paired device.

③ Click "OK" to add a new device and search for a pairable device.

④ Make sure the wireless Bluetooth pairing is turned on and within the pairing range.

⑤ Click "OK" and pairing will succeed after a while (if pairing fails, please start again from step ①).

10.Connect to Computer


*Use a Type-C data cable to connect the computer and TV (with SD card). A pop-up will appear on the TV with options for charging/data transfer. When selecting data transfer, the PC screen will display an SD card icon , indicating that the PC has detected the SD card and is automatically installing the camera driver.

*You can download MP4 format videos from the internet to the VIDEO folder on the TV's SD card. You can also delete or copy videos, photos, and other content from the SD card.

Product parameters

Screen	2.8"IPS
Photo format	JPG
Movie format	MP4
Language	English, German, French, Spanish, Italian, etc
Charge voltage	DC-5V

Check of Common Breakdown

Question Type	Solution
TV Won't Turn On	Connect the TYPE-C cable to charge the device for 1-2 hours.
Can't Take Photos or Record Videos	Check if the SD card is properly inserted or if the memory is full.If the memory is full, please back up the content on the SD card before deleting or expanding storage.
No Sound	Try turning up the volume or unmuting the sound.
Remote Control Not Responding	① Replace the batteries . ②Check that the batteries are installed correctly, ensuring the correct polarity. ③Make sure there are no obstructions between the remote control and the TV, and that the signal can be transmitted properly.
Can't Play Downloaded Videos	①Check if the downloaded video is in MP4 format and placed in the root directory of the SD card. ②Check if the video file itself is corrupted by trying to play a different video file. ③Try restarting the TV and reloading the video file.
Bluetooth Won't Connect	①Ensure that the Bluetooth audio device is turned on and in pairing mode. ②Check the list of paired Bluetooth devices on the TV to ensure it is connecte to the correct one. ③Try disconnecting and re-pairing the Bluetooth device.
Playback Lagging or Freezing	Use a pin tool (not included in the access-ories) to press the reset hole to reset it. (As shown in the figure below). 

Safety Warnings

*This is a toy and does not receive real television broadcasts.

*Do not use the device for extended periods to protect eyesight.

*Keep away from water or heat sources.

*Do not disassemble or attempt to repair the product.

*The battery compartment of the remote control contains a safety screw. Please ensure that the battery is replaced and the screw is re-tightened under adult supervision.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instru--ctions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Instructions for Battery Use

1.For battery power indication, please refer to the illustration.



Full Slightly low Low Insufficient

2.Use Type-C cable to charge the battery, with 5V1A charger.

NOTES:

1.When the product indicates that the battery is Low power, please charge it with (5V1A) charger in time to better protect the battery and prolong the life of the product.

2.When your product has not been used for a long time and can not be powered on normally, please charge it with (5V1A) charger for 15 minutes, and then press the Reset button to power it on again.

3.When your product completely powers off, please charge it in time for 1-2 hours to keep the battery in a high level state, to avoid being in a protective state of low power over-discharge and unable to power on.

4.Please keep the phone shell and interface dry, and do not use it in a damp environment.

5.Do not expose to high temperatures or place near a heat source. Do not leave in direct sunlight for any length of time.

6.The built-in battery cannot be removed or replaced. If it is damaged, please contact the merchant or customer service for maintenance. The charger should be used under the supervision of adults. The charger is not a toy. Please keep it dry and use it according to the specifications.

7.If the SD card space is used up, please clear videos or photos from the SD card in time.

8.Do not mix old and new batteries. Do not mix alkaline, standard(carbon-zinc), or rechargeable batteries.

9. The product contains small accessories, which children need to use under the supervision of their parents.

Compliance Information

EN: Warning! Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities. Never leave dead or weak batteries in the controller of this toy. If you do not plan to use the toy for several days, remove the batteries. Dispose of batteries proptly and properly, do not bury or burn them.

FR: Attention! Ne convient pas aux enfants de moinsde 36 mois. Contient des petites pieces pouvantetre avalees etre avalees.
Ne mélangez pas des piles anciennes et neuves, différents types de piles (Standard, Alcaline ou Rechargeable) ou Rechargeable capacités différentes. Ne laissez jamais une batterie morte ou faible.dans l' appareil Le contrôleur pour ce jouet. Si vous n' allez pas utiliser le jouet plus d' une fois Mon Dieu, enlevez la batterie. Jetez les piles rapidement et Eh bien, ne les enterrez pas ou ne les incinérez pas.

ES: ¡Atencion! No indicado para menores de 36meses. Contiene piezas pequenas. Peligro deobstruccion.
No mezcle pilas viejas y nuevas, diferentes tipos de pilas (estándar, alcalinas o recargables), o baterías recargables de diferentes capacidades. Nunca deje baterías agotadas o débil en el controlador de este juguete. Si no planea usar eljuguete durante variosdias, retire las baterías. Deseche las baterías de manera adecuada y adecuada, no las entierre ni las queme.

DE: Achtung! Fur Kinder unter 36 Monaten nichtgeeignet. Beinhaltet Kleinteile. Verschluckungs-gefahr.
Mischen Sie nicht alte und neue Batterien, verschiedene Batterietypen (Standard-batterien, Alkalibatterien oder Batterien) wiederaufladbar) oder wiederaufladbare. Batterien unterschiedlicherd Kapazität. Lassen Sie niemals leere oder schwache Batterien in der Steuerung dieses Spielzeugs. Wenn Sie das Spielzeug mehrere Tage lang nicht benutzen, nehmen Sie die Batterien heraus. Entsorgen Sie Batterien ordnungsgemäß, vergraben oder verbrennen Sie sie nicht.

IT: Attenzione! Non adatto ai bambini di eta inferiora 36 mesi. Contiene piccole parti. Rischio disoffocamento. Non mescolare batterie vecchie e nuove, tipi diversi di batterie (Standard, Alcalino o Ricaricabile) o Ricaricabile diverse capacita.Non lasciare mai una batteria scarica o scarica nel dispositivo Il controller per questo giocattolo. Se non utilizzerai il giocattolo più di una volta Dio, rimuovi la batteria. Smaltire le batterie tempestivamente e Bene, non seppellirli o incenerirli.

Product Name: Children's TV Toys
Nom du produit: Jouets télévisés pour enfants
Modèle : TV1 Model: TV1
Produkt Name: Kinderfernsehspielzeug

Contact: us-proservice@outlook.com eu-proservice@outlook.com
Manufacturer: Shenzhen Aobaisen Electronic Technology Co.,Ltd
Address: 6 Floor,Yuanshuo Science Park, No.8 South Lane, Xinshiqiao Street,Guihua Community, Shenzhen,China
Contact Person: Meifeng Feng
Tel: +86 15217034875

E-mail: mgyaya@163.com

⚠WARNING:
CHOKING HAZARD-
Small Parts. Not for children under 3 years. Retain for future reference.

⚠ATTENTION
RISQUE D'ÉTOUFFEMENT - Petites pièces. Pas pour les enfants de moins de 3 ans.

DE: IN CHINA HERGESTELLT
FR: FABRIQUÉ EN CHINE
ES: HECHO EN CHINA
UK: MADE IN CHINA
IT: FATTO IN CINA

FCC ID: 2BN9M-TV1
FCC ID: 2BN9M-TV1-1
Manufacture Date: 07/2025
SN: 202507001

Attention:
- Children 0-3 years old should use this product under the supervision of their parents
- Do not use while charging
- Do not put the product near fire

0-3

Attention: This is a toy, not an electronic television.No digital display or broadcasting functions.