


工单：20221208124 信诚潘冬清　　无标题　　F1　自反　　输出时间:23-06-05　11:36:53
颜色:Blackta
文件名：信诚潘冬清—刘总说明书最后确认文件0k9月12日++.p1.pdf

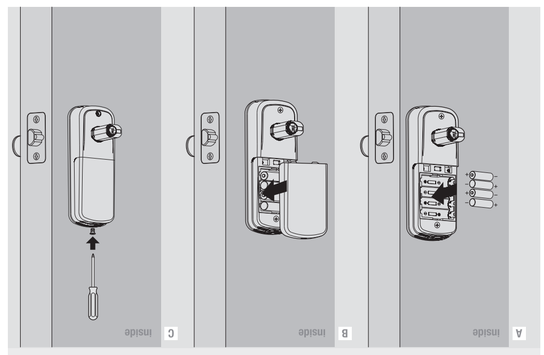


5 Install 4 AA batteries and battery cover




6 Install the door handles

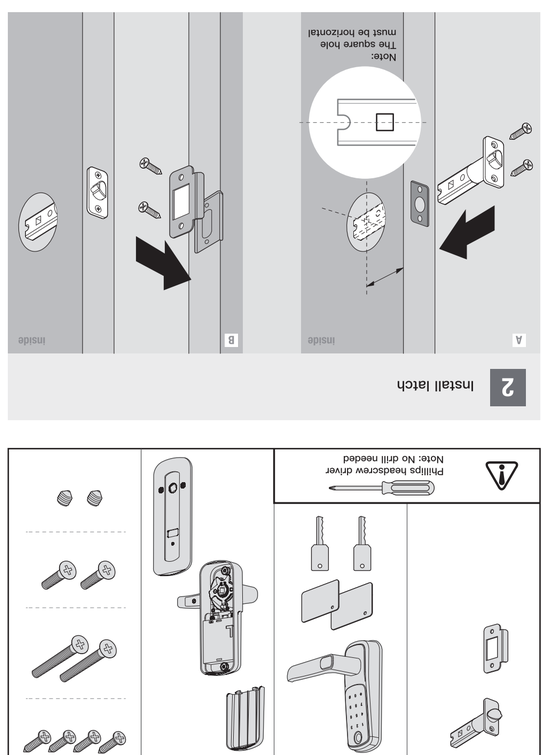

7 Insert the key and test the installation

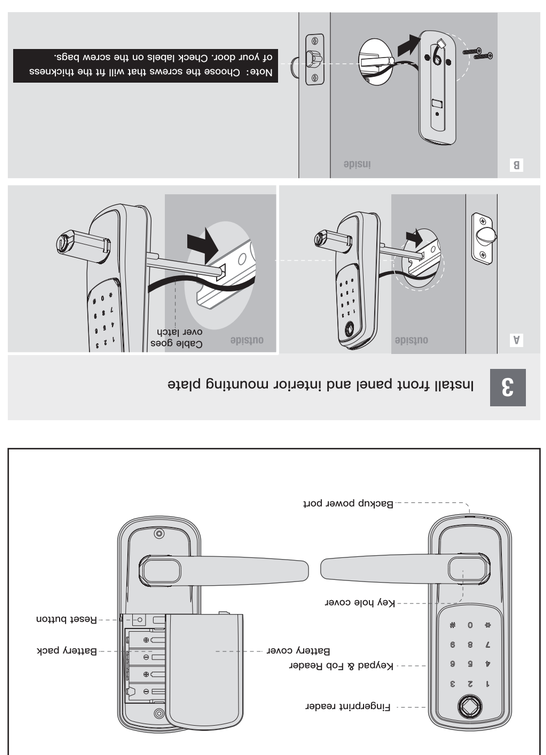


Install our lock on top (only if needed)

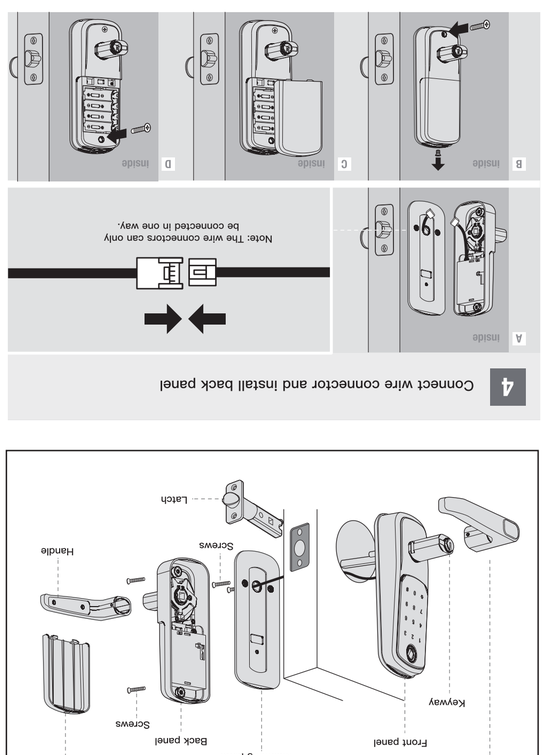

If you have a deadbolt lock on top, please move the deadbolt lock to the bottom and install our lock on top to avoid installation issues.

1 Adjust the backset of latch (if needed)

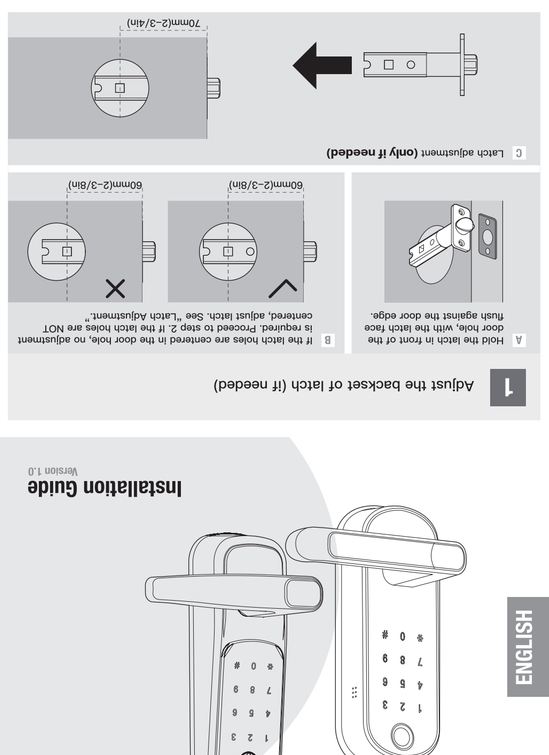

2 Install latch

3 Install front panel and interior mounting plate

4 Connect wire connector and install back panel

FCC

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
--Reorient or relocate the receiving antenna.
--Increase the separation between the equipment and receiver.
--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
--Consult the dealer or an experienced radio/TV technician for help.
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
FCC Radiation Exposure Statement
This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
This device can operate without distance restriction between the radiator and user body.

ENGLISH

Installation Guide

Version 1.0

WHAT'S INCLUDED

PRODUCT OVERVIEW


EXPLOSIVE VIEW

CyanMagentaYellowBlack

ENGLISH

APP Guide

Version 1.0

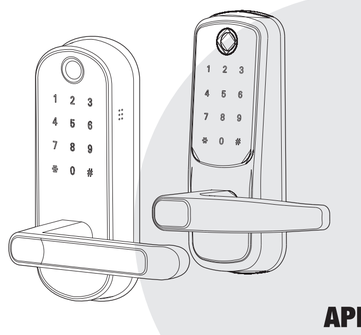


HOW TO REGISTER

Download the Smart Lock app from
Google Play or App Store
Search " TT Lock."

GET IT ON Google Play
Download on the App Store



STEP 1
Tap on register to get started !



STEP 2
Fill out this and then tap "Get Code". You will be sent a verification code to verify your account ! Once, you receive it, tap on "Register"

Note: The Smart Lock app is needed to use this lock. If this lock was professionally installed (or installed by someone other than the homeowner), make sure this step is performed by the homeowner.

PAIRING YOUR LOCK



STEP 1
Tap on the three horizontal lines.

STEP 2
Tap on "+ Add Lock"

STEP 3
Tap on "Next"

STEP 4
Tap on the blue plus sign.

Note: You may need to tap on lock keypad.

LOCK PAGE OVERVIEW



- **Unlock/Lock** — Unlock/Lock using phone's bluetooth
- **Generate Passcode Page** — Generate 6 different types of passcodes
- **eKey Page** — View and modify current eKeys
- **Remote Unlock** — Unlock remotely if Sifely Gateway is connected nearby
- **Records Page** — View entry times, attempts and methods
- **Settings Page** — View and modify settings
- **Passcode Page** — View and modify passcode
- **Send eKey** — Set up and send eKeys
- **Authorized Admin Page** — Create and edit admins
- **Cards/Fobs Page** — Set up your fobs here
- **Wireless Key Fob Page** — Wireless Key Fob Page
- **Fingerprints Page** — Set up fingerprints
- **Unlock/Lock Status** — Check status of lock

Note: Some of these icons may not appear if the Gateway is not connected to the lock.

APP UNLOCK/LOCK




To unlock the lock, tap this icon once.
To lock the lock, press and hold on this icon.

Note: This will only work while you are within bluetooth range of the lock.
Refer to Gateway Guide page for remote unlock lock information.

PASSCODES



STEP 1
To access the passcode menu, tap on "Generate Passcode". This will take you to the passcode page.

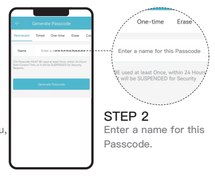


STEP 2
Enter a name for this Passcode.

Here is a breakdown of the 6 different code types for different durations.

Permanent	Lasts permanently	**Erase**	Erases all codes on lock
Timed	Lasts between selected hours	**Custom**	Choose your own digits such as 4321 (permanent or timed)
One-time	Lasts for one use	**Recurring**	Lasts during scheduled hours weekly

PASSCODES

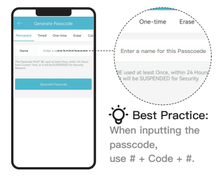


Best Practice:
When inputting the passcode, use # + Code + #.

Pay attention to this text when generating a code. You may experience issues if these instructions are not followed.

Note: To generate custom codes, you will need to be within bluetooth range of the lock unless a Gateway is connected.

Passcode Page

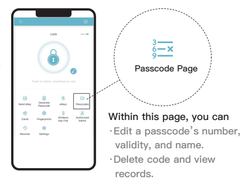

Within this page, you can
·Edit a passcode's number, validity, and name.
·Delete code and view records.



Note:The above can only be done within bluetooth range unless a Gateway is connected.

IC CARD / FOBS



To add a fob to your lock.
Follow these steps.

1. Tap on "Cards".
2. Tap on "Add Card"
3. Choose the validity period of the lock.
4. Once the lock says "Please swipe your card", place the fob against 5 on the keypad.
5. If you hear"input successful ", the fob can be used to unlock your lock.




FINGERPRINTS


To add a fingerprint follow these instructions:



Step1
Tap on Fingerprints.

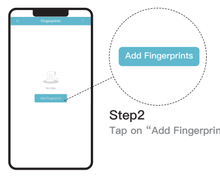

Step2
Tap on "Add Fingerprints"

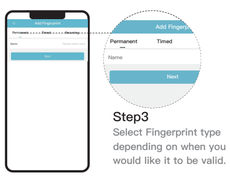


Step3
Select Fingerprint type depending on when you would like it to be valid.



Step4
Follow instructions on app. You will be asked to place your finger on the sensor 4 times.


Experiencing issues with fingerprint recognition?
●Ensure the sensor surface is clean.
●Try a different finger.
●Ensure your finger is moist enough.
●Take out batteries for a minute and place back in.

eKEYS

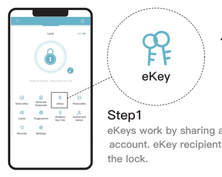


Best Practices:
It is strongly recommended that the recipient first register for an account using the Smart Lock app.

Step1
eKeys work by sharing app access of your lock with another Smart Lock account. eKey recipients will be able to use their phone to unlock/lock the lock.

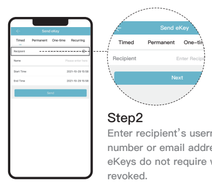


Step2
Enter recipient's username. It will be the phone number or email address used during registration. eKeys do not require wifi or bluetooth to be sent or revoked.

AUTHORIZED ADMIN

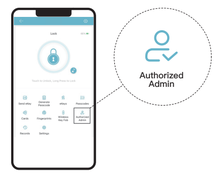

Step1
Authorized Admins are similar to eKeys; however, an authorized admin can do the following:
1. Unlock/lock via the app.
2. Generate, Edit, Delete passcodes, IC cards, & fingerprints.
3. Adjust settings like passage mode, auto-lock timer, & turn on/off the lock sound.

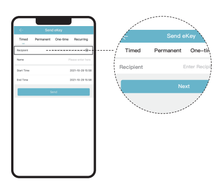


Step2
Enter recipient's username. It will be the phone number or email address used during registration.


PASSAGE MODE & AUTO-LOCK



Step1
Auto-lock will automatically lock the lock when it has be opened after 5 second by default. This can be adjusted with Passage Mode and Auto-lock timer. Outlined below is how to adjust these settings related to auto-lock.

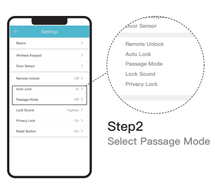


Step2
Select Passage Mode

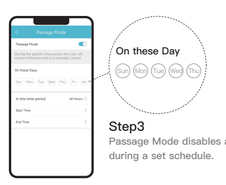

Step3
Passage Mode disables auto-lock during a set schedule.

LOCK SETTINGS

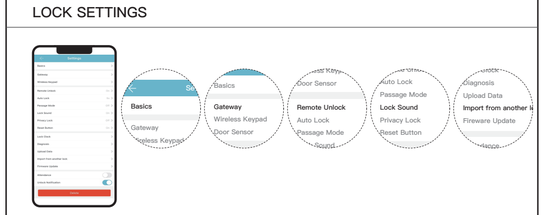

Here are some settings you should familiarize yourself with.

Under **Basics**, you can view and change information such as Lock Name.

Gateway shows signal strength if Gateway is connected.


With **Remote Unlock** on and a Gateway connected, you can remotely unlock/lock your lock.

Lock Sound adjusts the locks sound level.

Import from another lock allows for the transfer of passcodes and fobs from one lock to another.

Delete will remove the lock from your account and clear any settings one the lock. You must be near the lock to do this.

WIRELESS KEY FOB

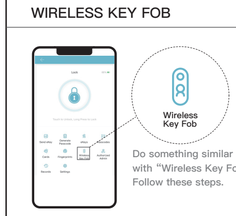

Do something similar with "Wireless Key Fob" Follow these steps.

1. Tap on "Wireless Key Fob"
2. Tap on "Add Key Fob"
3. Choose validity period.
4. Follow on app instructions to pair the wireless key fob.
5. Use unlock and lock to interact with lock.

Note: A Wireless Key Fob can only connect to one lock.



INTEGRATIONS

Our locks work with the following software:

WORKS WITH Google Assistant

COMPATIBLE WITH Amazon Alexa

With more to come in the near future.

GATEWAY

The Gateway bridges any nearby locks to your local wifi allowing for remote control.

With the Gateway connected.

- Receive unlock notifications wherever you are.
- Remote unlock/lock.
- Check access logs whenever you need them.
- Generate, edit, or delete custom codes for your guests.
- Access the features of the webportal version of our app for free!
- Check battery level remotely.

FAQ

Q: I entered a code or fingerprint incorrectly too many times and my lock will not accept any new inputs.
A: Unlock the lock once via the app or wait 5 minutes.

Q: How can I manually lock the lock?
A: Press and hold # to lock the lock.

Q: The batteries died before I could replace them. What can I do?
A: Use the provided physical keys to open or plug in a powerbank into the slot on the underside of the keypad to power it up to be able to enter and change the batteries.

Q: How do I share access of the lock on 2 different phones?
A: Refer to eKeys or Authorized Admin section on how to do that is.

Not working like it should? Contact us with the following information for quicker resolution.

- Which product you do have?
- Where are you in the setup process?
 - ○Installing the product.
 - ○Setting up the app and pairing the product.
 - ○Already set up app with the product.
- How long have you had our products for?

尺寸：538.8 mm X 431.8 mm