MF01A6款：100x142mm
12 g铜板 4+4 风琴折 左右反

Product interface

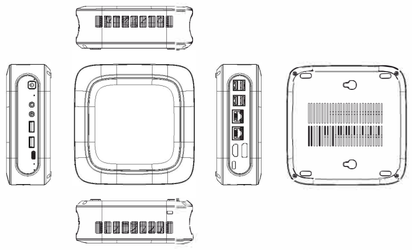

Product specification sheet

CPU	Intel i9-11900H
OS	Windows11
Memory	DDR4 SODIMM*2 16G/32G
SSD	M.2 2280 NVMe PCIE3.0 512GB/1TB
Display	HDMI x 1 / DP x 1 / Type-C x 1
Wifi	802.11 b/g/n/ac, 2.4G+5G & BT5.2
I/O	USB2.0x2 USB3.2x4
LAN	RJ45x2(2.5G/2.5G)
Audio	3.5mm Audio Jack x1 3.5mm Mic Jack x1
DC	DC 19~20V/6.32~6A

Remark:

1. The low-power RF motor is a certified qualified product. Without permission, the company, businesses or individuals are not allowed to change the frequency, increase the power or change the characteristics and functions of the original design.
2. The use of low frequency RF motor shall not affect flight safety or interfere with legal communication;
   If any interference is found, it should be stopped immediately and improved until there is no interference.
   Legal communication refers to wireless communication in work as prescribed by law.
   Low-frequency rf motors shall be able to withstand the interference of legal communication or industrial, scientific and medical radio-wave motor equipment.
3. The product contains miniature batteries used by CMOS on the host board. Please do not replace them by yourself;
   If consumers replace the battery with the incorrect model by themselves, it may be dangerous. Please dispose of the replaced battery properly.

Part and interface definitions

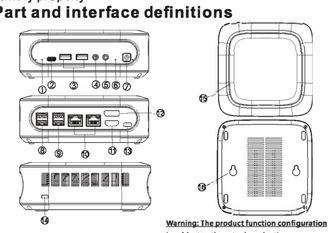

Warning: The product function configuration is subject to the actual product!

1.	System Reset	7.	Power Button	13.	DC IN
2.	Type-C	8.	USB 2.0	14.	Kensington
3.	USB3.2	9.	USB3.2	15.	Thermal
4.	Line-out	10.	RJ45	16.	VESA Screw Hole
5.	Mic-in	11.	HDMI		
6.	Clr-cmos Button	12.	DP		

Directions for use

1. Select the "Video input source" of the HDMI/DP interface and display device (such as TV, LCD/LED, Projector) to the HDMI input channel connected.
2. DC power supply: connect the power cord of accessories to the device and plug the other end directly into the plug.
3. Wireless keyboard and mouse can be used with Bluetooth keyboard and mouse and USB interface.
4. Press the power button to start the system.

Optimizing Boot Performance and Power Efficiency Settings

The Mini PC offers powerful control features that allow users to optimize boot performance and power efficiency through BIOS settings. These adjustments not only impact the overall operation of the server but also determine its performance levels.

You can customize your server's power consumption and performance by adjusting the following modes in the BIOS:

Minimal Power Mode:
Minimizes power consumption, ideal for tasks that require long operation times but low performance.
Normal Mode:
Balances power consumption and system performance, perfect for everyday tasks and general usage.
Performance Mode:
Maximizes system performance to handle high-load tasks.

Operation Path:

1. After starting the Mini PC, press the **DEL** key to enter the BIOS interface.
2. Navigate to the **Advanced** tab and select the **Power Management** submenu.
3. Inside the submenu, you will find the **Power Consumption Control** option, where you can adjust various power-related settings to optimize your system's performance and efficiency.

EC REP
Name: Woksea Technologie Deutschland GmbH
Add: berlichingen str.9 Schwabach Deutschland
Zip Code: 91126
Contact Person: Mao
Tel/Fax: +49 9122 9835684
E-mail: wokseaeu@gmail.com

UK REP
Name: ERMENEGILDO SMART LIMITED
Add: 6 PROSPECT WAY ROYAL OAK INDUSTRIAL ESTATE DAVENTRY NORTHAMPTONSHIRE UNITED KINGDOM NN11 8PL
Contact Person: Mihai Lambert
Tel/Fax: 00442037697376
E-mail: 1948mihai@gmail.com

Alwotai Technology (Shenzhen) Co., Ltd.
A602-603, Jinfujai Building, Dabao Road, Xin'an Street, Bacan District, Shenzhen, Guangdong

Register your product and activate your warranty: **https://ewowtech.com/warranty**
7X24 Hours Customer Service: **support@ewowtech.com**
TEL: **+1-(978)-605-4333 (8:00AM-17:00PM EST)**

MADE IN CHINA

MF01A6款：100x142mm
12 g铜板 4+4 风琴折 左右反

Quick Start Guide

MG19

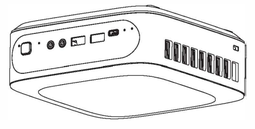

First day

Start your new PC/Register Service Home/Activate Warranty
Confirmed Warranty has been extended to two years at Service Home

ACTIVATE YOUR 12+24 MONTHS WORRY-FREE WARRANTY NOW

12+24

Enjoy your new computer

Everyday

Telephone customer service response
Elite Engineer Services
24-hour after-sales email
Software Update Guidelines

Someday

- 24 months free replacement for damaged unit
- 30 days money-back guarantee for any reason
- Life-time service for any issue

Customer Service Tel: +1-(978)-605-4333
Customer service email: support@ewowtech.com

BareBone Support Site: https://ewowtech.com/pages/mg19

BareBone Support

● Windows OS ● Driver File ● Installation video

Scan the downloaded QR code to get free Windows KEY

- surprise -

Service Guarantee Description

Thank you for buying this product. You can enjoy one year of free spare parts and manual guarantee service provided by our company.

The company will be required to provide services due to the following conditions, and maintenance fees will be charged as appropriate:

- Improper operation was not carried out according to the product manual or instructions.
- Man-made damage, computer virus, dampness, improper software installation or self-disassembly, etc.
- Irresistible force such as fire, flood, wind and earthquake.
- Wear and tear caused by accessories, consumables and natural use.
- If we need to reinstall the software or adjust the computer Settings, a fee will be charged as appropriate.
- The company's warranty identification mark is damaged or dirty, resulting in unrecognizability.
- Do not block the front and rear vents, which may affect product performance and life.
- Do not use non-original adapters, which may affect product performance and life.
- Please backup your personal data and files before sending the product to repair it. The integrity of the data may be affected during the repair process.
- We guarantee the maintenance service, so that you buy peace of mind, use it at ease.

FCC WARNING
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.
To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.