GIFT BOX.

BANSHILI Magic Dream Series Crib Rattle

FOR EVERY ANGEL THAT COMES TO EARTH, A BABY GIFTS TO KEEP YOUR BABY COMPANY AND

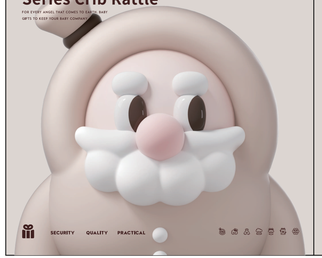

SECURITY QUALITY PRACTICAL

INTRODUCTION

Dear parents,
Thank you for choosing the Banshili Plush Musical Crib Mobile. To assist you in understanding and using this product correctly, we have prepared this detailed instruction manual for you. the Banshili Plush Musical Crib Mobile is designed to provide visual and auditory stimulation for your baby, promoting sensory and cognitive development. With built-in music and bells, it attracts your baby's attention and helps them track moving objects. Additionally, it creates a soothing sleep environment, aiding in promoting your baby's sleep.We sincerely hope that this product can become your right hand to take care of your baby and escort their healthy growth. Thank you for trusting our products and wish you and your baby a happy time.

PRODUCT PARAMETERS

Trade Name: BANSHILI Magic Dream Series Crib Rattle
Recommended Age: 0 months to 3 years
Product Dimensions: 410*300*950mm

Primary Material:
Fabric 1: 100% Polyester
Fabric 2: 100% Cotton
Filling: 100% Polyester
Frame: ABS (except accessories)
Core: Electronic Components

Security category:
GB 31701-2015 Infant and children's products, category A

Mandatory and safety standards:
GB 6675.1-2014 GB 6675.2-2014
GB 6675.3-2014 GB 6675.4-2014
GB 19865-2005 ASTM..CPSIA..CA65

Importer: Miliin Inc.
Importer address:16192 Coastal Hwy, Lewes, DE 19958, Sussex County, Delaware.
Manufacturer: Shanghai Banshili Technology Co., Ltd
Manufacturer address: Room 619, Building 3, No. 618 Jianyun Road, Pudong New Area, Shanghai, China

PARTS

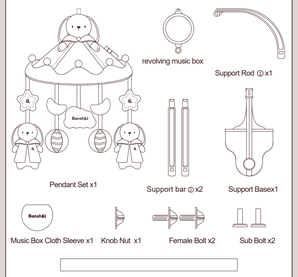

Note: The style in the picture is only for illustration, please refer to the actual .

INSTALL

Assemble the four-section bracket inside the accessory bag as shown below

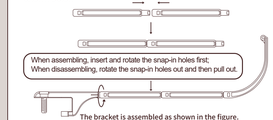

Attach the stand base to the child's bed or bed rail as shown below



INSTALL

Attach the stand fabric cover and the music box fabric cover to the stand and the music box respectively, and then hang the music box on the top hook of the stand.



Hang the pendant set on the music box hook as shown below



FUNCTION INSTRUCTIONS OF THE MUSIC BOX

SCHEMATIC DIAGRAM OF MUSIC BOX BUTTONS AND FUNCTIONS

•BASIC VERSION:



•BLUETOOTH MODEL:



MUSIC BOX KEY FUNCTION AND OPERATION DESCRIPTION

•BASIC MODEL :

ON/OFF KEY:
LIGHTLY PRESS IT TO TURN ON THE POWER, THE MUSIC IS AUTOMATICALLY PLAYED HOOK ROTATION, LIGHTLY PRESS IT AGAIN TO TURN OFF THE POWER, SO ON AND SO FORTH; THE MOTOR AND THE MUSIC WORK SYNCHRONOUSLY, THE MOTOR ROTATES WHEN THE MUSIC IS PLAYED, AND THE MOTOR STOPS WHEN THE MUSIC STOPS.

FUNCTION INSTRUCTIONS OF THE MUSIC BOX

Mode switching:
Music box mode is divided into: music mode, rotary mode..
Initial state of power on, music plays automatically and the hook rotates. The first time you press lightly, the hook stops and the music continues; the second time you press lightly, the music stops and the hook resumes rotating; the third time you press lightly, the music and the hook resume at the same time.

Volume minus/previous song:
Long press the volume key volume continues to decrease until the volume is zero. Release the volume key to keep the current volume setting. Short press the volume key to switch to the previous song.

Volume Up/Next Song:
Long press the volume key volume continues to increase, hear the drip sound for the maximum volume. Release the volume key to keep the current volume setting. Short press the volume key to switch to the next music.

Power Saving Mode:
In the power-on state, if there is no operation for a sustained period of time, it will play all the music loops two times in any mode and then enter the sleep state. If any key is triggered during this period, the timer will be re-timed. When waking up, playback starts from the next music before entering sleep.

Bluetooth models:

On/Off,Pause/Play button:
Long press 3 seconds for on/off, switch on/off, respectively, corresponding to different voice prompts, short press after playback, music hooks pause, short press again, music and hooks resume.

Mode switching:
Music box mode is divided into: Bluetooth mode, TF card mode, rotary mode.
Initial state of power on the indicator light flashes slowly, while playing the tone "Card display", music plays automatically, the hook rotates. The first time you press it, the indicator light will flash slowly, the music will stop, and the hook will rotate; the second time you press it, the indicator light will flash fast, and the tone "Bluetooth device is ready to pair" will play, and it will start searching for Bluetooth device (device name:)HLEEDUO-1) ,After successfully connecting with the mobile device, you can operate the device or product buttons for volume +/-, up/down and play/pause operations; the third time you press lightly, the indicator light will flash slowly, and at the same time play the beep "Card display", the music and the hook will resume at the same time. Press and hold the mode switch button for 3 seconds in any mode control the hook to pause or rotate.

VOLUME MINUS/PREVIOUS SONG:
Press and hold the Volume key Volume continues to decrease until the volume is zero. Release the volume key to keep the current volume setting. Short press the volume key to switch to the previous music.

VOLUME PLUS/NEXT SONG:
Long press the volume key volume continues to increase, hear the drip sound for the maximum volume. Release the volume key to keep the current volume setting. Short press the volume key to switch to the next music.

INDICATOR LIGHT:
Fast flash for Bluetooth search, slow flash for playback, constant light for pause, double flash for rotary mode.

USB PORT:
DC5Vinput, the product will automatically turn on, you can download the files and songs on your computer and save them to the memory card, or you can play them on your computer.

TF CARD:
When this product is inserted with a TF card, it will play the content in the TF card by default after power on. Volume can be adjusted, up/down song can be switched and play/pause function is available by pressing the button. Without TF card inserted, the device defaults to Bluetooth mode and starts searching for Bluetooth devices (device name: HLEEDUO-1) after powering on. After successfully connecting with the mobile device, you can operate the device or product buttons for volume +/-, up/down song and play/pause operation. After pulling out the TF card, it can be connected to the card reader for downloading.TF card supports common formats such as MP3, WAV, WMV, etc. Tip: The TF card is located inside the battery compartment, at the bottom of the battery.

HOOKUP:
After power on the hook rotates, long press the mode switching key for 3 seconds, it can control the hook to stop or rotate, after the hook stops rotating, the hook will work again after switching modes.

MUSIC BOX TECHNICAL PARAMETERS

·Basic model:
Built-in 2 x 1.5v AA non-rechargeable batteries
Playback output power about 0.2W
Quiescent current less than 6uA
Maximum power: 0.32W
Dimensions and specifications:L136*W100*T36mm

·Bluetooth model:
Built-in 2 1.5v AA non-rechargeable batteries
Playback output power is less than 1W
Product static power consumption is less than 6uA , the maximum power consumption of the work of 1.5W
Signal to Noise Ratio: ≥ 70dBA
Bluetooth version: V5.0 + EDR
Device Name: HLEEDUO-1
Dimensions: L136 * W100 * T36mm
TF card: 128MB, the maximum support for the 8G

MUSIC CONTENT

• Children's songs (12songs)
IT'S A SMALL WORLD
FRERE JACQUES
TWINKLE TWINKLE LITTLE STAR
BRAHMS LULLABY
MARY HAD A LITTLE LAMB
SCHUBERT'S LULLABY(WIEGENLIED)
MOZART'S LULLABY(WIEGENLIED)
LA LE LU
OLD MACDONALD HAD A FARM
ROCK A BYE BABY
LET ME BE YOUR TEDDY BEAR
HUSH,LITTLE BABY

• Christmas songs (11 songs)
JINGLE BELLS
SILENT NIGHT(SLOW SPEED)
SANTA CLAUS IS COMING TO TOWN
WE WISH YOU A MERRY CHRISTMAS
AMAZING GRACE
WHITE CHRISTMAS
DECK THE HALLS
JOY TO THE WORLD
O TANNENBAUM
FROSTY THE SNOWMAN
JOLLY OLD SAINT

MUSIC CONTENT

• Popular Songs (12 songs)
HAPPY BIRTHDAY TO YOU
LOVE STORY (MOVIE THEME)
FUR ELISE
YOU ARE MY SUNSHINE
WHEN YOU WISH UPON A STAR
LOHENGRIN BRAUTCHOR(WEDDING MARCH)
THE MOON REPRESENTS MY HEART.
MAY YOU HAVE A PROSPEROUS NEW YEAR! (NEW YEAR'S GREETING)
VARIATIONS ON THE THEME FROM CANON
SKY CITY
JASMINE
JOYFUL

WARNING

-This product must be used under adult supervision and must be assembled by an adult to ensure safety.
-Please dispose of the bag properly immediately after product installation to avoid choking risk.
-Please ensure that infants and young children do not put any product parts in their mouths to prevent swallowing hazards.
-Remove the toy as soon as the infant begins to stand on its hands or knees for support to avoid risk of entanglement or strangulation.
-If mounted on a wall or ceiling, make sure that the toy is hung in such a way that it is out of the reach of an infant who is attempting to stand.
-Attach the supplied fasteners (e.g. cords, clamps, etc.) securely to the crib or playpen and check them regularly, as instructed.
-Do not attach any additional cords or straps to the product to ensure safety.
-Regularly check that the toy parts are in good condition. If any damage is found, discontinue use immediately.

FCC Warning
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

SAFETY INSTRUCTIONS FOR BATTERY USE

-This product uses 2 x 1.5V AA non-rechargeable batteries.
-When replacing or installing batteries, please follow the polarity and voltage markings on the toy batteries correctly to avoid short circuits.
-Do not attempt to recharge non-rechargeable batteries. -Do not mix different types of batteries or old and new batteries.
-Use only batteries that are the same or equivalent to the recommended batteries.
-Remove the batteries when they are exhausted and remove them from the toy when not in use for a long period of time.
-Do not connect more than the recommended number of power supplies.
-Make sure the power terminals are not short-circuited.

THE PRODUCT USES 2 X 1.5V "AA"

ASTM F963
Complies with ASTM F963-23 Standard Consumer Safety Specification for Toy Safety.
CPSIA
Conforms to CPSIA Lead & Phthalates Content Requirements
CA65

Banshili 班时礼

DON'T WORRY

ORIGINALITY CREATES SURPRISES
DESIGNED FOR BABY