PRINT ARTWORK ON DIRECTLY ON PAPER.
DO NOT PRINT RED FOLD AND CUT LINES. OPEN USER MANUAL DIMENSIONS: 6.46"W x 5.5"H

FOLD LINE

CUT LINE

FRONT

iJOY

PORTABLE LABEL
THERMAL PRINTER



USER MANUAL

Bluetooth

iJOY


The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by QUIET USA CORP. is under license. Other trademarks and trade names are those of their respective owners.

QUIET USA CORP.
495 Flatbush Ave Brooklyn, NY 11225

© GOLIOY & IJOY are registered trademarks of QUIET USA CORP.
All other trademarks and trade names are property of their respective owners.
Designed by GOLIOY & IJOY in New York. All rights reserved QUIET USA CORP.

Made in China.

•HOW TO OPEN THE DEVICE AND LOAD PAPER

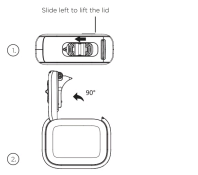

•YOUR IJOY PRODUCT

Thank you for purchasing and using the "IJOY PORTABLE THERMAL LABEL PRINTER". This product provides a custom convenient printing experience. Before using this product, carefully read this manual to in order to operate at maximum benefit. Please ask your local dealer or call us if you have any questions.

Contents:
1x Label maker
1x Roll Length: 4.56 meters Label size: 15x30mm
1x Type-C Cable(30cm)
1x Manual




Device



Charging Cable

•SPECIFICATIONS

Model: IJ10780-PS
Battery: 1200mAh
Max Capacity for printer head: 30KM
Type-C Charging cable: 30cm length, DC 5V/1A
The portable printer comes with the labels sized at:
Label size: 15 x 30 mm, label width 15 mm, roll length 4.56 meters.
Printing speed(Max): 15mm/s
Listed Version: Bluetooth
Printing method: thermal
Effective print width of print head(Max): 12mm
Resolution: 230dpi(8dots/mm)
Print Dot Size: 0.125x0.125mm(1mm=8dots)
The printer uses standard sized label paper, compatible with labels ranging from 12-15mm

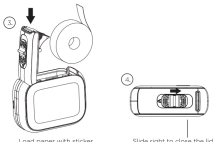

BACK

•HOW TO DOWNLOAD

1, Download the APP called "iPrint" on your Google Play.
Or you can scan the QR code to download.

Android iOS

2. Turn ON Bluetooth on your device.

3. In the app, tap the Select Equipment icon in the upper-right corner. Select the printer from the Bluetooth device list. The printer name is typically "L1-****".

4. Configure the label paper settings.

5. Create or edit your label, then tap Print.

•HOW TO TURN DEVICE ON AND OFF



ON/OFF
(PRESS AND HOLD FOR 2 SECONDS TO TURN ON. PRESS AND HOLD FOR 2 SECONDS AGAIN TO TURN OFF)

Blue light: bluetooth connected/in normal use

Blue light flashing: bluetooth disconnected

Red Light: charging/paper shortage/overheating/cover opening

Red Light off: fully charged

Red light flashing: low power will cause the printed handwriting to be weak, please charge it in time

•WARNINGS

1. Make sure that the paper bin is clean before using the printer. If there is any debris in the paper bin, the print head may be damaged during printing. In case of any debris, use a special cleaning device or alcohol to clean the paper bin and print head.
2. Turn off the power immediately when the printer malfunctions.
3. There are complex circuits and devices inside the printer, please do not disassemble the printer without authorization.
4. Charge the battery in a cool and airy room. Do not expose the printer and power adapter to high-temperature and high-humidity environments, or water to avoid short circuits that can cause the battery to heat up, smoke, deform, damage, or even explode. If the power adapter comes into contact with water or other liquid, cut off the power immediately. When you notice smoke or an odor from your printer or power adapter, unplug the power adapter immediately and take care to avoid burnes.
5. Please do not squeeze, mechanical vibration, shake the printer and power adapter. It is forbidden to use the power adapter when the power cord is damaged, overwrise it will cause electric shock, fire and damage to the power adapter.
6. Do not use the printer near flammable products such as gas stattions and fuel warehouses.

•BATTERY DISPOSAL

Please do not attempt to change the battery yourself. If the battery has died, you should follow the disposal instructions listed here. Never dispose of used batteries/electronics with ordinary solid wastes. Always dispose of used batteries/electronics in accordance with the prevailing community regulations that apply to the disposal of batteries/electronics. If there are no local regulations concerning battery/electronics disposal, please dispose of the device in a waste bin for electronic devices. Many electronics retailers now recycle batteries and other electronic components at no charge.

•BATTERY CAUTION

The battery used in this device may present a risk of fire, explosion or chemical burn if used incorrectly. Never use or charge the battery if it appears to be leaking, discolored, deformed, or in any way abnormal. Never disassemble the unit or attempt to remove the battery as that could cause leakage of alkaline solution or other electrolytic substances. Never expose the battery to any liquid. Never expose the battery to excessive heat such as direct light or fire. Always keep the battery out of reach of infants and small children.

•OTHER IMPORTANT SAFETY INFORMATION

Disposal of old electronic & electronic equipment (Applicable in the European Union and other European Countries with separate collection systems) The trash can symbol (seen on the bottom) on the production indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for recycling of electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling. For more detailed information about this product, please contact your local household waste disposal service or the shop where you purchased this item.

IMPORTANT REMINDERS

This device can ONLY be charged by 5V adapters/ USB ports only. Quick charging devices over 5V may cause heat and fire.

•FCC ID STATEMENT **FCC ID: 2BP72-IJ10780**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.
Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.