设计版本号	产品名称 | Product name	比例 | scale	日期 | Date	设计师 | Designer	审核 | Audit
Rev_V0_EN	DR-HTF027S_美规UG	1：1	20260723	Dove	Joan

Hesung | innovation 和生创新

材质印刷与技术要求	材质: 157G铜版纸双面覆哑膜 印刷要求: 双面彩色印刷，图稿清晰、不开裂、不发皱。 对折要求: 上下风琴折页 色值要求：蓝 C90 M70 Y0 K0	字体 | Fonts	Manrope	尺寸 | Size	单页尺寸：160*130 mm 总长：390MM

图纸设计禁止修改，尺寸以实际刀模图为准

160mm

130mm

DREO | Smart Tower Fan 347S

User Guide

Model No.: DR-HTF027S
Rated Power: 58W
Input: 120V~ 60Hz

Scan to read the full user manual

Only DREO experts give all the support you need

- Faster response.
- Excellent customer support.
- Hassle-free returns.
- Professional product guidance.
- Exceptional after-sales experience.

Reach out to us, it's easy!

support@dreo.com www.dreo.com

(888) 290-1688 Mon–Fri, 9:00 am–5:00 pm PST/PDT

When using the appliance for the first time, remove the wraps and attach the parts by following the steps below.

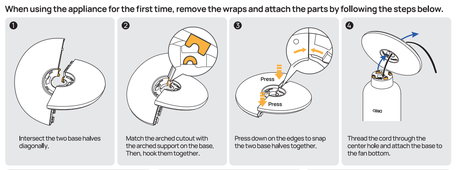

CAUTION Do not operate the tower fan if the base has not been installed. Make sure to thread the cord through all rear cord keepers.

LED Display

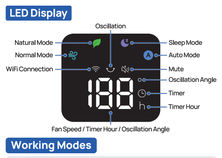

Working Modes

Normal Mode
Fan runs at the fixed speed.

Natural Mode
Fan speed goes up and down intermittently to replicate the natural breeze.

Sleep Mode (Mute Auto On)
Balance comfort and noise by automatically decreasing fan speed as you fall asleep.
Speed decreases once every 30 minutes, two times at most per use.

Auto Mode
Fan automatically increases speed when the room temperature is higher and decreases speed when the temperature is lower.

Note: If the fan is turned OFF or disconnected from power, it will operate under the previous setting (except the 'Timer setting') when it is turned ON again.

Control Panel

Power (On/Off)
- Touch to turn the fan on or off.

Mode
- Switch between Normal/Natural/Sleep/Auto mode.
- Long press for 3 seconds to mute/unmute.

Increase
- Increase fan speed (1–12 levels).

Decrease
- Decrease fan speed (1–12 levels).

Timer
- Select to set a timer (0–12h).

Oscillation / WiFi Connection
- Adjust airflow direction (0°, 30°, 60°, 90°, 120°).
- Long press for 5 seconds to start network settings and device pairing.

Connecting to the DREO App

Scan the QR code to download the DREO app.

OR

Download on the App Store

GET IT ON Google Play

Search "DREO" on Google Play or the App Store.

Look for "**Smart Tower Fan 347S**" when connecting your new appliance.

1. Launch the DREO app and sign in or create an account.
   Tip: Verify your email address to continue.
2. Hold for 5 seconds to start WiFi connection settings.
   Tip: The icon will keep flashing when pairing.
3. Tap **+ Add Device** and select **Smart Tower Fan 347S**.
   Tip: Enable Bluetooth and plug in the appliance.
4. Now you can control the appliance on your app!
   Tip: To restart network setup, hold again for 5 seconds.

*To learn more, please go to user manual www.dreo.com

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

Do not cover the air inlet and outlet while in operation.

Do not use the appliance near flammables and combustibles.

General Safety

1. Read all instructions before using this appliance.
2. Children should be supervised to ensure that they do not play with the appliance. Cleaning and maintenance shall not be performed by children without supervision.
3. Use the appliance as described in the user manual only. Any other use not recommended in the user manual may cause fire, electrical shock, or personal injury.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Operation Safety

1. Place the appliance on a flat, dry surface before use.
2. Do not immerse in water or any other liquids.
3. Do not use the appliance until the base is installed.
4. Do not insert your fingers, pencils, or any other objects into the grilles while in operation.
5. Do not attempt to repair or modify any electrical or mechanical functions on the appliance. All servicing should be performed by qualified personnel only.

Electricity Safety

1. Make sure that the voltage of your electricity supply is the same as that indicated on the appliance.
2. Always unplug before cleaning or leaving the appliance unused for a long period of time. Keep your hands dry when plugging/unplugging.
3. Do not operate any fan with a damaged cord or plug. Discard the fan or return to an authorized service facility for examination and/or repair.
4. Do not run the cord under carpeting. Do not cover the cord with throw rugs, runners, or similar coverings. Do not route the cord under furniture or appliances. Arrange the cord away from traffic area and where it will not be tripped over.
5. **WARNING:** To reduce the risk of fire, electric shock or injury to persons, do not use replacement parts that have not been recommended by the manufacturer (e.g. parts made at home using a 3D printer).
6. **WARNING:** To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
7. **WARNING:** If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
8. The appliance shall not be modified by users, such as by adding supplemental filters to the appliance.
9. Exclusive for models that include a power adapter in their package contents: The appliance is only to be used with the power adapter provided with the appliance. Turn off the appliance before plugging in.
10. Exclusive for models that don't include a power adapter in their package contents: This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.
11. Exclusive for models that don't include a power adapter in their package contents: This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

Cleaning Instructions

1. Always turn off and unplug the appliance before cleaning.
2. Gently wipe off the dust with a soft, dry cloth.
3. Use a soft, dry cloth or a cotton-tipped swab to remove any dust from the air inlet.
4. DO NOT use cleaning agents.
5. DO NOT use abrasive scrubbers.
6. Fire or electrical shock hazard. DO NOT immerse the main unit in water. Never allow water to get inside the appliance.
7. Except for cleaning, any servicing should be performed by an authorized service representatives.
8. Store in a cool, dry area and keep the cable out of high-traffic areas to avoid tripping hazards.

FOR HOUSEHOLD USE ONLY
READ AND SAVE THESE INSTRUCTIONS

Battery Replacement

1. Remove the battery cover in the direction indicated by the arrow.
2. Replace with two new AAA 1.5V batteries. Make sure that the positive (+) and negative (-) terminals are positioned correctly.
3. Push the battery cover back into place.

⚠WARNING

- Replace with new batteries of the same type when replacement is required.
- Remove the batteries when the remote control is unused for a long period of time.
- Do not attempt to destroy or dismantle the batteries.
- Do not dispose of the batteries in a fire as batteries may explode or leak.
- Chemical burn hazard. Keep batteries away from children.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) , or rechargeable (ni-cad, ninh, etc.) batteries.
- Always purchase the correct size and grade of battery most suitable for the intended use.
- Keep battery contacts clean and dry.
- Clean the battery contacts and also those of the device prior to battery installation.
- Remove used batteries promptly.
- Non-rechargeable batteries are not to be recharged.

CHOKING HAZARD - Small parts. Not for children under 3 years.



The remote control has no RF circuit.

User Servicing Instructions (Fuse)

This appliance features a fused safety plug that protects against overload or short-circuit situations. If the fuse blows, please cut off power and follow the below instructions or consult a qualified electrician.

1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
2. Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades.
3. Remove fuse carefully. Push the fuse from the other side to remove the fuse.
4. Risk of fire. Replace fuse only with 5 Amp, 125 Volt fuse.
5. Close fuse cover. Slide closed the fuse access cover on top of attachment plug.



⚠WARNING Risk of fire. Do not replace the attachment plug. Contains a safety device (fuse) that should not be removed. Discard the product if the attachment plug is damaged.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

DREO CUSTOMER CARE

12-MONTH LIMITED WARRANTY

What is Covered

DREO warrants to you that your product will be free from original defects in materials and workmanship for a period of twelve (12) months from the date of your purchase, when you use the product for normal household purposes in accordance with this user manual.

We may extend warranty for certain purchases. If you do not retain your proof of purchase, your warranty will start two (2) months from the date of manufacture printed on your product label.

What is Not Covered

This limited warranty only applies to the original purchaser of your product and is non-transferable. This warranty is only valid if your product is used in the country in which you originally purchased it. In addition, this warranty will not apply, and DREO will not be liable for any costs, damages, or repairs, in connection with any of the following:

- Accidents or use of your product with inappropriate force;
- Damage or destruction caused by wrong voltage or unstable electric current;
- Normal wear and tear;
- Careless operation or handling, misuse, abuse, neglect, and/or failure to maintain or use your product in accordance with this user manual;
- Use of your product for commercial purposes or non-domestic products;
- Reduction in battery discharge time due to battery age or use (as applicable);
- Products with altered or removed serial numbers;
- Cleaning any blockages from the product;
- Purchases from retailers and distributors not authorized by DREO to sell this product;
- Defects caused by or resulting from damages from shipping or handling by any third party not authorized by DREO to ship or handle your product; or
- Defects caused by or resulting from repairs, service, improper maintenance, or alteration to your product or any of its components by anyone other than a repair person authorized by DREO.

Any service and customer support that DREO provides to you under this limited warranty will not extend the duration of this limited warranty.

Warranty Limitations and Exclusions

ANY IMPLIED WARRANTIES RELATING TO YOUR PRODUCT, INCLUDING BUT NOT LIMITED TO THE WARRANTY OF MERCHANTABILITY AND THE WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THE LIMITED WARRANTY SET FORTH ABOVE AND ARE OTHERWISE DISCLAIMED.

THE LIMITED WARRANTY SHALL BE THE SOLE REMEDY OF THE PURCHASER OR USER OF THE PRODUCT, AND DREO SHALL NOT BE LIABLE FOR AN ALLEGEDLY DEFECTIVE OR DAMAGED PRODUCT EXCEPT TO REPAIR OR REPLACE IT IN ACCORDANCE WITH THE LIMITED WARRANTY. DREO WILL NOT BE LIABLE FOR SPECIAL, INCIDENTAL, INDIRECT, CONSEQUENTIAL OR PUNITIVE DAMAGES OR LOSSES OF ANY NATURE THAT YOU MAY INCUR IN CONNECTION WITH YOUR PURCHASE OR USE OF YOUR PRODUCT.

Some jurisdictions do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This limited warranty gives you specific legal rights, and you also may have other rights which vary from jurisdiction to jurisdiction.

Limited Remedies

If your product fails because of an original defect in material and/or workmanship during the warranty period, DREO will repair or replace (in DREO's sole discretion) your product. To obtain warranty service on your product, contact us at support@dreo.com or at (888) 290-1688 (available from Monday–Friday, 9:00 AM–5:00 PM PST/PDT) for further instructions.

IN THE EVENT OF AN ORIGINAL DEFECT IN MATERIAL AND/OR WORKMANSHIP, TO THE EXTENT PERMITTED BY LAW, THE REMEDIES SET FORTH IMMEDIATELY ABOVE ARE YOUR SOLE AND EXCLUSIVE REMEDIES.

Reach out to us, it's easy!

(888) 290-1688 (Mon–Fri, 9:00 am–5:00 pm PST/PDT)
support@dreo.com
www.dreo.com
DREO PTE. LTD.
1 COLEMAN STREET, #05-05, THE ADELPHI, SINGAPORE 179803

Rev_EN_1.0

折页压痕线

裁切线
正折线
反折线
出血位
粘胶区域

图层使用规范：

1、 备注信息图层为非印刷区域，展示印刷物料基础信息。
2、 刀板线、备注工艺、尺寸层展示印刷工艺部分。
3、 画面信息层展示印刷展示图片与文字。

*电子文档为Adobe Illustrator制作

文件格式：model规格类目日期.AI **（为可编辑原始文档）**
文件格式：model规格类目日期.pdf **（为文件转曲不可编辑文档）**

审稿检查事项 会签以“√”形式确认（负责部门预审确认）	
审稿检查事项	
商标规范	
字符高度	
工艺材质	
颜色标识	
产品文案	
条码检查	
厂　　址	
全 成 分	
警告标语	
执行标准	
产品尺寸	
外/内箱尺寸	
OEM信息*	
产品包装信息	
请相关部门确认产品、包装等信息！ *OEM信息： 委托方及被委托方信息（名称、地址、邮编、电话、生产许可证、卫生许可证）	

设计师	审核	产品负责人	法规	采购