Evolution

使用手册、售后卡

包装内清单

键盘包/键盘本体/配件盒/说明书/合格证

配件盒清单

备用轴/数据线/2.4G 接收器/双拔器

M2.5*3 备用螺丝/M2*4 备用螺丝/铍铜硅胶

MAC增补键帽/Gasket条/防撞硅胶/防撞圆硅胶

快拆、2.4G接收器收纳示意图

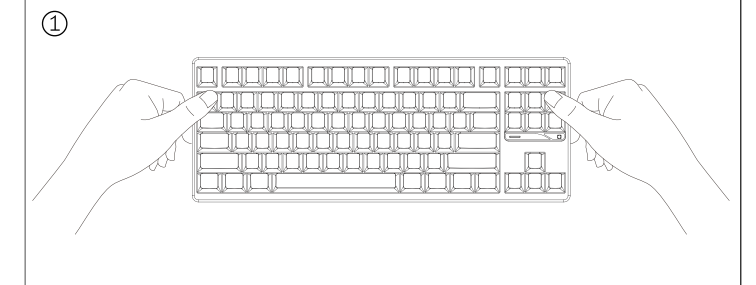
① 大拇指按住键帽，食指提键盘上盖上部，打开上碰珠

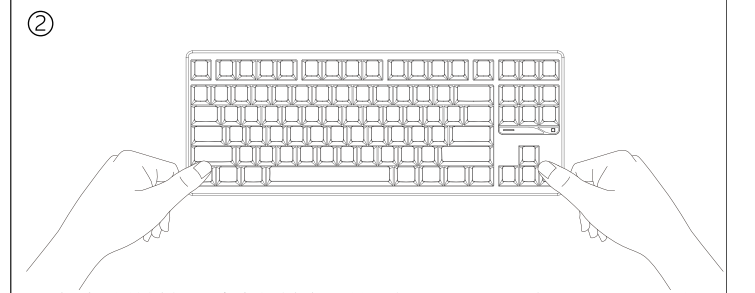
② 大拇指按住键帽，食指提键盘上盖下部，打开下碰珠，即可打开上盖

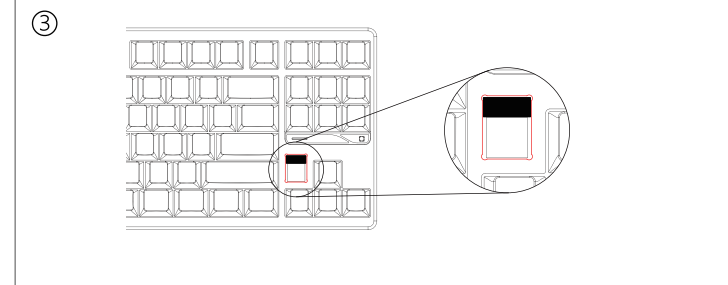
③ 打开上盖后，2.4G接收器可收纳在收纳槽内（接收器需头朝上）

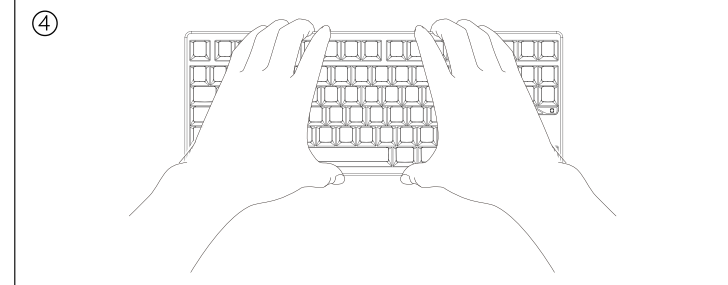
④ 将上盖按位置摆放好向下压即可安装完成

按键、组合键说明

	组合按键	Windows功能	MAC功能*
FN+	Delete(长按3s)	恢复出厂设置	恢复出厂设置
	F1	屏幕亮度 -	屏幕亮度 -
	F2	屏幕亮度 +	屏幕亮度 +
	F3	返回主页	控制台(CTRL+UP)
	F4	打开邮件	搜索
	F5	打开计算器	呼出SIRI
	F6	打开播放器	截图(Cmd+SHIFT+4)
	F7	上一曲	上一曲
	F8	暂停/播放	暂停/播放
	F9	下一曲	下一曲
	F10	静音	静音
	F11	音量 -	音量 -
	F12	音量 +	音量 +
	WIN-L(短按)	锁WIN	
	WIN-L(长按3s)	WIN(默认)/os切换	

*在使用MAC情况下F区常用为功能键不需要+FN

背光、LOGO 灯调节说明

	背光控制	
FN+	Z	ON/OFF 背光
	X	背光灯效切换下一个
	C	背光灯效切换上一个
	V	背光色相+
	B	背光色相-
	N	背光饱和度+
	M	背光饱和度 -
	<	背光亮度+
	>	背光亮度-
	↑	背光速度+
	↓	背光速度-

	LOGO 灯控制	
FN+	Q	ON/OFF LOGO 灯
	W	LOGO 灯效切换下一个
	E	LOGO 灯效切换上一个
	R	LOGO 灯色相+
	T	LOGO 灯色相-
	Y	LOGO 灯饱和度+
	U	LOGO 灯饱和度-
	I	LOGO 灯亮度+
	O	LOGO 灯亮度-
	P	LOGO 灯速度+
	[	LOGO 灯速度-

电源管理

EVO80 配备两块 4000 毫安时电池， 电池开关位置在键帽Caps Lock下方。（此开关仅为电源开关非模式切换开关）

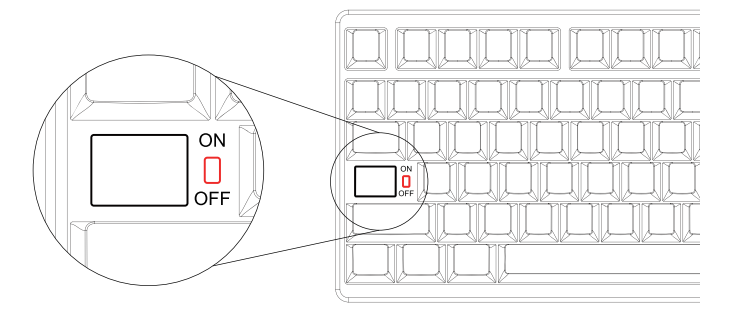

键盘电量查询 FN+D（不松手）

当键盘处于充电状态时ESC键下的白色指示灯快闪，当键盘处于满电状态时ESC键下的绿色指示灯常亮。
当键盘不在充电状态时ESC键下的灯用颜色来指示电量。
0%-10%红色；10%-50%黄色；50%-80%蓝色；80%-100%绿色

模式介绍及配对

	模式及配对	
FN+	~`	USB 模式
	1!	蓝牙模式设备1
	2@	蓝牙模式设备2
	3#	蓝牙模式设备3
	4$	2.4G 模式

USB 连接

1、将USB-C连接线插入键盘端口。
2、将USB-C连接线另一头连接至电脑。
3、确保键盘在USB模式下，~`键下指示灯常亮2s后键盘恢复到整体背光灯效即连接成功，设备名为EVO80。
注：未连接数据线时，~`键下指示灯慢闪白色8s，未连接则进入休眠。

2.4G 连接*

1、键盘处于有线/电池电源开关打开状态。
2、使用FN+4$切换到2.4G模式，4$键下指示灯快闪时开始配对。
3、将2.4G接收器插入电脑USB端口，4$键下指示灯常亮2s后键盘恢复到整体背光灯效即连接成功，设备名称为EVO80 2.4G。
注：配对时对应指示灯为快闪白色，恢复连接时为慢闪，配对1分钟未成功则进入休眠状态，恢复连接20秒未成功则进入休眠状态。

蓝牙连接*

1、键盘处于有线/电池电源开关打开状态。
2、使用FN+1！/2@/3#切换到蓝牙模式，1！/2@/3#键下指示灯快闪时开始配对。
3、对应设备名称为EVO80 BT1/EVO80 BT2/EVO80 BT3，在1！/2@/3键下指示灯常亮2s后键盘恢复到整体背光灯效即连接成功。
注：配对时对应指示灯为快闪白色，恢复连接时为慢闪，配对1分钟未成功则进入休眠状态，恢复连接20秒未成功则进入休眠状态。

休眠模式

USB模式连接成功时不休眠。
其它模式键盘成功连接时，如果键盘3分钟无操作，键盘自动进入一级休眠，此时灯光关闭，蓝牙或者2.4G处于连接状态，按键唤醒同时有按键输出。
无线模式时，如果电脑关机或者拔掉接收器，键盘20秒无操作，键盘进入二级休眠，灯光关闭，无线断开连接。

*2.4g与蓝牙首次配对成功后再切换到此模式会先进入恢复连接状态，若要连接新设备可长按FN+对应模式按键清除连接信息并重新开始配对。

FCC警告

此设备符合FCC规则的第15部分。操作受以下两个条件限制: (1).此设备不得造成有害干扰， (2).此设备必须接受接收到的任何干扰，包括可能引起不希望的干扰的干扰。

注1:此设备经过测试，符合FCC规则第15部分规定的B类数字设备的限制。这些限制旨在提供合理保护，防止在住宅安装中产生有害干扰。此设备产生、使用并可能辐射射频能量，如果未按说明书安装和使用，可能会对无线电通信产生有害干扰。但是，不能保证在特定安装中不会发生干扰。如果此设备确实对无线电或电视接收造成有害干扰，可以通过关闭和打开设备来确定，则鼓励用户尝试通过以下一种或多种措施来纠正干扰:

- 重新定向或移动接收天线。
- 增加设备和接收器之间的距离。
- 将设备连接到与接收器连接的电路不同的插座。
- 咨询经销商或有经验的无线电/电视技术人员寻求帮助。

注2:未经负责合规的方明确批准的任何对本单元的更改或修改可能会使用户操作设备的权限无效。

售后登记

订单号 ______________________

问题描述 ______________________

售后日期 ______________________

寄回地址信息 ______________________

每页 200*120 mm，正反印

Evolution

User Manual & Warranty Card

Content List

Carrying Case / Keyboard / Accessory Box / User Manual / Quality Certificate

Accessory List

Spare Switches / USB-C Cable / 2.4GHz Dongle / Keycap & Switch Puller

Spare Screws (M2.5*3 & M2*4) / Leaf Spring Gaskets

Mac Add-on Kit / Gaskets / Silicone Dampeners

Easy Disassembly

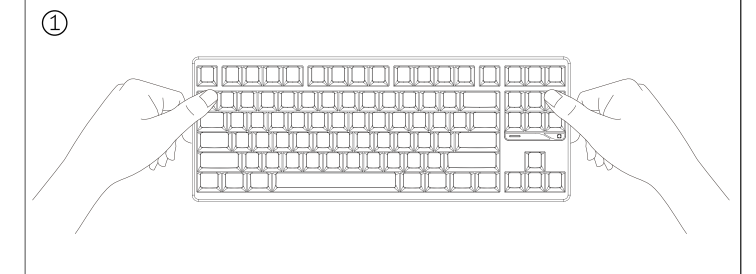
① Press the keycaps with your thumbs and lift the upper part of the top case with your index fingers to release the top ball-catch mechanism

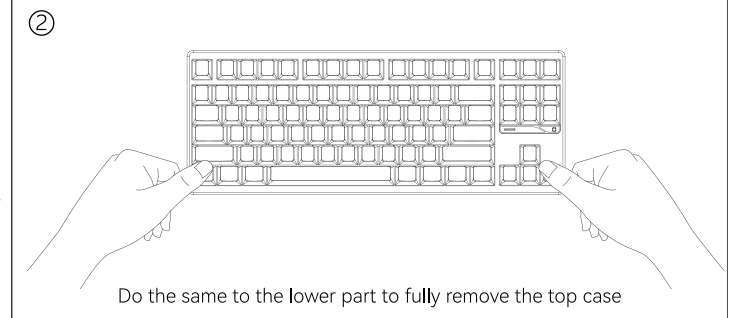
② Do the same to the lower part to fully remove the top case

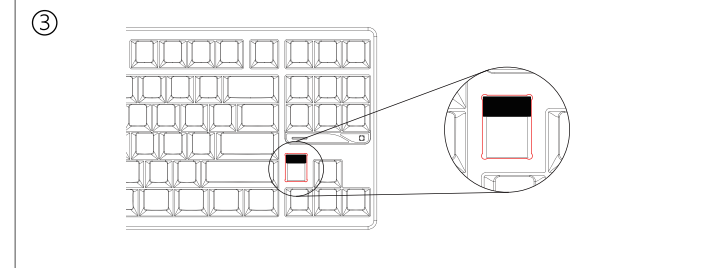
③ Under the top case, there is a storage slot for the 2.4GHz dongle. The dongle should be placed with the housing facing upwards.

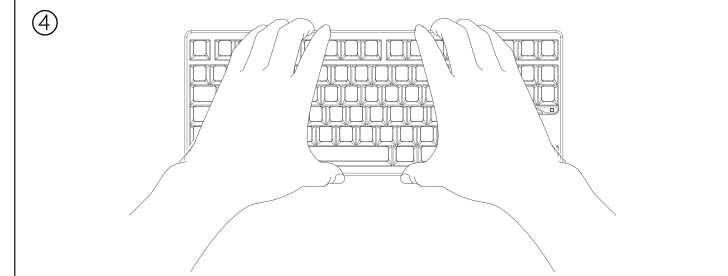
④ Align the top and bottom case, then press the top case down until the ball-catch mechanism engages to install the top case back.

Keyboard Shortcut Reference

	Keystroke	In Windows Mode	In Mac Mode*
FN+	Delete (Press and hold for 3s)	Factory Reset	Factory Reset
	F1	Screen Brightness -	Screen Brightness -
	F2	Screen Brightness +	Screen Brightness +
	F3	Return to Home Page	Enter Mission Control
	F4	Open the Email	Search
	F5	Open the Calculator	Activate Siri
	F6	Open the Player	Take a screenshot (Cmd+SHIFT+4)
	F7	Previous Song	Previous Song
	F8	Pause/Play	Pause/Play
	F9	Next Song	Next Song
	F10	Mute	Mute
	F11	Volume -	Volume -
	F12	Volume +	Volume +
	WIN-L (Tap)	Win Lock	
	WIN-L (Press and hold for 3s)	Windows (default)/Mac Mode Switch	

*In Mac mode, the F row works as function keys by default, so there's no need to press the Fn key together.

Backlight and LED Strip Control

	Backlight Control	
FN+	Z	Backlight ON/OFF
	X	Next Lighting Effect
	C	Prev Lighting Effect
	V	Hue +
	B	Hue -
	N	Saturation +
	M	Saturation -
	<	Brightness +
	>	Brightness -
	↑	Lighting Effect Speed +
	↓	Lighting Effect Speed -

	LED Strip Control	
FN+	Q	LED Strip ON/OFF
	W	Next RGB Effect
	E	Prev RGB Effect
	R	Hue +
	T	Hue -
	Y	Saturation +
	U	Saturation -
	I	Brightness +
	O	Brightness -
	P	RGB Speed +
	[	RGB Speed -

Power Management

EVO80 is equipped with two 4000mAh batteries. The battery switch is located under the Caps Lock keycap. Note that this switch is for battery control only and does not change connectivity methods.

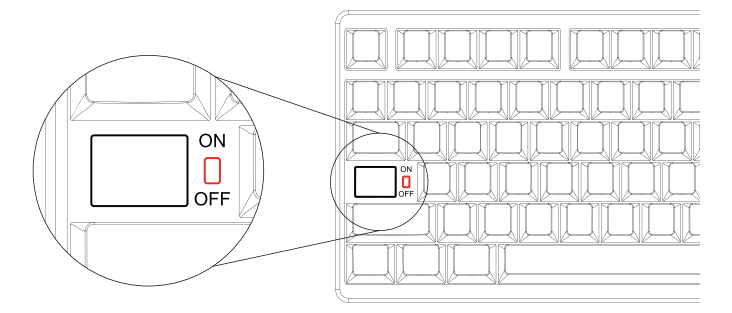

Press and hold FN+D to check the battery status:

When the keyboard is charging, the indicator under the Esc key will turn white and flash rapidly.
When the keyboard is fully charged, the indicator will turn green and stay on.
When the keyboard is not charging, the light under the Esc key indicates the battery level with colors:
0%-10% is red; 10%-50% is yellow; 50%-80% is blue; and 80%-100% is green.

Connectivity Method & Pairing

	Switching Connectivity Method	
FN+	~`	Wired Mode
	1!	Bluetooth Device 1
	2@	Bluetooth Device 2
	3#	Bluetooth Device 3
	4$	2.4G Mode

Wired Mode

1. Connect the keyboard to your PC using the included USB-C cable.
2. Tap FN+~` to switch the keyboard to wired mode. The indicator under ~` will stay on for 2 seconds, then return to the normal lighting effect, indicating the connection is established. The device name is EVO80.

Note: When the USB-C cable is disconnected, the ~` key indicator will flash slowly for 8 seconds before the keyboard enters sleep mode.

2.4G Mode

1. Make sure the keyboard is either connected to a power source or that the battery switch is turned to the ON position.
2. Tap FN+4 to switch the keyboard to 2.4G mode. If it's never paired before, the indicator under 4 will flash rapidly, indicating the keyboard is ready to pair.
3. Plug the 2.4G dongle into your PC. The indicator under 4 will stay on for 2 seconds, then return to the normal lighting effect, indicating the connection is established. The device name is EVO80 2.4G.
4. If you want to connect to a new device, press and hold FN+4 for 3 seconds to enter pairing mode again.

Note: The white indicator flashes quickly during pairing and slowly when reconnecting.
If pairing isn't successful within 60 seconds or reconnection fails within 20 seconds, the keyboard will revert to sleep mode.

Bluetooth Mode

1. Make sure the keyboard is either connected to a power source or that the battery switch is turned to the ON position
2. Tap FN+1 / FN+2 / FN+3 to switch the keyboard to the Bluetooth mode. If it's never paired before, the indicator under the respective key will flash rapidly, indicating the keyboard is ready to pair.
3. Once paired, the indicator under the respective key will stay on for 2 seconds before returning to the normal lighting effect, indicating the connection is established. The device name will be EVO80 BT1, EVO80 BT2, or EVO80 BT3, depending on the selected device number.
4. If you want to connect to a new device, press and hold FN+1 / FN+2 / FN+3 for 3 seconds to enter pairing mode again.

Note: The white indicator flashes quickly during pairing and slowly when reconnecting.
If pairing isn't successful within 60 seconds or reconnection fails within 20 seconds, the keyboard will revert to sleep mode.

Sleep Mode

The Evo80 is designed for energy efficiency, operating exclusively in wireless modes. Upon establishing a connection, the device enters a low-power sleep mode after three minutes of inactivity. During this initial stage, the keyboard's LEDs are deactivated, but a single key press will promptly awaken the keyboard, which will then be recognized by the connected device. In the event of a disconnection—such as when a PC is powered off or if the wireless dongle is removed—the Evo80 will initiate a search for the paired device. Should it fail to reconnect after 20 seconds of unsuccessful attempts, the Evo80 will transition into a deep sleep mode. In this state, the LEDs remain off, and key presses will not trigger any device response until the keyboard is reconnected or re-paired.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1:This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2:Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Warranty Registration Card

Order Number ______________________

Problem Description ______________________

Date ______________________

Shipping Address ______________________