

OUTSIDE

MagSafe® ChargePod

User Manual

English


Package Includes

- 1 x ChargePod Battery and Shell
- 1 x USB - C to USB Charging Cable
- 1 x User Manual

Features

- Magnetic Wireless Charging (MagSafe® Compatible)
- Portable Wireless Charging
- USB-C Input and Output
- Accurate LED Power Indicators
- Automatic Power off
- High Quality, Safe Polymer Battery

Product Diagram

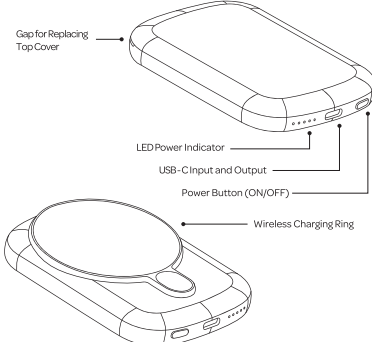

Step 1 / Check the indicator lights


Click the power button once to check if your ChargePod is charged.
If the indicators light up, continue to Step 3.
If the last light begins flashing, continue to Step 2.

About Power Indicator Lights

Check power indicator lights to monitor power status
Checking remaining power:
○○○○●
Click the button. If one light is on, it means the ChargePod has less than 25% power remaining. Two lights is 50%, three lights is 75%, and four lights is 100%.
When the last light begins flashing, the battery level is less than 5% and will need to be recharged.

Step 2 / Charge your ChargePod

Charge the ChargePod using the included Type C USB to USB charging cord.
The indicator lights will flash in a row when the ChargePod is successfully charging.
Once it is fully charged, all 4 lights will light up.



Step 3 / Place your ChargePod on the back of your device

If using a built-in MagSafe® magnet, align ChargePod to the center of device.
The ChargePod should snap into place when the magnets align.

Step 4 / Power on & begin charging


How to use your ChargePod

- Click the power button once to POWER ON
- Click the power button twice to POWER OFF


○○○○●

Click the power button once to turn the ChargePod on.
When the ChargePod detects an external device, the red light will change to green and begin charging.
If the light is red, the ChargePod is not charging an external device, but it is powered on and ready to charge an external device.

Wireless Charging : Charge your phone wirelessly

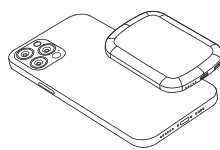

Wired Charging : Charge your phone or device with a charge cable



Step 5 / Stop charging & power off

Click power button twice to power off the ChargePod
When ChargePod is powered off, it will not charge even when a device is still connected to your ChargePod (wired or wirelessly).

Automatic Power Off

If you stop charging your device with ChargePod for 35 seconds, the ChargePod is powered off automatically.

Step 6 / Recharge your ChargePod

Your ChargePod indicator lights will begin flashing when less than 5% of battery is remaining. Refer to Step 2 to recharge your ChargePod.

TROUBLESHOOTING

If the ChargePod will not charge :

- Check the charging cable is working & plugged into a power adapter.

If the ChargePod is not charging your device :

- Confirm that your ChargePod is charged & powered on. Refer to Step 1 & 4.

If your MagSafe® compatible device is not magnetically snapping to ChargePod :

- Confirm that your phone case is also MagSafe® compatible.

SPECIFICATIONS

- ModelCP01
- BatteryPolymer
- Type-C Input5V=3A / 9V=2A (Max)
- Type-C Output5V=3A / 9V=2.22A / 12V=1.67A (Max)
- Wireless Output5W / 7.5W / 10W / 15W (Max)
- Working temperature-10°C ~ -40°Cz

ChargePod COMPATIBILITY

Built-in Magnet :
Compatible with iPhone12 & later (with MagSafe® compatible case).
Wireless Charging :
Compatible with Qi wireless charging phones, such as iPhone 8 & later, Samsung, Google, etc.
Wired Charging :
Compatible with all devices. Requires USB-C charging cable.

NOTES & WARNINGS

- ChargePod can lose it's battery function if they are not used for a long time. Charge the device at least every 3months to maintain functionality.
- This device may heat up during charging, which is normal as long as it is below 55°C
- Always keep this device dry and do not clean with chemical agents.
- Go green and recyde this device at designated electronic recycling drop-off centers.
- Do not use it to charge devices with incompatible current and voltage, which could result in fire.
- Do not crush, disassemble, impale or put this device in humid conditions.
- Children must use it under the guidance of adults.

FC

MAG

CE

RoHS

RECYCLE

CE

Executive standard
GB/T35590-2017
Designed in Korea
Made in China

MagSafe® is a trademark of Apple Inc., registered in the U.S. and other countries and regions.

110 mm

240 mm

INSIDE

MagSafe® ChargePod

Manuel d'utilisation

French


Le forfait comprend

- 1 x Batterie et coque ChargePod
- 1 x Câble de charge USB-C vers USB-C
- 1 x Manuel d'utilisation

Fonctionnalité

- Chargement magnétique sans fil (compatible MagSafe®)
- Chargement sans fil portable
- Entrée et sortie USB-C
- Indicateurs d'alimentation LED précis
- Arrêt automatique
- Batterie polymère de haute qualité et sécuritaire

Schéma du produit

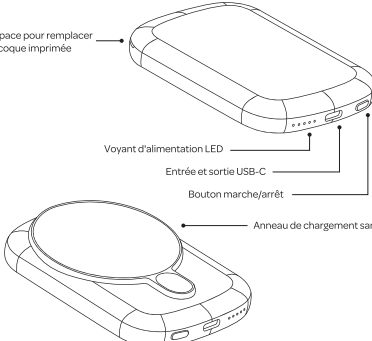

Étape 1 / Vérifiez les voyants lumineux


Appuyez une fois sur le bouton d'alimentation pour vérifier si votre ChargePod est chargé.
Si les voyants s'allument, passez à l'étape 3.
Si le dernier voyant clignote, passez à l'étape 2.

À propos des voyants d'alimentation

Vérifiez l'état de la batterie grâce aux voyants d'alimentation.
Vérification de la charge restante:
○○○○●
Cliquez sur le bouton. Si un voyant est allumé, le ChargePod a moins de 25 % de charge restante. Deux voyants indiquent 50 %, trois 75 % et quatre 100 %. Lorsque le dernier voyant clignote, la batterie est inférieure à 5 % et doit être rechargée.

Étape 2 / Chargez votre ChargePod

Chargez le ChargePod à l'aide du câble de chargement USB Type-C vers USB fourni.
Les voyants lumineux clignotent en continu lorsque le ChargePod est en charge.
Une fois la charge terminée, les quatre voyants s'allument.



Étape 3 / Placez votre ChargePod à l'arrière de votre appareil

Si vous utilisez un aimant MagSafe® intégré, alignez le ChargePod au centre de l'appareil. Le ChargePod devrait s'enclencher lorsque les aimants sont alignés.

Étape 4 / Allumer et commencer la charge


Comment utiliser votre ChargePod

- Appuyez une fois sur le bouton d'alimentation pour allumer
- Appuyez deux fois sur le bouton d'alimentation pour éteindre


○○○○●

Appuyez une fois sur le bouton d'alimentation pour allumer le ChargePod.
Lorsque le ChargePod détecte un appareil externe, le voyant rouge passe au vert et la charge commence. Si le voyant est rouge, le ChargePod ne charge pas d'appareil externe, mais il est allumé et prêt à en charger un.

Chargement sans fil : Chargez votre téléphone sans fil

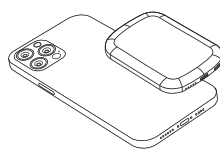

Chargement filaire : Chargez votre téléphone ou votre appareil avec un câble de charge



Étape 5 / Arrêter la charge et éteindre

Appuyez deux fois sur le bouton d'alimentation pour éteindre le ChargePod.
Lorsque le ChargePod est éteint, il ne se charge pas, même si un appareil y est connecté (avec ou sans fil).

Arrêt automatique

Si vous arrêtez de charger votre appareil avec le ChargePod pendant 35 secondes, le ChargePod s'éteint automatiquement.

Étape 6 / Rechargez votre ChargePod

Les voyants de votre ChargePod clignoteront lorsque la batterie sera inférieure à 5 %. Reportez-vous à l'étape 2 pour recharger votre ChargePod.

DÉPANNAGE

Si le ChargePod ne charge pas :

- Vérifiez que le câble de charge fonctionne et qu'il est branché à une source électrique fonctionnelle.

Si le ChargePod ne charge pas votre appareil :

- Vérifiez que votre ChargePod est chargé et allumé. Reportez-vous aux étapes 1 et 4.

Si votre appareil compatible MagSafe® ne se fixe pas magnétiquement au ChargePod :

- Vérifiez que votre coque de téléphone est également compatible MagSafe®.

SPÉCIFICATIONS

- ModèleCP01
- BatteriePolymer
- Entrée Type-C5V=3A / 9V=2A (Max)
- Sortie Type-C5V=3A / 9V=2.22A / 12V=1.67A (Max)
- Sortie Sans Fil5W / 7.5W / 10W / 15W (Max)
- Température d'utilisation-10°C ~ -40°C

COMPATIBILITÉ ChargePod

Aimant intégré :
Compatible avec l'iPhone 12 et les modèles ultérieurs (avec étui compatible MagSafe®).
Chargement sans fil :
Compatible avec les téléphones compatibles Qi, tels que l'iPhone 8 et les modèles ultérieurs, Samsung, Google, etc.
Chargement filaire :
Compatible avec tous les appareils. Nécessite un câble de chargement USB-C.

REMARQUES ET AVERTISSEMENTS

- La batterie du ChargePod peut perdre sa capacité en cas d'utilisation prolongée. Rechargez l'appareil au moins tous les 3 mois pour préserver son bon fonctionnement.
- Cet appareil peut chauffer pendant la charge, ce qui est normal tant que la température est inférieure à 55 °C.
- Gardez toujours cet appareil au sec et ne le nettoyez pas avec des produits chimiques.
- Adoptez une démarche écologique : recyclez cet appareil dans les centres de recyclage des appareils électroniques agréés.
- Ne l'utilisez pas pour charger des appareils dont le courant et la tension sont incompatibles, car cela pourrait provoquer un incendie.
- Ne pas écraser, démonter, empaler ou exposer cet appareil à l'humidité.
- Les enfants doivent l'utiliser sous la surveillance d'un adulte.

FC

MAG

CE

RoHS

RECYCLE

CE

Norme exécutive
GB/T35590-2017
Conçu en Corée
Fabriqué en Chine

MagSafe® est une marque déposée d'Apple Inc., déposée aux États-Unis et dans d'autres pays et régions.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement

The device has been evaluatec to meel general RF exposure requirement. The device can be used in portable exposure condition without restriction.