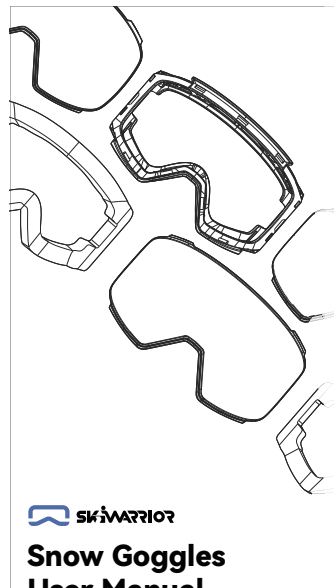


SKIWARRIOR

Snow Goggles User Manual

Smart Wireless Intercom Ski Goggles

Table of Contents

Hardware Overview
Parts Introduction
Buttons Introduction
G03K Introduction

Screen UI Introduction
Screen Icons Introduction
Statuses of Icons


App Download
App Name and Platform Description

Basic Operations
Powering On
Powering Off
Pairing with a Phone
Changing the Strap
Changing the Lens

Screen Operation
Volume Adjustment
Voice Assistant Activation
Call Answering & Track Selection
Channel Tuning
Custom/Public Channel Switching
Sub-audio Code Setup
Connecting 3rd Gen Walkie-Talkie Remote

Notes and Suggestions
Care Suggestions
Warnings
Charging Recommendations
Q&A

Electronic Information
Technical Specifications
Walkie-Talkie Channel Frequency Chart
Sub-audio Tone Table

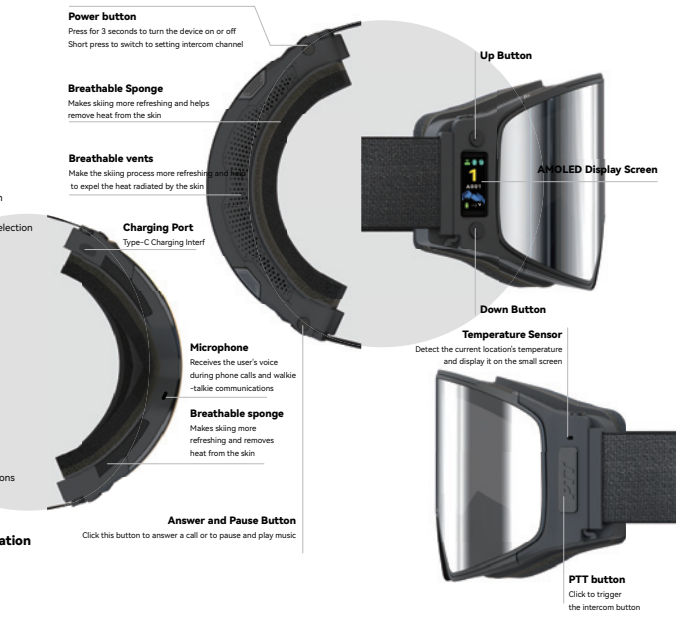

Button Functions

Ski Goggle Buttons & Functions Introduction

Up Button

Single Click
In Volume Mode: Increases the volume by one level, with each increment accompanied by a corresponding "du" sound, which gets louder as the volume increases.

In Channel Setting Mode: Each press increases the channel number by 1, and the current channel number is announced in English with a prompt tone when setting the channel.

Double Click
Play the previous song

Long press
Long press for 3 seconds to enter remote control pairing mode

Down Button

Single Click
In the volume setting mode: reduce the volume, a prompt tone will sound for each volume reduction, the lower the volume, the lower the prompt tone "du"

In the channel setting mode: each time the channel number is pressed -1, a prompt tone will sound when setting the channel to indicate the current number

Double Click
Play next song

Click + long press
Enter reset, the prompt sound is "reset" First click once, then long press for 3s to enter

long press
Long press for 5 seconds to turn off the sub-audio code function

Power Button

Single Click
Short press to switch to walkie-talkiechannel setting. If there is no operation on the "↑" or "↓" buttons within 5 seconds after switching to the walkie-talkie channel setting, the device will exit the channel setting and return to the volume setting.

Long press
Long press for 3s to turn on or off

Answer Call and Play Pause Button

Single click
Playing a song: Tap to pause the song
Incoming call: Tap to answer the call, long press to hang up.
During a call: Tap to hang up.
Outgoing call: Tap to hang up, with a prompt tone following the mobile system's prompt tone.


Long press
Long press for 3s to wake up the voice assistant

PTT Intercom Button

Long press
Press to start intercom, prompt tone "du"
Release to end intercom, prompt tone "du-du~"

G03K Intercom Remote Control Hardware Introduction

G03K Parts & Functions Overview



Indicator Light Color Codes

Battery Status Display
- **Normal Battery** – Green light when any button is pressed
- **Low Battery** – Green light flashes slowly

Charging Status Display
- **Charging** – Red light on
- **Fully Charged** – Light turns off

Pairing Status Indicator
- **Entering Pairing Mode** – Green light flashes 5 times

Power On/Off Status Display
- **Power On** – Green light stays on for 5 seconds
- **Power Off** – Green light flashes quickly 3 times

Screen UI Introduction

Screen Home Page Introduction

Home Page Introduction



Function Interface



Status Introduction

Introducing the Functions of iCON in Different States

Walkie-Talkie Power Status
- **Green Status** – Walkie-Talkie is On
- **Gray Status** – Walkie-Talkie is Off

Remote Control Connection Status
- **Blue Status** – Remote Control is Connected
- **Gray Status** – Remote Control is Disconnected
- **Pairing Status** – Goggles are in Pairing Mode Remote Control Connection Status

Mobile Bluetooth Connection Status
- **Blue status** – Mobile Bluetooth Connected
- **Gray Status** – Mobile Bluetooth disconnected

PTT intercom status identification
- Walkie talkie

Snow Goggle Battery Display Status

Non-Charging State: 100-80% | 80-20% | 20-10% | <10% | <5%

Charging Status

Download App

By downloading our App, you can unlock more operations and use more features!



SKIGO

Visit the App Store on your IPhone or Google Play on your Android device to search for "SKIGO" and download our app.


Download on the App Store | GET IT ON Google Play

The App Store® is a registered trademark of Apple Inc. in the United States and other countries.

Google Play™ is a registered trademark of Google Inc. in the United States and other countries.

How to Turn the Device On/Off

As shown in the diagram on the right, press and hold the button at the top end of the screen for 3 seconds to power the device on or off.

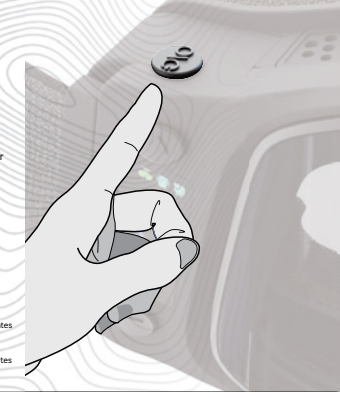


How to Pair with a Mobile Phone

Connect to your phone's Bluetooth system

Step 1: Turn on the snow goggles to enter pairing mode.
Step 2: Go to your phone's Bluetooth pairing interface.
Step 3: Select the snow goggles' Bluetooth name for pairing, as shown in th e figure below.


Snow Goggle Bluetooth Name

SKIWARRIOR




Connecting to the APP

Step 1: Launch the "SKIGO" App.
Step 2: If it's your first time pairing, the app will display the status shown in Figure 1 on the right. Tap the "Bind" button at the bottom to start searching for devices.
Step 3: Select your device and then tap "Connect".

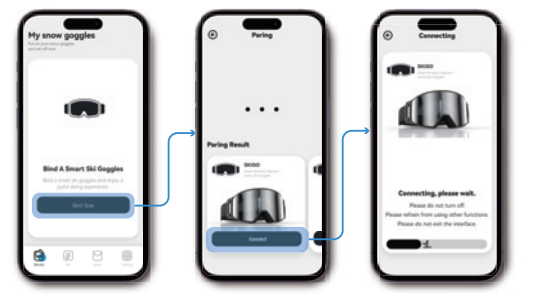

Strap Removal and Installation

Removal Process

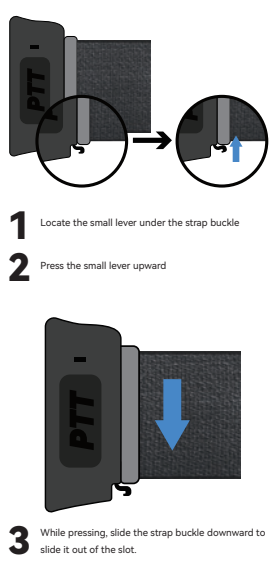


1 Locate the small lever under the strap buckle

2 Press the small lever upward

3 While pressing, slide the strap buckle downward to slide it out of the slot.

Installation Process



1 Refer to the diagram above to locate the slots on both ends



2 Slide the strap buckles from the bottom up into the slots.Continue sliding until you hear a "snap" sound, indicating that the strap is securely in place.

Please pay attention to the insertion direction of the head strap buckle, the wrench position should be downward

Lens Removal and Replacement


Lens Removal
Grasp the lens firmly and gently pull it out with a bit of force; the lens will then be removed.

Lens Installation
Guide the lens close to the frame's groove, and the lens will automatically attach, completing the lens installation.

Be cautious to avoid finger pinching



Screen Function Operation




Adjust volume
On the home page, simply press the up and down arrow keys to adjust the volume

Answer calls and pause music
When you receive a call or are listening to music, press this button to answer the call or pause the music

Voice Assistant
Long press for 3 seconds to activate the voice assistant


Adjust Channels



1 click the confirmation button at the top

2 click the up and down arrows to adjust the channel

Select or Switch Between Custom and Public Channels



Custom Channels
Tap the switch at the bottom right corner of the square to enable Custom Channels mode.

Public Channels
Tap the switch at the bottom right corner of the square to enable Public Channels mode




Set Sub-audio Code

For Custom Channels
To set a custom sub-audio code, select the "Custom Channels" block on the left at the bottom of the home page.

Set Public Channel Sub-audio Code
If you need to set a sub-audio code for public channels, select the "Public Channels" block on the right at the bottom of the home page

Figure 1




Selecting a Sub-audio Code

1.Whether you are choosing a public channel or a custom channel, after clicking on the sub-audio code selection option, a pop-up window will appear on the right side.

2.After the pop-up window is displayed, scroll down to view more sub audio code channels.


3.The first item in the list is the off button. If you need to turn off the sub-audio code, scroll to the first item in the list and select "OK" to confirm.

Figure 2




After Selection Complete
Once the selection is finished, the snow goggles' screen will display the current sub-audio code channel, shown below the main channel, as illustrated in Figure 2.

Pairing the G03K Remote Control



1 Press and pair on. hold for 3 seconds to enter pairing mode, and you will hear the prompt "pair on"

If no remote control is paired within 15 seconds, the pairing process will fail and exit the pairing mode, with an audio prompt saying "pair off"



2 Press "↑" and "↓" on the remote control simultaneously to enter pairing mode. The green light will flash 5 times, and it will pair automatically. The pairing result will be announced via voice through the snow goggles' speaker

Auto-exit pairing mode after 15 seconds

Pairing Successful – Voice prompt: "pair ok"
Pairing Failed – Voice prompt: "pair off"

Technical Specifications

Snow goggles electronic information display

Bluetooth version	5.2
Bluetooth connection distance	30m
Intercom distance (unobstructed)	3km
Charging method	Type-C
Standby time	7 days
Battery life	2 days
Protection level	IP65
Input voltage and current	5V / 1A
Applicable temperature	40°C ~ -20°C
Implementation standard	GB 4943.1-2022

CMIIT ID:2023FP14056

CTCSS sub-tone code (16hex)

Serial number		D0	D1
1	63	30	06
2	67	70	06
3	69.3	93	06
4	71.9	19	07
5	74.4	44	07
6	77	70	07
7	79.7	97	07
8	82.5	25	08
9	85.4	54	08
10	88.5	85	08
11	91.5	15	09
12	94.8	48	09
13	97.4	74	09
14	100	00	10
15	103.5	35	10
16	107.2	72	10
17	110.9	09	11
18	114.8	48	11
19	118.8	88	11
20	123	30	12
21	127.3	73	12
22	131.8	18	13
23	136.5	65	13
24	141.3	13	14
25	146.2	62	14
26	151.4	14	15
27	156.7	67	15
28	159.8	98	15
29	162.2	22	16
30	165.5	55	16
31	167.9	79	16
32	171.3	13	17
33	173.8	38	17
34	177.3	73	17
35	179.9	99	17
36	183.5	35	18
37	186.2	62	18
38	189.9	99	18
39	192.8	28	19
40	196.6	66	19
41	199.5	95	19
42	203.5	35	20
43	206.5	65	20
44	210.7	07	21
45	218.1	81	21
46	225.7	57	22
47	229.1	91	22
48	233.6	36	23
49	241.8	18	24
50	250.3	03	25
51	254.1	41	25

Digiatonic sound

Serial number		D0	D1
52	D017N	17	80
53	D023N	23	80
54	D025N	25	80
55	D026N	26	80
56	D031N	31	80
57	D032N	32	80
58	D036N	36	80
59	D043N	43	80
60	D047N	47	80
61	D050N	50	80
62	D051N	51	80
63	D053N	53	80
64	D054N	54	80
65	D065N	65	80
66	D071N	71	80
67	D072N	72	80
68	D073N	73	80
69	D074N	74	80
70	D114N	14	81
71	D115N	15	81
72	D116N	16	81
73	D122N	22	81
74	D125N	25	81
75	D131N	31	81
76	D132N	32	81
77	D134N	34	81
78	D143N	43	81
79	D145N	45	81
80	D152N	52	81
81	D155N	55	81
82	D156N	56	81
83	D162N	62	81
84	D165N	65	81
85	D172N	72	81
86	D174N	74	81
87	D205N	05	82
88	D212N	12	82
89	D223N	23	82
90	D225N	25	82
91	D226N	26	82
92	D243N	43	82
93	D244N	44	82
94	D245N	45	82
95	D246N	46	82
96	D251N	51	82
97	D252N	52	82
98	D255N	55	82
99	D261N	61	82
100	D263N	63	82
101	D265N	65	82
102	D266N	66	82
103	D271N	71	82
104	D274N	74	82
105	D306N	06	83
106	D311N	11	83
107	D315N	15	83
108	D325N	25	83
109	D331N	31	83
110	D332N	32	83
111	D343N	43	83
112	D346N	46	83
113	D351N	51	83
114	D356N	56	83
115	D364N	64	83
116	D365N	65	83
117	D371N	71	83
118	D411N	11	84
119	D412N	12	84
120	D413N	13	84
121	D423N	23	84
122	D431N	31	84
123	D432N	32	84
124	D445N	45	84
125	D446N	46	84
126	D452N	52	84
127	D454N	54	84
128	D455N	55	84
129	D462N	62	84
130	D464N	64	84
131	D465N	65	84
132	D466N	66	84
133	D503N	03	85
134	D506N	06	85
135	D516N	16	85
136	D523N	23	85
137	D526N	26	85
138	D532N	32	85
139	D546N	46	85
140	D565N	65	85
141	D606N	06	86
142	D612N	12	86
143	D624N	24	86
144	D627N	27	86
145	D631N	31	86
146	D632N	32	86
147	D646N	46	86
148	D654N	54	86
149	D662N	62	86
150	D664N	64	86
151	D703N	03	87
152	D712N	12	87
153	D723N	23	87
154	D731N	31	87
155	D732N	32	87
156	D734N	34	87
157	D743N	43	87
158	D754N	54	87

Intercom Frequency Table

Channel Number	US	EU
1	462.5625	446.00625
2	462.5875	446.01875
3	462.6125	446.03125
4	462.6375	446.04375
5	462.6625	446.05625
6	462.6875	446.06875
7	462.7125	446.08125
8	467.5625	446.09375
9	467.5875	446.10625
10	467.6125	446.11875
11	467.6375	446.13125
12	467.6625	446.14375
13	467.6875	446.15625
14	467.7125	446.16875
15	462.5500	446.18125
16	462.5750	446.19375
17	462.6000	
18	462.6250	
19	462.6500	
20	462.6750	
21	462.7000	
22	462.7250	

Care Recommendations

1.This product comes with a storage bag and a box to protect the goggles. The box allows you to carry the goggles in your bag or hang them on your bag for protection while skiing

2.Do not use tissues or other rough materials to wipe the lenses to avoid irreversible damage.

3.Store this product in a cool, dry environment.

4.Keep the product charged to prevent battery aging.

5.Store the product in the provided soft cloth bag, and place the lenses and other sensitive parts in the storage bag to prevent damage and scratches from sharp objects.

Charging Recommendations

Please use the included Type-C charging cable to charge the device. Using other charging cables and power adapters that exceed the current and voltage the device can handle may damage the battery and render the product unusable.

FCC warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1)This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority io operate the equipment.

For Smart wireless intercom audio ski goggles:
SAR tests are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. Before a new device is a available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC.
For body worn operation, this device has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal.
Non-compliance with the above restrictions may result in violation of RF exposure guidelines.
Transmit no more than the rated duty factor of 50% of the time. To transmit (talk), push the Push-ToTalk (PTT) key. To receive calls, release the PTT key. Transmitting 50% of the time, or less, is important because the radio generates measurable RF energy only when transmitting (in terms of measuring for standards compliance).
And for Multi Functional Intercom Remote Control: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment . This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Troubleshooting Q&A

What to do if the device won't turn on?
1.Please check the battery level to see if it's depleted. Try reconnecting the charger.
2.Please try turning on the device in an environment with suitable temperature for this product.

What to do if it can't connect to a phone?
1.Please try restarting the goggles.
2.Please check the battery level. If it's low, it might not be able to connect to Bluetooth.

What to do if there's no sound when playing music?
1.Please try adjusting the volume on the goggles and on your phone.
2.Please check the battery level. If it's low, there might be no sound.
3.Please charge it in time.

What to do if there's no sound during intercom communi-cation?
1.Please confirm whether you are on the same channel. Check if the volume is set to the minimum; if so, please increase it.
2.Please ensure that the intercom distance is within 3km (unobst ructed). The signal may not be received or the reception may det eriorate due to obstructions in the usage environment.
3.Please confirm whether the intercom function on the goggles is turned on.