




homtime | 美时

MX 原木蓝牙无线充电音箱

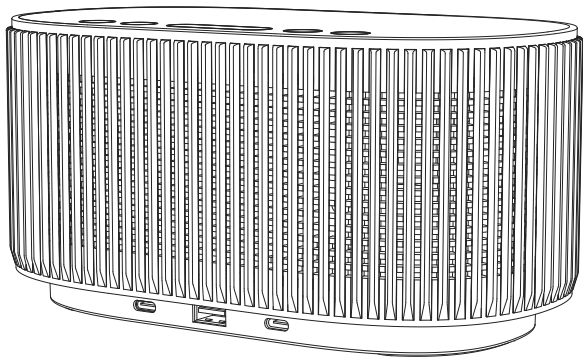

温馨提示：

使用本产品前请您仔细阅读并严格遵循使用说明和警告事项，并妥善保管，以备日后查阅

安全注意事项

请在使用产品前阅读以下注意事项：



警告

如果无视安全事项，错误操作，可能导致对人身及产品不同程度的损伤。

使用前请认真阅读本产品的使用说明书、包含安全注意事项、产品配件的使用、产品的操作说明等，请遵守安全事项并正确操作使用。

- 请按照说明书的操作安装该产品
- 请用原装或是厂商指定的附件/配置
- 请不要自行拆开分解本产品
- 请使用本产品原装的电源
- 请不要在产品 & 电缆上面放置物品，不要用力使用本产品。另外请不要任意对电缆进行弯曲、切断、加工等
- 清洁本产品之前，请先断开电源，请仅用干抹布清洁本产品
- 请勿在靠近水源的地方使用本产品
- 请不要将本产品至于潮湿处，请不要将本产品接触到水或是置于水中
- 请不要在本产品中放入其它部件
- 因为不正确的使用导致机体破损、奇味、冒烟等现象时，请立刻终止使用
- 请勿猛烈碰撞本产品或是使其跌落，否则可能会导致产品损坏和数据丢失
- 遭遇雷雨天气或长时间不使用本产品时，请拔下电源插头

#以上注意事项请严格遵守，否则将有可能导致短路、电击、火灾等故障

#产品出现故障时，请不要自己修理，请联系本公司技术支持小组或是公司认可的服务人员以获得服务。

本产品为精密产品，请不要在如下条件下保管及使用

- 振动，冲击场所
- 阳光直射，高温场所
- 潮湿，被水淹没场所
- 灰尘多的场所
- 强电磁波，电磁力的场所
- 强静电场所
- 容易发生结露的场所
- 靠近散热器、电热器、火炉其他产生热能的装置附近
-  仅适用于海拔2000m以下地区安全使用
-  仅适用于非热带气候条件下安全使用

#请注意不要用脚踩踏本产品及电线

一、产品特点及主要规格

- * LED矩阵信息显示；
- * 蓝牙播放功能；
- * 双Type-C 充电功能；
- * USB-A 充电功能；
- * 时间显示12/24H制式功能；
- * 自动校准时间/日期；
- * 遥控校准功能
- * 内置万年历，自动DST

二、主要规格


- * 蓝牙名称：Homtime MX
- * 扬声器：4 Ω 10W
- * 频响范围：70Hz~20KHz （~6dB）
- * 额定功率：RMS：~2*8W
- * 额定输入：12V/4A
- * 电池规格：镍氢电池*3
- * 使用环境：-0℃~+40℃
- * 储存环境：-10℃~+60℃
- * 无线充电工作频率：115~205KHz。

三、标准配置（购买后请仔细检查包装内的产品及配件）

◎主机	1 pcs	◎电源适配器	1 pcs
◎说明书	1 pcs	◎保修卡	1 pcs
◎7号镍氢电池	3 pcs		

四、显示和产品按键

顶部

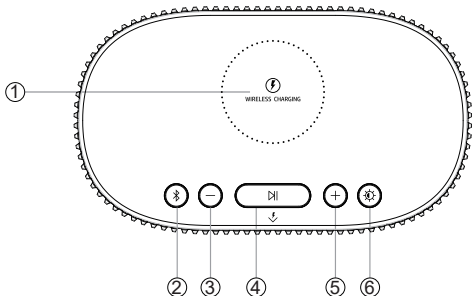

① 无线充电区域
(Mega磁吸)

④ 播放/暂停键
- 蓝牙播放短按：
播放/暂停；
- 双击快进下一首
- 三击后退一首


② 蓝牙键
- 短按：开/关蓝牙
- 长按：开启蓝牙配对

⑤ 加键
短按：音量加/时间加
长按：快速音量加/时间
快速调节加

③ 减键
短按：音量减/时间减
长按：快速音量减/时间
快速调节减

⑥ 亮度选择
- 待机状态 短按：循环
调节LED矩阵灯亮度。

前部

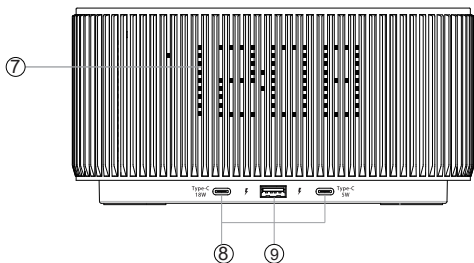


⑦ LED时间显示区域

⑧ TypeC充电口

⑨ USB充电口

底部

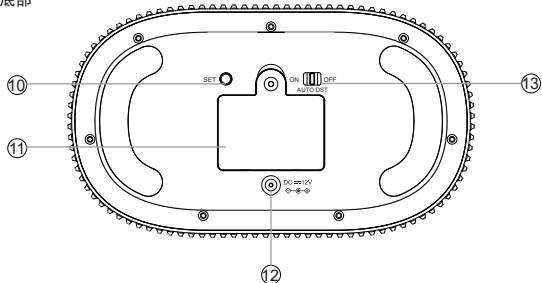

⑩ 时间设置键

⑫ 电源接口

⑪ 电池仓

⑬ DST拨钮开关

拨动开启/关闭DST自动功能

五、使用说明

1. 开机

接通外接电源后开启时钟显示，默认AM 12:00。

2. 时间设置

时间/日期设置


– 电源连接状态下，短按主机底部SET按键时间设置键进入时间设置模式，
时间日期设置模式包含六种模式：

- 1) 12/24小时制：设置模式下短按+/-键调节；
 - 2) 年数字：默认2025设置模式下短按+/-键调整，长按快速调整；
 - 3) 月数字：默认1设置模式下短按+/-键调整，长按快速调整；
 - 4) 日数字：默认1设置模式下短按+/-键调整，长按快速调整；
 - 5) 小时时间：设置模式下短按+/-键调整，长按快速调整；
 - 6) 分钟时间：设置模式下短按+/-键调整，长按快速调整；
- 进入时间设置状态后每按下设置键完成当前设置模式并切换到下一个设置模式。
六种模式全部确认后结束时间设置模式。

* 设置12小时/24小时制

– 默认设置为24小时制。


在12小时制状态下，时间同步显示A或P对应的LED灯光。

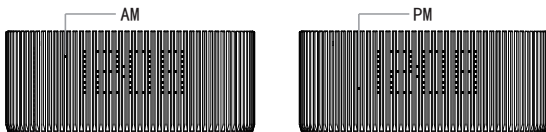

- 短按SET时间设置键，打开时间设置模式，首先进入12/24小时切换模式。
屏幕显示24H或12H并闪烁，短按+/-键切换制式模式。
- 短按SET时间设置键确认当前制式完成设置，并进入时间设置模式：年数字调整模式。
- 切换模式后10秒内不操作，自动保留当前时间制式模式，并退出设置模式。

* 设置调整年数字


- 进入年数字设置调整模式，此时屏幕显示数字数字闪烁（默认2025，后续设置显示记录之前设置数字）。按+/-键调整年数字，长按+/-键，数字快速循环变化。



- 调整所需年数字后，短按SET时间设置键完成设置，并进入月数字设置模式。

* 设置调整月数字


- 进入月数字设置调整模式，此时屏幕显示M+数字, 数字闪烁（默认1，后续设置显示记录之前设置数字）。按+/-键调整月数字，长按+/-键，数字快速循环变化。



- 调整所需月数字后，短按SET时间设置键完成设置，并进入日数字设置模式。

* 设置调整日数字

- 进入日数字设置调整模式，此时屏幕显示D+数字, 数字闪烁。
按+/-键调整日数字，长按+/-键，数字快速循环变化。



- 调整所需日数字后，短按SET时间设置键完成设置，并进入小时时间设置模式。

* 设置调整小时时间


- 进入小时时间设置调整模式，此时屏幕小时位置数字闪烁。按+/-键调整小时数，长按+/-键，数字快速循环变化。
- 调整所需小时时间后，短按SET时间设置键完成设置，并进入分钟时间设置模式。

* 设置调整分钟时间


- 进入分钟时间设置调整模式，此时屏幕主时间分钟数字闪烁。按+/-键调整分钟数，长按+/-键，数字快速循环变化。
- 完成分钟时间设置并结束退出时间设置模式，并恢复正常显示状态。
- 注意：当没有调整过时间，直接按下设置键时，秒数不归零，保持原来的秒数计时。

* 切换DST（拨钮切换自动DST功能 ON/OFF）

- 在待机状态下，拨动开关至ON位置，打开DST功能。屏幕显示d On三秒，小时数根据内置DST日期自动调整小时。



- 自动DST待机状态下，拨动开关至OFF位置，关闭DST，屏幕显示d OFF三秒，小时数根据DST日期自动调整小时数。



* 切换时间间隔闪烁显示/常显


- 双击SET时间设置键，分隔符（即小时和分钟之间的两点）常亮显示；再次双击时间设置键，恢复闪烁显示
- 产品出厂默认为闪烁显示。

3. LCD亮度调节

- 主屏幕亮度分为4档，默认亮度：较亮
- 在连接电源待机状态下按 $\odot$ 按键调节LCD显示亮度。最低亮度定义背光不亮。
- 亮度等级顺序由暗到亮：较亮（默认）-最亮-熄灭-微亮……循环。

4. 音量调节

- 在音频播放模式下按“+、-”按键，调节音量。屏幕显示数字显示音量数值。




- 音量等级0-32。
- 短按调节音量加和减，长按为快速加減音量。
- 设备自动记录各个模式下最后一次设定使用的音量数值。

5. 蓝牙

* 添加蓝牙设备

- 短按 $\textcircled{3}$ 开/关蓝牙功能。打开蓝牙模式，屏幕显示bt字符并闪烁，同时播放蓝牙开启提示音。
- 在未连接状态蓝牙符号一直闪烁显示。
- 启动移动设备的蓝牙功能，然后在移动设备打开蓝牙功能并搜索蓝牙设备。
- 从搜索到的蓝牙设备中选择Homttime MX 进行配对连接。
- 当连接成功后，喇叭发出连接成功提示音，蓝牙bt符号常亮显示5秒,同步连接设备的时间对音箱时间进行校准。
- 设备存储有已连接蓝牙设备状态下，为音箱添加新的蓝牙设备配对，长按蓝牙键3秒，强行启动蓝牙配对功能，屏幕闪烁显示bt。



* 关闭蓝牙

- 蓝牙开启状态下，短按蓝牙键关闭蓝牙功能，音箱与蓝牙设备自动断开；
- 再次短按蓝牙键打开蓝牙模式，不需要再次手动配对连接蓝牙，而是与最后连接的蓝牙设备自动连接。

* 自动断开

- 以下情况蓝牙将自动断开：
- 蓝牙配对状态下没有进行配对或没有成功配对，3分钟后自动关闭蓝牙功能。
- 蓝牙连着设备但没有播放音乐，18分钟后自动关闭蓝牙功能。

* 音乐播放

- 音乐播放时：
- 短按【播放/暂停】键，歌曲将暂停或播放歌曲。
- 短按+/-按键可以调整播放音量的大小，屏幕同时显示音量大小等级。
- 双击【播放/暂停】键切换到下一首曲目。

6. 对外充电功能

* USB对外充电功能

- 产品提供两个C口和1个A口充电功能。左边C口为PD 20W，右边C口为5W，A充电口为5W。
- 设备断开市电状态下，不提供充电功能。
- 充电短路或过流时，设备切断充电功能，如果设备仍然与产品连接，产品发出警告提示音。

* 无线充电功能

- 电源：支持12V供电
- 无线充电功率：MAX 15W
- 感应距离：0~10mm
- 工作频率：115~205 KHz
- 效率：≥70%（6.25mm时）
- 支持qi协议。
- 若有金属异物在充电区域或其它异常情况时，启动无线充电保护功能。

7. 电池供电工作

切断电源的情况下，由镍氢备份电池供电，此时只记忆时间，不可用于充电。

8. 遥控器一键校时功能（选配）

通过红外遥控对时可以重置系统：

- 闹钟音箱同步红外遥控器上的时间（含年、月、日、时、分、秒）；
- 若在蓝牙状态，则清除蓝牙记忆的设备名；
- 将LED自动背光恢复到默认状态（最亮模式）；
- 若音响在开启状态下，则关闭音响；




homtime | 美时
为 时 间 而 生

上海锋乐电子科技有限公司
www.homtime.com
服务热线：4008-600-330



MX

Wooden Bluetooth Wireless Charging Speaker with Clock Function

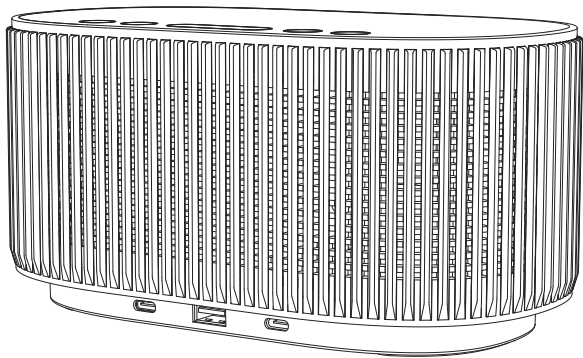

TIPS / IMPORTANT:

Read all safety and operational instructions in this handbook thoroughly before operating or setting up the device. Retain this handbook for future reference.

Safety Instructions

Read all safety instructions before using this product:



WARNING

IF YOU IGNORE SAFETY INSTRUCTIONS, ERROR MANIPULATION MAY CAUSE DAMAGE TO PERSONS AND PRODUCTS.

Please read this manual carefully including safety instructions, parts instruction and operation manual before using this product.

- . Install the product strictly according to this operation manual.
- . Use only with Homtime-recommended attachments, accessories, and replacement parts.
- . Please do not disassemble or open the product.
- . Please use the original power cord .
- . Please do not place items on the product and power cord, Please do not bend, cut or modify the cord. Please do not use with a damaged cord or plug.
- . Before cleaning the product, disconnect the power supply first and clean the product with dry cloth.
- . Suitable for dry locations only.
- . Do not use outdoors or on wet surfaces. Never place the product where it may fall into a bath or other water container.
- . Do not put insert foreign objects into this product.
- . Stop using the product immediately if it is damaged, smell or smoked caused by improper use.
- . Dropping the product or subjecting it to impact may cause damage and data loss.
- . Unplug the power cord during thunderstorm or do not use the product for extended period.



#Please strictly follow above the safety instructions, otherwise it may lead to short circuit, electric shock, fires or other malfunction.
#If the product is not functioning properly. Please contact our technical support team or the s authorized service provider

This product is precise equipment. Please do not store and use it under the following conditions:

- . Vibrating or shock-prone enviroments.
- . Direct sunlight or high temperature place.
- . Wet and flooded place.
- . Dusty place.
- . Strong electromagnetic waves and electromagnetic force place.
- . Strong static place.
- . Moist enviromends.
- . Close to the radiator, electric heater, or heat generating device.
- .  Applicable only for in areas below 2000m above sea level.
- .  Applicable only for non - tropical climates.

#Please do not step on the product and the power cord.

#Please consult your distributor if you have any questions regarding the installation, operation and safety of this product.

1.Product Features:

- * LED Display
- * Bluetooth Playback Function
- * Dual Type-C Charging Ports
- * USB-A Charging Port
- * 12/24H Time Format Display
- * Automatic Time/Date Calibration
- * Remote Calibration Function
- * Built-in Perpetual Calendar with Auto DST Adjustment

2.Specifications


- * Bluetooth Name: Homtime MX
- * Speaker: 4Ω 10W
- * Frequency Response: 70Hz~20KHz (-6dB)
- * Rated Power: RMS: 2 X 8W
- * Rated Input: 12V/4A
- * Battery Specification: Ni-MH Battery X 3
- * Operating Environment: -0°C~+40°C
- * Storage Environment: -10°C~+60°C
- * Wireless charging operating frequency:115~205KHz

3.What is included?

◎Main Unit	1 pcs	◎Power Adapter	1 pcs
◎User Manual	1 pcs	◎Warranty Card	1 pcs
◎Ni-MH AAA battery	3 pcs		

4. Buttons & Display

TOP

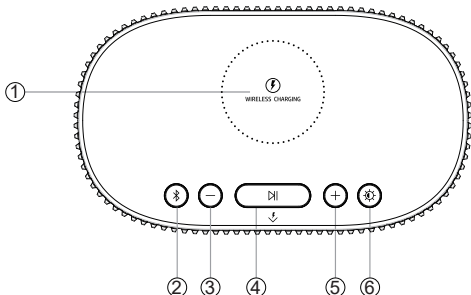

① Wireless Charging Area

④ Play& Pause Button

- Short Press: Play&Pause
- Double-Click: Skip to Next Track

② Bluetooth Button

- Short Press: Turn Bluetooth ON/OFF
- Long Press: Enable Bluetooth Pairing Mode

⑤ "+" Button

- Short Press: Volume Up / Adjust Time Forward
- Long Press: Rapid Volume Increase / Time Adjustment (Accelerated)


③ "-" Button

- Short Press: Volume Down / Adjust Time Backward
- Long Press: Rapid Volume Decrease / Time Adjustment (Accelerated)

⑥ Brightness Selection


- In standby Mode, Short Press to cycle through the brightness levels

FRONT

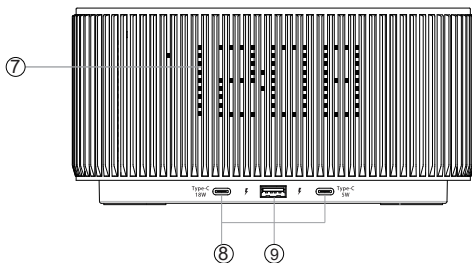

- ⑦ LED Time Display Area ⑧ Type-C Charging Port ⑨ USB-A Charging Port

BOTTOM

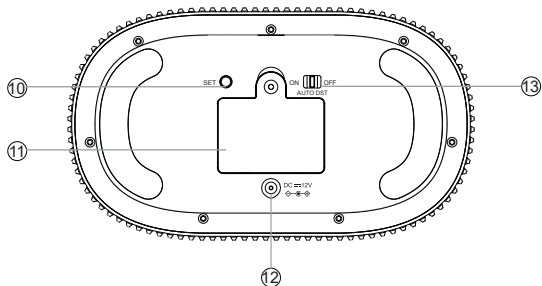

- ⑩ Time Setting Button ⑫ Power Jack
⑪ Battery Compartment ⑬ DST ON/OFF Switch

Operating Instruction

1.Power On

Plug the adapter into the power jack to turn on the device.

2.Time & Date Settings


Press the SET button on the base unit to enter time/date setup.

Set 12/24H Format(Default: 24H Format): Short press +/- buttons to select the hour format.


Set Year/Month/Day/Hour: Short press +/- buttons to increment/decrement values ;Long press for rapid adjustment.

The device will auto-exit setup mode after settings are saved


When in 12H mode, the display shows AM or PM(See illustration).

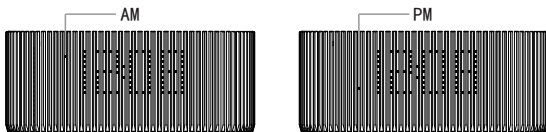


Year Setting Display(See illustration)





Month Setting Display(See illustration)



Date Setting Display(D+Numbers)(See illustration)



DST Setting Display(See illustration)



3.LED Brightness Adjustment

4-level brightness. Low-Medium(Default)-High-OFF


Press  button to select the LED brightness level.

4.Volume Adjustment

-During music playback, press +/- buttons for volume adjustment(0~32). Short press to adjust volume up/down; Long press for rapid volume adjustment.


-Volume Memory Feature: The device automatically saves the last used volume setting for each mode.

Screen display(See image)



5. Bluetooth Function

Press the Bluetooth button to turn on/off Bluetooth function. When Bluetooth is active, the “bt” icon is flashing, go to the Bluetooth setting on your Bluetooth enabled device. Search and connect to “Homtime MX”. The speaker will emit a “Do” chime once the connection is done.



Music Playback

Play/Pause

Short press the Play/Pause button to pause or resume playback.

Volume Adjustment

Short press the +/- buttons to adjust volume. The current volume level is displayed on the screen.

Track Navigation

Next Track: Double-click the Play/Pause button.

6. Charging Function

Dual Type-C Charging Ports: Left USB-C Port: Supports PD 20W fast charging; Right USB-C Port: Standard 5W output.

USB-A Port: Standard 5W output.

* Charging ports are inactive when the device is unplugged from the power adapter.

* Charging stops if a short circuit or over-current is detected. A warning tone sounds if the faulty device remains connected.

Wireless Charging Function

.Input Power: 12V

.Wireless Charging Output Power: Max 15W

.Induction Distance: 0-10mm

.Operating Frequency: 115-205kHz

.Efficiency: $\geq 70\%$ (at 6.25mm distance)

.Compatible with all Qi-enabled devices

.Automatically stops charging if metal objects or foreign materials are detected.

7.Back-up Battery

Triple Ni-MH Batteries are needed. When unplugged from power, the backup battery keeps the clock running. The charging ports are disabled.

8.One-Click Synchronization time (Hotel Version)

Compatible with H2 (Infrared remote control/Optional accessory)

Press H2 to synchronizes the time/date/year; Clear the alarm setting; Stop music playing and set the default brightness level.

Shanghai Funner Electronic Technology Co.,Ltd
www.homtime.com



homtime | 美时

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- FCC Radiation Exposure statement

For Bluetooth Speaking

The device has been evaluatec to meel general RF exposure requirement. The device can be used in portable exposure condition without restriction.

For WPT

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. During the operation of device a distance of 15cm surrounding the device and 20 cm above the top surface of the device must be respected.