HPUMLSE

# (Laptop User Manual)
# (ノートパソコン)

Please read this user manual carefully before use

# WARRANTY

To Protect Your Rights, Please Activate
The Electronic Warranty Within 7 Days
Of Receiving The Prodnct.

Scan The QR Code Or Visit

WWW.HPUMLSE.COM

To Know More

## User Guide

### Exterior introduction

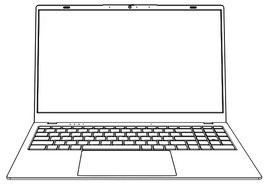

### Introduction to keyboard shortcut function keys

The keyboard keys of different models vary, please refer to the actual product.

- Home page
- Switch display device
- Reduce screen brightness
- Improve screen brightness
- lower the volume
- Set as mute / cancel mute
- Increase the volume
- Disable microphone
- Wireless delivery
- Previous track
- Play / pause
- Next track
- Enable/disable touchpad
- Flight mode
- Pause Break (Pause)
- Print Screen SysRq (Prt Scr)
- Scroll Lock (Scr Lk)
- Num Lock (Num Lk)

### Touchpad

The touchpad on the keyboard has mouse-like functions that allow you to control the computer more conveniently. Not all gestures are available in all applications, so please refer to the actual usage. The following are common touchpad gestures:

Single finger click: equivalent to clicking the left mouse button

Double -click: equivalent to Double -click the left mouse button

Single finger movement: mobile desktop cursor

Left button click: equivalent to clicking the left mouse button

Right -click: equivalent to right -click the mouse button

Double -pointed clicks: equivalent to right -click the mouse button

Double finger decline upward: rolling the screen or documentation

Double fingers open or close: browse pictures, web pages, etc.Can enlarge or reduce pictures, web pages, etc.

Three point clicks: use search

Three finger sliding upward: multi -task view

Three fingers downward movement: display desktop

Three fingers to slide left and right: switch application

### Kind tips

1. When you receive the laptop and turn it on for the first time, create a username and connect to WiFi after entering the desktop.
2.Always wait for the power indicator on the keyboard to turn off before closing the screen.
3.Please do not install operating systems obtained from other sources as the drivers may be incompatible with this machine. If you wish to reinstall the system, please contact us.
4.This laptop comes with Windows pre-installed. If the system is not activated after connecting to the internet, please contact us.
5.The laptop comes with a power cord and user manual. If you cannot find them in the packaging, please contact us.
6.The laptop comes with a one-year warranty. If you encounter any problems during use, please do not rush to give negative feedback or return the machine. Please contact us through the "after-sales email." We will solve your problem and make sure you are satisfied.

### Recommendations on the use of Windows systems

For the first time using the Windows system, follow the system prompts to initialize and create a local user. Click the WLAN icon in the lower right corner of the screen to connect to WiFi and start using the laptop.

This laptop is suitable for online office work, local applications and learning, managing data, playing 4K videos, socializing on SNS, and playing some games.

To ensure a more stable and smooth experience, we strongly recommend the following operations:
1.It is recommended to disable automatic system updates and switch to manual updates, or disable system updates altogether. Frequent automatic updates can take up a lot of time and may cause the system to slow down or lose hardware drivers after updating.
2.It is recommended not to store important data on the system C drive. Instead, create a new disk partition for data storage. By default, the system only has one hard disk partition, which is the C drive. You can use the system's built-in disk management tool to create a new partition.Normally, the C drive only needs 80-100GB of capacity for the system and system software. For detailed operations, you can search online or consult us.
3.Install software from reliable sources. Installing software from unknown sources can cause the system to crash. We strongly recommend downloading official software from reliable websites, such as the software's official website, the system's built-in software store, and software download websites with verification.
4.Regularly back up data and clean the cache.

### Common Troubleshooting

1.How to enter BIOS?
When starting the laptop, press "ESC" to enter the BIOS.
2.What to do if the driver is lost?
Usually, when you reset to factory settings, all drivers will be automatically installed. If you have lost the driver, try to restore the factory settings. If the problem still cannot be solved, please contact us and we will send you a system to reinstall.
3.How to confirm that the charger is working normally?
When charging, there is a small red light next to the charging port. If the red light is on, we can determine that the charger is working normally.
4.What to do if the screen is black?
If the screen is black, try to press and hold the power button to shut down, and then restart the laptop. Then observe whether the function indicator lights are on, and press the "Capslock" key to see if the indicator lights up. If all indicator lights are on but the screen is still black, please contact us.
5.What to do if the computer blue screens?
Contact the brand's after-sales service for system reinstallation or replacement.
6.Unable to charge?
a. Check whether the charger is plugged into the left charging port, whether the charging indicator is on, and whether the battery icon in the lower right corner of the laptop screen shows "plugged in".
b. Contact us to replace the charger.
7.Can't connect to WiFi.
a. Check whether WiFi is turned on.
b. Check whether the WiFi password is entered correctly (pay attention to uppercase and lowercase letters).
c. Check whether the WiFi driver is installed correctly. If there is no driver, please contact us for the driver and installation tutorial.

### Precautions

1.Do not subject the device or its accessories to strong impacts or vibrations, as this may cause damage and device malfunctions.
2.Do not use the device in dusty, damp, dirty, or magnetic environments, as this may cause internal circuit malfunctions.
3.Do not use the device during thunderstorms, as this may cause device malfunctions or electric shock hazards.
4.Use the device within the temperature range of 0℃ to 35℃ , and store the device and its accessories within the temperature range of -10℃ to +45℃ . High or low environmental temperatures may cause device malfunctions.
5.Avoid getting the device and its accessories wet or damp, as this may cause fire or electric shock hazards.
6.Do not place the device near a heat source or exposed flame, such as an electric heater, microwave oven, oven, water heater, fireplace, candle, or other high-temperature sources.
7.Stop using the device and close all applications, and disconnect all connections or cables to other devices before cleaning and maintenance.
8.Do not clean the device or its accessories with aggressive chemicals, detergents, or strong cleaning agents. Use a clean, dry, soft cloth to wipe the device or its accessories.
9.Do not use unauthorized or incompatible chargers or batteries, as this may cause fire, explosion, or other hazards.
10.Do not disassemble or modify the battery, insert foreign objects, or immerse it in water or other liquids, as this may cause battery leakage, overheating, fire, or explosion.
11.Dispose of the battery according to local regulations. Do not treat the battery as household waste. Improper battery disposal may cause battery explosions.
12.The device uses a non-removable built-in battery. Do not attempt to replace the battery yourself, as this may cause the device to malfunction or damage the battery.

### FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modi-cations to this device not explicitly approved by manufacturer could void your authority to operate this equipment.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
The device complies with RF specifications when the device used at 0mm from your body.
This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment and meets RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that are deemed to comply without testing of specific absorption ratio (SAR).Cet equipment est conforme aux limites d' exposition aux rayonnements énoncées pour un environnement non contrôlé et respecte les règles d' exposition aux fréquences radioélectriques (RF) CNR-102 de l' IC. Cet équipement emet une energie RF très faible qui est considérée conforme sans évaluation du débit d' absorption spécifique (DAS).
"To comply with FCC RF exposure compliance requirements, this grant is applicable to only mobile configurations. The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter."

certificate of conformity
Calibrator QC
PASS

## special hint

- Consumers who buy our products through legal channels can enjoy the product warranty service if there is a failure caused by non-human reasons within one year from the date of purchase.
- (一)、Warranty Coverage
  All three of the following need to be met at the same time.
  1)The appearance of the product is intact, without damage, scratches, stains, cracks, deformation and so on.
  2) Can provide a complete and valid purchase invoice and warranty, and fill in the number and the product machine number is identical.
  3) The certificate of conformity of the product and the anti-tampering sticker on the body are not damaged.
- (二)、Not covered by the three guarantees
  We will charge a material fee for repairing and replacing components in the following cases
  1) If the certificate of conformity of the product and the anti-removal sticker on the body are damaged.
  2) The user disassembles or repairs the machine by himself/herself, which leads to machine failure or damage.
  3) the user due to the use, maintenance, storage of improper machine failure, damage to the person.
  4) Those who do not have the purchase invoice and warranty, or those whose warranty is not filled out or stamped with the dealer's seal.
  5) the user purchase invoice, the machine number filled out on the warranty card and the product machine number is not the same.
  6) machine failure or damage caused by natural disasters or force majeure and other non-product quality factors; and
- (三)、warranty card
  Dear users, thank you for using our products. In order to serve you better, after purchasing the product, please read, fill in and keep this warranty card properly.

| | |
|---|---|
| user name and surname | |
| user address | |
| zip code | |
| contact number | |
| Product Model | |
| Machine number | |
| Date of purchase | |
| Invoice number | |
| Store | （clause） |

Loss of user retention will not be replaced

## ユーザーガイド

### 外観の紹介

### キーボードショートカット

機種によってキーボードのキーに差があるので、製品の実際を基準にしてください。

- ホームページ
- スイッチディスプレイデバイス
- 画面の明るさを軽減します
- 画面の明るさを改善します
- ボリュームを下げます
- ミュート /キャンセルミュートとして設定します
- ボリュームを増やします
- マイクを無効にします
- ワイヤレス配信
- 最後
- 再生 /一時停止
- 次の曲
- タッチパッドを有効/無効にします
- 機内モード
- 割り込み/サスペンション (Pause)
- フルスクリーンスクリーンショット (Prt Scr)
- ローリングロック (Scr Lk)
- 番号キーを同間します (Num Lk)

### タッチパッド

キーボードのタッチパッドにはマウスと同様の機能があり、コンピュータをより便利に制御できます。 すべてのジェスチャがすべてのアプリケーションで使用できるわけではありません。実際の状況を参照してください。

本指のクリック: マウスの左ボタンをクリックするのと同じです

本指のダブルクリック: マウスの左ボタンのダブルクリックに相当します。

1 本指の移動: デスクトップ上のカーソルを移動します

左クリック: マウスの左ボタンをクリックすることと同じです

右クリック: マウスの右クリックと同じです

2本指クリック：右クリックと同等

2 本の指で上下にスワイプ: 画面またはドキュメントをスクロールします。

2 本の指で開くまたは閉じる：写真やWebページなどを拡大するときに、写真や Web ページなどを拡大または縮小できます

3 本指タップ: 検索を使用する

三本の指で上にスワイプすると、マルチタスクビューが表示されます

三本の指で下にスワイプすると、デスクトップが表示されます

三本の指で左または右にスワイプすると、アプリの切り替えが行われます

### 眼切なヒント

1. コンピュータを初めて起動し、ユーザー名を作成した後、デスクトップに移動してから Wi-Fiに接続してください。
2. 電源を切る場合は、キーボード上の電源インジケータが消えるまで待ってから画面を閉じてください。
3. 他の場所から入手したシステムをインストールしないでください。
4. このノートパソコンにはWindowsがプリインストールされています。
5. ノートパソコンには電源とユーザーマニュアルが付属しています。
6. ノートパソコンには1年間の保証が付いています。使用中に問題が発生した場合は、すぐに悪い評価をせずに製品を返送しないでください。

### 問題がある

1.BIOSに入る方法は?
ノートパソコンを起動するときに、「ESC」キーを押してBIOSに入ることができます。
2.ドライバーが紛失した場合はどうすればよいですか?
通常、工場出荷時の設定にリセットすると、すべてのドライバーが自動的にインストールされます。
3.充電器が正常に動作しているかどうかを確認する方法は?
充電中に充電ポートの横に小さな赤いランプがある場合、
4.ブラックスクリーンになった場合はどうすればよいですか?
ブラックスクリーンになった場合は、電源ボタンを長押ししてシャットダウンし、ノートパソコンを再起動してみてください。
5.ブルースクリーンになった場合はどうすればよいですか?
ブランドのカスタマーサポートに連絡してシステムを再インストールするか、新しいノートパソコンを交換してもらってください。
6.充電できない場合は?
a. 充電器が左側の充電ポートに差し込まれているか、充電インジケーターライトが点灯しているかを確認してください。画面右下のバッテリーアイコンに充電が表示されているかも確認してください。
b. お問い合わせいただき、充電器の交換をお願いいたします
7.Wi-Fiに接続できない場合は?
a.Wi-Fiがオンになっているか確認してください。
b.正しいWi-Fiパスワードが入力されているか確認してください
（大文字と小文字に注意してください）。

### 特記事項

1.機器や付属品の破損、故障の原因となりますので、機器や付属品に強い衝撃や振動を与えないでください。
2.機器の内部回路の故障の原因となりますので、塵埃、湿気、汚れ、磁場の近くで機器を使用しないでください。
3.雷雨の天候ではこのデバイスを使用しないでください。雷雨は機器の故障や感電の危険を引き起こす可能性があります。
4.デバイスは0℃ ~ 35℃ の温度範囲内で使用し、デバイスと付属品は-10℃ ~ +45℃の温度範囲内で保管してください。 周囲温度が高すぎたり低すぎたりすると、機器の故障の原因となることがあります。
5.デバイスとその付属品は雨や湿気から遠ざけてください。火災や感電の危険が生じる可能性があります。
6.電気ヒーター、電子レンジ、オーブン、給湯器、火災、火災など、熱または裸の火災の近くのデバイスを使用しないでください 周囲温度を広げる可能性のあるろうそくまたはその他の銀所。
7.清掃とメンテナンスの前に、このデバイスの使用を停止し、すべてのアプリケーションを終了にし、すべての会社を他の機器で切断します接続またはケーブル。
8.強力な化学製品、洗浄剤、または強力な洗浄装置やアクセサリーを使用しないでください。 掃除と乾燥を使用してください。 ソフトクロスでデバイスまたはそのアクセサリー。
9.火災、爆発、またはその他の危険を引き起こす可能性のある、古いようのまたは一貫性のない充電器やバッテリーを使用しないでください。
10.バッテリーの漏れを避けるために、バッテリーを分解または変更したり、異物を挿入したり、水や他の液体に浸したりしないでください。過度、火災または爆発。
11.バッテリーを家庭用廃棄物として処理できないように、地元の規則に従ってバッテリーを処理してください。 バッテリーの処理が不適切な場合、それは可能かもしれませんその結果、バッテリーは爆発します。
12.このデバイスは不用意な機器されたバッテリーを使用します。機器が正常に輸送できないようにしないように、バッテリーを自分で交換しないでください損傷またはバッテリーの損傷。

### Windowsシステムの使用に関する提案

Windowsシステムを初めて使用する場合は、システムプロンプトに従って初期化してローカルユーザーの作成を完了し、画面の右下隅をクリックしてWLANを見つけ、ワイヤレスWIFIネットワークに接続すると、使用できるようになります。
このラップトップは、オンラインオフィスワーク、ローカルアプリケーション、学習、データの管理に適しています。4KビデオをプレイしSNSでの付き合い、いくつかのゲームをプレイします。
より快適で楽しい製品体験を得るために、次のことを行うことを強くお勧めます。
1.システムの自動アップデートをオフにして手動アップデートを使用するか、システムアップデートを完全にすることをお勧めします。自動アップデートを頻繁に行うと時間がかかり、アップデート後にシステムの速度が低下してハードウェアが失われる可能性もあります。運転手。
2.重要なデータはシステムのCドライブに保存せず、データ保存用に新しいディスクパーティションを作成することをお勧めします。システムの初期D版、デフォルトではシステムハードディスクパーティション が1つだけ存在します。システムに付属のディスク管理ツールで圧縮できるCドライブディスク領域については、通常のCディスクでシステムとシステムソフトウェア用に80G ~ 100Gの容量だけが必要で、十分です。詳しい操作方法については、インターネットで検索していただくか、弊社までご相談ください。
3.可信なソフトウェアのみをインストールしてください。信頼できないソフトウェアをインストールすると、システムのクラッシュが発生する可能性があります。
4.定期的なデータバックアップとキャッシュのクリーンアップを行ってください。

適合証明書
検査者 品質管理部(QC)
合格

## 特別なヒント

消費者が正当なルートで当社製品を購入した場合、購入日から 1 年以内に人為的要因以外で故障が発生した場合、製品保証サービスを受けることができます。

（一）保証対象範囲
以下の 3 つの条件をすべて満たす必要があります。
1）製品の外観が intact（損傷なし、傷、汚れ、クラック、変形などと）。
2）完全で有効な購入領収書と保証書を提供でき、本号と製品の機番を記入し、機番が一致している。
3）製品の機台証明書と本体の改ざん防止シールが損傷していない。

（二）3 つの保証対象外の場合
以下の場合、製品の修理 交換に材料費を徴収します
1）製品の機台証明書や本体の改ざん防止シールが損傷している場合。
2）ユーザーが自ら機器を分解または修理し、機器の故障または損傷を引き起こした場合。
3）ユーザーの使用、保守、保管の不当および不適切で、機器の故障や人身傷害が発生した場合。
4）購入領収書や保証書を所持していない場合、または保証書に記入がない、または販売店のシールが押されていない場合。
5）ユーザーの購入領収書、保証カードに記入された機番と製品の機番が一致しない場合。
6）自然災害や不可抗力その他製品品質管理以外の原因による機器の故障や損傷。

（三）保証カード

親愛なるユーザーの皆様。当社製品をご利用いただき、誠にありがとうございます。より良いサービスを提供するため、製品を購入後、この保証カードをよくお読みいただき、記入して適切に保管してください。

FCCの警告:
この機器はテストされ、FCC規則の第15部に従ってクラスBデジタルデバイスの制限を満たしていることが判明されました。これらの制限は、住宅施設の有害な干渉から合理的な保護を提供するために設計されています。この装置は無線周波数エネルギーを生成し、使用し、放射することができ、指示に従って設置され使用されない場合は、無線通信に有害な干渉を引き起こす可能性があります。しかし、特定のインストールで干渉が起こらないという保証はありません。この装置がラジオまたはテレビの受信に有害な干渉を引き起こす場合（これは装置をオフにして決定することができ、ユーザーは以下の一つまたは複数の措置で干渉を訂正しようとするよう奨励されます。
• 受信アンテナを再配置または移動します。
•機器と受信機の間の分離を増やします。
•機器を受信機が接続されている回路とは異なる回路の出口に接続します。
•ディーラーまたは経験豊富なラジオ/テレビ技術者に相談してください。
注意: 製造業者が明示的に承認していないこのデバイスの変更または変更は、このデバイスを操作する権限を無効にすることができます
このデバイスはFCC規則の第15部分に準拠しています。操作には以下の2つの条件が適用されます: (1) このデバイスは有害な干渉を引き起こさない場合があり (2) このデバイスは望ましくない操作を引き起こす可能性のある干渉を含む受け取られた干渉を受け入れなければなりません。
デバイスはあなたの体から0mmで使用されたデバイスのRF仕様に準拠します。
この装置は、制御されていない環境のために設定されたICの放射線曝露限界に準拠しIC無線周波数 (RF) 曝露規則のRSS-102を満たしています。この装置は非常に低いレベルのRFエネルギーを持ち、特定吸収比 (SAR) のテストなしに適合していると考えられています。この機器は、制御されていない環境のために定められた放射線曝露限界に準拠し、IC の無線周波 (RF) CNR-102の暴露規則を満たしています。この装置は非常に低いRFエネルギーを放出し、特殊吸収流量 (DAS) の評価なしに適合性とみなされます。
「FCCのRF曝露コンプライアンス要件を満たすために、この補助金はモバイル構成のみに適用されます。この送信機に使用されるアンテナは、すべての人から少なくとも20cmの隔離距離を提供するように設置されなければならず、他のアンテナまたは送信機と一緒に位置づけたり、動作したりすることはできません。」

| | |
|---|---|
| ユーザー名 | |
| 住所 | |
| 郵便番号 | |
| 連絡先番号 | |
| 製品モデル | |
| 機番 | |
| 購入日 | |
| 領収書番号 | |
| 店舗 | （ 条項 ） |

ユーザーがカードを紛失した場合、再発行は致しません