GARVEE

GARVEE

WIRELESS CONTROL HEATED RUG

-User Manual-

WARNING

IMPORTANT INSTRUCTION
DO NOT DESTROY

INTRODUCTION

Thank you for purchasing the heated rug . Please read this user manual carefully and keep it in a safe place for future reference. If you need any assistance, please contact our support team with your product model number and Amazon order number.

INCLUDED

1x Heated Rug
1x User manual
(Note: Please check first to make sure the product is complete without any damage. If you have anydoubt, please do not use and contact us.)

Product Specifications

Model	R4872	R6084	R96120
Name	Heated Rug	Heated Rug	Heated Rug
Input voltage	120V AC / 60Hz	120V AC / 60Hz	120V AC / 60Hz
Heat settings:	1-2-3	1-2-3-4-5-6	1-2-3-4-5-6
Rated power	180W	180Wx2	180Wx2
Time setting	10H	2H-3H-4H-5H-6H-7H-8H-9H-10H	2H-3H-4H-5H-6H-7H-8H-9H-10H
Materials	Polyester	Polyester	Polyester
Product dimensions	4' x 6'	5' x 7'	8' x 10'
wired controller	Included	Included	Included
Wireless control	Not Included	Included	Included

Symbol Explanation			
	Read all the instructions.	30	Wash in cold water with a temperature of ≤ 30°C.
	Do not puncture.		Do not bleach.
	Do not use if folded orcreased		Do not tumble dry.
	Not suitable for very young children (0-3 years).		Do not iron.
20 PAP	Dispose of the packingin an eco-friendly manner.		Do not dry clean.
	WARNING: Warning of risks of injury or health hazards.		
	CAUTION: Safety information about possible damage to appliance/accessories.		

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
--Reorient or relocate the receiving antenna.
--Increase the separation between the equipment and receiver.
--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
--Consult the dealer or an experienced radio/TV technician for help.

NORTH AMERICAN MODELS WITH POLARIZED PLUGS: POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other).To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way. If the plug fits loosely into the AC outlet,or if the AC outlet feels warm, do not use that outlet.

PRODUCT DIAGRAM

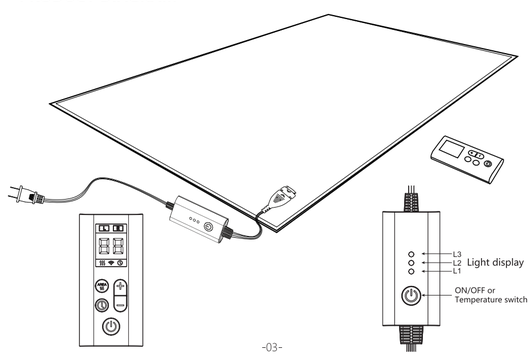

- DO NOT DRY CLEAN, AS DRY CLEANING SOLVENTS MAY DAMAGE THE WIRES.
- DO NOT CHEMICALLY CLEAN (WITH BLEACH OR CLEANING FLUIDS).
- DO NOT USE A WRINGER.
- DO NOT USE CLOTHESPINS.
- DO NOT IRON OR WRING OUT.
- DO NOT USE MOTHBALLS OR SPRAYS OF ANY KIND.
- DO NOT RECONNECT OR USE UNTIL COMPLETELY DRY.
- DO NOT WASH THE CORD OR PUT THE CORD INTO WATER.
- PLEASE NOTE THAT FREQUENT WASHING OF THE PRODUCT HAS A NEGATIVE EFFECT.
- DO NOT USE COMMERCIAL DRYERS OR THE DRYERS AT YOUR LOCAL LAUNDROMAT, AS THEY MAY GET TOO HOT AND CAN DAMAGE THE WIRING OF THE PRODUCT.
- THIS APPLIANCE HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE. THIS PLUG WILL FIT INTO A POLARIZED OUTLET ONLY ONE WAY.

IF THE PLUG DOES NOT FIT FULLY INTO THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN.
DO NOT ATTEMPT TO DEFEAT THIS SAFETY FEATURE.

Storing: If the product is not to be used for a long time, please disconnect the controller from it. It's recommended to store in the original packaging.
Warning: Make sure that the product has completely cooled down before folding, otherwise it might be damaged. During storage, do not place any objects on the folded product.
Disposing: For eco-friendly reasons, the product should be disposed of separately and not as unsorted municipal waste at the end of its service life.Please dispose of it properly at the local waste collection site.

WARRANTY AND CUSTOMER SUPPORT

If you need help regarding product issues,after-sales service,or other relevant problems, please contact us.Customer Phone Service: +1 888 891 2855 Email: support@garvee.com

IMPORTANT-INSTRUCTIONS-DO NOT DESTROY

READ INSTRUCTIONS CAREFULLY

1. Be sure to read the accompanying instruction booklet carefully before using this heated rug.
2. Do not use this heated rug with infants, helpless persons, or anyone insensitive to heat (e.g., persons with poor blood circulation).
3. Do not place heavy furniture on the heating wire area of the heated rug for extended periods.
4. Do not allow cords to be pinched.
5. Keep the controller away from drafty or damp areas (e.g., open windows).
6. Do not use pins - they may damage the electrical wiring.
7. Ensure this heated rug is connected to an alternating-current supply circuit of the correct voltage.
8. Avoid folding the heated rug during use, as this may cause excessive heating.
9. If improper operation is observed, discontinue use immediately and consult the manufacturer or dealer for repairs.
10. Keep all parts of the heated rug and controller visible at all times.
11. Loop cords loosely when storing; wrapping them tightly around the controller may cause damage.
12. Do not use dry-cleaning solvents – they may deteriorate the heating element's insulation.
13. Cleaning method: Hand wash only. Do not dry clean.
14. For household use only.
15. Save these instructions for future reference.
16. Turn off or unplug when not in use. See instruction manual for enabling and disabling the Remote control.

CAUTION

1.Do not plug into the wall outlet until you have connected the controller cord to the product.

2.Caution:The cord must be completely connected.
A risk of fire could occur with a loose connection.

WARNING:
This product is equipped with a SAFETY SYSTEM. This sensor technology prevents the rug surface from becoming overheated and will automatically switch it off if a malfunction occurs. Please note that for safety reasons, the product cannot be operated any longer after the malfunction. If the overheat protection is activated, please contact us.

QUESTIONS & ANSWERS

Problem	Cause	Solution
The product does not produce enough heat or does not work.	The heating product provides safe heat and protects users' skin by maintaining a temperature within the range set by international safety standards, to help avoid low-temperature burns. Therefore, the temperature setting is for keeping warm.	If you don't feel the heat, fold the product and test it for 30 minutes to see whether it gets warm (but please make sure that the product is placed flat and not folded during normal use). If you still can't feel the heat after the test, please contact our customer service.
The product does not work upon arrival.	Product malfunction may exist.	When you receive the product, please take it out of the packaging and place it flat (do not fold). Check that the coupler and mains plug are connected properly, then turn it on to check whether the product works normally. If not, please contact our customer service.
The product does not heat uniformly.	The product is folded or the heating wire is coiled during use.	Please use the product flat. The temperature of body areas in contact with the heating zones is higher than those that are not, which is normal.
The product no longer works after being used for a period of time.	The product is not used or washed properly, or there are product malfunctions.	Please contact our customer service.
If the above suggestions do not solve the problem,the permanent switch-off protection via the safety system might have been cativated. In this case, please contact our customer service.		

CLEANING AND MAINTENANCE

⚠ Warning

1. Before cleaning, always remove the mains plug from the outlet first.
2. Disconnect the controller from the product.

CLEANING

1. Soak the product for 15 minutes in mild soap and cool water.
2. Rinse with fresh, cool water.
3. Recommended to wash by hand or rinse externally with professional equipment. (Immediately after washing, reshape the product to its original dimensions and spread it outflat on a clothes horse or clothesline.)

MAINTENANCE

1. Store the product only after it has completely cooled down and is completely dry.
2. Loop the cord loosely.
3. Store in an airy, dry environment.

⚠ CAUTION

- DO NOT SUBMERGE THE CONTROLLER IN WATER.
  THE CONTROLLER MUST NEVER COME INTO CONTACT WITH WATER OR OTHER LIQUIDS. TO CLEAN THE CONTROLLER, USE A DRY, LINT-FREE CLOTH.

Wireless Controller Interface

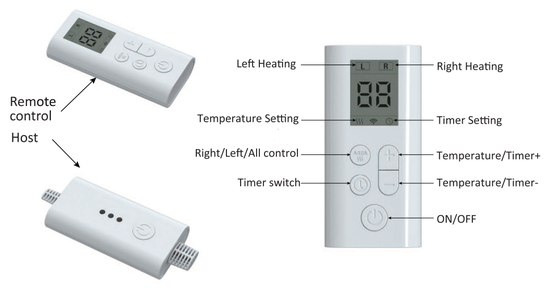

Wireless Controller Operational Manual

Host

1. After plugging in, the three LEDs will flash and the buzzer will beep.
2. The host and remote control are paired at the factory, so the host can be controlled directly by the remote control. When the host is in remote control mode and turned on, the middle LED on the host will light up. When the host receives a signal from the remote control, the middle LED on the host will flash quickly. When the host is turned off, the user can turn it on with the remote control, and the host will emit a long beep.
3. The host can be turned on solely. When the remote control is out of power or temporarily cannot be found, press the host's ON/OFF button for cyclic control (OFF-1-2-3) , the left and right zones will be adjusted together.The default timer is 10 hours. One LED light represents the low setting, two LED lights represent the medium setting, three LED lights represent the high setting,and all LED lights are off for OFF.

How to pair the remote control with the Host

(Note: Pre-paired at the factory. Follow these steps only if re-pairing is needed.)

1. Install batteries in the remote control.
2. Connect the host coupler to the heated rug, plug in the host, then press and hold the host power button. All three LEDs will flash.
3. Press the remote control power button. The host LEDs will stop flashing, indicating successful pairing.

4. When the host is turned on via remote control, you may also press the host ON/OFF button to turn it off. All LEDs will turn off, and both left/right rugs will deactivate simultaneously.
5. If an error occurs, the buzzer will emit an intermittent beeping alarm. The heated rug will be turned off, and the host will not be able to receive signals from the remote control. The host ON/OFF button will be disabled, and the host must be unplugged immediately. The LEDs (L1/L2/L3) will flash to display the corresponding error code:
F1 (L1 flashes): Controller malfunction
F2 (L2 flashes): Heating wire open circuit / Disconnected from controller

Wireless Controller Operational Manual

Remote Control

1. When installing the battery for the first time, the LCD will be fully displayed and the backlight will turn on. The backlight will turn off after 1 second.
2. When the device is turned on, the screen will go off and enter sleep mode 30 seconds after the last button press. If you press the power button, it will return to the state before sleep.
3. Gear setting: When both L and R are displayed at the same time (showing the current gear setting), press the +/- button to adjust the gear settings for both the left and right sides simultaneously. When only L or R is displayed, the temperature setting for the left and right sides can be adjusted independently (0-1-2-3-4-5-6).
4. Press the "AREA" button to switch between left and right in a cycle (L&R→R→L).
5. The timer can only be set for both the left and right heated rug at the same time. Press the timing button; the timing duration and the clock symbol will flash together. Press the +/- button to adjust the timer (2h-3h-4h-5h-6h-7h-8h-9h-10h). There are three ways to return to the normal gear display mode: (a) Do not press any buttons for 6 seconds; (b) Press the timing button again; (c) Press the "AREA" switch.
6. When the battery voltage is lower than 2.4V during the power-on self-test, "LO" will be displayed.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.