



USER'S GUIDE


THERMOSTAT REMOTE

COMPATIBLE WITH DIMPLEX® ELEMENT
ONBOARD THERMOSTAT

TECHNICAL SPECIFICATIONS

Remote Compatibility	This product is designed for use with hardwired Dimplex ELEMENT Onboard Thermostats only.
Remote Batteries	2 x AAA

REMOTE DISPLAY AND ICONS

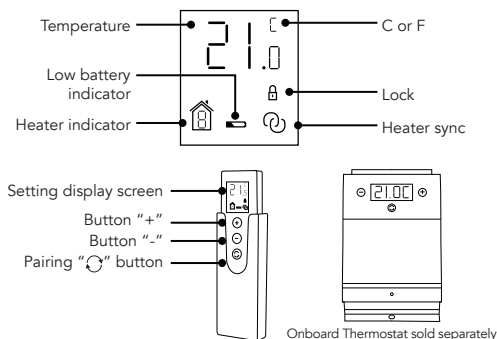

OPERATING INSTRUCTIONS

SETUP

Pairing Instructions

1. Long press the pairing button on the thermostat to initiate pairing mode for the thermostat. The screen on the thermostat will say "pair" to indicate it is looking for a connection.
2. Long press the pairing button on the remote to initiate pairing mode for the remote. Screen on remote should flash to indicate it is looking for a connection.
3. Thermostat and remote should pair automatically. Pairing is successful by assigning "H1", "H2", or "H3". Repeat for heaters 2 and 3 if applicable.

OPERATING INSTRUCTIONS

Setting the temperature using a paired remote

1. Using the remote press any button to wake the display. If selected heater is not displayed on the heater selection indicator, press the button to cycle through paired heaters.
2. Wait for heater sync indicator to appear on screen.
3. Press + or - to select the desired temperature.

REMOTE SETTINGS

Temperature display

Select your preferred temperature display by short pressing both + and - buttons to cycle between "°C" and "°F".

Lock function

Use the lock function to prevent the set temperature from being changed inadvertently. Onboard thermostat and remote can be locked independently from each other. Any buttons pressed other than the correct disengage will not affect the onboard thermostat or remote.

To lock EITHER the onboard thermostat or remote:

1. Long press + button to initiate lock.
2. For remote, lock symbol will now appear. For onboard controller "LOC" will appear and then fade quickly to display set temperature.
3. To disengage the lock, long press + button.

Factory reset

If the onboard thermostat or remote needs to be unpaired or factory reset at any time, all thermostats connected to the remote and the remote itself must be reset at the same time.

To initiate a factory reset press and hold - button for 5 seconds. After 5 seconds, the display will flash for 5 seconds. Then, press the pairing button and "H" will appear inside the heater indicator to show there is no paired thermostats.

SAFE OPERATION

WARNING:

Remote control contains a small battery. Keep away from children. If swallowed, seek medical attention immediately. Do not install the battery backwards, recharge, insert, or mix with used or other battery types, as this may cause explosion or leakage, resulting in injury.

Safety Precautions

- Do not disassemble or modify the remote.
- Keep out of reach of children.
- Dispose of batteries according to local regulations.

TROUBLESHOOTING

Troubleshooting

1. **Problem:** Remote display does not turn on.
Solution: Replace remote batteries. Ensure battery are installed correctly.
2. **Problem:** Thermostat won't pair to remote.
Solution: Factory reset all connected baseboards and remote. Retry pairing.
3. **Problem:** My remote won't connect to the thermostat that is already paired.
Solution: Verify that you are within range (20 feet). Verify pairing has been completed. Verify power to baseboard is on.

Remote Control Battery Replacement

1. Remove battery cover.
 2. Correctly install the AAA batteries. in the battery holder as indicated.
 3. Secure the battery cover.
- Batteries must be recycled or disposed of properly. Check with your Local Authority or Retailer for recycling advice in your area.

Power & Battery Handling

- Use only 2 x AAA batteries of the recommended type.
- Insert batteries with correct polarity (+/-).
- Do not mix old and new batteries of different types.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

WARRANTY



If the remote is deemed defective within 1 year of the original date of purchase, Dimplex will repair or replace the product at its discretion. Warranty is void in case of damage incurred from improper use or installation. See <http://dimplex.com> for details.

In keeping with our policy of continuous product improvement, we reserve the right to make changes without notice.
© 2025 Glen Dimplex Americas

GlenDimplex
Americas
7217410010R01




GUIDE DE L'UTILISATEUR TÉLÉCOMMANDE DE THERMOSTAT COMPATIBLE AVEC DIMPLEX® ELEMENT THERMOSTAT INTÉGRÉ

CARACTÉRISTIQUES TECHNIQUES

Compatibilité de la télécommande Ce produit est conçu pour être utilisé uniquement avec des thermostats intégrés Dimplex ELEMENT câblés.

Piles de la télécommande 2 x AAA

Affichage de la télécommande et icônes

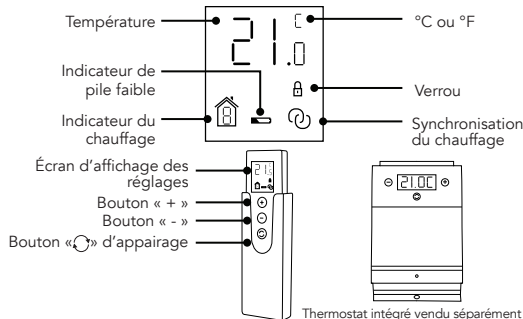

INSTRUCTIONS DE FONCTIONNEMENT

CONFIGURATION

Instructions d'appairage

- Appuyez longuement sur le bouton d'appairage du thermostat pour lancer le mode d'appairage. L'écran du thermostat affichera « pair » pour indiquer qu'il recherche une connexion.
- Appuyez longuement sur le bouton de la télécommande pour lancer le mode d'appairage. L'écran de la télécommande devrait clignoter pour indiquer qu'elle recherche une connexion.
- Le thermostat et la télécommande devraient s'appairer automatiquement. L'appairage est réussi en attribuant « H1 », « H2 » ou « H3 ». Répétez pour les plinthes chauffantes 2 et 3 si nécessaire.

INSTRUCTIONS DE FONCTIONNEMENT

Régler la température à l'aide d'une télécommande appairée

- À l'aide de la télécommande, appuyez sur n'importe quel bouton pour activer l'affichage. Si le chauffage sélectionné n'apparaît pas sur l'indicateur de sélection, appuyez sur le bouton pour faire défiler les chauffages appairés.
- Attendez que l'indicateur de synchronisation du chauffage apparaisse à l'écran.
- Appuyez sur ou pour sélectionner la température souhaitée.

PARAMÈTRES DE LA TÉLÉCOMMANDE

Affichage de la température

Sélectionnez votre affichage de température préféré en appuyant brièvement sur les boutons et pour alterner entre °C et °F.

Fonction de verrouillage

Utilisez la fonction de verrouillage pour éviter que la température réglée ne soit modifiée par inadvertance. Le thermostat intégré et la télécommande peuvent être verrouillés indépendamment l'un de l'autre. Toute pression sur un bouton autre que celui permettant le déverrouillage n'aura aucun effet sur le thermostat intégré ou la télécommande.

Pour verrouiller soit le thermostat intégré, soit la télécommande

- Appuyez longuement sur le bouton pour activer le verrouillage.
- Pour la télécommande, le symbole de verrouillage apparaîtra. Pour le contrôleur intégré, « LOC » s'affichera puis disparaîtra rapidement pour revenir à la température réglée.
- Pour désactiver le verrouillage, appuyez longuement sur le bouton .

Réinitialisation d'usine

Si le thermostat intégré ou la télécommande doit être Si à tout moment. Ou réinitialisé aux paramètres d'usine, tous les thermostats connectés à la télécommande ainsi que la télécommande elle-même doivent être réinitialisés simultanément.

Pour lancer une réinitialisation d'usine, maintenez le bouton enfoncé pendant 5 secondes. Après 5 secondes, l'affichage clignotera pendant 5 secondes. Ensuite, appuyez sur le bouton d'appairage : « -H » apparaîtra à l'intérieur de l'indicateur de l'appareil de chauffage pour indiquer qu'aucun thermostat n'est appairé.

UTILISATION EN TOUTE SÉCURITÉ

AVERTISSEMENT :

La télécommande contient une petite pile. Gardez-la hors de portée des enfants. En cas d'ingestion, consultez immédiatement un médecin. Ne pas installer la pile à l'envers, ni la recharger, ni la jeter au feu, ni la mélanger avec des piles usagées ou d'autres types de piles — cela pourrait provoquer une explosion ou une fuite entraînant des blessures.

Précautions de sécurité

- Ne démontez pas et ne modifiez pas la télécommande.
- Tenir hors de portée des enfants.
- Les piles doivent être recyclées ou éliminées conformément à la réglementation locale.

DÉPANNAGE

Dépannage

- Problème :** L'affichage de la télécommande ne s'allume pas.
Solution : Remplacez les piles de la télécommande. Assurez-vous que les piles sont correctement installées.
- Problème :** Le thermostat ne se connecte pas à la télécommande.
Solution : Réinitialisez toutes les plinthes connectées ainsi que la télécommande aux paramètres d'usine. Réessayez l'appairage.
- Problème :** Ma télécommande ne se connecte pas au thermostat déjà appairé.
Solution : Vérifiez que vous êtes à portée (6 mètres). Vérifiez que l'appairage est terminé. Vérifiez que l'alimentation des plinthes est activée.

Remplacement de la pile de la télécommande

- Retirez le couvercle de la pile.
- Installez correctement la pile AAA dans le support, comme indiqué.
- Fixez le couvercle de la pile.

Les piles doivent être recyclées ou éliminées correctement. Consultez votre autorité locale ou votre détaillant pour obtenir des conseils sur le recyclage dans votre région.

Gestion de l'alimentation et des piles

- Utilisez uniquement 2 piles AAA du type recommandé.
- Insérez les piles en respectant la polarité (+/-).
- Ne mélangez pas des piles usagées et neuves, ni des piles de types différentes.

DÉCLARATION DE LA FCC

Cet appareil est conforme à la partie 15 des règles de la FCC. Son fonctionnement est soumis à la condition que cet appareil ne provoque pas d'interférences nuisibles. Toute modification ou tout changement non expressément approuvé par la partie responsable de la conformité pourrait annuler le droit de l'utilisateur à utiliser cet équipement.

REMARQUE : Cet équipement a été testé et jugé conforme aux limites pour un appareil numérique de classe B, conformément à la partie 15 des règles de la FCC. Ces limites sont conçues pour offrir une protection raisonnable contre les interférences nuisibles dans une installation résidentielle. Cet équipement génère, utilise et peut émettre de l'énergie radiofréquence et, s'il n'est pas installé et utilisé conformément aux instructions, peut provoquer des interférences nuisibles aux communications radio. Cependant, il n'y a aucune garantie que des interférences ne se produiront pas dans une installation particulière.

GARANTIE

Si la télécommande est jugée défectueuse dans un délai d'un an à compter de la date d'achat initiale, Dimplex réparera ou remplacera le produit à sa discrétion. La garantie est annulée en cas de dommages résultant d'une utilisation ou d'une installation incorrecte. Consultez <http://Dimplex.com> pour plus de détails.

Conformément à notre politique d'amélioration continue des produits, nous nous réservons le droit d'apporter des modifications sans préavis.
© 2025 Glen Dimplex Americas



FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1 This device may not cause harmful interference.

2 This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable

protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the

instructions, may cause harmful interference to radio communications. However, there is no

guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the

equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

CAUTION: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The remote control has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

ISED Statement

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s).

Operation is subject to the following two conditions :

1. This device may not cause interference.

2. This device must accept any interference, including interference that may cause undesired operation of the device. This equipment complies with Innovation, Science and Economic Development Canada's radiation exposure limits set forth for an uncontrolled environment.

L ' é metteur/r é cepteur exempt de licence contenu dans le pr é sent appareil est conforme aux CNR d ' Innovation, Sciences et D é veloppement é conomique Canada applicables aux appareils radio exempts de licence. L ' exploitation est autoris é e aux deux conditions suivantes :

1. L ' appareil ne doit pas produire de brouillage;

2. L ' appareil doit accepter tout brouillage radio é lectrique subi, m ê me si le brouillage est susceptible d ' en compromettre le fonctionnement.

The remote control has been evaluated to met general RF exposure requirement. The device can be used in portable exposure condition without restriction