


100x140mm

REMOTE CONTROL HEATING VIBRATING SHOULDER WRAP USER MANUAL

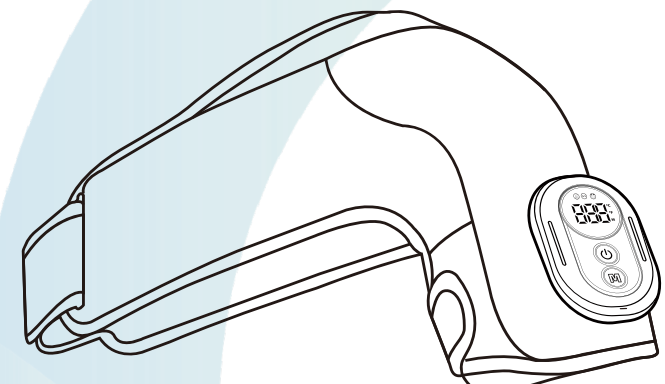

MODEL: 102379

Thank you for choosing our product. Please read
this manual carefully before use. After reading,
please keep the manual properly for future reference.

CONTENT

EN	-----	Page 1-7
FR	-----	Page 8-13

IMPORTANT PRECAUTIONS BEFORE USE

- ★ Please read the instruction manual carefully before use to ensure correct operation.
- ★ This product is intended for relief purposes only and should not be used as a substitute for medical equipment or medications.
- ★ If any discomfort or abnormality arises during use, please discontinue use immediately and consult a doctor or healthcare professional.
- ★ Do not use this product in damp environments to avoid damaging internal components.


WORKING ENVIRONMENT

Temperature	Humidity	Atmospheric Pressure
0~40°C	< 80% RH	70KPA~106KPA

PARAMETER

PRODUCT PARAMETERS		
Max Power	Battery Capacity	Charging Voltage
9.5W	5000mAh	DC5V 2A
REMOTE CONTROL PARAMETERS		
Max Power	Battery Capacity	Charging Voltage
1.6W	250mAh	DC5V 2A

CONTROLLER

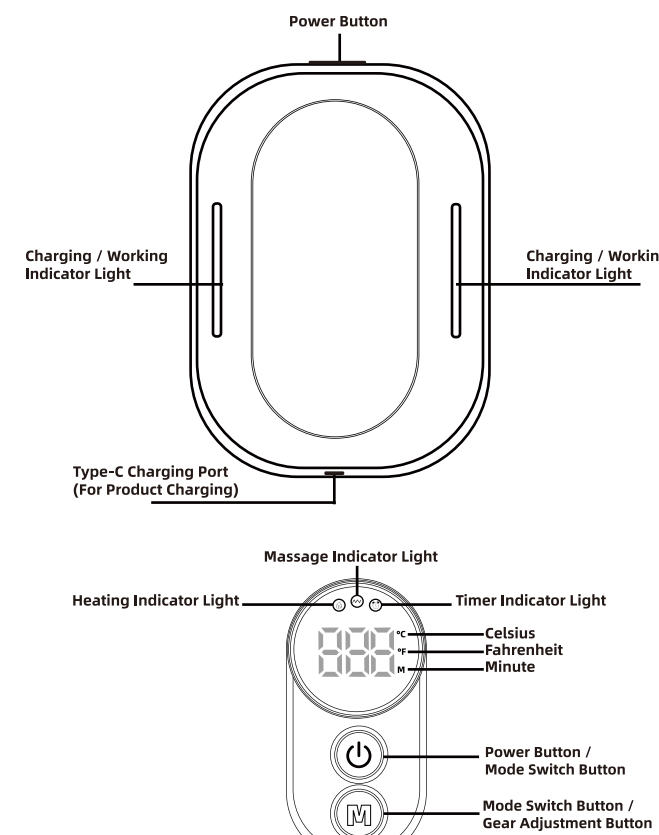

WEARING STEPS

1. Fully unfold the shoulder pad, ensuring the back is facing upwards.
2. Locate the hole on the right side of the shoulder pad, insert one end of the extension strap firmly into the hole, and secure it.
3. Pass the shorter strap under the shoulder pad through the hole, and naturally form a loop under the shoulder pad, but don't rush to stick it with magic stick.
4. Place the shoulder pad on your shoulder and guide your arm through the loop formed under the pad, ensuring it fits snugly on your shoulder.
5. Adjust the position of the arm strap and use the magic stick to fix it tightly and comfortably against your arm.
6. Pull the extension strap over your back and bring it to the front, adjusting its length and position to ensure the shoulder pad feels both stable and comfortable.
7. Once adjusted, inspect the shoulder pad to ensure it is fully fitted and secure.
8. After confirmation, you may begin using this product.

OPERATION INSTRUCTIONS

- 01 Wear The Shoulder Support**
Properly wear the device on your left or right shoulder. Adjust the position and tightness to ensure a secure fit.
For convenience, you may remove the remote control from the base after powering on to adjust settings, then reattach it to the base when finished.
- 02 Power On From The Base**
Long press the power button on the base to turn on the device. Default settings: 50°C heating, F01 vibration massage, and 20-minute timer; both left and right indicator lights will illuminate.
If the device fails to power on, it may be due to low battery. Please recharge and try again.
Note:
1. The base must be powered on first to receive remote commands.
2. The base can only activate default settings; to adjust modes or intensity, use the remote control.
- 03 Buzzer**
The buzzer activates by default upon startup (short beep). Press the base's power button briefly to turn it off.
- 04 Power On From Remote Control**
After the base is on, long press the remote's power button to activate it. The display shows "F01" and the top five indicator lights illuminate. Default settings (50°C heating, F01 massage, 20-minute timer) sync with the base.
- 05 Switch Modes**
In default operating mode, briefly press the power button or M button on the remote control to the previously entered menu mode interface.
The last active menu interface before shutdown. OR
Repeatedly press the power button or M button to cycle through different modes in this order: Massage Mode → Timer Mode → Heating Mode → °C/°F Toggle Mode → Back to Massage Mode.
If no action is taken within 5 seconds, the device exits mode selection and resumes operation.

EN

- 06 Heating**
Briefly press the remote's power button to enter heating mode. Press the M button to cycle through temperatures: 50°C/122°F, 55°C/131°F, 60°C/149°F, 65°C/149°F, 68°F, 40°C/113°F. The display will show the current temperature rising gradually to your selected setting.
- 07 Vibration**
Briefly press the remote's power button to enter massage mode. Press the M button to cycle intensities: F01 → F02 → F03 → F04 → F05 → F00 (OFF).
- 08 Timer**
Briefly press the remote's power button to set the timer. Press the M button to select: 20m → 35m → 45m.
- 09 Switch Temperature Units**
Short press the remote's power button to enter °C/°F switching mode.
Short press the remote's M button to toggle the temperature unit between °C/°F.
The remote does NOT auto-power-off; manually turn it off.
- 10 Manual Shutdown**
Long press the remote's power button to turn off both the device and base.
Long press the base's button to turn off the device only (remote remains on).
- 11 Auto Shutdown**
If a timer is set, the device powers off automatically when time elapses.
The remote does NOT auto-power-off; manually turn it off.
- 12 Storage**
After use, store the device and accessories in a dry, ventilated area away from direct sunlight or moisture.
- 13 Pairing**
The remote is pre-paired with the base. To pair a new remote:
With the base on, briefly press its power button twice (beep sounds; shoulder indicators flash), then 30 seconds, long press the remote's M button. A long beep and steady indicators confirm pairing success (settings reset to default).
- 14 Reset To Default**
In any mode, long press the M button to restore default settings.

ABOUT CHARGING

Product Charging

1. Low Battery Warning: The charging indicator lights flash rapidly three times, accompanied by a short beep for each flash. This reminder repeats every 30 seconds, for a total of three reminders.
2. Low Battery Shutdown: The charging indicator lights flash rapidly three times, with a short beep for each flash, followed by a long beep before shutdown.
3. When the product issues a low battery warning or automatically shuts down due to low battery, charge it promptly.
4. Ensure the device is powered off before charging.
5. Use the provided charging cable to connect the base and the cable. During charging, the charging indicator lights flash.
6. When the charging indicator lights remain steadily lit, the device is fully charged.

Remote Control Charging

1. Low Battery Warning: The display area and power button indicator light flash three times, repeating every 30 seconds for a total of three reminders. The display area returns to its original state after flashing, while the power button indicator light continues flashing.
2. Low Battery Shutdown: The display area and power button indicator light flash three times, then the remote control shuts down.
3. When the remote control issues a low battery warning or automatically shuts down due to low battery, charge it promptly.
4. Ensure the remote control is powered off before charging.
5. Use the provided charging cable to connect the remote control and the cable. During charging, the indicator light under the power button breathes (pulses).
6. When the indicator light under the power button remains steadily lit, the remote control is fully charged.

Note: When charging, please use your original charging cable, otherwise there may be problems with not charging or not charging fully. Do not operate the controller during charging, otherwise may damage it.

PRECAUTIONS

- ★ Excessive massage is harmful to the body.
 - ★ This product is a household appliance and cannot replace medical equipment or medicines.
 - ★ Incorrect operation may result in safety accidents or property damage.
1. Please make sure the product is completely dry before use.
 2. When starting to use this product, it is recommended to select the low temperature mode. Slight redness and warmth of the skin after use is normal. However, if severe skin redness and swelling occur after use, please stop use immediately and consult a doctor.
 3. The device is not waterproof and should not be used in wet areas.
 4. It is recommended to avoid direct contact of the product with the skin.
 5. Within 30 seconds, long press the remote's M button. A long beep and steady indicators confirm pairing success (settings reset to default).
 6. Long-term use will cause the product temperature to be high, so be careful of burns. Continuous use of the heating function should not exceed 30 minutes.
 7. If the user experiences any discomfort during use, such as dizziness, headache, asthma, etc., please stop using it immediately; if necessary, please contact your doctor.
 8. When not in use, please turn off the product and keep it in a clean and dry place.
 9. Do not expose the device to sunlight or fire to avoid damaging the thermal conductor of the insulator.
 10. Do not disassemble or modify the controller and circuit board as well to avoid artificial damage.

WARNING


CONSULT A DOCTOR BEFORE USE:

- Patients suffering from osteoporosis, fractures, sprains, acute pain and other leg diseases
- Patients with nerve disorders in the legs or sensory disturbances in the skin
- Pregnant or postpartum women
- Heart disease patients

★ The product has a heating function, people who are not sensitive to temperature must pay attention.

CLEANING AND MAINTENANCE

1. Before cleaning, please make sure to disconnect the power completely.
2. When cleaning, wipe the product with a damp cloth, but be careful not to wet the Type-C interface. Do not use strong cleaners or hard brushes.
3. Lay flat to dry.
4. This product does not support machine wash or hand wash.
5. Do not dry clean.

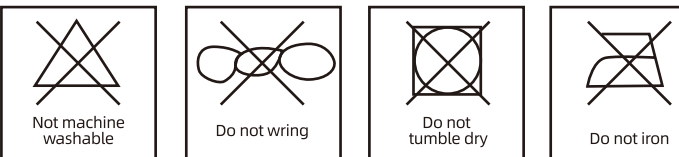

FCC Requirement
changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

PRÉCAUTIONS IMPORTANTES AVANT UTILISATION

- ★ Veuillez lire attentivement le manuel d'instructions avant utilisation pour garantir un fonctionnement correct.
- ★ Ce produit est conçu uniquement à des fins de soulagement et ne doit pas être utilisé comme substitut à un équipement médical ou à des médicaments.
- ★ Si vous ressentez un inconfort ou remarquez une anomalie pendant l'utilisation, veuillez cesser immédiatement l'utilisation et consulter un médecin ou un professionnel de santé.
- ★ N'utilisez pas ce produit dans des environnements humides pour éviter d'endommager les composants internes.


ENVIRONNEMENT DE TRAVAIL

Température	Humidité	Pression Atmosphérique
0~40°C	< 80% RH	70KPA~106KPA

PARAMÈTRE

PARAMÈTRES DU PRODUIT		
Puissance Maximale	Capacité Des Batteries	Tension De Charge
9.5W	5000mAh	DC5V 2A
PARAMÈTRES DE LA TÉLÉCOMMANDE		
Puissance Maximale	Capacité Des Batteries	Tension De Charge
1.6W	250mAh	DC5V 2A

CONTRÔLEUR

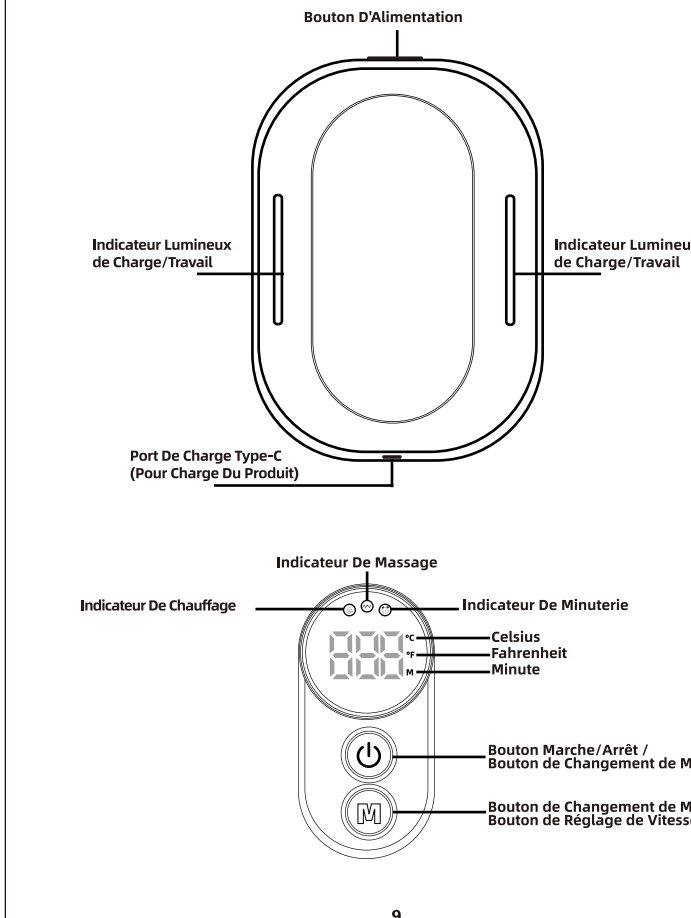

PORT DE LA MARCHÉ

1. Dépliez entièrement l'épaulière en vous assurant que le dos est tourné vers le haut.
2. Localisez le trou sur le côté droit de l'épaulière, insérez fermement une extrémité de la sangle d'extension dans le trou et fixez-la.
3. Passez la sangle la plus courte sous l'épaulière à travers le trou et formez naturellement une boucle sous l'épaulière, mais ne vous précipitez pas pour la coller avec un bâton magique.
4. Placez l'épaulière sur votre épaule et guidez votre bras à travers la boucle formée sous l'épaulière, en vous assurant qu'il est bien ajusté sur votre épaule.
5. Ajustez la position du brassard et utilisez le bâton magique pour le fixer fermement et confortablement contre votre bras.
6. Tirez la sangle d'extension sur votre dos et amenez-la vers l'avant, en ajustant sa longueur et sa position pour garantir que l'épaulière soit à la fois stable et confortable.
7. Une fois ajusté, inspectez l'épaulière pour vous assurer qu'elle est entièrement ajustée et sécurisée.
8. Après confirmation, vous pouvez commencer à utiliser ce produit.

INSTRUCTIONS DE FONCTIONNEMENT

- 01 Porter l'Épaulière**
Portez correctement l'appareil sur l'épaule gauche ou droite. Ajustez la position et la tension pour un maintien sécurisé.
Pour plus de commodité, vous pouvez retirer la télécommande de la base après l'allumage pour régler les paramètres, puis la remettre en place une fois terminé.
- 02 Allumage par la Base**
Appuyez longuement sur le bouton d'alimentation de la base pour allumer l'appareil. Paramètres par défaut : Chauffage à 50°C, massage vibratoire F01 et minuterie de 20 minutes. Les voyants gauche et droit s'allument.
Si l'appareil ne s'allume pas, la batterie est peut-être faible. Rechargez et réessayez.
Remarque :
1. La base doit être allumée en premier pour recevoir les commandes de la télécommande.
2. La base ne peut activer que les paramètres par défaut. Pour ajuster les modes ou l'intensité, utilisez la télécommande.
- 03 Buzzer**
Le buzzer s'active par défaut au démarrage (bip court). Appuyez brièvement sur le bouton d'alimentation de la base pour le désactiver.
- 04 Allumage par Télécommande**
Après l'allumage de la base, appuyez longuement sur le bouton d'alimentation de la télécommande pour l'activer. L'écran affiche "F01" et les cinq voyants supérieurs s'allument. Les paramètres par défaut (chauffage 50°C, massage F01, minuterie 20 minutes) se synchronisent avec la base.
- 05 Changer de Mode**
En mode de fonctionnement par défaut, appuyez brièvement sur le bouton Marche/Arrêt ou le bouton M de la télécommande pour accéder à:
La dernière interface de menu active avant l'extinction, OU
L'interface de mode de menu précédemment quittée.
Appuyez à plusieurs reprises sur le bouton Marche/Arrêt ou le bouton M pour parcourir les différents modes dans cet ordre: Mode Massage → Mode Minuterie → Mode Chauffage → Mode °C/°F → retour au Mode Massage.
Si aucune action n'est effectuée dans les 5 secondes, l'appareil quitte la sélection de mode et reprend son fonctionnement.

- 06 Chauffage**
Appuyez brièvement sur le bouton d'alimentation de la télécommande pour activer le mode Chauffage. Appuyez sur le bouton M pour parcourir les températures : 50°C/122°F, 55°C/131°F, 60°C/149°F, 65°C/149°F, 68°F, 40°C/113°F.
L'écran affiche la température actuelle augmentant progressivement jusqu'à la valeur sélectionnée.
- 07 Vibration**
Appuyez brièvement sur le bouton d'alimentation de la télécommande pour activer le mode massage. Appuyez sur le bouton M pour parcourir les intensités : F01 → F02 → F03 → F04 → F05 → F00 (OFF).
- 08 Minuterie**
Appuyez brièvement sur le bouton d'alimentation de la télécommande pour régler la minuterie. Appuyez sur le bouton M pour sélectionner : 20m → 35m → 45m.
- 09 Changer d'Unité de Température**
Appuyez brièvement sur le bouton d'alimentation de la télécommande pour accéder au mode de commutation °C/°F.
Appuyez brièvement sur le bouton M pour alterner entre les unités de température °C et °F.
- 10 Arrêt Manuel**
Appuyez longuement sur le bouton d'alimentation de la télécommande pour éteindre l'appareil.
Appuyez longuement sur le bouton de la base pour éteindre uniquement l'appareil (la télécommande reste allumée).
- 11 Arrêt Automatique**
Si une minuterie est réglée, l'appareil s'éteint automatiquement à la fin du temps imparti.
La télécommande ne s'éteint PAS automatiquement ; éteignez-la manuellement.
- 12 Stockage**
Après utilisation, rangez l'appareil et les accessoires dans un endroit sec et aéré, à l'abri de la lumière directe du soleil ou de l'humidité.
- 13 Appairage**
La télécommande est pré-appairée avec la base. Pour appairer une nouvelle télécommande :
Avec la base allumée, appuyez brièvement deux fois sur son bouton d'alimentation (bip : les voyants d'épaule clignotent).
Dans les 30 secondes, appuyez longuement sur le bouton M de la télécommande. Un bip long et des voyants fixes confirment la réussite de l'appairage (réinitialisation aux paramètres par défaut).
- 14 Réinitialisation aux Paramètres par Défaut**
Dans n'importe quel mode, appuyez longuement sur le bouton M pour restaurer les paramètres par défaut.

À PROPOS DE LA CHARGE

Charge Du Produit

1. Avertissement De Batterie Faible: Les voyants de charge clignotent rapidement trois fois, accompagnés d'un bip court pour compléter le cycle. Ce signal se répète toutes les 30 secondes, pour un total de trois rappels.
2. Arrêt Pour Batterie Faible: Les voyants de charge clignotent rapidement trois fois avec un bip court pour chaque flash, suivis d'un bip long avant l'arrêt.
3. Lorsque l'appareil émet un avertissement de batterie faible ou s'éteint automatiquement, chargez-le immédiatement.
4. Assurez-vous que l'appareil est éteint avant de le charger.
5. Utilisez le câble fourni pour connecter la base au chargeur. Pendant la charge, les voyants clignotent.
6. Lorsque les voyants de charge restent allumés en continu, l'appareil est complètement chargé.

Charge De La Télécommande

1. Avertissement De Batterie Faible: L'affichage et le voyant du bouton d'alimentation clignotent trois fois, se répétant toutes les 30 secondes (trois fois au total). L'affichage revient à son état initial après clignotement, tandis que le voyant continue de clignoter.
2. Arrêt Pour Batterie Faible: L'affichage et le voyant clignotent trois fois avant l'arrêt.
3. Lorsque la télécommande émet un avertissement de batterie faible ou s'arrête automatiquement, chargez-la immédiatement.
4. Éteignez la télécommande avant la charge.
5. Connectez-la au câble fourni. Pendant la charge, le voyant sous le bouton d'alimentation pulse.
6. Lorsque le voyant reste allumé fixement, la télécommande est chargée.

Remarque: Lors du chargement, veuillez utiliser notre câble de chargement d'origine, sinon il pourrait y avoir des problèmes de ne pas charger ou de ne pas charger complètement. N'utilisez pas le contrôleur pendant le chargement, sinon vous pourriez l'endommager.

PRÉCAUTIONS

- ★ Un massage excessif est nocif pour le corps.
 - ★ Ce produit est un appareil électromagnétique et ne peut remplacer un équipement médical ou des médicaments.
 - ★ Un fonctionnement incorrect peut entraîner des accidents de sécurité ou des dommages matériels.
1. Veuillez vous assurer que le produit est complètement sec avant utilisation.
 2. Lorsque vous commencez à utiliser ce produit, il est recommandé de sélectionner le mode basse température. Une légère rougeur et une chaleur de la peau après utilisation sont normales. N'hésitez pas à l'utiliser. Cependant, si une rougeur ou un gonflement sévère de la peau apparaît après utilisation, veuillez arrêter immédiatement l'utilisation et consulter un médecin.
 3. L'appareil n'est pas étanche et ne peut pas être utilisé dans un endroit humide.
 4. Il est recommandé d'éviter tout contact direct du produit avec la peau.
 5. Il est recommandé de commencer par la température la plus basse et d'ajuster progressivement la température appropriée en fonction des conditions personnelles pour éviter de brûler la peau des personnes non sensibles à la chaleur.
 6. Une utilisation à long terme entraînera une température élevée du produit, alors faites attention aux brûlures. (L'utilisation continue de la fonction de chauffage ne doit pas dépasser 30 minutes.)
 7. Si l'utilisateur ressent un inconfort pendant l'utilisation, tel que des étourdissements, des maux de tête, de l'asthme, etc., veuillez cesser de l'utiliser immédiatement ; si nécessaire, veuillez contacter votre médecin.
 8. Lorsque l'appareil n'est pas utilisé, veuillez éteindre le produit et le conserver dans un endroit propre et sec.
 9. Exposez pas l'appareil au soleil ou au feu pour éviter d'endommager le conducteur thermique de l'isolant.
 10. Ne démontez pas ou ne modifiez pas le contrôleur et le circuit imprimé à volonté pour éviter des dommages artificiels.

AVERTISSEMENT

CONSULTEZ UN MÉDECIN AVANT UTILISATION :

- Patients souffrant d'ostéoporose, de fractures, d'entorses, de douleurs aiguës et d'autres maladies des jambes
- Patients souffrant de troubles nerveux des jambes ou de troubles sensoriels de la peau
- Femmes enceintes ou post-partum
- Patients atteints de maladies cardiaques

★ Le produit a une fonction de chauffage, les personnes qui ne sont pas sensibles à la température doivent y prêter attention.

NETTOYAGE ET ENTRETIEN

1. Avant le nettoyage, assurez-vous de débrancher complètement l'alimentation.
2. Lors du nettoyage, essuyez le produit avec un chiffon humide, mais veillez à ne pas mouiller l'interface Type-C. N'utilisez pas de nettoyeurs puissants ni de brosses dures.
3. Sécher à plat.
4. Ce produit ne prend pas en charge le lavage en machine ou à la main.
5. Ne pas nettoyer à sec.

