



Active Speaker Set with LED
Ensemble d'Enceintes LED

FP11177US-DK

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.

EN

Before You Start

- ⚠ Please read all instructions carefully.
- ⚠ Retain instructions for future reference.
- ⚠ Separate and count all parts and hardware.
- ⚠ Read through each step carefully and follow the proper order.
- ⚠ We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- ⚠ Always place the product on a flat, steady and stable surface.
- ⚠ Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.

FR

Avant de Commencer

- ⚠ Veuillez lire attentivement toutes les instructions.
- ⚠ Conservez les instructions pour vous y référer ultérieurement.
- ⚠ Vérifiez toutes les pièces et les accessoires.
- ⚠ Lisez attentivement chaque étape et suivez l'ordre correct.
- ⚠ Nous recommandons que, dans la mesure du possible, tous les produits soient assemblés à proximité de la zone où ils seront utilisés, afin d'éviter tout déplacement inutile du produit une fois assemblé.
- ⚠ Placez toujours le produit sur une surface plane et stable.
- ⚠ Conservez toutes les petites pièces de ce produit et les matériaux d'emballage hors de portée des bébés et des enfants, car ils pourraient présenter un risque d'étouffement.

EN

Congratulations to the purchase of this product. Please read this manual thoroughly prior to using the product in order to benefit fully from all features.

Read the manual prior to using the product. Follow the instructions. Take all precautions to avoid fire and/or electrical shock. Repairs must only be carried out by a qualified technician in order to avoid electrical shock. Keep the manual for future reference.

- Prior to using the product, please ask advice from a specialist. When the product is switched on for the first time, some smell may occur. This is normal and will disappear after a while.
- The product contains voltage carrying parts. Therefore do NOT open the housing.
- Do not place metal objects or pour liquids into the product. This may cause electrical shock and malfunction.
- Do not place the product near heat sources such as radiators, etc. Do not place the product on a vibrating surface. Do not cover the ventilation holes.
- The product is not suitable for continuous use.
- Be careful with the mains lead and do not damage it. A faulty or

damaged mains lead can cause electrical shock and malfunction.

- When unplugging the product from a mains outlet, always pull the plug, never the lead.
- Do not plug or unplug the product with wet hands.
- If the plug and/or the mains lead are damaged, they need to be replaced by a qualified technician.
- If the product is damaged to such an extent that internal parts are visible, do NOT plug the product into a mains outlet and DO NOT switch the unit on. Contact your dealer. Do NOT connect the product to a rheostat or dimmer.
- To avoid fire and shock hazard, do not expose the product to rain and moisture.
- All repairs should be carried out by a qualified technician only.
- Connect the product to an earthed mains outlet (120V AC/ 60Hz) protected by a 10-16A fuse.
- During a thunderstorm or if the product will not be used for a longer period of time, unplug it from the mains. The rule is: Unplug it from the mains when not in use.
- If the product has not been used for a longer period of time, condensation may occur. Let the unit reach room temperature before you switch it on. Never use the product in humid rooms or outdoors.
- To prevent accidents in companies, you must follow the applicable guide lines and follow the instructions.
- Do not repeatedly switch the product on and off. This shortens the life time.
- Keep the product out of the reach of children. Do not leave the product unattended.
- Do not use cleaning sprays to clean switches. The residues of these sprays cause deposits of dust and grease. In case of malfunction, always seek advice from a specialist.

- Do not force the controls.
- If this product is with speaker inside which can cause magnetic field. Keep the product at least 60 cm (24") away from computer or TV.
- If this product have a built-in lead-acid rechargeable battery. Please recharge the battery every 3 months if you are not going to use the product for a long period of time. Otherwise the battery may be permanently damaged.
- If the battery is damaged please replace with same specification battery. And dispose the damaged battery environment friendly.
- If the product has fallen, always have it checked by a qualified technician before you switch the product on again.
- Do not use chemicals to clean the unit. They damage the varnish. Only clean the product with a dry cloth.
- Keep away from electronic equipment that may cause interference.
- Only use original spares for repairs, otherwise serious damage and/or dangerous radiation may occur.
- Switch the product off prior to unplugging it from the mains and/or other equipment. Unplug all leads and cables prior to moving the product.
- Make sure that the mains lead cannot be damaged when people walk on it. Check the mains lead before every use for damages and faults!
- The mains voltage is 120V AC/ 60Hz. Check if power outlet match. If you travel, make sure that the mains voltage of the country is suitable for this product.
- Keep the original packing material so that you can transport the product in safe conditions.



This mark attracts the attention of the user to high voltages that are present inside the housing and that are of sufficient magnitude to cause a shock hazard.



This mark attracts the attention of the user to important instructions that are contained in the manual and that he should read and adhere to.

NOTE: To make sure that the product will function normally, it must be used in rooms with a temperature between 5°C/41°F and 35°C/95°F.



Electric products must not be put into household waste. Please bring them to a recycling centre. Ask your local authorities or your dealer about the way to proceed. The specifications are typical. The actual values can slightly change from one unit to the other. Specifications can be changed without prior notice.

Do not attempt to make any repairs yourself. Do not make any changes to the product. We are not responsible for accidents or damages caused by inappropriate use or disrespect of the warnings contained in this manual. We cannot be held responsible for personal injuries caused by a disrespect of the safety recommendations and warnings.

UNPACKING INSTRUCTION

CAUTION! Immediately upon receiving the product, carefully unpack the carton, check the contents to ensure that all parts are present, and have been received in good condition. Notify the shipper immediately and retain packing material for inspection if any parts appear damage from shipping or the package itself shows signs of mishandling. Save the package and all packing materials. In the event that the product must be returned to the factory, it is important that the product be returned in the original factory box and packing.

If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.


POWER SUPPLY

On the label on the backside of the product is indicated on this type of power supply must be connected. Check that the mains voltage corresponds to this, all other voltages than specified, the product will be irreparably damaged. The product must also be directly connected to the mains and may be used. No dimmer or adjustable power supply.



Always connect the device to a protected circuit (circuit breaker or fuse). Make sure the device has an appropriate electrical ground to avoid the risk of electrocution or fire.

CONTROLS AND CONNECTIONS

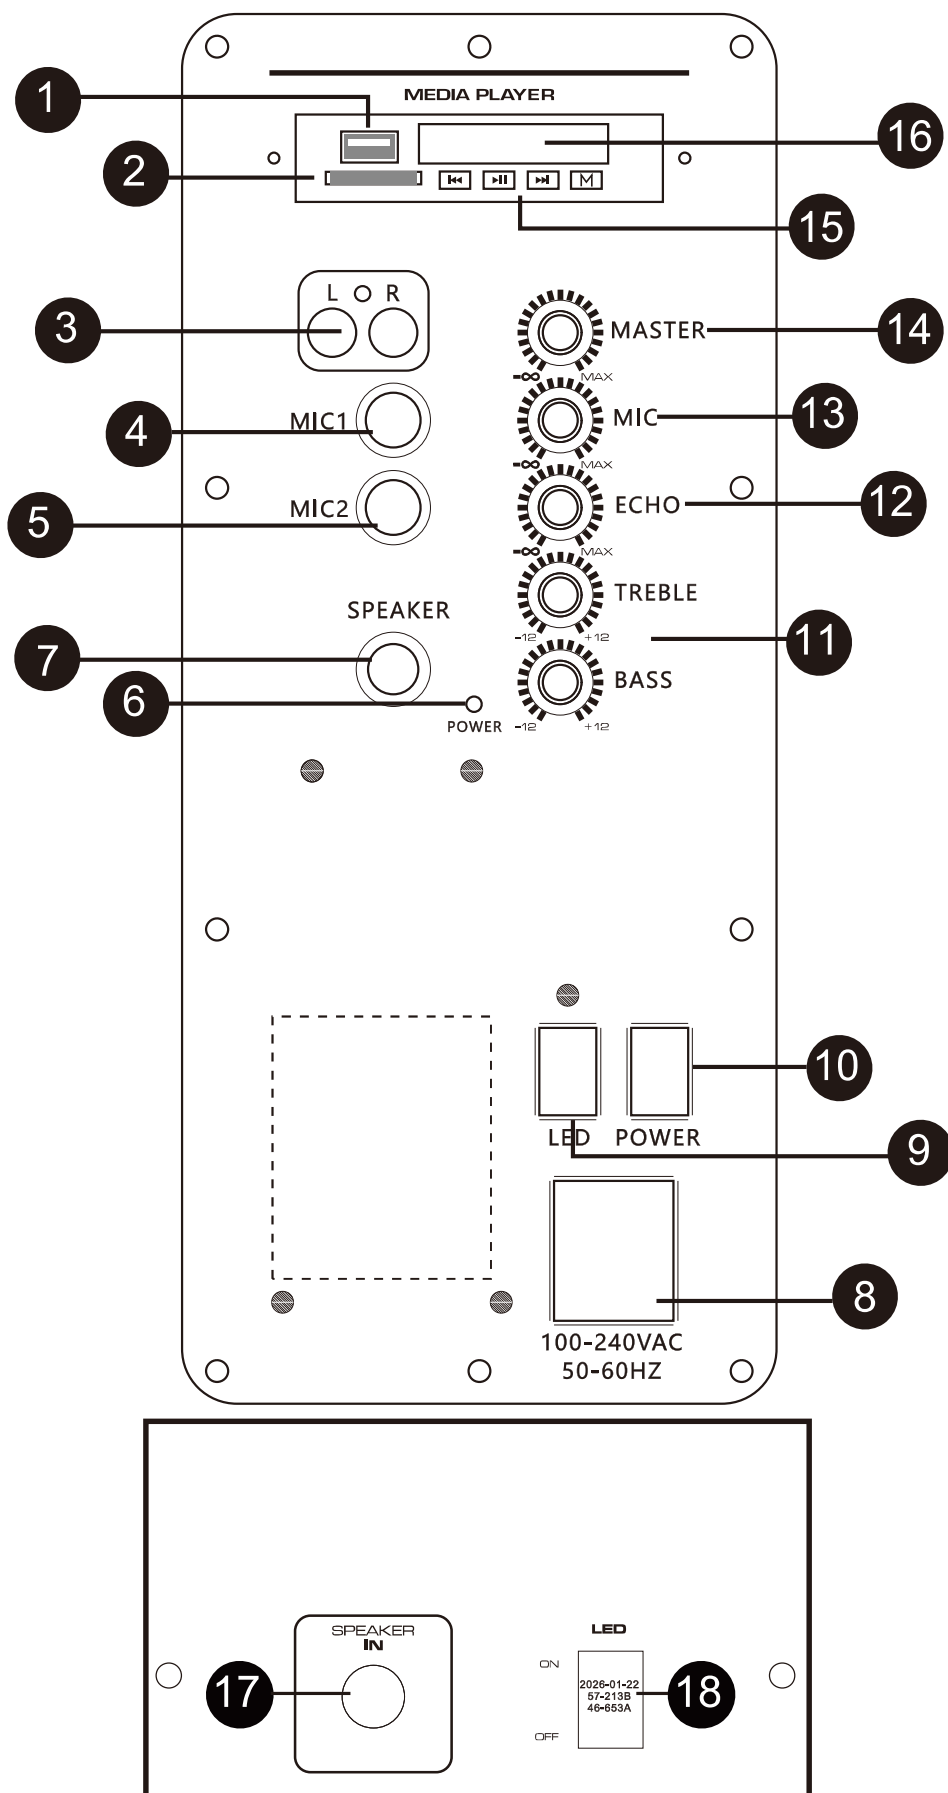

1.USB port

Connect your USB devices to this slot to play music with MP3 or WMA format.

2.SD port

Connect your SD/MMC card in this slot to play music with MP3 or WMA format.

3.AUX input left and right

RCA AUX input left and right .

4.Microphone input channel 1

6.3mm ¼" input jack for connecting a microphone.

5.Microphone input channel 2

6.3mm ¼" input jack for connecting a microphone.

6.Power light

Power on/off LED (green) indicator.

7.Speaker output (active speaker)

Put the plug of the supplied speaker cable into this connector and put the other plug of speaker cable into passive speaker.

8.Power input

Before connecting the power cord, check if the mains corresponds to the voltage indicated on the rating plate on the unit. Connect the power cord only to a mains socket outlet with a protective earthing connection.

9.LED switch (active speaker)

Turn on the LED (front side) of the active speaker on or off.

10.Power switch

Turn the power on/off.

11.Tone control

Using the bass and treble knobs, the overall system frequency response can be adjusted.

12.Microphone echo control

Adjust the intensity of the echo effect.

13.Microphone volume control

Adjust the sound level of microphone channel 1 and 2.

14.Master volume control

Adjust the overall output level of the sound system.

15.Direct selection buttons

Previous button: 1.Press to select previous track

2.Long press to increase the volume

Pause/Play button: Press to switch between pause and play

Next button: 1.Press to select next track

2.Long press to lower the volume

Mode button: Press to switch between BT/USB/SD modes

16.LCD display

Display to show you various information like file name, elapsed time, total time, file number, total file number, file and playback mode.

17.Speaker input (passive speaker)

Put the plug of the supplied speaker cable into this slot and put the other plug of the speaker cable into the active speaker.

18.LED switch (passive speaker)

Turn the LED ring (front side) of the passive speaker on or off.

CONNECT BT-DEVICE



1. Set the search function on of the BT device you want to play the music. See the operating instructions for that device.

2. Press the “MODE” button until “AUX” will show in display and activate BT-function.

3. Find on your BT-device “BLUETOOTH” and make the connection. If password is required, you can enter "0000".

REMOTE CONTROL

1. Stand-by button

Use this button to put the unit into or out of standby mode.

2. Mode button

Press to switch between BT/USB/SD modes.

3. Previous & next buttons

Press to change to previous or next track.

4. Master volume control

Adjust the overall output level of the sound system.

5. Number pad

Numeric keyboard for selecting presets.

6. Play/pause

Press this button to start or pause play.

7. Equalizer

Press to use EQ function.

8. Enter button


Press to confirm.

9. Mute

Press to mute the device.

10. Stop

Press to stop.

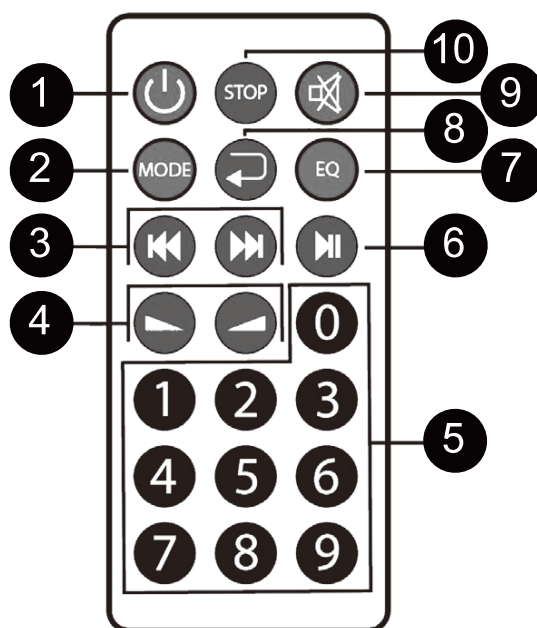

NOTE: Improper use of the batteries may cause battery leakage and corrosion. To operate the remote control correctly, follow the instructions below:

- Do not insert batteries into the remote control in the wrong direction.
- Do not charge, heat, open or short-circuit batteries. Do not throw batteries into a fire.
- Do not leave dead or exhausted batteries in the remote control.
- Do not use different types of batteries together or mix old and new batteries.
- If you do not use the remote control for a long period of time, remove the batteries to avoid possible damage from battery corrosion.
- If the remote control does not function correctly or the operating range becomes reduced, replace all batteries with new ones.
- If battery leakage occurs, wipe the battery liquid from the battery compartment, then insert new batteries.

The batteries can be used for one year in normal condition.

FR



Félicitations pour l'achat de ce produit. Veuillez lire attentivement ce manuel avant d'utiliser le produit afin de profiter pleinement de toutes ses fonctionnalités.

Lisez le manuel avant d'utiliser le produit. Suivez les instructions. Prenez toutes les précautions nécessaires pour éviter tout risque d'incendie et/ou d'électrocution. Les réparations doivent être effectuées uniquement par un technicien qualifié afin d'éviter tout risque d'électrocution. Conservez le manuel pour référence ultérieure.

- Avant d'utiliser le produit, veuillez demander conseil à un spécialiste. Lors de la première mise en marche du produit, une odeur peut se dégager. Ceci est normal et disparaîtra après un certain temps.
- Le produit contient des pièces sous tension. Par conséquent, **N'OUVREZ PAS** le boîtier.
- Ne placez pas d'objets métalliques et ne versez pas de liquides dans le produit. Cela pourrait provoquer un choc électrique et un dysfonctionnement.
- Ne placez pas le produit à proximité de sources de chaleur telles que des radiateurs, etc. Ne placez pas le produit sur une surface vibrante. Ne couvrez pas les orifices de ventilation.
- Le produit n'est pas adapté à une utilisation continue.
- Manipulez le cordon d'alimentation avec précaution et veillez à

ne pas l'endommager.

- Un cordon d'alimentation défectueux ou endommagé peut provoquer un choc électrique et un dysfonctionnement.
- Lorsque vous débranchez le produit d'une prise secteur, tirez toujours sur la fiche, jamais sur le cordon.
- Ne branchez pas et ne débranchez pas le produit avec les mains mouillées.
- Si la fiche et/ou le cordon d'alimentation sont endommagés, ils doivent être remplacés par un technicien qualifié.
- Si le produit est endommagé au point que les pièces internes sont visibles, NE le branchez PAS sur une prise secteur et NE l'allumez PAS. Contactez votre revendeur. NE connectez PAS le produit à un rhéostat ou à un variateur.
- Pour éviter tout risque d'incendie ou d'électrocution, n'exposez pas le produit à la pluie ou à l'humidité.
- Toutes les réparations doivent être effectuées uniquement par un technicien qualifié.
- Branchez le produit à une prise secteur mise à la terre (120 V CA/60 Hz) protégée par un fusible de 10-16 A.
- En cas d'orage ou si le produit n'est pas utilisé pendant une longue période, débranchez-le du secteur. La règle est la suivante : débranchez-le du secteur lorsqu'il n'est pas utilisé.
- Si le produit n'a pas été utilisé pendant une longue période, de la condensation peut se former. Laissez l'appareil atteindre la température ambiante avant de le mettre en marche. N'utilisez jamais le produit dans des pièces humides ou à l'extérieur.
- Afin d'éviter tout accident dans les entreprises, vous devez respecter les directives applicables et suivre les instructions.
- Ne pas allumer et éteindre le produit de manière répétée. Cela réduit sa durée de vie.
- Tenir le produit hors de portée des enfants. Ne pas laisser le produit sans surveillance.
- N'utilisez pas de sprays nettoyants pour nettoyer les interrupteurs. Les résidus de ces sprays provoquent des dépôts de poussière et de graisse. En cas de dysfonctionnement, demandez toujours conseil à un spécialiste.

- Ne forcez pas sur les commandes.
- Si ce produit est équipé d'un haut-parleur interne pouvant générer un champ magnétique, maintenez-le à au moins 60 cm (24") d'un ordinateur ou d'un téléviseur.
- Si ce produit est équipé d'une batterie rechargeable au plomb intégrée. Veuillez recharger la batterie tous les 3 mois si vous ne comptez pas utiliser le produit pendant une longue période. Sinon, la batterie pourrait être endommagée de manière irréversible.
- Si la batterie est endommagée, veuillez la remplacer par une batterie de mêmes spécifications. Éliminez la batterie endommagée dans le respect de l'environnement.
- Si le produit est tombé, faites-le toujours vérifier par un technicien qualifié avant de le remettre en marche.
- N'utilisez pas de produits chimiques pour nettoyer l'appareil. Ils endommagent le vernis. Nettoyez le produit uniquement avec un chiffon sec.
- Tenez-le à l'écart des équipements électroniques susceptibles de causer des interférences.
- Utilisez uniquement des pièces de rechange d'origine pour les réparations, sinon des dommages graves et/ou des rayonnements dangereux peuvent se produire.
- Éteignez le produit avant de le débrancher du secteur et/ou d'autres équipements. Débranchez tous les fils et câbles avant de déplacer le produit.
- Assurez-vous que le cordon d'alimentation ne peut pas être endommagé lorsque des personnes marchent dessus. Vérifiez le cordon d'alimentation avant chaque utilisation pour vous assurer qu'il n'est pas endommagé ou défectueux !
- La tension secteur est de 120 V CA/60 Hz. Vérifiez que la prise de courant est compatible. Si vous voyagez, assurez-vous que la tension secteur du pays est adaptée à ce produit.
- Conservez l'emballage d'origine afin de pouvoir transporter le produit dans de bonnes conditions de sécurité.



Ce symbole attire l'attention de l'utilisateur sur la présence de tensions élevées à l'intérieur du boîtier, suffisamment importantes pour présenter un risque d'électrocution.



Ce symbole attire l'attention de l'utilisateur sur les instructions importantes contenues dans le manuel, qu'il doit lire et respecter.

REMARQUE: Pour garantir le bon fonctionnement du produit, celui-ci doit être utilisé dans des pièces dont la température est comprise entre 5°C/41°F et 35°C/95°F.



Les produits électriques ne doivent pas être jetés avec les ordures ménagères. Veuillez les apporter à un centre de recyclage. Renseignez-vous auprès des autorités locales ou de votre revendeur sur la marche à suivre. Les spécifications sont types. Les valeurs réelles peuvent varier légèrement d'un appareil à l'autre. Les spécifications peuvent être modifiées sans préavis.

N'essayez pas d'effectuer vous-même des réparations.
N'apportez aucune modification au produit. Nous ne sommes pas responsables des accidents ou dommages causés par une utilisation inappropriée ou le non-respect des avertissements contenus dans ce manuel. Nous ne pouvons être tenus responsables des blessures corporelles causées par le non-respect des recommandations et avertissements de sécurité.

INSTRUCTIONS DE DÉBALLAGE

ATTENTION ! Dès réception du produit, déballez soigneusement le carton, vérifiez le contenu pour vous assurer que toutes les pièces sont présentes et qu'elles ont été reçues en bon état. Informez immédiatement le transporteur et conservez le matériel d'emballage pour inspection si des pièces semblent avoir été endommagées pendant le transport ou si le colis lui-même présente des signes de mauvaise manipulation. Conservez le colis et tous les matériaux d'emballage. Si le produit doit être renvoyé à l'usine, il est important qu'il soit renvoyé dans son emballage d'origine.

Si l'appareil a été exposé à des variations de température importantes (par exemple après un transport), ne l'allumez pas immédiatement. La condensation qui se forme pourrait endommager votre appareil.

Laissez l'appareil éteint jusqu'à ce qu'il ait atteint la température ambiante.


ALIMENTATION ÉLECTRIQUE

L'étiquette apposée à l'arrière du produit indique le type d'alimentation électrique à utiliser. Vérifiez que la tension secteur correspond à celle indiquée. Toute tension autre que celle spécifiée endommagera irrémédiablement le produit. Le produit doit également être branché directement sur le secteur pour pouvoir être utilisé. N'utilisez pas de variateur ou d'alimentation électrique réglable.



Connectez toujours l'appareil à un circuit protégé (disjoncteur ou fusible). Assurez-vous que l'appareil dispose d'une mise à la terre électrique appropriée afin d'éviter tout risque d'électrocution ou d'incendie.

CONTROLS AND CONNECTIONS

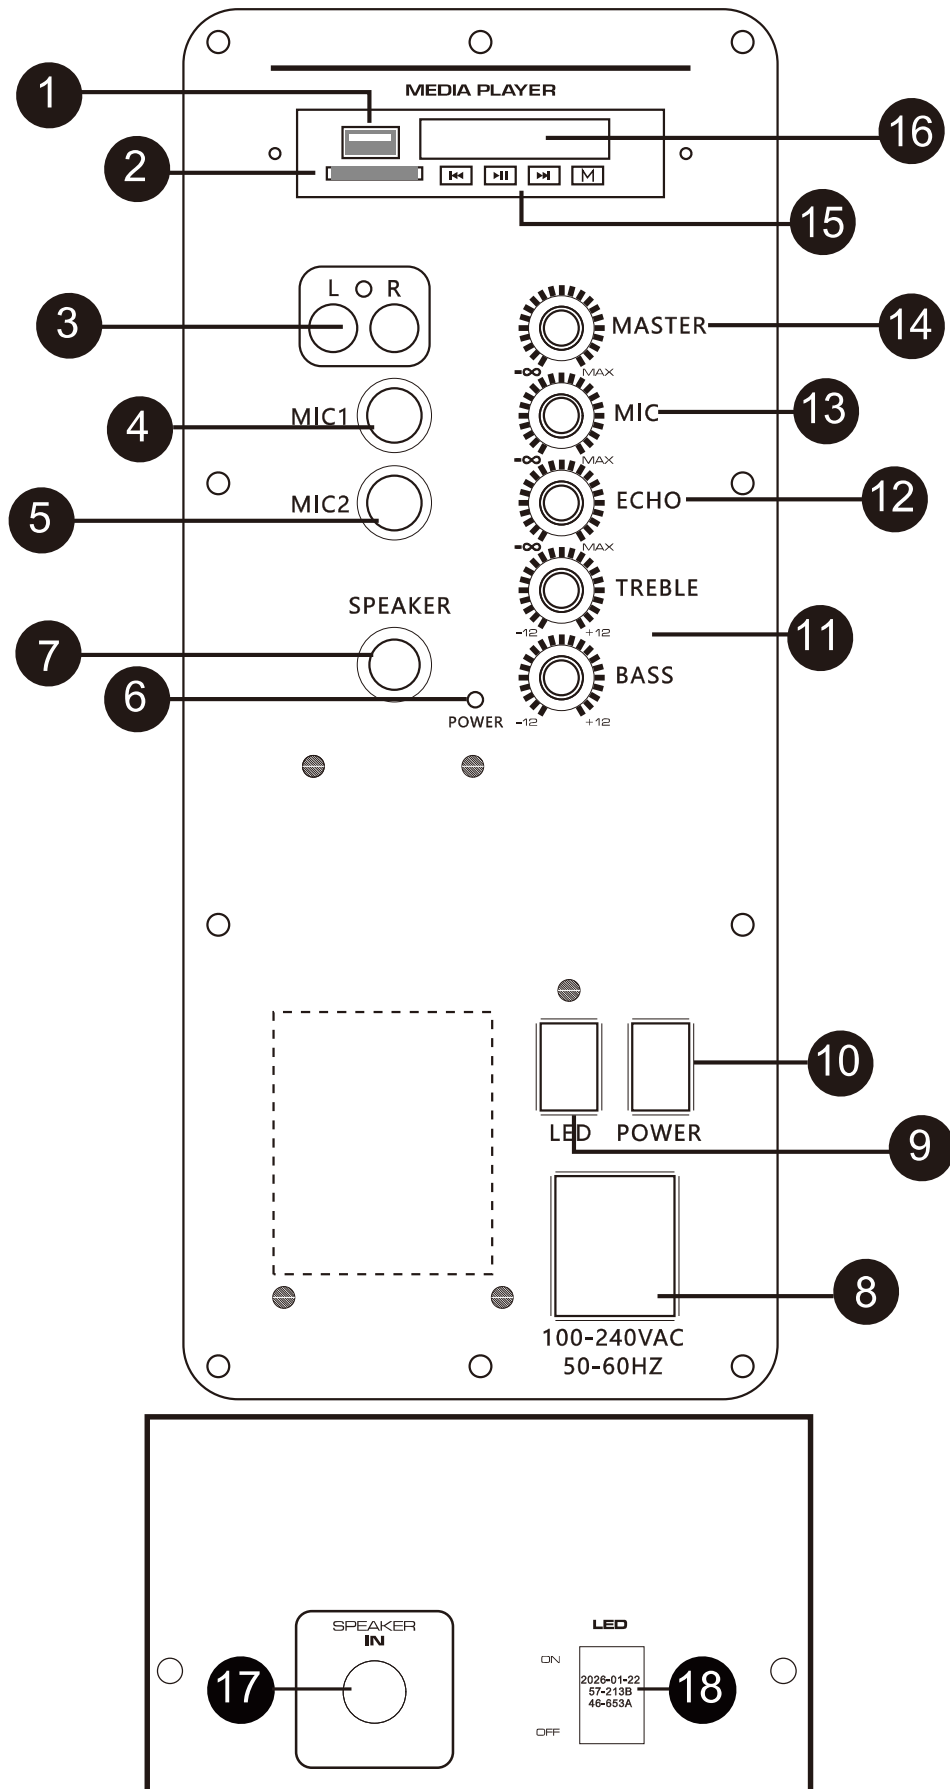

1. Port USB

Connectez vos périphériques USB à ce port pour lire de la musique au format MP3 ou WMA.

2. Port SD

Insérez votre carte SD/MMC dans ce port pour lire de la musique au format MP3 ou WMA.

3. Entrées AUX gauche et droite

Entrées RCA AUX gauche et droite.

4. Canal d'entrée microphone 1

Prise d'entrée jack 6,3 mm ¼" pour connecter un microphone.

5. Canal d'entrée microphone 2

Prise d'entrée jack 6,3 mm ¼" pour connecter un microphone.

6. Voyant d'alimentation

Voyant LED (vert) d'alimentation activé/désactivé.

7. Sortie haut-parleur (haut-parleur actif)

Branchez la fiche du câble haut-parleur fourni dans ce connecteur et branchez l'autre fiche du câble haut-parleur dans le haut-parleur passif.

8. Alimentation électrique

Avant de brancher le cordon d'alimentation, vérifiez que le secteur correspond à la tension indiquée sur la plaque signalétique de l'appareil. Branchez le cordon d'alimentation uniquement à une prise secteur équipée d'une connexion de mise à la terre de protection.

9. Interrupteur LED (haut-parleur actif)

Allumez ou éteignez la LED (à l'avant) du haut-parleur actif.

10. Interrupteur d'alimentation

Allumez ou éteignez l'appareil.

11. Contrôle de la tonalité

Les boutons de graves et d'aigus permettent de régler la réponse en fréquence globale du système.

12. Contrôle de l'écho du microphone

Permet de régler l'intensité de l'effet d'écho.

13. Contrôle du volume du microphone

Permet de régler le niveau sonore des canaux 1 et 2 du microphone.

14. Contrôle du volume principal

Permet de régler le niveau de sortie global du système audio.

15. Boutons de sélection direct

Bouton précédent : 1. Press pour sélectionner la piste précédente.

2. Long presse pour augmenter le volume.

Bouton de pause/lecture: Appuyez pour basculer entre pause et lecture.

Bouton suivant: 1. Press pour sélectionner la piste suivante.

2. Presse longue pour abaisser le volume.

Bouton de mode: Appuyez pour basculer entre les modes BT / USB / SD.

16. Écran LCD

Écran affichant diverses informations telles que le nom du fichier, le temps écoulé, la durée totale, le numéro du fichier, le nombre total de fichiers, le fichier et le mode de lecture.

17. Entrée haut-parleur (haut-parleur passif)

Insérez la fiche du câble haut-parleur fourni dans cette prise et insérez l'autre fiche du câble haut-parleur dans le haut-parleur actif.

18. Interrupteur LED (haut-parleur passif)

Allumez ou éteignez l'anneau LED (face avant) du haut-parleur passif.

CONNECTER LE PÉRIPHÉRIQUE BT



1. Activez la fonction de recherche sur l'appareil BT sur lequel vous souhaitez lire la musique.
Reportez-vous au mode d'emploi de cet appareil.

2. Appuyez sur le bouton « MODE » jusqu'à ce que « AUX » s'affiche à l'écran et activez la fonction BT.

3. Recherchez «BLUETOOTH» sur votre appareil BT et établissez la connexion.

Si un mot de passe est requis, vous pouvez saisir « 0000 ».

TÉLÉCOMMANDE

1. Bouton Veille

Utilisez ce bouton pour mettre l'appareil en mode veille ou le sortir de ce mode.

2. Bouton Mode

Appuyez sur ce bouton pour passer du mode BT au mode USB ou SD.

3. Boutons Précédent et Suivant

Appuyez sur ces boutons pour passer à la piste précédente ou suivante.

4. Contrôle du volume principal

Règle le niveau de sortie global du système audio.

5. Pavé numérique


Clavier numérique permettant de sélectionner les préréglages.

6. Lecture/Pause

Appuyez sur ce bouton pour démarrer ou mettre en pause la lecture.

7. Égaliseur

Appuyez pour utiliser la fonction EQ.

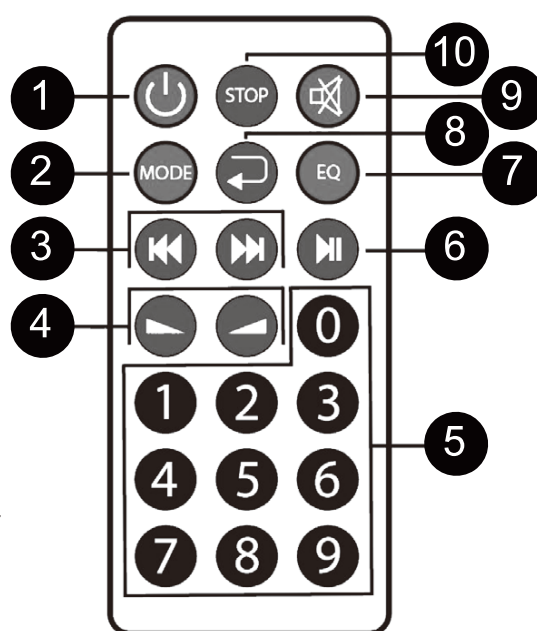

8. Bouton Entrée

Appuyez pour confirmer.

9. Muet

Appuyez pour couper le son de l'appareil.

10. Arrêt

Appuyez pour arrêter.

REMARQUE: Une utilisation incorrecte des piles peut entraîner des fuites et de la corrosion. Pour utiliser correctement la télécommande, suivez les instructions ci-dessous:

- N'insérez pas les piles dans la télécommande dans le mauvais sens.
- Ne chargez pas, ne chauffez pas, n'ouvrez pas et ne court-circuitiez pas les piles. Ne jetez pas les piles au feu.
- Ne laissez pas de piles usagées ou épuisées dans la télécommande.
- N'utilisez pas différents types de piles ensemble et ne mélangez pas des piles usagées et des piles neuves.
- Si vous n'utilisez pas la télécommande pendant une longue période, retirez les piles afin d'éviter tout dommage éventuel dû à leur corrosion.
- Si la télécommande ne fonctionne pas correctement ou si sa portée est réduite, remplacez toutes les piles par des neuves.
- En cas de fuite des piles, essuyez le liquide du compartiment à piles, puis insérez des piles neuves.

Les piles peuvent être utilisées pendant un an dans des conditions normales.



Return / Damage Claim Instructions

 DO NOT discard the box / original packaging.

In case a return is required, the item must be returned in original box. Without this your return will not be accepted.

 Take a photo of the box markings.

A photo of the markings (text) on the side of the box is required in case a part is needed for replacement. This helps our staff identify your product number to ensure you receive the correct parts.

 Take a photo of the damaged part (if applicable).

A photo of the damage is always required to file a claim and get your replacement or refund processed quickly. Please make sure you have the box even if it is damaged.

 Send us an email with the images requested.

Email us directly from marketplace where your item was purchased with the attached images and a description of your claim.



Instructions De Retour / Réclamation De Dommages

 NE PAS jeter la boîte/l'emballage d'origine.

Dans le cas où un retour est requis, l'article doit être retourné dans sa boîte d'origine. Sans cela, votre retour ne sera pas accepté.

 Prenez une photo des marquages de la boîte.

Une photo des marquages (texte) sur le côté de la boîte est requise au cas où une pièce serait nécessaire pour le remplacement. Cela aide notre personnel à identifier votre numéro de produit pour s'assurer que vous recevez les bonnes pièces.

 Prenez une photo des dommages (le cas échéant).

Une photo des dommages est toujours requise pour déposer une réclamation et obtenir rapidement votre remplacement ou votre remboursement. Assurez-vous d'avoir la boîte même si elle est endommagée.

 Envoyez-nous un e-mail avec les images demandées.

Envoyez-nous un e-mail directement depuis le marché où votre article a été acheté avec les images ci-jointes et une description de votre réclamation.



USA office: Fontana **AUS** office: Truganina **FRA** office: Saint Vigor d'Ymonville
GBR office: FDS Corporation Limited, Unit 4, Blackacre Road, Great Blakenham,
Ipswich, IP6 0FL, United Kingdom

If you're having difficulty, our friendly
customer team is always here to help.



USA:cs.us@costway.com
AUS:service.au@costway.com
GBR:cs.uk@costway.com
FRA:cs.fr@costway.com

FCC WARNING :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.