80mm

190mm

PSK5000



一、基本参数与功能

CPU架构：2x Cortex A75@2.0GHz+6x Cortex A55@1.8GHz
主频：2.0G
GPU：Mali-G52 MC2 GPU
EMCP：3+32/4+64/6+128 （Optional）
LCD：5 寸1920*1080 IPS全贴合
触摸屏：电容式10点触摸
WIFI：内置2.4G WiFi b/g/n
蓝牙：支持蓝牙5.0
TF卡槽：数量 x1，支持最高512G扩展
OTG端口：Type-C
电源：Type-C接口，输入功率5V 3A
耳机：支持3.5mm耳机输出
电池：内置4000mAh 电池
喇叭：2X1.5M腔体喇叭
咪头：内置硅麦

二、部分功能介绍


内置重力感应芯片
支持XBOX和SWITCH按键布局切换(推荐使用Xbox风格手柄布局)
支持串流
自动更新游戏列表
护眼模式
性能模式切换
按键功能提示具有触摸功能
游戏自动展示
应用管理
游戏搜索
收藏管理
历史记录
最近任务管理

三、按键功能介绍：

1、SWITCH 按键布局（默认）

电源按钮	长按5秒可开机；短按可关闭/亮起屏幕； 长按10秒重启
+	增大音量
-	减小音量
L	所有游戏
上	向上选择菜单
下	向下选择菜单
左	向左选择菜单
右	向右选择菜单
摇杆上	向上选择菜单
摇杆下	向下选择菜单
摇杆左	向左选择菜单
摇杆右	向右选择菜单
摇杆下压	确认/启动游戏
SE	主界面/应用界面切换
HOME键	长按出现最近任务
R 键	最近游玩
X	我的收藏
A	确认/启动游戏
Y	暂无功能
B	暂无功能
性能旋钮	性能模式选择：auto、powersave、balance、performance
返回	暂无功能
ST	搜索游戏


屏幕底部提示按键具有触摸功能

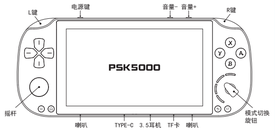

2、XBOX按键布局

电源按钮	长按5秒可开机；短按可关闭/亮起屏幕； 长按10秒重启
+	增大音量
-	减小音量
L	所有游戏
上	向上选择菜单
下	向下选择菜单
左	向左选择菜单
右	向右选择菜单
摇杆上	向上选择菜单
摇杆下	向下选择菜单
摇杆左	向左选择菜单
摇杆右	向右选择菜单
摇杆下压	确认/启动游戏
SE	主界面/应用界面切换
HOME键	长按出现最近任务
R 键	最近游玩
X	暂无功能
A	暂无功能
Y	我的收藏
B	确认/启动游戏
性能旋钮	性能模式选择：auto、powersave、balance、performance
返回	暂无功能
ST	搜索游戏

屏幕底部提示按键具有触摸功能

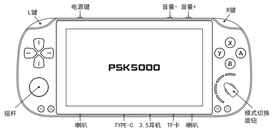

3、下拉菜单栏：屏幕顶部向下划拉出

WLAN	打开/关闭WLAN；长按进入WLAN设置
蓝牙	打开/关闭蓝牙；长按进入蓝牙设置
护眼模式	打开/关闭护眼模式；长按进入护眼模式
屏幕录制	打开/关闭护屏幕录制；长按弹出屏幕录制设置
自动旋转屏幕	打开/关闭自动旋转屏幕；长按自动旋转屏幕
飞行模式	打开/关闭飞行模式；长按进入飞行模式
按键布局	切换按键布局，Switch布局 / Xbox布局
编辑图标	调整图标布局
电源图标	点按弹出开机/重启
设置图标	进入系统设置信息
+	增大音量
-	减小音量
L	暂无作用
R	暂无作用
L3	暂无作用

4、所有游戏界面：快捷键L按钮

电源按钮	长按5秒可开机；短按可关闭/亮起屏幕；长按10秒重启
+	增大音量
-	减小音量
L	暂无作用
上	向上选择菜单
下	向下选择菜单
左	向左选择菜单
右	向右选择菜单
摇杆上	向上选择菜单
摇杆下	向下选择菜单
摇杆左	向左选择菜单
摇杆右	向右选择菜单
摇杆下压	确认/启动游戏
SE	检索游戏（扫描TF卡和系统内部存储指定目录下的所有游戏镜像文件并自动加载）
HOME键	长按出现最近任务
R	暂无左右
X	根据按键布局模式可自动切换
A	根据按键布局模式可自动切换
Y	根据按键布局模式可自动切换
B	根据按键布局模式可自动切换
性能旋钮	性能模式选择：auto、powersave、balance、performance
返回	返回主界面
ST	搜索游戏（启动游戏搜索界面）

屏幕底部提示按键具有触摸功能

四、首次使用或插入新的存储设备时，应用会提示扫描游戏：

1. 扫描提示
应用检测到新游戏文件时会显示扫描对话框
点击“确定”开始扫描
2. 扫描过程
应用会在指定的游戏目录中递归扫描游戏文件
扫描范围包括：
内部存储：`/sdcard/roms/psp/`
外部SD卡：`{外部存储路径}/roms/psp/`（需要外部存储管理权限）
扫描支持ISO和CSO格式的游戏文件
确保TF卡已正确插入并已挂载
扫描完成后会提示“游戏扫描完成”
3. 手动扫描
在游戏列表页按 SELECT 键可触发手动扫描
会弹出扫描确认对话框，点击“确定”开始扫描
扫描会更新游戏列表，检测新增或删除的游戏文件
4. 自动文件实时更新
应用支持实时更新游戏目录的文件变化，实时更新游戏列表：
自动检测新游
当您向游戏目录添加新的 ISO/CSO 文件时，应用会自动检测并添加到游戏列表
屏幕会显示“新增游戏文件”的提示信息
系统会智能等待文件复制完成后再添加，避免加载未完成的文件
自动检测删除
当游戏文件从目录中删除时，应用会自动从列表中移除
屏幕会显示“删除游戏文件”的提示信息
实时更新范围
内部存储：`/sdcard/roms/psp/`
外部SD卡：`{外部存储路径}/roms/psp/`
包括所有子目录（递归检测）
注意：如果同时添加大量游戏文件，系统会逐个检测并添加，请耐心等待

五、增加和删除游戏

支持的游戏格式
ISO格式：PSP游戏的标准镜像文件
CSO格式：压缩的PSP游戏镜像文件
游戏存放路径
1. 内部存储
`/sdcard/roms/psp/` - 内部存储的PSP游戏目录（默认路径）
2. 外部存储（TF卡/外置SD卡）
- `{外部存储路径}/roms/psp/` - 外置存储的PSP游戏目录
- 例如：`/storage/XXXX-XXXX/roms/psp/`（XXXX-XXXX为SD卡的实际挂载名称）

自动扫描以下路径中的游戏文件：
在上述路径中递归扫描所有ISO和CSO格式的游戏文件
将游戏文件存放在 `/sdcard/roms/psp/`（内部存储）或 `{外部存储路径}/roms/psp/`（外置SD卡）目录下
游戏文件可以直接放在上述目录中，也可以放在子目录中（支持递归扫描）
确保存储设备已正确挂载，应用才能扫描到游戏文件
如果外部存储设备被移除或重新插入，应用会自动重新扫描

六、PSP模拟器菜单

按右摇杆下压或者按A启动PSP模拟器菜单。
在菜单中，您可以保存/加载游戏状态、调整设置以及退出游戏。
如果游戏出现延迟、卡顿，您可以进入菜单设置，找到跳帧选项，并选择自动跳帧。

七、常见问题

Q1：如何添加游戏到收藏？
在游戏列表中，选择游戏后按X键或者Y键即可添加到收藏。
如果游戏已收藏，按 X键或者Y键可取消收藏。
Q2：为什么搜索不到游戏？
游戏文件是否已正确扫描到系统中
搜索关键字是否正确
游戏名称是否包含中文或特殊字符
Q3：游戏启动失败怎么办？
游戏文件是否完整
是否已安装PSP模拟器（PPSSPP）
文件路径是否正确
Q4：如何切换到应用列表？
在主界面按 *SELECT* 键可在游戏主页和应用列表页之间切换。

八、电池电量低

1. 当电池电量低时，控制台可能会出现屏幕闪烁、音频断断续续或无法启动的情况。在这种情况下，请及时给设备充电。
当电池电量低时，请务必保存进度并连接充电器。
2. 建议使用5V的充电电压，且电流额定值应在500毫安至2000毫安之间。
3. 请使用厂家提供的充电线。切勿使用大功率充电线，以免电压过低，导致无法充电。

九、注意事项

使用前请仔细阅读本手册。技术规格如有变更，恕不另行通知。
1. 本节旨在帮助用户正确操作控制台。请仔细阅读并遵循这些说明。
★请下载设备支持格式的游戏，并将其放置在TF卡上的相应文件夹中。
★该设备在发货时未附带任何视频、音乐、游戏或图像文件；所有演示文件仅供演示之用。
★所有演示文件使用完毕后必须立即删除。公司对此不承担任何责任。
★请勿使控制台受到剧烈冲击。
★请勿将控制台暴露于苯或稀释剂等化学物质中。
★远离强磁场和电场。
★避免阳光直射或靠近热源。
★请勿自行拆解、维修或改装主机。
★ 骑自行车、开车或骑摩托车时，请勿使用播放器或耳机，以避免发生事故。
★ 请勿在高音量下使用，以免听力受损。
★请勿让控制台接触水。
2. 要关闭系统，请在主界面上按下“开始”按钮，选择“退出”，然后选择“关闭系统”。请勿直接按下电源按钮强制关机，因为这可能会损坏系统并导致设备无法启动。

由于生产批次之间的差异，上述功能可能有所不同。请以实际设备为准。

PSK5000



1. Basic Parameter & Features

CPU : 2x Cortex A75 @ 2.0GHz + 6x Cortex A55 @ 1.8GHz
Frequency: 2.0GHz
GPU: Mali-G52 MC2
RAM/ROM : 3+32 / 4+64 / 6+128 (Optional)
LCD: 5-inch 1920*1080 IPS Fully Laminated
Touch Panel: 10-point Capacitive Touch
Wi-Fi: Built-in 2.4G Wi-Fi b/g/n
Bluetooth: BT5.0
Micro SD Slot: 1 slot(up to 512GB expansion)
OTG Port: USB Type-C
Power: USB Type-C Interface, Input 5V 3A
Audio: 3.5mm Headphone Jack
Battery: Built-in 4000mAh Battery
Speakers: 2 x 1.5W Chamber Speakers
Microphone: Built-in Silicon Mic

2. Feature Introduction


- Built-in Gravity Sensor (G-Sensor)
- Toggle between Xbox and Switch Button Layouts (Xbox layout recommended)
- Supports Game Streaming
- Auto-update game list
- Eye Care Mode
- Performance Mode Toggle
- On-screen Key Hints are Touchable
- Automatic Game Demo
- App Management
- Game Search
- Favorites Management
- History Record
- Recent Tasks Management

3.Buttons Introduction:

Switch Layout (Default)

Power button	Long press 5s Power On, Short Press Sleep/Wake,Long press 10s Power off
+	Volume +
-	Volume -
L	All games
Up	Select menu up
Down	Select menu down
Left	Select menu left
Right	Select menu right
Joystick Up	Select menu up
Joystick Down	Select menu down
Joystick Left	Select menu left
Joystick Right	Select menu right
Joystick Press	Confirm/Launch Game
SE	Main Interface/Application Interface Switch
HOME button	Long press to show recent tasks
R button	Recently Played
X	My Favorites
A	Confirm/Launch Game
Y	No features available
B	No features available
Performance dial	Performance mode selection: auto, powersave, balance, performance
Back	No features available
ST	Search Game


Bottom Key Hints are Touchable

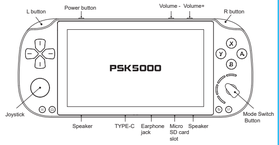

XBOX Button Layout

Power button	Long press 5s Power On, Short Press Sleep/Wake,Long press 10s Power off
+	Volume +
-	Volume -
L	All games
Up	Select menu up
Down	Select menu down
Left	Select menu left
Right	Select menu right
Joystick Up	Select menu up
Joystick Down	Select menu down
Joystick Left	Select menu left
Joystick Right	Select menu right
Joystick Press	Confirm/Launch Game
SE	Main Interface/Application Interface Switch
HOME button	Long press to show recent tasks
R button	Recently Played
X	My Favorites
A	Confirm/Launch Game
Y	No features available
B	No features available
Performance dial	Performance mode selection: auto, powersave, balance, performance
Back	No features available
ST	Search Game

Bottom Key Hints are Touchable

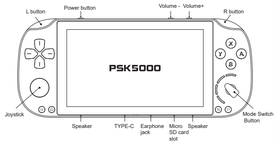

Quick Menu: Swipe down from top

WLAN	Turn WLAN on/off; long press to enter WLAN settings
Bluetooth	Turn Bluetooth on/off; long press to enter Bluetooth settings
Eye care Mode	Turn Eye Comfort Mode on/off; long press to enter Eye Comfort Mode
Screen recording	Turn Screen Recording on/off; long press to bring up screen recording settings
Auto-rotate screen	Turn Auto Screen Rotation on/off; long press to auto screen rotation
Airplane mode	Turn Airplane Mode on/off; long press to enter Airplane Mode
Button layout	Switch button layout, Switch layout / Xbox layout
Edit Icon	Adjust icon layout
Power Icon	Tap to bring up power on/restart
Setting Icon	Enter system settings
+	Increase volume
-	Decrease volume
L	No effect currently
R	No effect currently
L3	No effect currently

All Games Interface: Shortcut L Button

Power button	Long press 5s Power On, Short Press Sleep/Wake,Long press 10s Power off
+	Volume +
-	Volumem -
L	No effect currently
Up	Select Menu Up
Down	Select Menu Down
Left	Select Menu Left
Right	Select Menu Right
Joystick Up	Select Menu Up
Joystick Down	Select Menu Down
Joystick Left	Select Menu Left
Joystick Right	Select Menu Left
Joystick Press	Confirm/Launch Game
SE	Search Games (Scans all game image files in the specified directory of the TF card and internal system storage and loads them automatically)
HOME button	Long press to show recent tasks
R	No left/right options currently.
X	Automatically switches between button layout modes.
A	Automatically switches between button layout modes.
Y	Automatically switches between button layout modes.
B	Automatically switches between button layout modes.
Performance dial	Performance Mode Selection: auto, powersave, balance, performance
Back	Return to Main Menu
ST	Search Games (Launches the game search interface)

Bottom Key Hints are Touchable

4.The app will prompt you to scan for games when you first use it or insert a new storage device:

1. Scan Prompt
App shows dialog when new games are detected
Click "Confirm" to start scanning
2.Scanning Process
App recursively scans specified directories
Scan Scope:Internal: /sdcard/roms/psp/,Ext. SD: {SD Path}/roms/psp/ (Requires permission)
Supports ISO and CSO formats
Ensure MicroSD card is mounted
"Game Scan Complete" prompt upon finish
3.Manual Scan
Press SELECT in game list to scan manually
Confirmation dialog appears, click "Confirm"
Updates list, detects added/deleted games
4.Real-time File Updates
Supports real-time directory monitoring and list updates:
Auto-detect New Games
App adds new ISO/CSO files to list automatically
Screen shows "New Game Files" prompt
Waits for copy completion to avoid errors
Auto-detect Deletions
Removes game from list if file is deleted
Screen shows "Deleted Game Files" prompt
Real-time update scope:Internal storage: `/sdcard/roms/psp/`, External SD card: `{external storage path}/roms/psp/`
Includes all subdirectories (recursive detection)
Note: If a large number of game files are added simultaneously, the system will detect and add them one by one. Please be patient.

5.Adding and Deleting Games

Supported Game format
ISO：Standard image file for PSP games
CSO：Compressed PSP game image file Game storage paths
1. Internal
/sdcard/roms/psp/ - The PSP game directory in internal storage (default path)
2. External(TF card/external SD card)
- `{external storage path}/roms/psp/` - PSP game directory on external storage
- For example: `/storage/XXXX-XXXX/roms/psp/`
(XXXX-XXXX is the actual mounted name of the SD card)
Automatically scan for game files in the following paths:
Recursively scan all ISO and CSO format game files in the above paths

6.PSP Emulator Menu

Press down on the right analog stick or press A or B to launch the PSP emulator menu.
In the menu, you can save/load your game state, adjust settings, and exit the game.
If the game experiences lag or stuttering, you can go to the menu settings, find the frame skipping option, and select automatic frame skipping.

7.FAQ

Q1: How to add to Favorites?
In the game list, select a game and press the X or Y key to add it to your favorites. If the game is already in your favorites, press the X or Y key to remove it from your favorites.
Q2: Why can't I find games?
Has the file been scanned correctly?
Is the search keyword correct?
Does filename contain special characters?
Q3: Game fails to launch?
Is file complete?
Is Emulator installed?
Is the file path correct ?
Q4: How to switch to App List?
Press the **SELECT** key on the main screen to switch between the game homepage and the application list page.

8. Low Battery Warning

1.Low battery may cause flickering, audio stutters, or boot failure
2.Use 5V charger, rated 500mA - 2000mA
3.Use provided cable. Do NOT use high-power cables

9. Precautions

Please read this manual carefully before use. Technical specifications are subject to change without notice.
1.This section aims to help users operate the console correctly. Please read and follow these instructions carefully.
★Please download games in a format supported by your device and place them in the corresponding folder on your TF card.
★The device was shipped without any video, music, game, or image files; all demo files are for demonstration purposes only.
★All presentation files must be deleted immediately after use. The company assumes no responsibility for this.
★Do not subject the console to severe impacts.
★Do not expose the console to chemicals such as benzene or thinner.
★Keep away from strong magnetic and electric fields.
★Avoid direct sunlight or proximity to heat sources.
★Do not disassemble, repair, or modify the main unit yourself.
★ Do not use music players or headphones while cycling, driving, or riding a motorcycle to avoid accidents.
★ Do not use at high volumes to avoid hearing damage
★Do not allow the console to come into contact with water.
2. To shut down the system, press the "Start" button on the main screen, select "Exit," and then select "Shut Down." Do not force a shutdown by pressing the power button directly, as this may damage the system and prevent the device from starting.

FCC Caution.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

* RF warning for Portable device:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Due to differences between production batches, the above functions may vary. Please refer to the actual equipment.