

102*70mm
70g 双胶纸

408 mm

280 mm


OPENFEEL User Manual wireless headphones

Safety Precautions

- Follow Regulations: Turn off the device in areas where wireless devices are prohibited.
- Maintain Distance: Keep at least 15cm away from implanted medical devices (e.g. pacemakers).
- Volume Control: Set an appropriate volume to avoid hearing damage.
- Temperature Range: Use the device and accessories between 5°C and 35°C. Extreme temperatures may cause malfunction.
- Storage: Store in a well-ventilated, cool place away from direct sunlight (e.g., not on car dashboards or windowsills).
- Keep Away from Children: This device is not a toy. Use under adult supervision and store out of children's reach to avoid damage or choking hazards.
- Avoid Distractions: Do not use while driving, operating machinery, or performing tasks requiring full attention.
- Avoid Thunderstorms: Do not use during thunderstorms to prevent malfunction or electric shock risks.
- Avoid Heat and Impact: Keep away from heat sources or open flames; avoid strong impacts or vibrations.
- Cleaning: Use a dry, soft cloth for cleaning. Do not use harsh chemicals or heating tools (e.g., hair dryers, microwaves).
- No Unauthorized Repairs: Do not disassemble or modify the device.
- Use Approved Chargers: Only use approved or compatible chargers to prevent faults, fire, or explosion risks.

Bluetooth ペアリング

- 充電ケースを初めて開け、イヤホンを取り出すと自動的にペアリングモードに入ります。
- イヤホンとペアリングするデバイスの Bluetooth スイッチをオンにし、[ROSE OpenFeel] というイヤホン名を検索してペアリング接続してください。

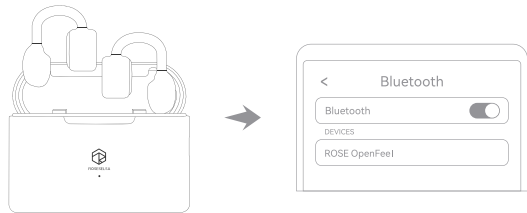


安全情報

- 禁止されている場所でのワイヤレス機器の使用は、規定に従いデバイスを閉じてください。
- このデバイスを使用する際は、植込み型医療機器（ペースメーカーなど）とは少なくとも15センチの距離を保ってください。
- 適切な音量を設定し、聴力を保護するようにしてください。
- デバイスの使用温度は5℃から35℃の範囲内で使用してください。過度に高いまたは低い環境温度はデバイスの故障を引き起こす可能性があります。
- デバイスの充電ケーブルは、直射日光を避けてください。車のダッシュボードの上や周辺など。
- このデバイスはおもちゃではありません。子供は大人の監督のもとで使用する必要があります。デバイスの充電ケーブルは子供の手の届かない場所に保管し、意図しない損傷や誤飲による窒息などの危険を回避してください。
- 車の運転、機械操作、または注意を集中する必要がある他の作業中にデバイスを使用しないでください。
- 雷のある気候下でのデバイスの使用は避け、デバイスの故障や感電の危険を回避してください。


Pairing

- Open the charging case for the first time and remove the earbuds to automatically enter pairing mode.
- Turn on the Bluetooth on the device you want to pair with, and search for the earbuds named [ROSE OpenFeel] to connect.

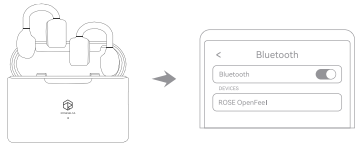

Resetting

- Place the earbuds in the charging case with the case lid open. Press and hold the reset button on the charging case for 5 seconds until the indicator light on the case pulses white three times, indicating a successful reset.
- After the reset, close and reopen the charging case to automatically enter pairing mode.

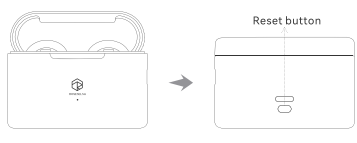

Warranty (In case of discrepancies, national laws and regulations take precedence)

- We offer a 1-year (i.e. 365 days) warranty coverage for our products (excluding carry cases, ear tips and other accessories). Warranty period starts from the date of purchase.
- Our Warranty covers any factory defects that might affect the proper functionality. It does not cover any man-made damage due to human error, negligence and etcetera.
- Once we have confirmed that your item is defective due to manufacturing issues, we will arrange for a replacement, partial refund or a full refund upon return (if applicable).
- Before proceeding in our warranty policy, please provide the order number and state the issue clearly.

- *The warranty does not cover the following situations:**
- Expired Warranty: The warranty period has ended or the product's validity cannot be verified.
 - No Proof of Purchase: Absence of a valid purchase receipt (order screenshot or invoice).
 - Improper Use: Damage caused by not following the user manual's instructions.
 - Accidental Damage: Damage due to product drops or water immersion.
 - Unauthorized Repairs: Damage resulting from unauthorized disassembly or modifications.
 - Damage caused by unavoidable events (e.g. fire, earthquake, lightning)
 - Scratches and other appearance damages due to casual use.

Charging

- Place the earbuds in the charging case and close the lid to charge.
- Use a USB-C cable to charge the charging case.



- * Battery status:** ○ White light>70%
● Green light 30% - 70%
● Orange light<30%
● Orange light pulsing < 30%
- * Charging:** White light pulsing;
Charging completed: White light off

* FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Touch Control (Customizable in the app) ● Single Tap ● Long Press / N/A

Action	Left Earbud (L)	Right Earbud (R)
Previous Track	***	/
Next Track	/	***
Play / Pause	**	**
Answer Call	*	*
End Call	*	*
Reject Call	**	**
Volume Down	**	/
Volume Up	/	*
Voice Assistant	/	**
Game Mode	*****	*****

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Statement

We provide customer service only for products purchased directly from Rose Technics or Rose Technics authorized distributors. If you have purchased from a different seller, please contact them for any exchange or refund request.

Thank you for purchasing authentic Rose Technics products. For any assistance, please contact us freely.

充電

- イヤホンを充電ケースに入れ、充電ケース
2. USB-C充電ケーブルを使用して



- * 電量指示:** ○ 白灯 >70% ● 緑灯 30% - 70% ● オレンジ色の点灯 <30% ● オレンジ色の点滅 <10%。
*充電中は白灯が点滅。充電完了後は白灯の点滅が消失します。

タッチ機能 (カスタムタッチはアプリで設定可能) ● タップ ● 長押し / 未操作

機能	左イヤホン(L)	右イヤホン(R)
前の曲	***	/
次の曲	/	***
再生/一時停止	**	**
通話を受ける	*	*
通話を終了する	*	*
音量を下げる	**	**
音量を上げる	/	*
音声アシスタント	/	**
ゲームモード	*****	*****

アフターサービス

以下、国家の法律に違反する場合、国家の法律を優先します。

- 当社の製品には、購入日から1年（すなわち365日）の保証期間が適用されます（ケース、イヤーチップ、その他のアクセサリーは除く）。保証期間は購入日から開始します。
- 当社の保証は、適切な機能に影響を及ぼす可能性がある工場の欠陥をカバーします。人為的なエラーや過失などによる人為的な損傷はカバーされません。
- 製造上の問題による不良を確認した場合、交換、一部返金、または全額返金の手配を行います（該当する場合）。

*以下のいずれかに該当する場合、保証の対象外となります

- 保証期間を超過した場合、または製品が保証期間内であることを証明できない場合。
- 有効な購入証明書（注文のスクリーンショットまたは請求書）がない場合。
- 説明書の指示に従って使用、保守、お手入れをしていない場合に発生する損傷。
- 製品の落下や水没による損傷。
- 自己解体や改造などの人為的な原因による損傷。
- 火災、地震、雷撃などの不可抗力による損傷。
- 自然劣化による損傷などによる損傷。



https://global.roseselsa.com/
global-support@roseselsa.com
https://discord.com/invite/cvHCm2S32U



OPENFEEL 使用说明书

安全信息

在使用和操作设备前，请阅读并遵守下面的注意事项，避免出现危险或非法的情况。

提示

- 在禁止使用无线设备的场所，请遵守该场所的规定，并关闭设备。
- 在使用本设备时，请与植入式医疗设备（如起搏器等）保持至少15厘米的距离。
- 当您使用设备收听音乐或通话时，建议使用耳机或调低所需的最小音量，以免损伤听力；长时间接听高音量可能会分散注意力，从而导致事故。
- 请在温度5℃~35℃范围内使用及存放设备及配件。当环境温度过高或过低时，可能会引起设备故障。
- 请将设备及配件放置在通风、阴凉、无阳光直射的地方。
- 请将设备及配件放置在儿童接触不到的地方，儿童可能在无意中损坏本设备及其配件，或吞下小零件导致窒息或其他危险。
- 本设备并非玩具，儿童应在成人监护下使用设备。


蓝牙配对

- 首次打开充电盒，取出耳机，自动进入配对状态。
- 耳机恢复出厂设置后，首次开机耳机将进入配对状态。
- 打开与耳机配对设备的蓝牙开关，搜索耳机名称选择并配对连接。



恢复出厂设置

- 耳机放入充电盒中，保持充电盒开盖状态，长按充电盒复位键5s，充电仓白光闪烁闪烁3次，即恢复出厂出厂设置。
- 恢复出厂设置完成后，关闭充电盒盖，重新打开进入配对模式。

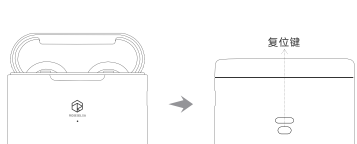

售后服务说明

以下若有与国家政策不符或遗漏之处，以国家政策为准。


- 自购买之日起的7日内，因产品质量问题可退货；30日之内，因质量问题可换货；12个月内，出现产品本身原因造成的性能故障，消费者可享受维修服务。
- 在三包有效期内，用户必须出具购买凭证和有效三包凭证才能享受三包、包换、保修的权利。
- 本公司对产品的退换货（即包退包换等）不承诺三包责任。
- 所有在保修期内的被维修或替换下来的零件、部件和附件等归本公司所有。

在用户使用过程中，符合下列情况之一者不在保修范围内：

- 超过三包有效期。
- 无三包凭证及购买发票，且无法证明该产品在三包有效期内。
- 未按产品说明书要求使用、维护、保养而造成损坏。
- 在使用过程中因产品跌落或水浸而造成损坏。
- 由于擅自拆卸、改装、等人行为原因造成的故障。
- 由于不可抗力因素（如火灾、地震、雷击等）而造成故障或损坏。
- 未按说明书或操作手册中的要求使用而造成损坏的。
- 产品自然磨损（如外壳）。

蓝牙配对

- 首次打开充电盒，取出耳机即可自动进入配对状态。
- 打開與耳機配對設備的藍牙開關，搜索耳機名稱[ROSE OpenFeel]進行配對連接。

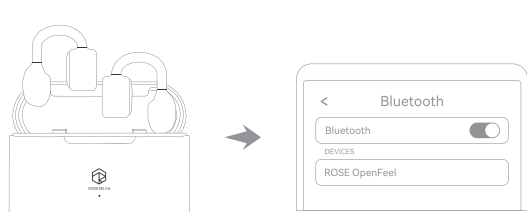

产品中有害物质的名称及含量

部件名称	有害物质或元素					
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬(Cr(VI))	多溴联苯(PBB)	多溴二苯醚(PBDE)
金属零件	X	O	O	O	O	O
电池	X	O	O	O	O	O
塑料零件	O	O	O	O	O	O
漆层	X	O	O	O	O	O
电路板组件	X	O	O	O	O	O

本表依据RoHS/REACH法规编制。

4. 表示有害物质在零部件材料中的含量符合RoHS/REACH法规规定的限量要求以下。


5. 本表所列物质至少在该部件的某一均质材料中的含量符合RoHS/REACH法规规定的限量要求，且目前业界没有成熟的替代方案。符合欧盟RoHS指令限制使用标准。

本产品的“电子电气产品有害物质限制使用标准”为10年，其标识如左图所示。

本产品及其组件上的使用期限标识可能有所不同，组件上的使用期限标识优先于产品上任何与之相冲突的或不同的环保使用期限标识。

恢復出廠設置

- 將耳機放入充電盒中，保持充電盒開蓋狀態，長按充電盒復位5s，見充電盒指示燈白光閃爍3次，即成功恢復出廠設置。
- 恢復出廠設置後，關閉充電盒蓋並重新打開，自動進入配對模式。

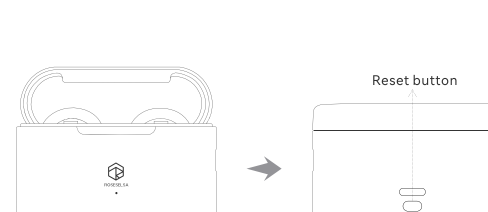

警告

- 请遵守所在国家或区域的相关规定，请勿在驾车、操作机器或从事需要注意外界声音的工作时使用设备。
- 请勿在恶劣天气下使用设备，雷暴可能导致设备不能正常工作或电击危险。
- 请勿将设备放置在阳光直射的地方，如汽车仪表盘或窗台处。
- 请勿将设备靠近热源或者暴露的火焰。
- 请勿使用加热工具（如电吹风、微波炉等）对设备进行干燥处理。
- 请勿擅自拆卸或改装设备及配件，否则设备及配件将不在本公司保修范围之内；设备发生故障时，请联系购买时的销售商中心；电池只能由防水时砂桶后中心更换。
- 请勿使设备及配件受到强烈的冲击或震动。
- 使用未经认证或不兼容的电源、充电器，可能引发故障、火灾、爆炸或其他危险。
- 清洁、维护设备前请停止使用设备；请勿使用腐蚀性化学品、清洗剂或强洗涤剂清洁设备；请使用清洁、干燥的软布擦拭设备。

充電

- 將耳機放入充電盒後，合上充電盒蓋給耳機進行充電。
- 使用USB-C充電線為充電盒充電。



- *電量指示:** ○ 白燈 >70% ● 綠燈 30% - 70% ● 橙燈 <30% ● 橙燈呈呼吸 <10%。
*充電中白燈閃爍；充電完成白燈常亮。

觸控功能 (自定義的觸控可以在APP中設置) ● 單擊 ● 長按 / 無操作	左耳機 (L)	右耳機 (R)
-		
功		
上一曲	***	/
下一曲	/	***
播放/暫停	**	**
接	*	*
掛斷	*	*
拒接	**	**
音量減	*	/
音量加	/	*
語音助手	/	**
遊戲模式	*****	*****

安全信息

- 在禁止使用無線設備的場所，請遵守規定關閉設備。
- 在使用本設備時，請與植入式醫療設備（如起搏器等）保持至少15釐米的距離。
- 請設置合適的音量大小，避免損傷聽力。
- 請在5℃~35℃範圍內使用該設備及配件，過高或過低的環境溫度可能引起設備故障。
- 將設備及配件保存在乾燥、陰涼的地方，避免陽光直射，如汽車儀表盤上方、窗臺等。
- 本設備並非玩具，兒童應在成人監督下使用；將設備及配件保存在兒童接觸不到的地方，避免意外損壞、誤吞或導致窒息等危險。
- 請勿在駕車、操作機器或從事其他需要集中注意力的工作時使用。
- 請勿在雷暴天氣下使用該設備，避免設備故障或電擊危險。
- 勿將設備靠近熱源或暴露的火焰，避免設備受到強烈的衝擊或震動。
- 勿使用腐蝕性化學品或強鹼性清潔液清潔設備，使用乾燥的軟布擦拭即可；勿使用加熱工具對設備進行乾濕處理，如電吹風、微波爐等。
- 勿擅自拆卸或改裝設備。
- 使用未經認可或不兼容的充電適配器，可能導致故障、起火、爆炸等危險。

售後服務

以下若有與國家法律法規不符之處，以國家法律法規為準。

- 我們為我們的產品提供為期1年（即365天）的保修服務（不包括攜帶盒、耳塞和其他配件）。保修期從購買日期開始計算。
- 我們的保修範圍包括可能影響正常功能的任何工廠缺陷，不包括任何由於人為損壞、疏忽等造成的人為損壞。
- 一旦我們確認您的物品因製造問題而有缺陷，我們將退回物品後安排更換、部分退款或全額退款（如果適用）。

*符合下列情況之一者不在保修範圍內：

- 超過warranty policy有效期，或無法證明產品在有效期內。
- 無有效的購買憑證（訂單截圖或發票）。
- 未按說明書的要求使用、維護、保養而造成損壞。
- 在使用過程中因產品跌落或水浸而造成損壞。
- 因擅自拆卸、改裝等人為原因而造成損壞。
- 由於不可抗力因素（火災、地震、雷擊等）而造成損壞。
- 產品自然磨損造成的磨損等。



下載 ROSELINK
https://global.roseselsa.com/
global-support@roseselsa.com
https://discord.com/invite/cvHCm2S32U

