版本	变更内容	变更者	日 期	打 样	
				是 ☐	否 ☐

Manual

Works with Apple Find My

Works with Android Find Hub

PASSWORD RESET INSTRUCTIONS

The default combination is 0-0-0. To set your own combination,please follow these steps:

1. Confirm the dials are at the 0-0-0 position.
2. Press down the reset button with a tool, such as ballpoint pen,until you hear a 'click' sound.
3. Set your desired personal combination by turning the dials,(for example, 8-8-8).
4. Push the Pushing towards to the direction of arrow and the reset button will pop up with "Click" sound to complete the setting.

Please write down your new combination and put it in a safe place.

⚠ To reset your lock, please set it to its current combination and then repeat the steps above.

Statement:
a) Statement "Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children.
Do NOT dispose of batteries in household trash or incinerate."
b) The statement "Even used batteries may cause severe injury or death."
c) The statement "Call a local poison control center for treatment information."
d) A statement indicating the compatible battery type (e.g., LR44, CR2032).
e) A statement indicating the nominal battery voltage.
f) The statement "Non-rechargeable batteries are not to be recharged."
g) The statement "Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate.
Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns."

Statement:
a) The statement"Ensure the batteries are installed correctly according to polarity (+ and -)."
b)Thestatement"Do notmixold andnewbatteries,differentbrandsor typesof batteries,such as alkaline,carbon-zinc,orrechargeablebatteries."
c)Thestatement"Removeand immediatelyrecyclecrdisposeofbatteriesfrom equipmentnotused for an extendedperiodof timeaccording tolocalregulations."
d)Thestatement"Alwayscompletelysecurethebatterycompartment.If thebatterycompartment doesnot closesecurely,stop using theproduct,remove the batteries,andkeep them awayfrom children."

1. INSTRUCTIONS FOR GOOGLE'S FIND HUB

TO START:
The first time to use this device, just open the suitcase and locate the back of the device, pull out the battery label to power on.

REPLACING THE BATTERY
open the suitcase and locate the back of device, and use pen or tool to pull the lock button to unlock, then insert one piece of CR2032 coin battery

POWER ON:
Press and hold the button for 5 seconds. The device will beep to indicate it's powered on.

Pairing with Android™ Devices

1. Ensure your Luggage and Android device are close to your Android device. A pop-up notification will appear on your Android device stating a new device has been found.
3. If the pop-up does not appear:
   • Open the Settings app.
   • Navigate to Google services > All Services > Devices.
   • Ensure Scan for nearby devices is enabled.
   • You will see a list of devices under Available devices nearby.
4. Tap the luggage name, once it appears on the list.
5. Follow the on-screen instructions to finish the setup. (You may be prompted to enable Bluetooth, Location, and other features if they are not already turned on.)
6. Your Luggage is now paired with your Google Account and can be used with the Find Hub app.

Reset:
1. When on, press the button 4 times quickly
2. After hearing a tone, press and hold the button for about 8 seconds until another tone sounds
3. Factory reset complete.

Unpairing from Android Devices

1. Open the Find Hub app.
2. Select your Luggage.
3. Tap the Settings button.
4. Tap Remove from Find Hub and follow the on-screen prompts.

2. DEVICE OPERATION INSTRUCTIONS

POWER OFF / SLEEP MODE
When powered on, press the button 5 times within 2 seconds.
The device will beep and enter sleep mode.

ENTER IDENTIFICATION MODE
Quickly press the button 6 times within 2 seconds on the device.

RE-ENABLE FIND MODE
If pairing mode times out, press the button once to re-enable.

SWITCHING BETWEEN FIND HUB AND FIND MY CONNECTIONS
" Remove Item " in the Find Hub App, then reset the device . Afterward, connect to the Find MY App.
Reset device:
1. When on, press the button 4 times quickly
2. After hearing a tone, press and hold the button for about 8 seconds until another tone sounds
3. reset complete.
Note:
If you dismiss the Fast Pair™ pop up twice or frequently pair and unpair a tag, you might trigger the banning logic, which prevents unnecessary Fast Pair pop ups. To resolve this, you can either wait for five minutes for the Fast Pair to pop up to be re-enabled or reboot your phone.
If any Find Hub network accessory separated from its owner is seen moving with you over time, you'll receive unknown tracker alert on your phone which tells you how to find it, disable it.
Google, Android and Find Hub are trademarks of Google LLC.
This product has been certified by Google to meet Find Hub network accessory specifications. Google is not responsible for the operation of this product. Google is also not responsible for ensuring that the product complies with any applicable safety standards or other requirements.

PRODUCT SPEC EUT Name:Findable Luggage Lock
• Model No.: TSA25002
• Function: Find My + Find Hub Finding
• Battery: 3V CR2032 x 1 piece
• Material: ABS
• Dimension: 141x30x26.3mm
• Working temperature: -10°+50℃
• Storage temperature: -10°+70℃
• Relative humidity: 10%~90%
• Origin: Made in China
• Warranty: 1 year
• Compatible devices: Applicable to Apple devices with iOS 18 or above; Android devices with Android 12 or above.

WARNINGS ⚠
• Please remove the battery if you do not use the tracker over a long period of time.
• Please keep in a dry, cool and clean place, avoid direct sunshine and moisture.
• This product is not waterproof. Please keep the tracker away from water.
• Please keep the tracker and its battery away from children. The battery may cause choking hazards for children.

PRODUCT FUNCTION DIAGRAM

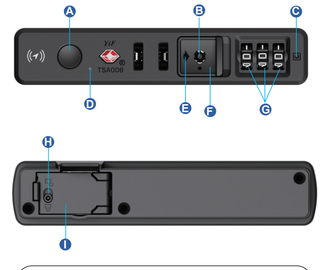

A Button
B TSA Key hole
C Reset button
D Indiccator
E Arrow
F Pushing
G Dials
H LOCK
I Battery compartment

1. INSTRUCTIONS FOR APPLE FIND MY

Works with Apple Find My

TO START:
The first time to use this device, just open the suitcase and locate the back of the device, pull out the battery label to power on.

REPLACING THE BATTERY
Open the suitcase and locate the back of device, use pen or tool to pull the lock button to unlock, then insert one piece of CR2032 coin battery

POWER ON
Press and hold the button for 5 seconds. The device will emit a beep sound and power on.
Double check to emit a beep, indicating device is powered on.

Pairing with Apple Devices

1.Open the Find My app.
2.Tap the Items tab.
3.Tap the + sign.
(If no other items are paired, tap Add Item.)
4. Select Add Other Item.
5. The app will search for your luggage.
6. Tap Connect, then name the item.
7. Choose an emoji.
8. Agree to the terms to complete the setup.
9. Tap Finish.

Unpairing from Apple Devices

1.Open the Find My app.
2.Tap the Items tab.
3.Select your luggage.
4.Scroll down and tap Remove Item.
5.Confirm the removal. The LED indicator will blink, and the device will chime three times.

2. DEVICE OPERATION INSTRUCTIONS

Works with Apple Find My

CHECK DEVICE STATUS
Double-click the button twice:
• Not paired: one long beep.
• Paired and connected: one short beep.
• Paired but disconnected: one long beep.
• If no sound, the device is off (sleep mode).Press and hold for 5 seconds to turn on.

POWER OFF / SLEEP MODE
When on, quickly press the button 5 times within 2 seconds.
The device beeps and LED flashes 3 times before entering sleep mode.

CHECK SERIAL NUMBER
Quickly press the button 6 times within 2 seconds.
The device beeps, LED flashes 6 times, and enters serial number read mode.

RE-ENTER PAIRING MODE
• After removal completed, the device remains powered on in pairing mode. If not re-paired within 10 minutes, it exits pairing mode.
• Re-enter pairing mode to press the device button once
• It will beep and flash once, allowing re-pairing with the app.

SWITCHING BETWEEN FIND MY AND FIND HUB CONNECTIONS
Remove Item" in the Find My App, then reset the device . Afterward, connect to the Find Hub App.
Reset device:
1. When on, press the button 4 times quickly.
2. After hearing a tone, press and hold the button for about 8 seconds until another tone sounds
3. reset complete.

Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards.
Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, Mac, macOS and watchOS are trademarks of Apple Inc. IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.
To use the Apple Find My app to locate this item, the latest version of iOS, iPadOS, or macOS is recommended. The Find Items app on Apple Watch requires the latest version of watchOS.

REGULATORY SAFETY INFORMATION

EUROPEAN UNION DISPOSAL INFORMATION:

The symbol above means that, according to local laws and regulations, your product and/or its battery shall be disposed of separately from household waste. When this product reaches its end - of - life, take it to a collection point designated by local authorities. The separate collection and recycling of your product and/or its battery at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

BATTERY HANDLING GUIDELINES

a. Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do Not dispose of batteries in household trash.
b. Call a local poison control center for treatment information.
c. Even used batteries may cause severe injury or death. Do Not dispose of batteries in household trash.
d. Battery type: CR2032.
e. Nominal battery voltage: 3V.
f. Non - rechargeable batteries are not to be recharged.
g. Do not force discharge, recharge, disassemble, heat above 60˚C or incinerate. Doing so may result in explosion and/or chemical burns.
h. Ensure that polarities are installed correctly according to polarity (+ and -).
I. Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
j. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

Risk of fire and burns. Do not recharge, disassemble, heat (-20˚C ~ +70˚C) or incinerate.

FCC COMPLIANCE

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• If the equipment is connected to an outlet, connect it to an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help.

PRECAUTIONS

⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours.**
- **KEEP** new and used batteries **OUT OF REACH OF CHILDREN.**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.

FCC Regulatory Compliance
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.
This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

材　　质：75g铜版纸　上下对折再风琴折 双面印刷
折叠尺寸：62x76mm
展开尺寸:152x496mm

制图	周珊	25.10.22	项目	TSA25002	材料	
审核			说明书		数量	
确认					产品编号	NSMK7510
版本 A		YiFeng® 怡丰制造有限公司			文件名	
					客　户	怡丰