
DS15-36 说明书
尺寸：100mm x 150mm
80g书写纸，黑白印刷，折页，单面印
料号：416-0DS15091-V01R
2026.02.05更新

VENTOSONIDO

USER MANUAL

VENTOONE

BOOKSHELF SPEAKER

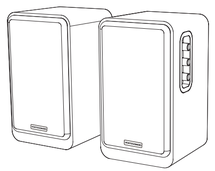


IMPORTANT
Please read this manual carefully before operating the soundbar, keep this user manual for further reference.

WHAT'S IN THE BOX



DIAGRAM(KNOBS, REMOTE, LED INDICATOR)

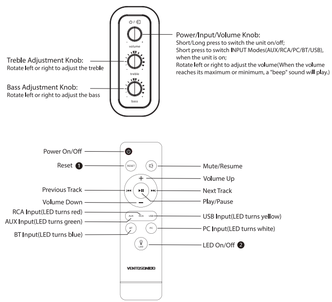


❶ Reset: Long press for 5s to reserve the sound bar to factory settings.
❷ LED On/Off: The LED of the soundbar will automatically turn itself off after 10s by default.
- Turn On: The LED will always be on;
- Turn Off: The LED will automatically turn off after 10s.

SPEAKER LED Indicator

The LED indicator on the sound bar gives you information about the status of the SPEAKER.

USB	yellow light	**BT**	Blue light
AUX	Green light	**RCA**	Red light
PC	White light		


INSTALL YOUR SPEAKER

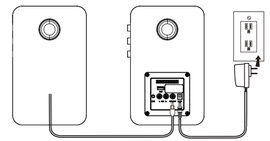


USING YOUR SPEAKER

A. Connect to your TV or Record Player

1. Check the audio output port of your TV and choose the corresponding port (RCA or 3.5mm) to connect via AUX cable.




2. Select the corresponding input mode based on the inserted interface of the speaker.



* RCA input - LED turns solid red
* AUX input - LED turns solid green


B. Connect to BT Device

1. Let the speaker enters the BT pairing mode, and the LED starts to flash blue.
2. Enable BT on your device and pair your device with the speakers (Named: vento one). Once paired, you should hear a voice prompt " Connected", indicating a successful connection.




C. Connect to USB (USB Driver Only)

1. Insert your USB drive into the speaker. (Note: Supports up to 64GB, and compatible music formats include MP3, WMA, WAV, APE, and FLAC. Please ensure your USB drive is formatted to the FAT32 file system.)
2. Press the USB button on the remote or briefly press the INPUT knob on the side to switch to USB input.



D. Connect to a PC or Console

1. Connect your speaker to the USB port of your PC or console via USB cable included.
2. Press the PC button on the remote or briefly press the INPUT knob on the side to switch to PC input.

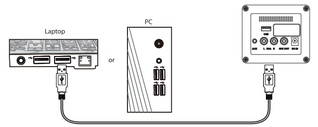

Tips: Connecting your speaker's USB port to a PC or laptop via a Type-C port for sound output is not supported.

SPECIFICATIONS

Model	VENTOONE
Power Supply	DC18V
Sound Channel	2.0 CH
BT Version	5.4
Distortion	<0.5%
Driver	1" Silk Dome Tweeter x 2 + 5" Bass Woofer x 2
Connection Jacks	AUX x 1, RCA x 1, USB x 1
Product Weight	4 kg
Product Dimension	L: 155(W)×156(D)×265(H)mm R: 155(W)×156(D)×265(H)mm

SAFETY INSTRUCTIONS

- Please read this user manual carefully and save it for future reference.
- Please avoid dropping.
- Please do not disassemble.
- Please do not submerge in water.
- Please do not use the device outdoors during thunderstorms.
- Please do not use this product in environments of extreme heat or cold.
- Please do not place dangerous items on top of this device(e.g. liquid filled objects, lit candles).
- To avoid hearing damage, do not listen for extended periods at high volume.
- Please use original or certified cables.
- The adapter should be installed near the device and should be easily accessible.
- Clean with a dry, soft lint-free cloth. Do not use any corrosive cleaner or oil.
- The ideal operating temperature for this product and its accessories is between 41°F/5°C and 95°F/35°C.

TROUBLESHOOTING

Q: No sound is coming out.

A: 1. Please check all device connections and ensure the correct input source is selected(Reference: USING YOUR SPEAKER).
2. If the issue persists, contact our customer service via email at support@ventosonido.com, or scan the QR code on the packaging to reach us.

Q: What should I do if there is noise coming from the speaker?

A: The noise might be caused by electromagnetic interference from devices such as an internet modem. Try to identify and gradually eliminate the source of interference to resolve the issue before using the speaker.

Q: Remote control is not working.

A: 1. Replace the batteries with new ones.
2. Use the remote control within 23 feet (7 meters) of the device and at an angle of 30°.
3. Make sure there is nothing blocking the IR receiver.
4. If you've followed the steps above and failed to get it to work, please reach us and get a replacement of remote control at support@ventosonido.com.

SAFETY INSTRUCTIONS

- Please read this user manual carefully and save it for future reference.
- Please avoid dropping.
- Please do not disassemble.
- Please do not submerge in water.
- Please do not use the device outdoors during thunderstorms.
- Please do not use this product in environments of extreme heat or cold.
- Please do not place dangerous items on top of this device(e.g. liquid filled objects, lit candles).
- To avoid hearing damage, do not listen for extended periods at high volume.
- Please use original or certified cables.
- The adapter should be installed near the device and should be easily accessible.
- Clean with a dry, soft lint-free cloth. Do not use any corrosive cleaner or oil.
- The ideal operating temperature for this product and its accessories is between 41°F/5°C and 95°F/35°C.

PROPER DISPOSAL INSTRUCTIONS

This symbol displayed on a product or its packaging indicates that the product should not be disposed of with other household waste at the end of its useful life.
To prevent uncontrolled waste disposal from potentially causing harm to the environment or human health, separate it from other types of waste and recycle it responsibly to promote the sustainable reuse of material resources.

Waste Electrical & Electronic Equipment

Household users should contact the retailer where they purchased this product or their local government office for details of where and how to recycle this product for environmentally friendly recycling. Business users should contact their suppliers and check the terms and conditions of their purchase contracts. This product must not be mixed with other commercial waste for disposal.

FCC REGULATORY COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference.
Through one or more of the following measures:
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation must meet the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

ISED WARNINGS

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:
(1) This device may not cause interference.
(2) This device must accept any interference, including interference that may cause undesired operation of the device.
This device complies with IC exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and the body.
Cet appareil contient des émetteurs/récepteurs sans licence qui sont conformes aux RSS(s) sans licence d'Innovation, Sciences et Développement économique Canada.
L'exploitation est soumise aux deux conditions suivantes :
(1) Cet appareil ne doit pas provoquer d'interférences.
(2) Cet appareil doit accepter toute interférence, y compris les interférences susceptibles de provoquer un fonctionnement indésirable de l'appareil.
Cet appareil est conforme aux limites d'exposition IC définies pour un environnement non contrôlé. Cet équipement doit être installé et fonctionne avec une distance minimale de 20cm entre le radiateur et le carrosserie.