User Manual

Model: GECOZO-S2

Website: https://www.gecozo.com/
After-sales email: xuzongshuai7@163.com

Works with Apple Find My

Please refer to this manual before using the product

I Apple Find My app Operating Instructions

To use the Apple Find My app to locate this item, the latest version iOS, iPadOS, or macOS is recommended.

How to set up Card in the Apple Find My app:

First make sure WiFi and Bluetooth are turned on

Make the card discoverable:

Power on:
Press and hold the button, hear a di sound, and the red light flashes once.


Power off:
Press and hold the button until vou hear the beeps in the pattern of di-didi-didi. then




Reset to default factory settings:
Press the button three times , then press the button and hold until you hear a "di" sound.

Charging prompt: Charging in progress : green light


Charging prompt: fully charged: blue ligh

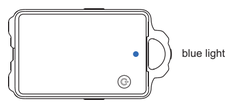

how to set up the card in the Apple Find app:

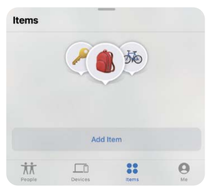


Click "Add Item" , then click "Add Other Supported Item" then follow the instructions shown.

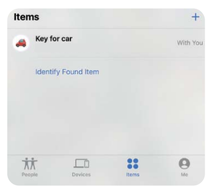

If you have added other items, you need to click on the "+" sign at the top right and enter it by clicking on "Add Other Items".


How to remove items from the Apple Find My app:

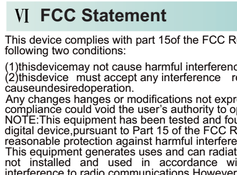

Navigate to the item page on the Apple Find My app, Click "Items" , then Swipe left on the item you want to remove.


After removing it on the Apple Find My app, the Card will automatically shut down after 15 minutes. Subsequent relink can be done by following the steps above.

After removal, be sure to reset the card to its factory settings.

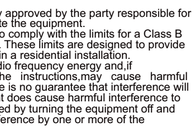

Unable to be linked

II Charge your card

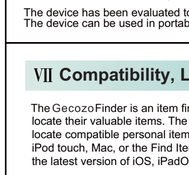

Ensure that the charging position is aligned with the wireless charger

Always turn on green light when charging
Always turn on bule light when fully charged

Safe electronical disposal

When your device reaches the end of their useful life, please dispose of at your local e-waste center to be recycled and properly discarded,

The card cannot be used in this mode.

When the finder card is connected to the device: press and hold the button until you hear (di-didi-didi, release after 5 beeps)to enter Disable (offline mode).

In Disable mode, the finder card is turned off, at this time it enters a super power saving state and cannot use playing sound and location tracking.

How to cancel Disable mode
Press and hold the button, hear a dl sound, and the red light flashes once.

III Warning

1. This product is not a toy or edible.
2. Obstacles or large metal objects can interfere with the Bluetooth signal.
3. This product has a built-in lithium battery. Please do not put this product directly on fire or any place near heat or fire, otherwise, the product may be damaged or malfunction, or even be dangerous.

IV Disclaimer

This is neither an anti-theft nor an anti-lost device.

This device provides the last detected location.

V Limited warranty

offers a 1-year limited warranty against product defects, effective from the time of delivery.

Product defects do not include those resulting from accidents, product modifification, or failure to follow instructions for use.

VI FCC Statement

This device complies with part 15of the FCC Rules. Operation is subject to the following two conditions:

(1)thisdevicemay not cause harmful interference,and
(2)thisdevice must accept any interference received, including interferencethat may causeundesiredoperation.
Any changes hanges or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE:This equipment has been tested and found to comply with the limits for a Class B digital device,pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.
This equipment generates uses and can radiate radio frequency energy and,if not installed and used in accordance with the instructions,may cause harmful interference to radio communications.However,there is no guarantee that interference will not occur in a particular installation.If this equipment does cause harmful interference to radio or television reception,which can be determined by turning the equipment off and on,the user is encouraged to try to correct the interference by one or more of the following measures:
• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.

VII Compatibility, Legal and Credit Line

The GecozoFinder is an item finder that works with the Apple Find My network to help users locate their valuable items. The Apple Find My network provides an easy, secure way to locate compatible personal items on a map using the Find My app on your iPhone, iPad, iPod touch, Mac, or the Find Items app on Apple Watch.To use Find My to locate this item, the latest version of iOS, iPadOS, macOS or watchOS is recommended.

Apple, MagSafe, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, Mac, macOS, and watchOS are trademarks of Apple Inc., registered in the U.S. and other countries. IOS is a trademark of Cisco, used under license.

Use of the Works with Apple badge means that this product has been designed to work specifically with the technology identified in the badge and has been certified by the manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

Product Name: Card Holder Case; Model No.:GECOZO-S2; FCC-ID:2BVNR-S2

Made in China