Lumolands AI儿童打印机 说明书-风琴六折

尺寸：110mm(H)*100mm*N

---------虚线为折痕

Warranty Card

☐ Return ☐ Exchange ☐ Repair

User Info	Name: Gender: Phone:	
	Address:	
Product Info	Purchase date:	
	Product order number:	
	Product Serial Number:	
Requirements of return /replacement /repair	Reason description:	
Maintenance records	Failure condition:	Maintenance person:
	Handling situation:	Delivery date:
	Maintenance ticket number:	Delivery date:

@Lumolands

5 Easy to print

Step 1
Press and hold the button on the right, then speak to the printer.

Step 2
Wait 5–10 seconds, and your sticker will start to print!

Step 3
Once printing is complete, you can peel off the sticker and start your fun collage.

6 Charge Your LumoSticker Pop

Use the included USB-C cable to charge your **LumoSticker Pop**.
- Connect one end of the USB-C cable to your LumoSticker Pop.
- Connect the other end to a **5V/2A** power adapter or a computer USB port.
- A full charge takes about **3 hours**.
- We recommend using a standard mobile phone charger.

Battery Care

If you do not use LumoSticker Pop for a long time, please charge it once every **3 months** to help protect the battery.

Use Environment

Please use LumoSticker Pop in a room-temperature environment between **5°C and 40°C** .

⚠ Safety Note
This product does not include a power adapter.
If you use a power adapter, please choose one that is FCC-certified and meets standard safety requirements.
The adapter output should be 5V/2A.

7 Clean the Print Head

If the print looks light, blurry, or uneven, the print head may need cleaning.
Adults only: Please make sure an adult cleans the print head.



How to Clean

Step 1
Turn off your **LumoSticker Pop**.
Open the cover and remove the sticker roll.



Step 2
Use a cotton swab or soft cotton cloth with a small amount of medical alcohol.
Gently wipe the print head from the center outward.



Step 3
After cleaning, wait **1–2 minutes** before using the printer again.
Make sure the alcohol has fully dried.

⚠ Safety Note
- Do not touch the print head directly.
- The print head may be hot right after printing. Please wait for it to cool down before cleaning.
- Clean gently to avoid damaging the print head.

More Ways to Create



Photo Printing

Choose your photos in the app, try different fun styles, and print your very own line-art photos.



Creative Printing

Add cool custom elements on the blank canvas, use fun templates, and quickly print the stickers you love!



Family Fun Activities

Find awesome ideas for family activities in the app's Inspiration Center! Make dream boards, create your own storybooks… so many fun things are waiting for you to explore!

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and.
(2) this device must accept any interference received, including interferencethat may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in aresidential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FC CE RoHS

lumolands

Instruction manual

LumoStickerPop

AI voice printer



Please read the instruction manual carefully before using the product.

Item Checklist & Specifications

• Package contents

01. Item Checklist



Printer x 1



Type-C Cable x 1



Instruction Manual x 1




Paper x 4 (1 roll in printer)

• Specifications

Name	Voice Printer
Model	PSM-01
Consumable Max Width	48mm
Supported Consumable	Recording paper, Recording sticker, Label paper
Resolution	203dpi
Communication Port	Bluetooth/WIFI
Power Supply	Type-C 5V/2A
Product Dimensions	80 x 92 x 66

Product Introduction

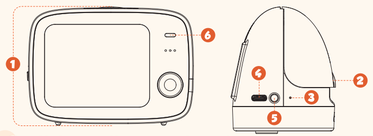

1 Sticker Roll Compartment
• Dimensions： Ø30mm.

2 Sticker Compartment Cover
• Pull the cover outward to open the paper compartment.

3 Reset key
• If the printer is not responding, insert a reset pin into the reset hole until the device shuts down. Then press and hold the power button for 2 seconds to restart.

4 Type-C Port
• Charged with mobile phone charger or power bank.
(Input Power: 5V/2A)

5 Power button
• Press and hold 2 seconds for to turn on/off.

6 Indicator Light
• Used to reflect the status of the printer.

How to Use

1 Get the Lumolands App

To start creating and printing, please download the **Lumolands App** first.

Option 1: Search for "**Lumolands**" on the **App Store** or **Google Play**.

APP

Lumolands

Download on the App Store | GET IT ON Google Play

Option 2:
Scan the QR code on the right to download the app.

Download on the App Store
Get it on Google Play.

二维码

⚠ NOTE
• Please connect your LumoSticker Pop to the Lumolands App before printing.
• For Android phones, Bluetooth connection may require location permission. Please turn on Location/GPS and allow permission when prompted.
• The Lumolands App supports **Android 7.0 / iOS 11.0** or later.

2 Turn On Your LumoSticker Pop

Press and hold the power button for **2 seconds** to turn your LumoSticker Pop on or off.

Power Button Description

Button	Operation	Functions
Power button	Hold for 2 seconds	Power on/off
	Press twice	Print diagnostic page and the QR code to connect the printer with Lumolands App
	Press once	The sticker paper will feed forward and stop at the outlet.

Indicator Light

Light	Functions
Light steady on	Bluetooth connected
Light flashing slowly	Bluetooth disconnected
Green light on	Normal use status / Fully charged
Red light on	Cover opened / No paper / Over-heat
Yellow light on	Low battery. Please charge the device.
Yellow light flashing quickly	Charging

⚠ NOTE: Your LumoSticker Pop will automatically turn off after 20 minutes without use.

3 Connect Your LumoSticker Pop

Before printing, please connect your **LumoSticker Pop** to Wi-Fi in the **Lumolands App**.

How to Connect

Step 1
Turn on **LumoSticker Pop**, then open the **Lumolands App**.

Step 2
Tap **Add Device** and select **LumoSticker Pop** from the device list.Bluetooth will be used for setup.

Step 3
Choose your Wi-Fi network, enter the password, and wait until the app shows **Connected**.

⚠ NOTE
• Please connect Bluetooth in the **Lumolands App**, not in your phone's Bluetooth settings.
• Bluetooth is used to help your phone find LumoSticker Pop and send Wi-Fi information.
• Keep your phone close to LumoSticker Pop during setup.
• On some Android phones, Bluetooth setup may require Nearby Devices or Location permission. Please allow permission when prompted.
• If setup fails, please check that LumoSticker Pop is turned on, Bluetooth is enabled, and the Wi-Fi password is correct.

4 Load the Sticker Roll

Before printing, place the sticker roll into your **LumoSticker Pop**.

1 Open the Cover
Gently pull the paper cover outward to open it.



2 Place the Sticker Roll
Put the sticker roll inside, with the sticker side facing down.



3 Close the Cover
Leave about 0.1–0.2 inches of sticker paper outside the printer.
Then press down gently to close the cover.



4 Align the Sticker Paper
Press the power button once.
The sticker paper will move forward and stop at the right position.

