

HUPEJOS[®]

V9-4CH Dash Cam



Quick User Guide
English/Deutsch

CATALOG

EN

Warm Tips

1.What's in the box?	3
2.Installation	18
3.Basic Operation	22
4.Trouble Shooting	32
5.Warranty & Support	33

DE

Warme Tipps

1. Was ist in der Box?	37
2. Installation	52
3. Grundlegende Bedienung	56
4. Fehlerbehebung	66
5. Garantie und Support	67

Warm Prompt

 *This Dash Cam is equipped with a touch screen, please make sure your fingers are clean and dry to avoid stains or scratches. If the touch screen is slow to respond, please check if the screen is affected by dirt or liquid, please clean the screen and try again.*

1. **Read the User Manual:** Please read the user manual carefully before using the dash cam.
2. **Power Supply:** The dash cam must be plugged in to operate. During installation, be sure not to insert the car key into the power supply, and don't insert or remove any machine accessories like Micro SD card or rear camera when the dash cam is powered on, These actions should be completed when power is turned off.
3. **Driving Safety:** Do not attempt to debug the product or use your mobile phone to view driving videos while driving. Always prioritize driving safety.
4. **SD Card Requirement:** This product requires an SD card for operation. Ensure the SD card is functional. You must use U3 high-speed card (recommended capacity 32GB-512GB), lower than U3 will cause problems like video stutter, black screen, and video cannot be recorded or cannot be played.
5. **Avoid Unauthorized Repairs:** Do not disassemble or attempt to repair the dash cam casing yourself. In case of malfunction, please contact the official HUPEJOS support.

6. Installation Location: Do not install the dash cam in a location that may obstruct your driving view.

7. Operating Environment: Use the dash cam in environments that are not exposed to high temperatures or excessive humidity. Your device is recommended for use and store within a temperature range of - 22 degrees Fahrenheit to 140 degrees Fahrenheit, and a humidity range of 10% to 80%.

8. Legal Use: Use this product only within the legal framework applicable in your region.

9. For some mobile phone models, if find that the TsCam APP cannot be connected to the preview, please turn on the airplane mode of the mobile phone and try.

10. If any damage is caused by failure to follow the instructions, the warranty will be voided.

11. We do not encourage you connection your camera with other hardware kit, but if you insist to do this, please have a look of those lower than 6V and higher than 2.5A.

EN

What's in the Box ?



**1. HUPEJOS V9
Dash Cam**



2. Rear camera




3. Adhesive Mount



**4. Car Charger with
Type C USB Cable**



5. Car Wring Tool

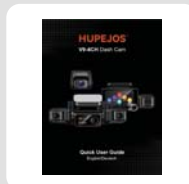

6. User Manual



7. Electrostatic Film



**8. SD Memory Card
(Memory card
pre-inserted)**

Power Tools



1. Car charger

Note: It is best to use the power cord that comes with our products, or our professional hardwire kit.



2. Hardwire Kit with radar

(Required for Parking Mode. Prevents car battery drain)(Not included, purchased separately)

Camera Overview



- | | |
|-------------------------------|--------------------------------|
| 1. Display | 9. Right Camera inside the Car |
| 2. Working Indicator Light | 10. IR Lamps |
| 3. Type C Power Port | 11. Power Button |
| 4. Rear Camera Interface | 12. Up Button |
| 5. TF Card Slot | 13. OK Button |
| 6. Adhesive Mount | 14. Down Button |
| 7. Front Camera | 15. Menu Button |
| 8. Left Camera inside the Car | |

Button Instruction



Power button

1. Recording mode: Short press to switch screen; long press for 2 seconds to power off
2. Setup mode: Short press to return to the previous screen
3. Playback mode: Short press to return to the previous screen



Menu button

1. When the recording is stopped, short press to enter the menu
2. Long press to switch between recording mode/playback mode



Up button

1. Recording mode: Short press to lock the video; long press to enable audio recording
2. Setup mode: Short press to select the previous function
3. Playback mode: Short press to select the previous file



Down button

1. Recording mode: Long press to take a snap shot; short press to switch the screen
2. Setup mode: Short press to select the next function
3. Playback mode: Short press to select the next file



OK button

1. Recording mode: Short press to start or stop recording; long press to turn on or off the WiFi
2. Setup mode: Short press to confirm
3. Playback mode: Short press to confirm

LED Indicator




1. Power-on: Red light first, switches to blue light after logo display
2. Recording: Red and blue lights flash (including screen-off mode)
3. Recording Paused: Blue light stays on continuously

Getting Started


⚠ Warm Reminder: Swipe the page up and down when the hand icon appears.




Language: English/Español/Português/Русский/ 简体中文 / 繁體中文 / Deutsch/Italiano/Français / 日本語/한국어/Türkçe/Thai/Nederlands

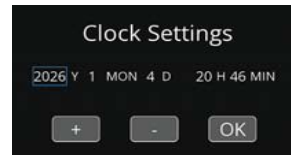

Clock Settings: Set the date and time (the regional time will be automatically updated during GPS positioning)

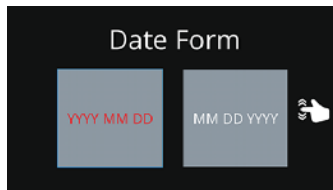

Date Form: Change the time and date display in the preview interface YYYY MM DD / MM DD YYYY

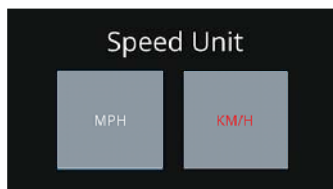

Speed Unit: off / km/h / mph (default value)

Screen Overview

⚠ A light tap on the touchscreen will bring up the menu.



Number: Function description of the video recording interface

1	Recording Time
2	 Sound Recording ON  Sound Recording OFF
3	 GPS is not located  GPS location is complete
4	Emergency File Locked
5	SSID and Wi-Fi password
6	Time and Date

EN

- | | |
|----|--|
| 7 | After successful GPS positioning,the current vehicle speed. |
| 8 | After successful GPS positioning, it will display the current vehicle driving direction in real time |
| 9 | Front Video |
| 10 | Rear camera Video |
| 11 | Left Video |
| 12 | Right Video |


Function Display





You can manually click the icon at the bottom of the screen to:

-  Wi-Fi off  Wi-Fi on
-  Start or stop recording
-  Enable or disable audio during video recording
-  Lock a video
-  Switch the screen view
-  Open the menu

In video recording mode, short press the menu button to enter the main interface.

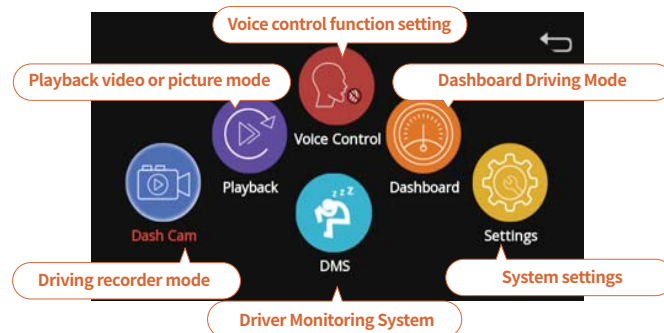


Playback Operations & Button Functions

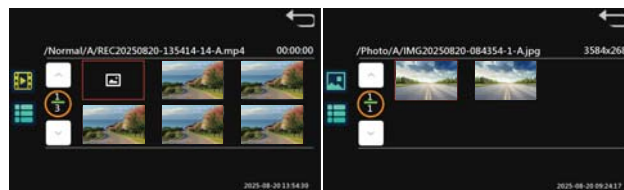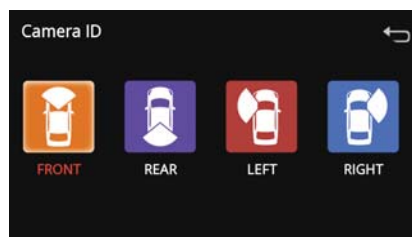

Playback file preview screen - icon status.

- ①Video/picture switching button: Long press the menu button to switch from video file preview to picture file preview.
- ②Menu: Press and hold the menu to enter the playback menu mode.
- ③Previous page: Short press the up button to view the previous video/picture.
- ④Next page: Short press the down button to view the next video/picture.
- ⑤Exit playback mode: Short press the power button or long press the menu button twice to return to video recording mode.

Playback Settings

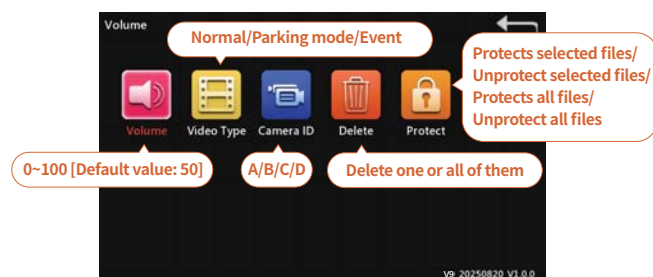

Voice Control

Press the OK button to turn on or off the voice control function.




Indicates that voice control is off




Indicates that voice control is on

After pressing the OK button to turn on the voice control, the voice command instructions will pop up, press any button to return to the main interface, say the following voice control commands to the machine, and the machine will respond with corresponding functions. Voice commands only support English wake-up, other languages are invalid.

EN

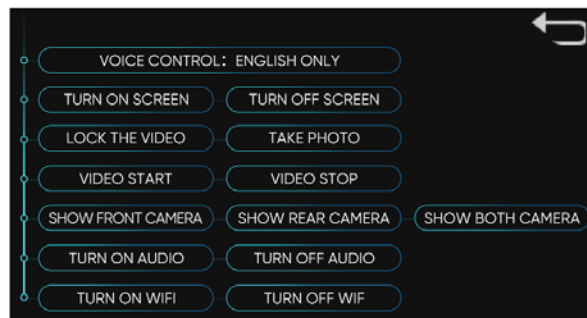


Dashboard Driving Mode

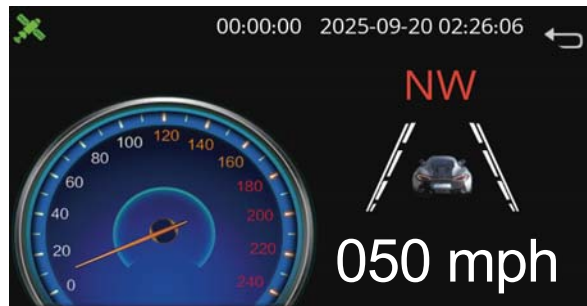

Important Notes:

If GPS positioning fails, the GPS icon will flash, and the dashboard functions for speed and direction will be unavailable. For instance, in scenarios such as no GPS signal in underground garages, or when the device is used outdoors for the first time, the dashboard's speed and direction functions will not work within the initial 2 minutes. These two functions will only be activated after GPS positioning is successfully completed.

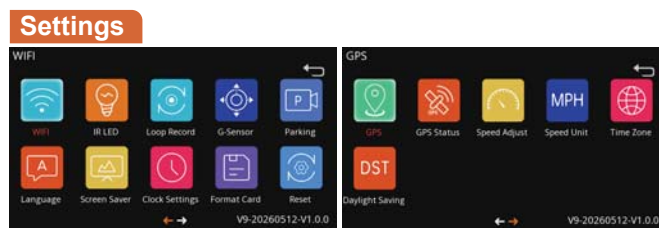

Wi-Fi: ON/OFF (default) Wi-Fi frequency: 2.4G/5G(default)
Note: If your phone does not support 5G, switch to the 2.4G option.



IR Led: On/Off/Auto (Default)
Note: When the scene is dark, it automatically opens, and when the scene is bright, it closes.



Loop Record: Cycle Time / Privacy Mode
Note: Enable Private Mode. Only save the last 3 recorded videos.



G-sensor: sensitivity setting, OFF/high/medium/low (default).

EN



Parking: When parking, if there is a collision when opening, the dash cam will automatically start recording for 60 seconds and then close it, Radar Kit Mode/Hardwire Kit Mode/OFF can be set.



Language: English/Español/Português/Русский/ 简体中文 / 繁體中文 / Deutsch/Italiano/Français / 日本語 / 한국어/Türkçe/Thai/Nederlands



Screen Saver: Off (default) You can set 1 minute to automatically close the screen and 3 minutes to automatically close the screen.



Clock Settings: Set the date and time (the regional time will be automatically updated during GPS positioning)



Format card: select whether to format the memory card (Format the memory card before using the dash cam)



Reset Select: whether to restore factory Settings



GPS: ON (default)/OFF



GPS Status: GPS satellite CN value real-time screen



Speed Adjust +5mph (Default) and you can choose from +12 to -12
Note: When the speed displayed by the dash cam deviates from the actual, it can be adjusted



Speed unit: off/km/h/mph (default value)



Time zone selection: default -5: 00
Warm tip: can be set according to the local time zone used by the user



Daylight Saving: On/Off(Default)

DMS(Driver Monitoring System)



DMS ON/OFF: You may select a trigger speed (to enable or disable the DMS function) from the available settings: 19 mph, 31 mph, 43 mph, 62 mph, 75 mph.

Camera: Depending on the direction of the vehicle's main cab, select either the left or right camera to turn on the DMS function. The dash camera reboots every time you choose to switch the left/right camera.

Select the following functions on or off. When the following functions are on, sound a corresponding alarm.

Eyes closing: When the driver's eyes are closed for a duration of more than 3 seconds, sound a fatigue driving alarm.

Detection range: head yaw angle deviation i.e. left: 25 degrees, right: 25 degrees for detection (the range is the eye key point visible range).

Function Failure: Wearing sunglasses or infrared blocking glasses as well as due to light spots, reflections, lens reflection caused by the eyes can not be detected properly, the closed eyes can not be detected.

Yawning: When the driver yawns 1 time (i.e., the proportion of mouth opening reaches 60% or more, and the continuous time is more than 3s), sound a fatigue driving alarm.

Function Failure: When the key information of the driver's face is blocked so that the algorithm can't detect it normally, it will output function failure. Yawning cannot be detected if the mouth cannot be detected due to wearing a mask.

Smoking: If the driver continuously smokes in the screen for more than 3 seconds, sound a smoking alarm.

Detection range: ① driver's hand holding a cigarette. ② driver's mouth holding a cigarette. ③ clear outline of the cigarette, the overall outline of the cigarette can be seen in the screen more than 60%.

Phone call: If the driver makes a phone call in the screen continuously for more than 3 seconds, sound a phone call alarm.

Detection range: ① hold the phone in the hand and make a normal call. ② the phone is closer to the face of the distance. ③ any side of the phone reveals the obvious.

Distraction: When the driver's left head deviation, right head deviation $\geq 45^\circ$ duration more than 3 seconds, sound a distraction alarm.

Monitoring range: head yaw angle deviation i.e. left: 60 degrees, right: 60 degrees for detection (the range is the visible range of the head key point).

Function Failure: When the head is completely deflected with the back to the camera or when the feature point cannot be detected, then the distraction cannot be detected.

Driver absence: If the face cannot be monitored at the driver's position for a duration of ≥ 3 seconds, sound a driver off-duty alarm.

Monitoring range: the position of the main cab of the vehicle.

SD Card Record Files are Described

SD Card name: Storage file

Event: Store video files that are locked in an emergency or manually

Normal: Store of conventional driving video files

Photo: Store snapshots

Parking: Store video files recorded by parking surveillance cameras

Share: For the reserved function, no files are stored

Secondary folder: A/B/C/D

A: Store video/pictures of front shots

B: Store video/pictures of left shots

C: Store video/pictures of right shots

D: Store the video/picture of the rear shots

Installation

Start the vehicle generator, and do a bench test before officially installing the dash cam: connect the car charger to the cigarette lighter port and the dash cam, connect the rear camera, and insert the SD card to ensure that the dash cam can work normally.

Step 1: Installing a Memory Card

With your camera off, insert the card into the card slot. Push the TF memory card straight into the slot in the direction of the screen print until you hear a 'click' sound.


Remove the card: Push the TF memory card forward, and the card will be removed when it is ejected.

Note:

- Removing the TF card in the video state may reduce the file and damage the life of the TF card, please turn off the dash cam first before inserting and removing the TF card.
- The SD card should be formatted once a month to maximize the lifetime of the memory card.


Step 2: Mounting the Front Camera

All car cameras with DMS(Driver Monitoring System) need to be mounted on this side of the main cab or right in the middle of the front windshield to ensure that the driver's face is recognized when using DMS. Find the right spot and wipe the pre-assembled location with a clean wipe. Then peel off the electrostatic sticker from the cellophane, and transfer it to the place you want to stick it. Eliminate the air bubbles on the static stickers. For a more secure installation, we recommend waiting 30 minutes before attach the 3M bracket, and then installing the dash cam after 12 hours.

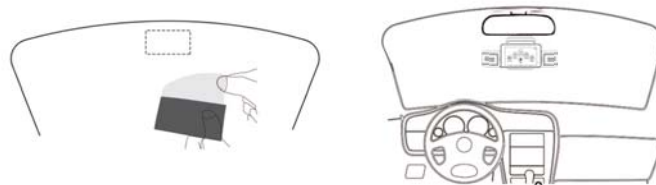

Use the crowbar to run the power cable along the front windshield and the roof, and hide the cable on the A-pillar, so as not to block

the driver's sight and cause danger.

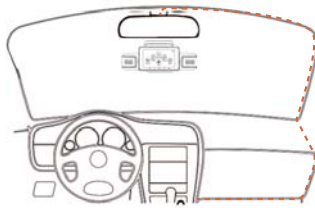

Step 3: Mounting the Rear Camera

Note:

NOTE: This rear camera is a special rear camera in the car, the effect is better if it is installed in the car and it is not waterproof. We recommend that you install it on the rear windshield of your car.




Use a clean cloth to wipe the rear windshield where the rear camera needs to be installed. Then peel off the electrostatic sticker from the cellophane, and transfer it to the place you want to stick it. Eliminate the air bubbles on the static stickers. It is recommended to install the back camera after standing still for half an hour to make the static stickers stronger.




EN

Running the rear camera connecting cable to the rear of the vehicle. Plug the rear camera connecting cable into the front unit, run the cable along the headliner, and straight down the length of the car to the A, B, and C pillars.

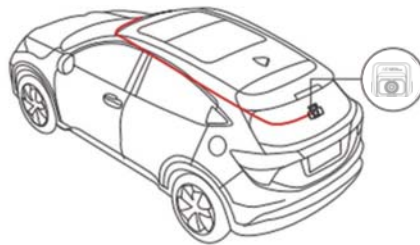

Step 4: Installing the Car Charger

Insert the power cord along the gaps between the front windshield and the ceiling, between the car body and the ceiling on the side of the passenger seat, between the rear seats and the ceiling.

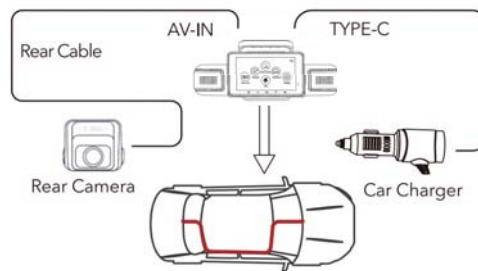

Basic Operation

Parking Mode (optional)


PREPARE YOUR HARDWARE KIT

Hardwire Kit is needed only when using Parking Mode.
If Parking Mode is desired, contact to purchase.

GETTING TO KNOW YOUR HARDWARE KIT


Features:

- > Low Battery Voltage Protection
- > Multi Input Power
- > Universal Compatibility
- > Length: 11.5ft

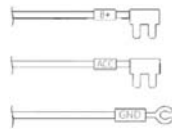

⚠ WARNING: Wrong connection may disable Voltage Protection and damage your car.

INSTALL YOU HARDWARE KIT

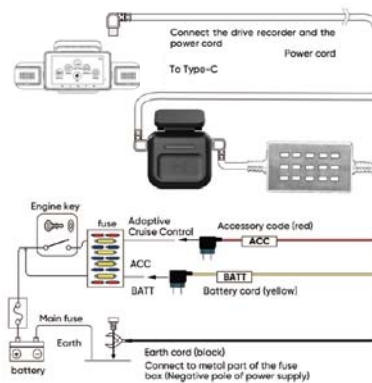

Red wire >ACC > Power only when car key is on
Yellow wire >B+ > Always has power
Black wire >Ground > Any grounded (neg) screw

POP-UP: Fuse box panel is typically located driver side dash board.
 You could cut the head of wires and connect it to your fuse directly
 if fuses is small.

INSTALLATION NOTES

Connection	Driving	Parking	
 ACC  B+  Ground	ON	Parking Mode	✓
 ACC  No connection  Ground	OFF	OFF	✗
 ACC  ACC  Ground	ON	OFF	✗
 B+  ACC  No connection	OFF	OFF	✗
 No connection  Any power  Ground	OFF	ON	✗
 B+  ACC  Ground	ON	OFF	✗

PARTICULAR WRONG CONNECTION

Connection	Driving	Parking
 B+		
 B+	ON	Always On
 Ground		

> The camera will run Parking Mode constantly, and your car battery will be drained under this connection

> Please check if your camera working after 15mins your car is off (Because some cars have a delayed power-off function, 15 minutes later you can ensure that the ACC interface has been powered off)

Mobile Phone APP Connection

Download APP

APP Name: TsCam

Please scan the QR code for the relevant version below to download the APP and install it.

Search for the 'TsCam' APP in APP Store/Google Play Store to find the APP and then download and install it on your phone.



Other APP name: Roadcam/Viidure

Search 'Roadcam' or 'Viidure' in APP Store/Google Play Store to find the application, then download and install it on your phone.

Sometimes 'TsCam' APP will be updated, if you can not download the 'TsCam' APP, please contact us in time for after-sales support!

Email: support@hupejos.com

NOTE: The WiFi range of V9 is 6~7 meters from the dash cam. Dash Cam is NOT a cloud device, and you can't view your videos remotely away from more than 6~7 meters from your car.

Live View-Watch your dash cam's live video feed in about 10fts.

Video playback-Watch recorded videos stored on your dash cam on your smartphone. (The video and picture pixels of TsCam APP

are compressed. So if you need to view clearer information, such as the license plate number, the picture or video can be downloaded through the APP and played back online, or use the SD card to view it on your computer.)

WiFi Connection

Press and hold the OK button to switch on WiFi. When WiFi is turned on, the display screen will display ID and ID password




Wi-Fi off



Wi-Fi on


1. Please make sure the WiFi function on the machine is on.
2. Open the phone WiFi settings list, select the WiFi name (SSID: HUPEJOS_V9_XXXX) on the machine, and enter the password (PWD: 12345678) to connect.
3. Open 'TsCam' APP, click the 'Connect' button and connect to use.

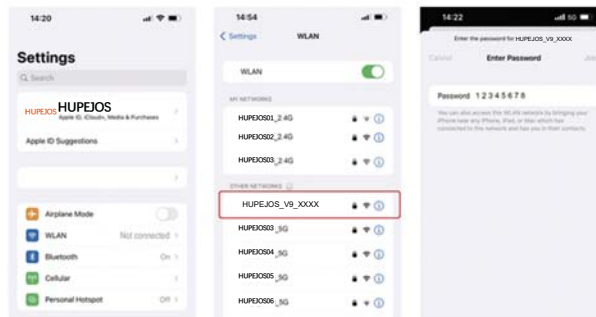


NOTE: Before connecting WiFi, please make sure the WiFi function of your smartphone is enabled. If WiFi fails to connect or is interrupted, turn off your phone's cellular network or change to Airplane Mode and reconnect. If you forget the WiFi password, you can restore the default setting of the device, and the Wi-Fi password of the device will also be restored to the default password (12345678).

APP Connection & APP Operation

After the WiFi connection is successful, click 'connect' when opening the APP, and then the APP will automatically connect to the camera and display the current real-time recording the situation of the camera.

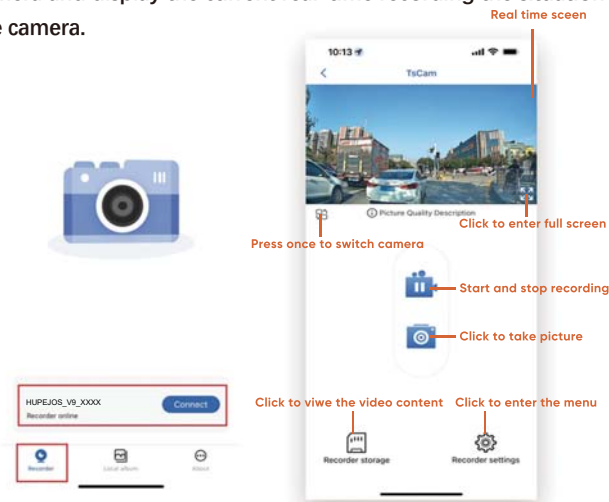

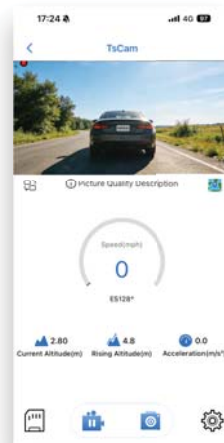

Once GPS connection is successful, you can access the map, as well as view Current Altitude, Rising Altitude, and Acceleration.

Note: Conditions required to view GPS tracks in real-time preview of the APP:

- ①The mobile phone needs to enable mobile data traffic.
- ②The Apple mobile phone calls the map that comes with the phone to access the GPS track. If the map is uninstalled from the phone, it needs to be reinstalled.
- ③Android phones need to cache offline maps according to the prompts. Or open TsCam, click About, and select offline map to cache the offline map.

After entering the APP's real-time preview, you can perform the following operations:

Video preview: After the APP is successfully connected to the camera, enter the real-time preview page, click the full-screen icon or place the phone horizontally, and the real-time screen will automatically switch to the full-screen preview mode. Click the window switch icon to switch the front rear and cabin video windows, but only multi-channel dash cams can use this feature.

Video playback: The video and photo files recorded on the SD card can be viewed in the APP, and the video can be played back after clicking the file.

Video download: You can select the video or picture you want to download in the SD card browsing interface or in the video playback area. After downloading the video, if you play it in the local file of the APP interface.


APP GPS Video Playback

①Open the APP and download the video to the local album.

②Select Native Album and Looping Video.

③Click Play video to view the track of the video.

Note: Android system must close the WiFi connection between the phone and the local machine to see the playing tracks on the APP, otherwise, the phone can't access the Internet. iOS system doesn't need to.

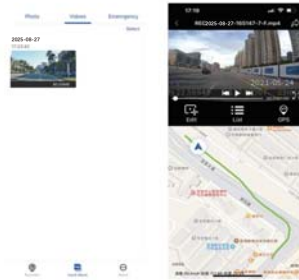

PC GPS Video Playback

GPS Function: The system time will be synchronized after successful positioning (according to the time zone time set in the menu). In the 'GPS status' of the general settings, you can view the real-time GPS CN value.

Install GXPlayer Player

1. MAC system computer: Search 'GXPlayer' on the application market of Apple computer to install it.
2. Windows system computer: the installation method is as follows. Windows systems, you can automatically generate the GXPlayer installation file from the memory card used in Dash Cam, find GXplayer in the file, and click download, and install GXplayer player to use.

Installing a GPS Player:



Open after the installation is complete:



Use GXPlayer

Import the video file after GPS positioning (Figure1, number 1)

Show track of travel (Figure1, number 2)

Show the position in the process of driving (Figure1, number 3)

The real-time speed (Figure1, number 4)


General Settings (Figure1, number 5. The Figure 2 menu Settings feature will appear)



OTA (Over The Air)

Firmware Update

Your dash cam improves continuously with FREE firmware updates and new features. The TsCam App enables OTA updates via 5.8GHz WiFi.

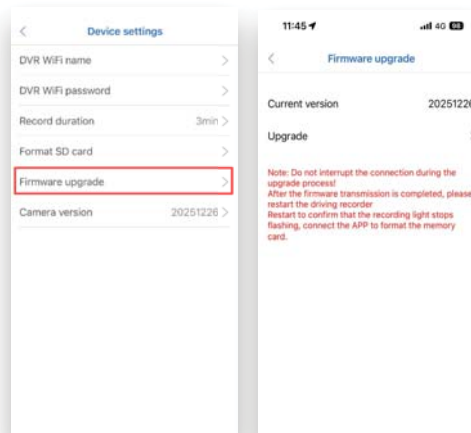

Note:

Do not interrupt the connection during the upgrade process! After the firmware transmission is completed, please restart the driving recorder. Restart to confirm that the recording light stops flashing, connect the APP to format the memory card.

Trouble Shooting

WiFi connecting goes wrong

Connection Prepare

- > Mobile data/VPN is off
- > 16ft less close to your Dash cam
- > Only allowed 1 device connection

Connection Notice

- > WiFi password: 12345678

Won't enter parking mode

- > Hardwire kit needed
- > The screen prompts 'ACC disconnected' when trying to enter Parking Mode
- > Blue light on + Red light flash

Camera always on after car turned down

- > Wrong connection of Red wire and Yellow wire
- > Please connect red wire with ignition fuse

Over heat

- > Camera should stay between -22°F to 140°F

Received dead camera

Use USB cable to connect your camera with computer and check if the screen turn on.

>If not, please unplug SD card and use a pin and press the Reset button at the bottom of camera.

>If the methods above don't solve your problem, feel free to contact HUPEJOS and please leave your contact information and current address which may be needed if a replacement is warranted.

EN

Warranty & Support

Support:

Support: 12-month standard warranty included; extend to 24 months by activating via <https://hupejos.com/?feature=warranty> or emailing support@hupejos.com. For product questions, missing accessories or suggestions, contact us via Amazon or the same email—responses within 12–24 hours.



THANKS YOU FOR
CHOOSING

HUPEJOS Dash Cam

Extend Your Warranty
To 24 Months
Scan With Your Phone



DE

HUPEJOS®

V9-4CH Dash Cam

Kurzanleitung

Warme Tipps

 *Diese Dashcam ist mit einem Touchscreen ausgestattet. Achten Sie darauf, dass Ihre Finger sauber und trocken sind, um Flecken oder Kratzer zu vermeiden. Wenn der Touchscreen langsam reagiert, überprüfen Sie, ob er durch Schmutz oder Flüssigkeit beeinträchtigt ist. Reinigen Sie den Bildschirm und versuchen Sie es erneut.*

1. Lesen Sie die Bedienungsanleitung: Bitte lesen Sie die Bedienungsanleitung sorgfältig durch, bevor Sie die Dashcam verwenden.

2. Stromversorgung: Die Dashcam muss zum Betrieb eingesteckt sein. Achten Sie während der Installation darauf, den Autoschlüssel nicht in die Stromversorgung, und keine Maschinen einlegen oder entfernen Zubehör wie Micro SD-Karte oder Rückfahrkamera, wenn das Armaturenbrett cam eingeschaltet ist, Diese Aktionen sollten abgeschlossen sein, wenn Strom ist ausgeschaltet.

3. Fahrsicherheit: Versuchen Sie nicht, Fehler am Produkt zu beheben oder während der Fahrt Fahrvideos mit Ihrem Mobiltelefon anzusehen. Die Fahrsicherheit hat immer Vorrang.

4. SD-Kartenanforderung: Dieses Produkt benötigt für den Betrieb eine SD-Karte. Stellen Sie sicher, dass die SD-Karte funktionsfähig ist. Sie müssen eine U3-Hochgeschwindigkeitskarte verwenden (empfohlene Kapazität 32 GB – 512 GB). Eine niedrigere Kapazität als U3 führt zu Problemen wie Video- E -Mails. Stottern, schwarzer Bildschirm und Video kann nicht aufgenommen werden oder kann nicht gespielt werden.

5. Vermeiden Sie nicht autorisierte Reparaturen: Zerlegen Sie das Gehäuse der Dashcam nicht und versuchen Sie nicht, es selbst zu reparieren. Im Falle einer Fehlfunktion wenden Sie sich bitte an den offiziellen HUPEJOS-Support.

6. Installationsort: Installieren Sie die Dashcam nicht an einem Ort, der Ihre Sicht beim Fahren beeinträchtigen könnte.

7. Betriebsumgebung: Verwenden Sie die Dashcam in Umgebungen, die keinen hohen Temperaturen oder übermäßiger Luftfeuchtigkeit ausgesetzt sind. Es wird empfohlen, Ihr Gerät innerhalb eines Temperaturbereichs von -22 Grad Fahrenheit bis 140 Grad Fahrenheit und einer Luftfeuchtigkeit von 10 % bis 80 %.

8. Legale Verwendung: Verwenden Sie dieses Produkt nur im Rahmen der in Ihrer Region geltenden Gesetze.

9. Bei einigen Handymodellen ist die TsCam APP keine Verbindung zur Vorschau hergestellt werden, schalten Sie bitte die Aktivierung des Flugmodus des Mobiltelefons und versuchen Sie es.

10. Wenn durch Nichtbefolgen der Anweisungen ein Schaden entsteht, erlischt die Garantie.

11. Wir empfehlen Ihnen nicht, Ihre Kamera mit anderen zu verbinden. Hardwire-Kit, aber wenn Sie darauf bestehen, dies zu tun, schauen Sie sich bitte an solche unter 6 V und über 2.5 A.

Was ist in der Box?



**1. HUPEJOS V9
Dash Cam**



2. Rückkamera



3. Klebehalterung



**4. Auto-Ladegerät mit
Type C USB-Kabel**



**5. Auto-Verkabelu-
ngswerkzeug**



6. Benutzerhandbuch



7. Elektrostatikfolie



8. SD-Speicherkarte

Elektrowerkzeuge



1. Autoladegerät

Hinweis: Verwenden Sie am besten das mit unseren Produkten mitgelieferte Netzkabel oder unser professionelles Hardwire-Kit.



2. Hardwire Kit with radar

(Erforderlich für den Parkmodus. Verhindert die Entladung der Autobatterie) (Nicht im Lieferumfang enthalten, separat erhältlich)

Kameraübersicht



- | | |
|---------------------------|------------------------|
| 1. Display | 9. Rechte Innenkamera |
| 2. Betriebsanzeigeleuchte | 10. Infrarot-Leuchten |
| 3. Typ-C-Stromanschluss | 11. Ein-/Ausschaltaste |
| 4. Rückkamera-Anschluss | 12. Auf-Taste |
| 5. TF-Kartensteckplatz | 13. OK-Taste |
| 6. Klebehalterung | 14. Ab-Taste |
| 7. Vorderkamera | 15. Menütaste |
| 8. Linke Innenkamera | |

Button - Anweisung



Power-Taste

1. Aufnahme Modus : Kurz drücken, um den Bildschirm zu wechseln; 2 Sekunden lang drücken, um das Gerät auszuschalten

2. Einstellungsmodus : Kurz drücken, um zum vorherigen Bildschirm zurückzukehren

3. Wiedergabe Modus : Kurz drücken, um zum vorherigen Bildschirm zurückzukehren



Menütaste

1. Wenn die Aufnahme gestoppt ist, ertönt ein kurzes Geräusch, um das Menü aufzurufen

2. Lange drücken, um zwischen Aufnahmen umzuschalten Modus/Wiedergabemodus



Aufwärtstaste

1. Aufnahme Modus : Kurz drücken, um das Video zu sperren; lange drücken, um die Audioaufnahme zu aktivieren

2. Einstellungsmodus : Kurz drücken, um die vorherige Funktion auszuwählen

3. Wiedergabe Modus : Kurz drücken, um die vorherige Datei auszuwählen



Abwärtstaste

1. Aufnahme Modus : Lange drücken, um einen Schnappschuss aufzunehmen; kurz drücken, um den Bildschirm umzuschalten

2. Einstellungsmodus : Kurz drücken, um die nächste Funktion auszuwählen

3. Wiedergabe Modus : Kurz drücken, um die nächste Datei auszuwählen

OK

OK-Taste

1. Aufnahme Modus : Kurz drücken, um die Aufnahme zu starten oder zu stoppen; lange drücken, um das WLAN ein- oder auszuschaltendrücken, um das WLAN ein- oder auszuschalten

2. Einstellungsmodus : Zur Bestätigung kurz drücken

3. Wiedergabe Modus : Zur Bestätigung kurz drücken

LED Indicator



1. Einschalten: Zuerst rote Leuchte, wechselt nach Anzeige des Logos auf blaue Leuchte

2. Aufnahme: Rote und blaue Leuchte blinken (auch im Bildschirm-Aus-Modus)


3. Aufnahme angehalten: Blaue Leuchte leuchtet dauerhaft

Erste Schritte


⚠ Hinweis: Wenn das Hand-Symbol angezeigt wird, wischen Sie auf der Seite nach oben und unten.




Sprache: English/Español/Português/
Русский/ 简体中文 / 繁體中文 / Deutsch/
Italiano/Français / 日本語/한국어/Türkçe/
Thai/Nederlands

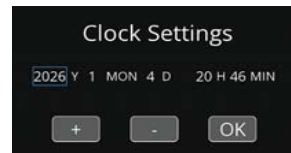

Uhrzeiteinstellungen: Datum und Uhrzeit
einstellen (die Ortszeit wird bei GPS-Ortung
automatisch aktualisiert)

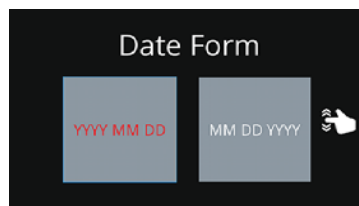


Datumsformat: Anzeige von Uhrzeit und Datum in der Vorschauoberfläche ändern; YYYY MM
DD/ MM DD YYYY

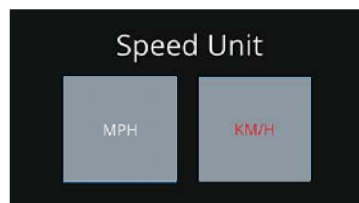

Geschwindigkeitseinheit: Aus / km/h / mph (Standardwert)

Bildschirmübersicht

⚠ Durch leichtes Tippen auf den Touchscreen wird das Menü aufgerufen.

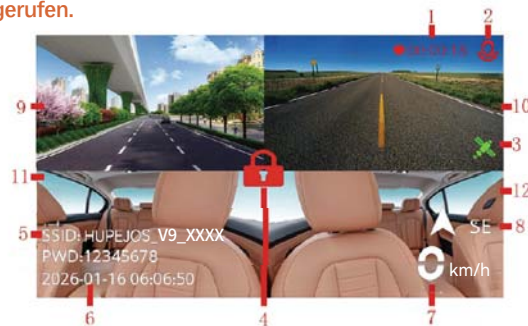

Funktionsbeschreibung der Videoaufnahme-Oberfläche

1	Aufnahmezeit
2	 Tonaufnahme EIN  Tonaufnahme AUS
3	 Keine GPS-Ortung  GPS-Ortung abgeschlossen
4	Notfalldatei gesperrt
5	SSID und WLAN-Passwort
6	Uhrzeit und Datum

DE

7

Nach erfolgreicher GPS-Ortung die aktuelle Fahrzeuggeschwindigkeit.

8

Nach erfolgreicher GPS-Ortung wird die aktuelle Fahrtrichtung des Fahrzeugs in Echtzeit angezeigt.

9

Vorderkamera-Video

10

Rückkamera-VideoLinkes

11

Innenkamera-Video

12

Rechtes Innenkamera-Video

Funktionsanzeige





Sie können das Symbol am unteren Bildschirmrand manuell anklicken, um:

-  Wi-Fi aus  Wi-Fi ein
-  Aufnahme starten / stoppen
-  Tonaufnahme bei Videoaufnahme aktivieren / deaktivieren
-  Video sperren
-  Bildansicht wechseln
-  Menü öffnen

Im Videoaufnahmemodus drücken Sie kurz die Menütaste, um zur Hauptoberfläche zu gelangen.



Wiederga und Tastenfunktionen

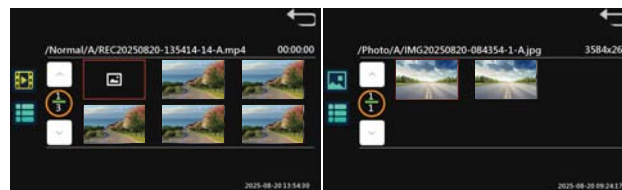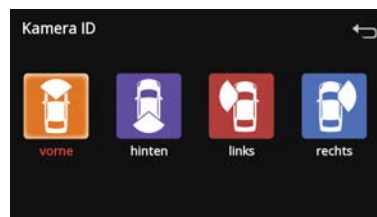

Bildschirm zur Wiedergabedateivorschau – Symbolstatus.

- ① Video-/Bild-Umschalttaste: Drücken Sie lange auf die Menütaste Schaltfläche zum Umschalten von der Videodateivorschau zur Bilddatei Vorschau.
- ② Menü: Halten Sie das Menü gedrückt, um die Wiedergabe aufzurufen Menümodus.
- ③ Vorherige Seite: Drücken Sie kurz die Aufwärtstaste, um die vorheriges Video/Bild.
- ④ Nächste Seite: Drücken Sie kurz die Abwärtstaste, um die nächstes Video/Bild.
- ⑤ Wiedergabemodus beenden: Drücken Sie kurz die Einschalttaste oder Drücken Sie die Menütaste zweimal lang, um zum Video zurückzukehren Aufnahmemodus.

Wiedergabeeinstellungen



Sprachsteuerung


Drücken Sie die OK-Taste, um die Stimme ein- oder auszuschalten Steuerfunktion.

 Zeigt an, dass die Sprachsteuerung ausgeschaltet ist


 Zeigt an, dass die Sprachsteuerung aktiviert ist

Nach dem Drücken der OK-Taste zum Einschalten der Stimme Kontrolle, Die Sprachbefehlsanweisungen werden angezeigt. Drücken Sie eine beliebige Taste, um zur Hauptschnittstelle zurückzukehren. Sagen Sie Befolgen von Sprachsteuerungsbefehlen an die Maschine und Die Maschine reagiert mit entsprechenden Funktionen. Sprachbefehle unterstützen nur englisches Aufwachen, andere Sprachen sind ungültig.

DE

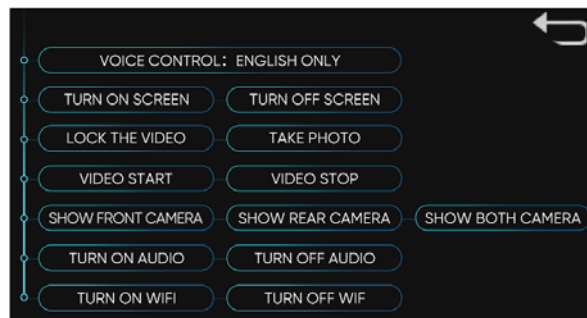

Armaturenbrett-Fahrmodus

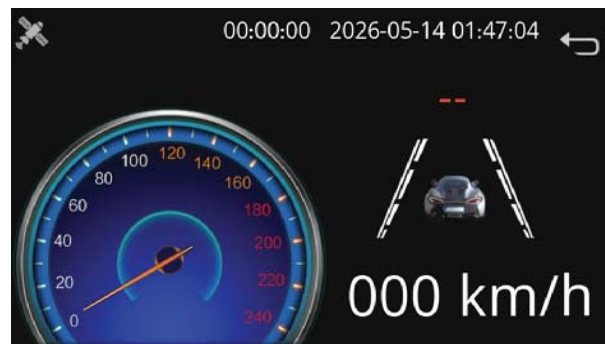

Wichtige Hinweise: Wenn die GPS-Ortung fehlschlägt, blinkt das GPS-Symbol, und die Geschwindigkeits- sowie Richtungsfunktionen des Armaturenbretts sind nicht verfügbar. Beispielsweise funktionieren in Tiefgaragen ohne GPS-Signal oder bei erster Außenverwendung des Geräts die Geschwindigkeits- und Richtungsfunktionen des Armaturenbretts in den ersten zwei Minuten nicht. Diese beiden Funktionen werden erst nach erfolgreich abgeschlossener GPS-Ortung aktiviert.

Einstellungen



WLAN: EIN/AUS (Standard) WLAN-Frequenz: 2,4G/5G (Standard)
Hinweis: Falls Ihr Mobiltelefon 5G nicht unterstützt, wechseln Sie zur 2,4G-Option.



IR-LED: EIN/AUS/Auto (Standard)
Hinweis: Bei dunkler Umgebung automatisch eingeschaltet, bei heller Umgebung automatisch ausgeschaltet.



Aufnahmeschleife: Zyklusdauer / Privatmodus
Hinweis: Aktivieren Sie den Privatmodus. Es werden nur die letzten 3 aufgezeichneten Videos gespeichert.



G-Sensor: Empfindlichkeitseinstellung, AUS/Hoch/Moyen/Niedrig (Standard).

DE



Parkmodus: Bei aktivierter Funktion startet die Dashcam bei einer Kollision im Parkzustand automatisch eine 60 Sekunden lange Aufnahme und schaltet anschließend ab. Einstellbar: Radarmodus / Abdruckleitungsmodus / AUS.



Sprache: English/Español/Português/Русский/ 简体中文 / 繁體中文 / Deutsch/Italiano/Français / 日本語 / 한국어 / Türkçe/Thai/Nederlands



Bildschirmschoner: Aus (Standard). Einstellbar: Bildschirm automatisch nach 1 Minute oder 3 Minuten ausschalten.



Uhrzeiteinstellungen: Datum und Uhrzeit einstellen (die Ortszeit wird bei GPS-Ortung automatisch aktualisiert).



Speicherkarte formatieren: Auswahl zum Formatieren der Speicherkarte (Speicherkarte vor der ersten Nutzung der Dashcam formatieren).



Zurücksetzen: Werkseinstellungen wiederherstellen (Auswahl).



GPS: EIN (Standard) / AUS



GPS-Status: Echtzeitanzeige der GPS-Satellitenanzahl auf dem Bildschirm.



Geschwindigkeitskorrektur: +5 mph (Standard), einstellbar von +12 bis -12.
Hinweis: Bei Abweichung der angezeigten Geschwindigkeit vom tatsächlichen Wert kann diese angepasst werden.



Geschwindigkeitseinheit: Aus / km/h / mph (Standardwert)




Zeitzonenauswahl: Standard -5:00
Hinweis: Kann entsprechend der lokalen Zeitzone des Benutzers eingestellt werden.



Sommerzeit: Ein / Aus (Standard)

DMS (Fahrerüberwachungssystem)

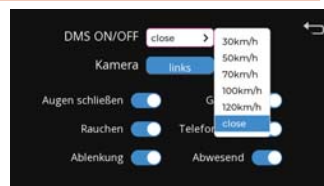

DMS EIN / AUS: Sie können eine Auslösegeschwindigkeit (zum Aktivieren oder Deaktivieren der DMS-Funktion) aus den verfügbaren Einstellungen wählen: 30 km/h / 50 km/h / 70 km/h / 100 km/h / 120 km/h.

Kamera: Je nach Fahrerseite des Fahrers wählen Sie die linke oder rechte Kamera, um die DMS-Funktion zu aktivieren. Die Dash Cam startet jedes Mal neu, wenn Sie zwischen linker und rechter Kamera wechseln. the left/right camera.

Schalten Sie die folgenden Funktionen ein oder aus. Wenn sie aktiviert sind, ertönt der entsprechende Alarm.

Augenschließen: Wenn die Augen des Fahrers länger als 3 Sekunden geschlossen sind, wird ein Müdigkeitsalarm ausgelöst. Erfassungsbereich: Kopfnickwinkel-Abweichung, d. h. links: 25 Grad, rechts: 25 Grad (Bereich entspricht dem sichtbaren Bereich der Augen-Schlüsselpunkte).

Funktionsausfall: Beim Tragen von Sonnenbrillen oder infrarotundurchlässigen Brillen sowie durch Lichtflecken, Spiegelungen oder Objektivreflexe können die Augen nicht ordnungsgemäß erfasst werden; geschlossene Augen können dann nicht erkannt werden.

Gähnen: Wenn der Fahrer einmal gähnt (d. h. der Mundöffnungsanteil 60 % oder mehr beträgt und die Dauer mehr als 3 Sekunden beträgt), wird ein Müdigkeitsalarm ausgelöst. Funktionsausfall: Wenn die wesentlichen Gesichtsinformationen des Fahrers verdeckt sind, sodass der Algorithmus diese nicht normal erfassen kann, wird Funktionsausfall angezeigt. Gähnen kann nicht erkannt werden, wenn der Mund aufgrund des Tragens einer Maske nicht erfasst werden kann.

Rauchen: Wenn der Fahrer länger als 3 Sekunden durchgehend raucht, wird ein Rauchalarm ausgelöst. Erfassungsbereich: 1. Hand des Fahrers hält eine Zigarette. 2. Mund des Fahrers hält eine Zigarette. 3. Deutliche Zigarettenkontur, die Gesamtkontur der Zigarette ist zu mehr als 60 % auf dem Bildschirm sichtbar.

Telefonieren: Wenn der Fahrer länger als 3 Sekunden durchgehend telefoniert, wird ein Telefonalarm ausgelöst. Erfassungsbereich: 1. Hand hält das Telefon und führt einen normalen Anruf durch. 2. Das Telefon befindet sich in geringer Entfernung zum Gesicht. 3. Eine beliebige Seite des Telefons ist deutlich sichtbar.

Ablenkung: Wenn der Fahrer den Kopf nach links oder rechts um mehr als 45° neigt und dies länger als 3 Sekunden anhält, wird ein Ablenkungsalarm ausgelöst. Überwachungsbereich: Kopfdrehwinkel-Abweichung, d. h. links: 60 Grad, rechts: 60 Grad (Bereich entspricht dem sichtbaren Bereich der wesentlichen Kopfmerkmale). Funktionsausfall: Wenn der Kopf vollständig zur Kamera weggedreht ist oder die Merkmalspunkte nicht erfasst werden können, kann Ablenkung nicht erkannt werden.

Fahrerabwesenheit: Wenn das Gesicht an der Fahrerposition länger als 3 Sekunden nicht überwacht werden kann, wird ein Fahrer-abwesend-Alarm ausgelöst. Überwachungsbereich: Position des Fahrersitzes im Fahrzeug.

Beschreibung der SD-Karten-Aufnahmedateien

SD-Kartenordner

Event: Gesperrte Notfall- oder manuell gesperrte Videodateien

Normal: Normale Fahrvideodateien

Photo: Schnappschüsse

Parking: Parküberwachungsvideos

Share: Reservierte Funktion, keine Speicherung

Unterordner A/B/C/D:

A: Vorderkamera-Videos/-Bilder

B: Linke Kamera-Videos/-Bilder

C: Rechte Kamera-Videos/-Bilder

D: Rückkamera-Videos/-Bilder

Installation

Starten Sie den Fahrzeugmotor und führen Sie vor der offiziellen Installation einen Test durch: Schließen Sie das Autoladegerät an den Zigarettenanzünder und die Dash Cam an, verbinden Sie die Rückkamera und legen Sie die SD-Karte ein, um sicherzustellen, dass die Dash Cam normal funktioniert.

Schritt 1: Einlegen der Speicherkarte

Schalten Sie die Kamera aus und stecken Sie die Karte in den Kartensteckplatz. Drücken Sie die TF-Speicherkarte in Richtung der Bildschirmmarkierung gerade in den Steckplatz, bis ein „Klick“ zu hören ist.

Entnehmen der Karte

DE

Drücken Sie die TF-Speicherkarte nach vorne; sie wird ausgeworfen und kann entnommen werden.


Hinweis:

Das Entnehmen der TF-Karte während der Videoaufnahme kann Dateien beschädigen und die Lebensdauer der TF-Karte verkürzen.

Schalten Sie die Dash Cam zuerst aus, bevor Sie die TF-Karte einlegen oder entnehmen. Formatieren Sie die SD-Karte einmal im Monat, um die maximale Lebensdauer der Speicherkarte zu gewährleisten.


Schritt 2: Montage der vorderen Kamera

KI-Autokameras mit DMS müssen an der Fahrerseite oder in der Mitte der Frontscheibe montiert werden, um die Gesichtserkennung des Fahrers bei Verwendung von DMS zu gewährleisten. Finden Sie den richtigen Platz und wischen Sie die Montagestelle mit einem sauberen Tuch ab. Ziehen Sie die elektrostatische Folie von der Zellophanfolie ab und kleben Sie sie an die gewünschte Stelle. Entfernen Sie Luftblasen auf der elektrostatischen Folie. Für eine sicherere Montage empfehlen wir, 30 Minuten zu warten, bevor Sie die 3M-Halterung anbringen, und die Dash Cam nach 12 Stunden zu installieren.

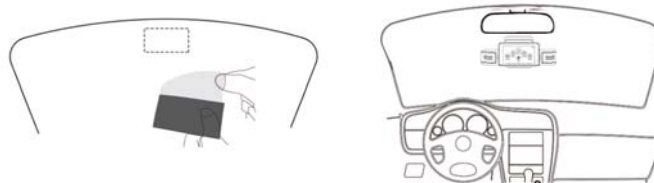

Verwenden Sie den Hebel, um das Netzkabel entlang der Frontscheibe und des Dachhimmels zu verlegen und das Kabel an

der A-Säule zu verstecken, damit es die Fahrersicht nicht blockiert und Gefahr verursacht.

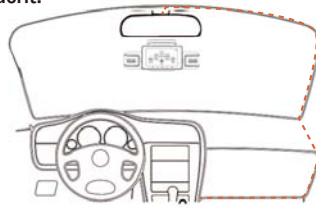


Step 3: Mounting the Rear Camera

HINWEIS:

Diese Rückfahrkamera ist eine spezielle Innenrückkamera. Die Wirkung ist besser, wenn sie im Fahrzeuginnenraum installiert wird. Sie ist nicht wasserdicht. Wir empfehlen, sie an der Heckscheibe des Fahrzeugs zu montieren.




Wischen Sie die hintere Scheibe an der Montagestelle mit einem sauberen Tuch ab. Ziehen Sie die elektrostatische Folie ab und kleben Sie sie an die gewünschte Stelle. Entfernen Sie Luftblasen. Empfohlen, die Rückfahrkamera nach 30 Minuten zu montieren, damit die elektrostatische Folie fester haftet.

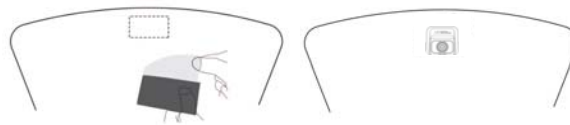


DE

Verlegen Sie das Verbindungskabel der Rückfahrkamera zum Fahrzeugheck. Stecken Sie das Verbindungskabel der Rückfahrkamera in das Vordergerät, verlegen Sie das Kabel entlang des Dachhimmels und gerade entlang der A-, B- und C-Säulen nach unten.

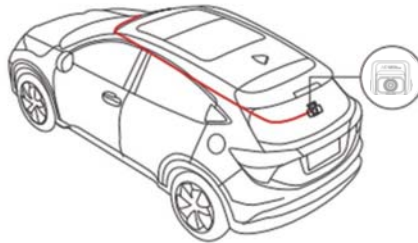

Schritt 4: Installation des Autoladegeräts

Verlegen Sie das Netzkabel entlang der Lücken zwischen Frontscheibe und Dachhimmel, Karosserie und Dachhimmel auf der Beifahrerseite, Rücksitzen und Dachhimmel.

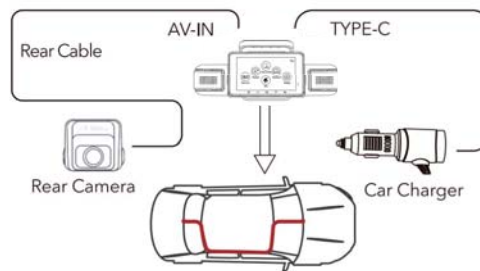

Rotes Kabel >ACC > Strom nur, wenn der Autoschlüssel eingeschaltet ist
Gelbes Kabel >B+ > Hat immer Strom
Schwarzes Kabel > Erdung > Jede geerdete (neg.) Schraube

POP-UP: Das Sicherungskastenpanel befindet sich normalerweise an der Fahrerseite des Armaturenbretts. Sie können den Kopf der Kabel abschneiden und diese direkt an Ihre Sicherung anschließen, wenn die Sicherungen klein sind.

INSTALLATIONS-HINWEISE

Verbindung	Fahren	Parken	
 ACC  B+  Erdung	EIN	Parkmodus	✓
 ACC  Keine Verbindung  Erdung	AUS	AUS	✗
 ACC  ACC  Erdung	EIN	AUS	✗
 B+  ACC  Keine Verbindung	AUS	AUS	✗
 Keine Verbindung  Jeder Strom  Erdung	AUS	EIN	✗
 B+  ACC  Erdung	EIN	AUS	✗

BESONDERE FALSCHER VERBINDUNG

Verbindung	Fahren	Parken
 B+		
 B+	EIN	Immer an
 Erdung		

> Die Kamera wird den Parkmodus ständig ausführen, und die Autobatterie wird unter dieser Verbindung entladen.

> Bitte überprüfen Sie, ob Ihre Kamera nach 15 Minuten, nachdem Ihr Auto ausgeschaltet ist, funktioniert. (Weil einige Autos eine verzögerte Abschaltfunktion haben, können Sie nach 15 Minuten sicherstellen, dass die ACC-Schnittstelle abgeschaltet wurde.)

Verbindung mit der Handy-App

App herunterladen

App-Name: TsCam

Scannen Sie den QR-Code zum Herunterladen der entsprechenden Version.

Suchen Sie im App Store/Google Play Store nach „TsCam“, „Road-cam“ oder „Viidure“ zum Herunterladen und Installieren.



Hinweis: Wenn die TsCam-App nicht heruntergeladen werden kann, kontaktieren Sie uns umgehend für After-Sales-Support!

E-Mail: support@hupejos.com

Hinweis: Die WLAN-Reichweite der V9 beträgt 6–7 Meter von der Dash Cam entfernt. Die Dash Cam ist kein Cloud-Gerät; Sie können Ihre Videos nicht fernab von mehr als 6–7 Metern vom Auto aus anzeigen.

Live-Ansicht: Echtzeit-Video der Dash Cam in ca. 3 Metern Entfernung anzeigen.

Videowiedergabe: Auf der Dash Cam gespeicherte Aufnahmen auf dem Smartphone ansehen. (Die Video- und Bildpixel der TsCam-App sind komprimiert. Zum Anzeigen klarerer Informationen wie Kennzeichen laden Sie das Bild oder Video über die App herunter und spielen es online ab oder verwenden Sie die SD-Karte zur Anzeige auf dem Computer.)

WLAN-Verbindung

Halten Sie die OK-Taste gedrückt, um WLAN einzuschalten. Wenn WLAN aktiviert ist, zeigt das Display die ID und das ID-Passwort an.




Wi-Fi aus



Wi-Fi ein

1. Stellen Sie sicher, dass die WLAN-Funktion am Gerät aktiviert ist.
2. Öffnen Sie die WLAN-Einstellungen des Handys, wählen Sie den WLAN-Namen (SSID: HUPEJOS_V9_XXXX) am Gerät aus und geben Sie das Passwort (PWD: 12345678) zum Verbinden ein.
3. Öffnen Sie die „TsCam“-App, klicken Sie auf die Schaltfläche

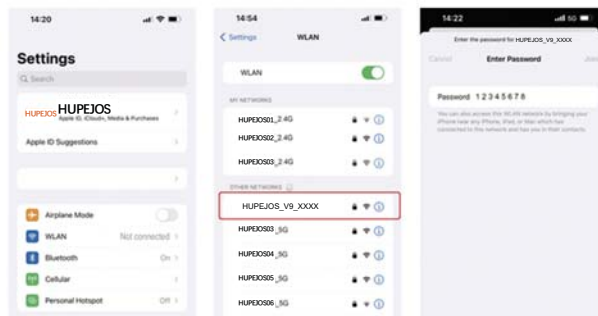


Hinweis: Vor der WLAN-Verbindung stellen Sie sicher, dass die WLAN-Funktion Ihres Smartphones aktiviert ist. Bei Verbindungsfehlern oder Unterbrechungen schalten Sie das mobile Datennetz des Handys aus oder wechseln in den Flugmodus und verbinden Sie erneut. Wenn Sie das


DE

WLAN-Passwort vergessen haben, stellen Sie die Standardeinstellungen des Geräts wieder her; das WLAN-Passwort wird auf den Standardwert (12345678) zurückgesetzt.

App-Verbindung & App-Bedienung

Nach erfolgreicher WLAN-Verbindung klicken Sie beim Öffnen der App auf „Verbinden“; die App verbindet sich automatisch mit der Kamera und zeigt die aktuelle Echtzeitaufnahme an.

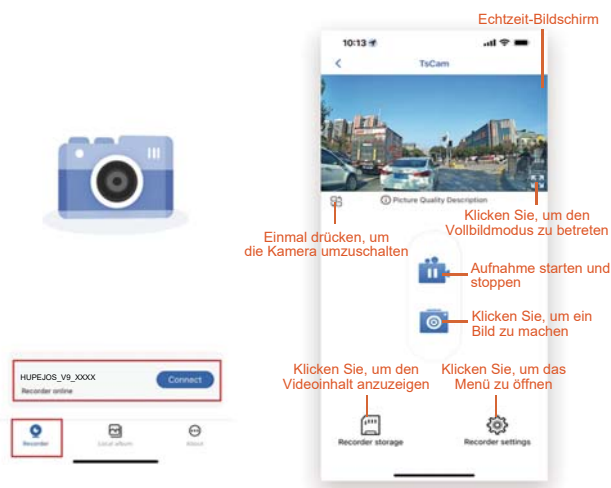

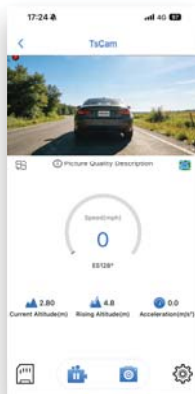

Sobald die GPS-Verbindung erfolgreich hergestellt ist, können Sie auf die Karte zugreifen sowie die aktuelle Höhe, die Steighöhe und die Beschleunigung einsehen.

Hinweis: Voraussetzungen zum Anzeigen von GPS-Strecken in der Echtzeitvorschau der APP:

- ① Das Mobiltelefon muss mobile Daten aktiviert haben.
- ② Apple-iPhones verwenden die vorinstallierte Karten-App des Telefons, um auf die GPS-Strecke zuzugreifen. Falls die Karten-App vom Telefon deinstalliert wurde, muss sie neu installiert werden.
- ③ Android-Telefone müssen Offline-Karten entsprechend den Hinweisen zwischenspeichern. Oder öffnen Sie TsCam, klicken Sie auf „Über“ und wählen Sie „Offline-Karte“, um die Offline-Karten zu zwischenspeichern.

Nachdem Sie die Echtzeitvorschau der APP geöffnet haben, können Sie die folgenden Vorgänge durchführen:

Videovorschau: Nachdem die APP erfolgreich mit der Kamera verbunden wurde, gelangen Sie zur Echtzeitvorschau-Seite. Klicken Sie auf das Vollbildsymbol oder halten Sie das Telefon quer, dann wechselt der Echtzeit-Bildschirm automatisch in den Vollbild-Vorschaumodus. Klicken Sie auf das Fensterumschalt-Symbol, um zwischen den Videofenstern für vorne, hinten und den Fahrgastraum umzuschalten. Diese Funktion steht jedoch nur für mehrkanalige Dashcams zur Verfügung.

Videowiedergabe: Die auf der SD-Karte aufgezeichneten Video- und Bilddateien können in der APP angezeigt werden. Nach Anklicken der Datei kann das Video abgespielt werden.

Video-Download: Sie können das gewünschte Video oder Bild in der SD-Karten-Browsing-Oberfläche oder im Videowiedergabebereich auswählen. Nachdem das Video heruntergeladen wurde, können Sie es in den lokalen Dateien der APP-Oberfläche abspielen.


App-GPS-Videowiedergabe

① Öffnen Sie die App und laden Sie das Video in das lokale Album herunter.

② Wählen Sie Lokales Album und Schleifenwiedergabe.

③ Klicken Sie auf Video abspielen, um die Strecke des Videos anzuzeigen.

Hinweis: Android-Systeme müssen die WLAN-Verbindung zwischen Handy und Gerät trennen, um die Strecken in der App anzuzeigen; iOS-Systeme nicht.

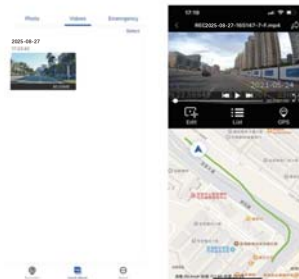

PC-GPS-Videowiedergabe

GPS-Funktion : Nach erfolgreicher Ortung wird die Systemzeit synchronisiert (entsprechend der im Menü eingestellten Zeitzone). Im „GPS-Status“ der allgemeinen Einstellungen können Sie die Echtzeit-GPS-CN-Wert.

Installieren Sie den GXPlayer-Player 1. MAC system computer: Search 'GXPlayer' on the application market of Apple computer to install it.
2. Windows-Systemcomputer: Die Installationsmethode ist wie folgt.
Windows-Systeme: Sie können automatisch die GXPlayer-Installationsdatei von der Speicherkarte generieren, die in der ashcam verwendet wird, finden Sie GXPlayer in der Datei, klicken Sie auf Download und installieren Sie den GXPlayer-Player zur Nutzung.

Installation eines GPS-Players:



Nach Abschluss der Installation öffnen:



Verwenden Sie GXPlayer

Importieren Sie die Videodatei nach GPS-Positionierung (Abbildung 1, Nummer 1)

Zeigen Sie die Reiseroute an (Abbildung 1, Nummer 2)

Zeigen Sie die Position während der Fahrt an (Abbildung 1, Nummer 3)

Die Echtzeitgeschwindigkeit (Abbildung 1, Nummer 4)


Allgemeine Einstellungen (Abbildung 1, Nummer 5. Die Menüeinstellungen von Abbildung 2 erscheinen)



OTA (Über die Luft)

Firmware-Aktualisierung

Ihre Dash Cam wird mit kostenlosen Firmware-Updates und neuen Funktionen kontinuierlich verbessert. Die TsCam-App ermöglicht OTA-Updates über 5,8GHz-WLAN.

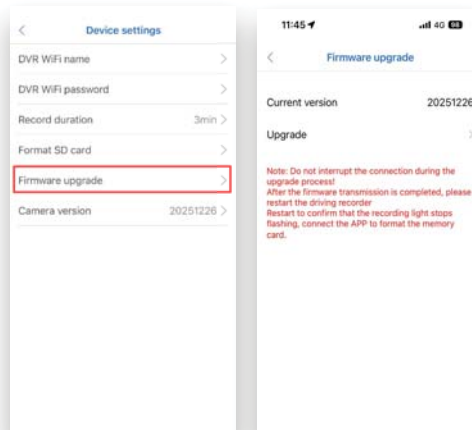

Hinweis:

Unterbrechen Sie die Verbindung während des Aktualisierungsvorgangs nicht! Nach Abschluss der Firmware-Übertragung starten Sie die Dash Cam neu. Überprüfen Sie nach dem Neustart, dass die Aufnahmelampe aufhört zu blinken, verbinden Sie die App und formatieren Sie die Speicherkarte.

Fehlerbehebung

WLAN-Verbindung funktioniert nicht

- > Mobile Daten/VPN ausgeschaltet
- > Innerhalb von 5 Metern zur Dash Cam
- > Nur 1 Gerät erlaubt
- > WLAN-Passwort: 12345678

Kein Eintritt in den Parkmodus

- > Benötigt Festverkabelungssatz
- > Bildschirm zeigt „ACC getrennt“ beim Versuch, in den Parkmodus zu gelangen
- > Blaues Licht an + rotes Licht blinkt

Kamera bleibt nach Ausschalten des Autos an

- > Falsche Verbindung von rotem und gelbem Kabel
- > Verbinden Sie das rote Kabel mit der Zündsicherung

Überhitzung

- > Kamera muss zwischen -30 °C und 60 °C bleiben

Defekte Kamera erhalten

- > Verbinden Sie die Kamera mit dem USB-Kabel mit dem Computer und überprüfen Sie, ob der Bildschirm angeht.
- > Falls nicht: Ziehen Sie die SD-Karte heraus und drücken Sie mit einem Stift die Reset-Taste am unteren Rand der Kamera.
- > Falls die Probleme nicht gelöst werden: Kontaktieren Sie HUPEJOS und hinterlassen Sie Ihre Kontaktdaten und aktuelle Adresse für einen möglichen Ersatz.

DE

Garantie & Support

Support:

Standardmäßige 12-monatige Garantie; Verlängerung auf 24 Monate durch Aktivierung unter <https://hupejos.com/?feature=warranty> oder E-Mail an support@hupejos.com.
Bei Produktfragen, fehlendem Zubehör oder Vorschlägen kontaktieren Sie uns über Amazon oder die gleiche E-Mail – Antwort innerhalb von 12–24 Stunden.



Danke, dass du dich für

HUPEJOS Dash Cam

entschieden hast!

Erweitere deine Garantie
auf 24 Monate
Scanne mit deinem Handy



HUPEJOS®

English/Deutsch



FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.